

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.

 
 
HOW TO OPERATE YOUR TRANSCEIVER

1. Turn the "ON-OFF" switch to "ON" position.
2. Press the "PUSH TO TALK" button for transmitting.
3. Release "PUSH TO TALK" button for receiving.
4. When transmitting, speak clearly in a normal voice, holding the set (MIC) about 3" from your mouth.
5. Best transmission and reception are obtained when the antenna is held in a vertical position.

CAUTION


1. Your transceiver set has been fully adjusted prior to shipment from the factory and be sure not to touch the internal components other than battery.
2. When the sound becomes weak, it is time to change the Battery.
3. After use, always return the "ON-OFF" switch to the "OFF" position.
4. Keep your set in dry and clean place.

REMOVABLE BUTTON CELL BATTERY IN THIS PRODUCT CONTAINS MERCURY. WHEN BATTERY IS REPLACED, DON'T PUT USED ONE IN TRASH. RECYCLE OR DISPOSE ACCORDING TO LOCAL, STATE OR FEDERAL LAW.

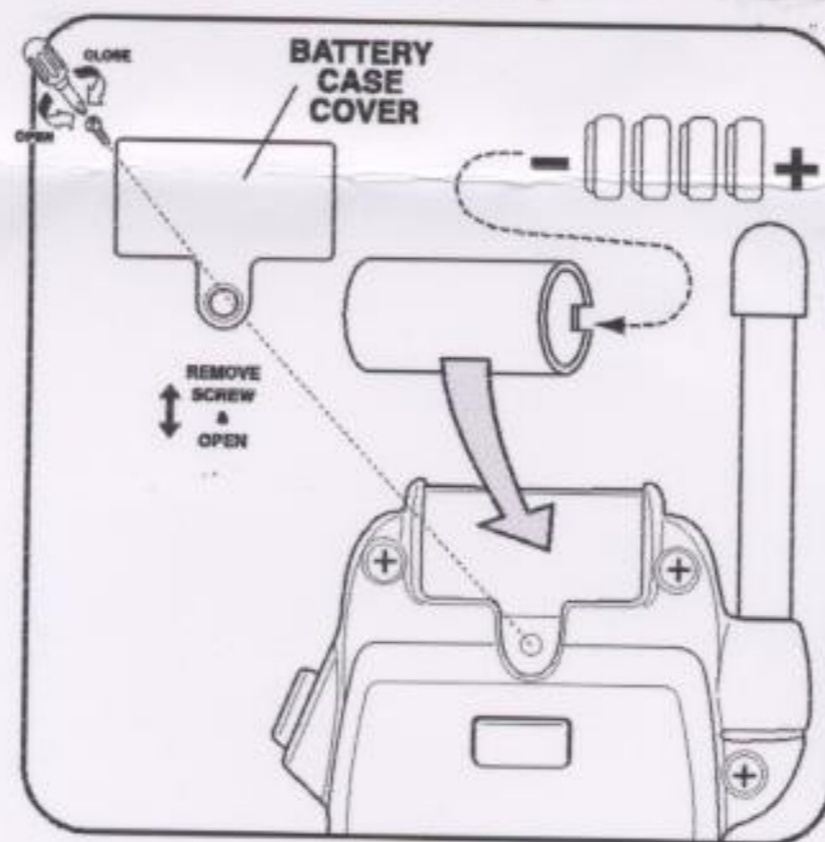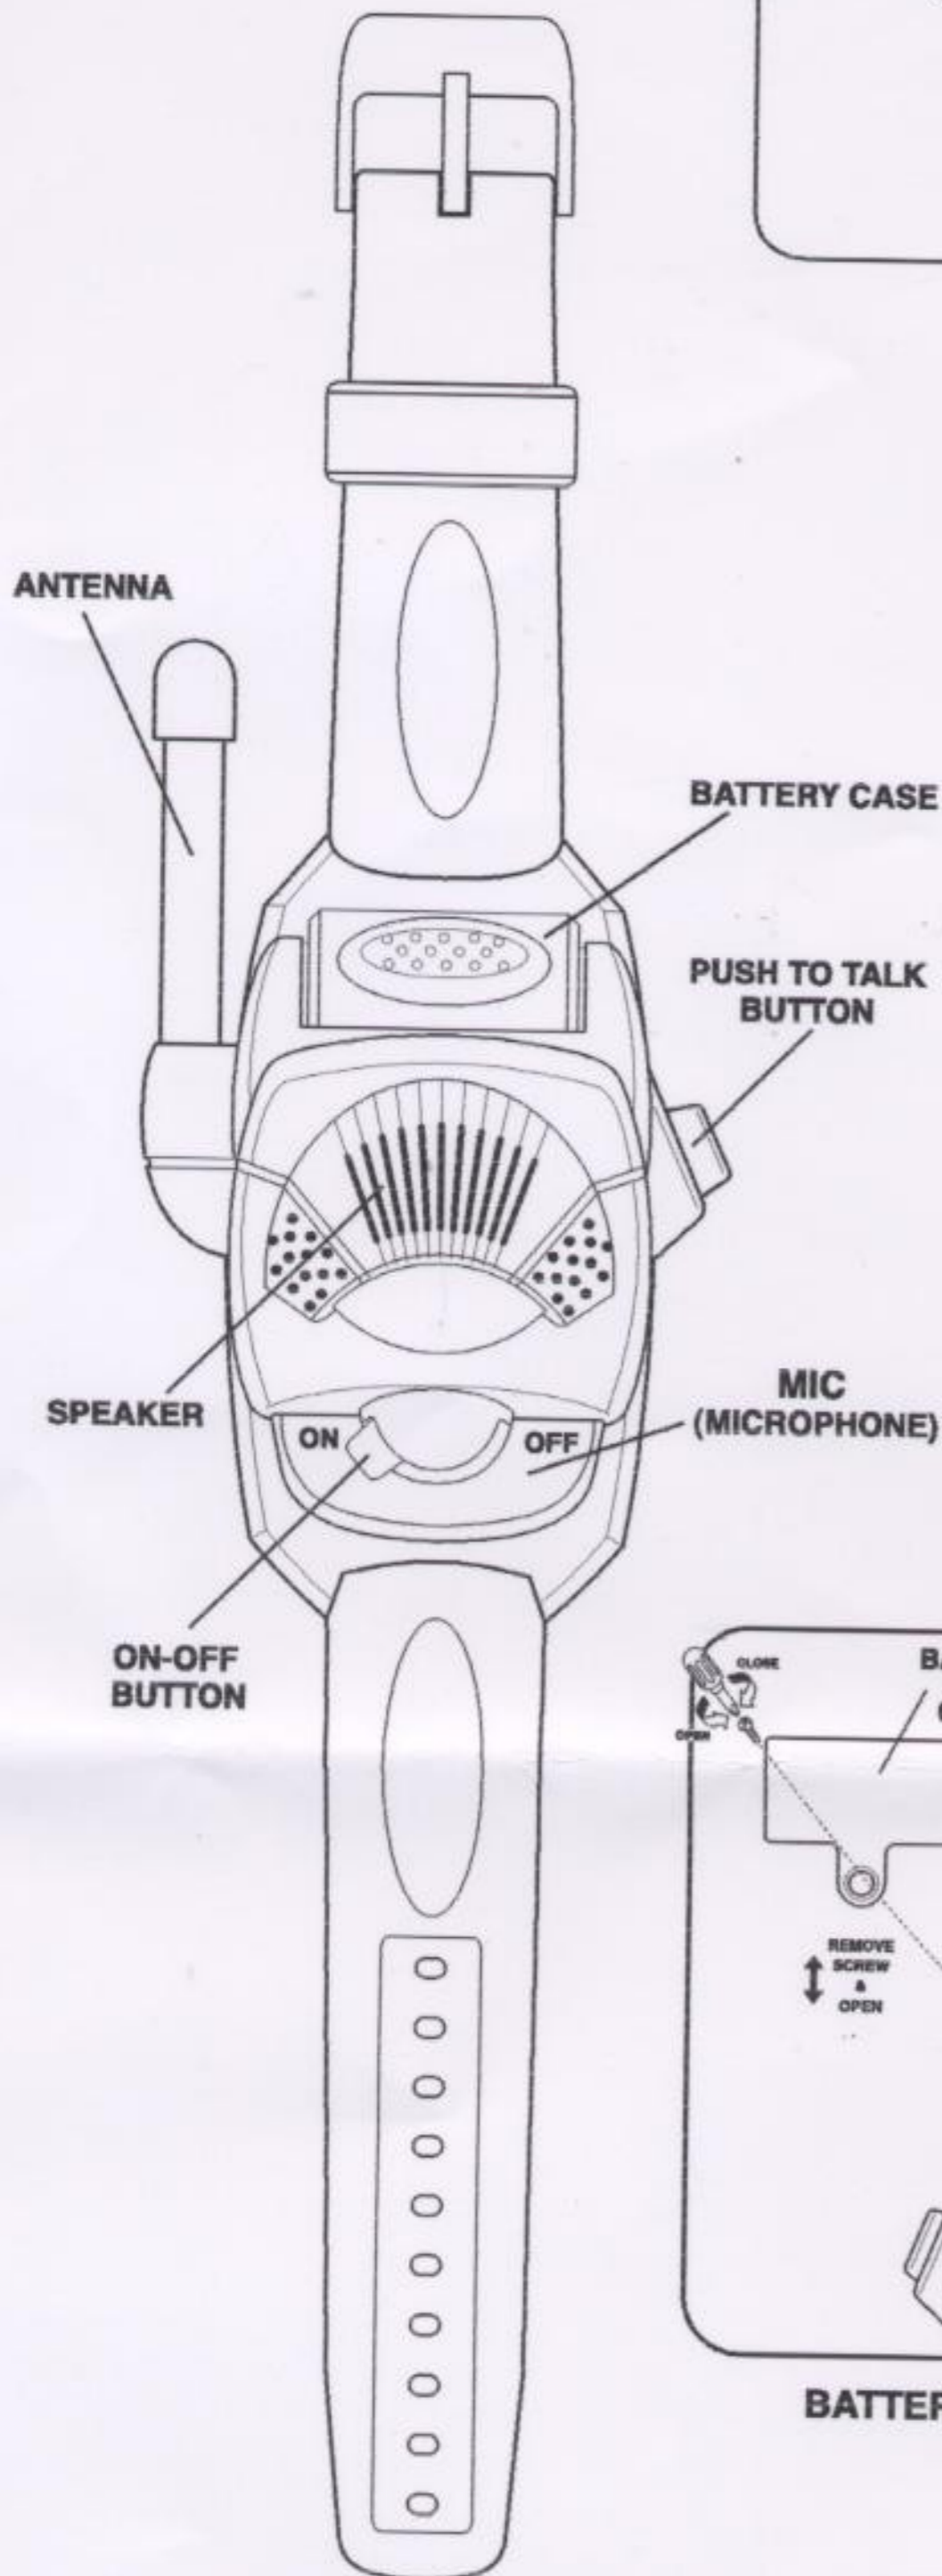

BATTERY INSTALLATION

 SNAP ON WALKIE TALKIE TO BELT

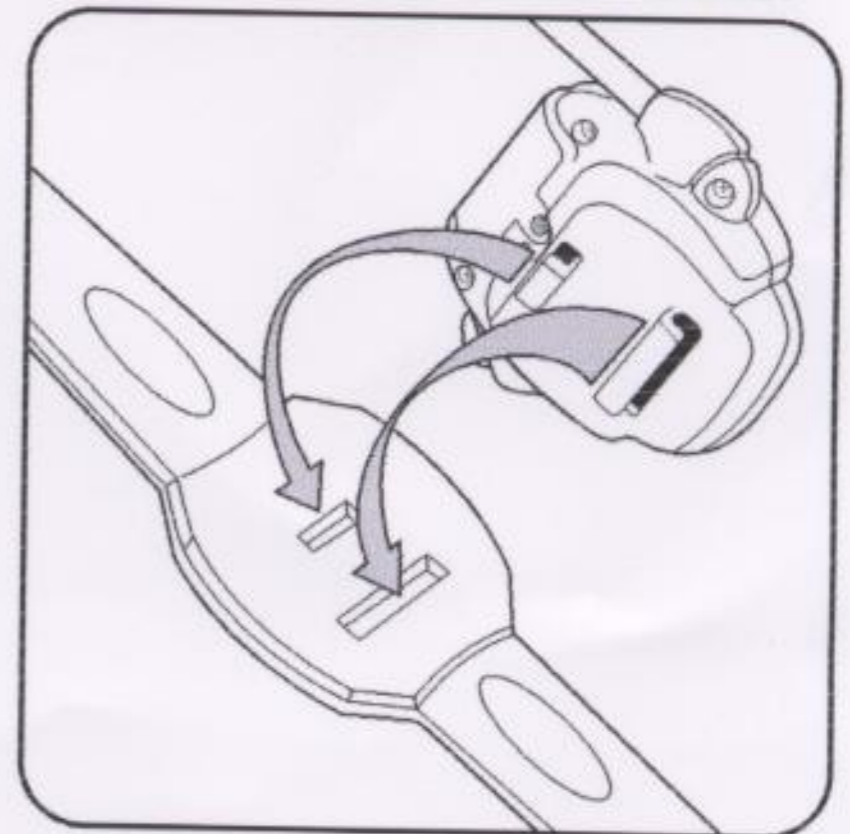

COLOR & DESIGN MAY VARY

ATTENTION: REMOVE ALL PLASTIC TIES & PACKAGING BEFORE GIVING THIS TOY TO A CHILD.

- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Replacement of batteries must be done by an adult.

ITEM NO. 10061



PRINTED ON RECYCLE PAPER

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT, SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

6V --- 0.5W

EACH UNIT USES FOUR (4) AG13 SPECIALTY BUTTON BATTERIES (TOTAL 8 BUTTON BATTERIES INCLUDED)

REMOVABLE BUTTON CELL BATTERY IN THIS PRODUCT CONTAINS MERCURY. WHEN BATTERY IS REPLACED, DON'T PUT USED ONE IN TRASH. RECYCLE OR DISPOSE ACCORDING TO LOCAL, STATE OR FEDERAL LAW.

ATTENTION: The batteries included in this unit are only intended for in-store demonstration. It is possible that they may become weak or discharged prior to purchase and customer may find it necessary to replace the included batteries with fresh cells to ensure proper operation.