



- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries must be inserted with the correct polarity. If the batteries are placed in the wrong polarity, the toy can be damaged, or causes a fire or and explosion.
- Replacement of batteries must be done by an adult.
- Remove batteries from the toy if they are not to be used for a long period of time.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



©2006 ZOG TOY INC.
MILFORD MASSACHUSETTS 01757, U.S.A.

HOW TO OPERATE YOUR TRANSCEIVER

1. REMOVE SCREW AND OPEN BATTERY DOOR AND SNAP IN A 9-VOLT BATTERY (ALKALINE BATTERIES RECOMMENDED)
2. TURN THE "ON-OFF" CONTROL TO "ON" POSITION. YOUR TRANSCEIVER IS NOW READY TO OPERATE.
3. PRESS THE "PUSH TO TALK" SWITCH FOR TRANSMITTING.
4. RELEASE "PUSH TO TALK" SWITCH FOR RECEIVING.
5. WHEN TRANSMITTING, SPEAK CLEARLY IN A NORMAL VOICE. HOLDING THE SPEAKER MICROPHONE ABOUT 3" FROM YOUR MOUTH.
6. BEST TRANSMISSION AND RECEPTION ARE OBTAINED WHEN THE ANTENNA IS HELD IN A VERTICAL POSITION.

HOW TO USE MORSE CODE FUNCTION

1. FOR TRANSMITTING A SIGNAL, TURN THE "ON-OFF" CONTROL TO "ON" POSITION.
2. WHILE PUSHING THE "PUSH TO TALK" BUTTON, PRESS THE MORSE CODE KEY MOMENTARILY AND RELEASE FOR DESIRED SIGNAL.
3. AND FOR RECEIVING A SIGNAL, RELEASE THE "PUSH TO TALK" SWITCH.
4. WHEN BACK TO COMMUNICATIONS AGAIN, USE NORMAL PUSH TO TALK OPERATION.

CAUTION

1. YOUR TRANSCEIVER SET HAS BEEN FULLY ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY AND BE SURE NOT TO TOUCH THE INTERNAL COMPONENTS OTHER THAN BATTERY.
2. WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERY.
3. AFTER USE, ALWAYS RETURN THE "ON-OFF" CONTROL TO THE "OFF" POSITION.
4. KEEP YOUR SET IN DRY AND CLEAN PLACE.

ATTENTION :
REMOVE ALL PLASTIC TIES & PACKAGING
BEFORE GIVING THIS TOY TO A CHILD.

ITEM NO. 10062
PRINTED IN CHINA