


#21009A WALKIE TALKIE

200 Toy (HK) Ltd.  
FCC ID: O4Y21009A  
Job #: 510AH1  
Exhibit #: 3A

1. SPEAKER / MICROPHONE
2. PUSH TO TALK BUTTON
3. SIGNAL BUTTON
4. ON-OFF & VOLUME CONTROL
5. ANTENNA
6. BATTERY DOOR

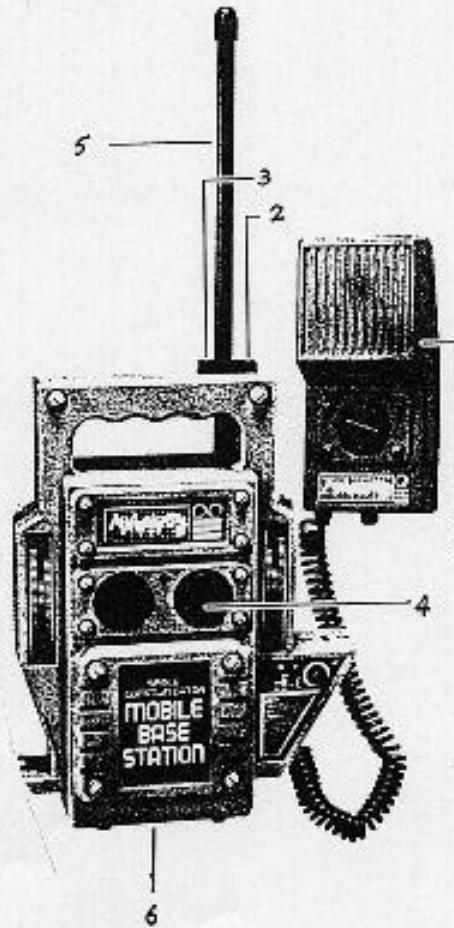

200 Toys (HK) Ltd.  
FCC ID: Q4Y21009A  
Job #: 510AHI  
Exhibit #: 3B

## **INSTRUCTION**

### **HOW TO OPERATE YOUR TRANSCEIVER**

1. REMOVE SCREW AND OPEN BATTERY DOOR AND SNAP IN A 9-VOLT BATTERY (ALKALINE BATTERIES RECOMMENDED)
2. TURN THE "ON-OFF" SWITCH TO "ON" POSITION, YOUR TRANSCEIVER IS NOW READY TO OPERATE.
3. PRESS THE "PUSH TO TALK" SWITCH FOR TRANSMITTING.
4. RELEASE "PUSH TO TALK" SWITCH FOR RECEIVING.
5. WHEN TRANSMITTING, SPEAK CLEARLY IN A NORMAL VOICE, HOLDING THE HANDHOLD MICROPHONE ABOUT 3" FROM YOUR MOUTH.
6. BEST TRANSMISSION AND RECEPTION ARE OBTAINED WHEN ANTENNA IS HELD IN A VERTICAL POSITION.

### **CAUTION**

1. YOUR TRANSCEIVER SET HAS BEEN FULLY ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY AND BE SURE NOT TO TOUCH THE INTERNAL COMPONENTS OTHER THAN REPLACING BATTERIES.
2. WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERIES.
3. AFTER USE, ALWAYS TURN THE "ON-OFF" SWITCH TO THE "OFF" POSITION.
4. KEEP YOUR SET IN A DRY AND CLEAN PLACE.

### **NOTE**

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.