

# TFT LCD Display

## Owner's Instruction Manual

 
Before operating the unit,  
please read this manual  
thoroughly and retain it  
for future reference

On- Screen Display Menus

PC Display

Closed Caption


ViChip

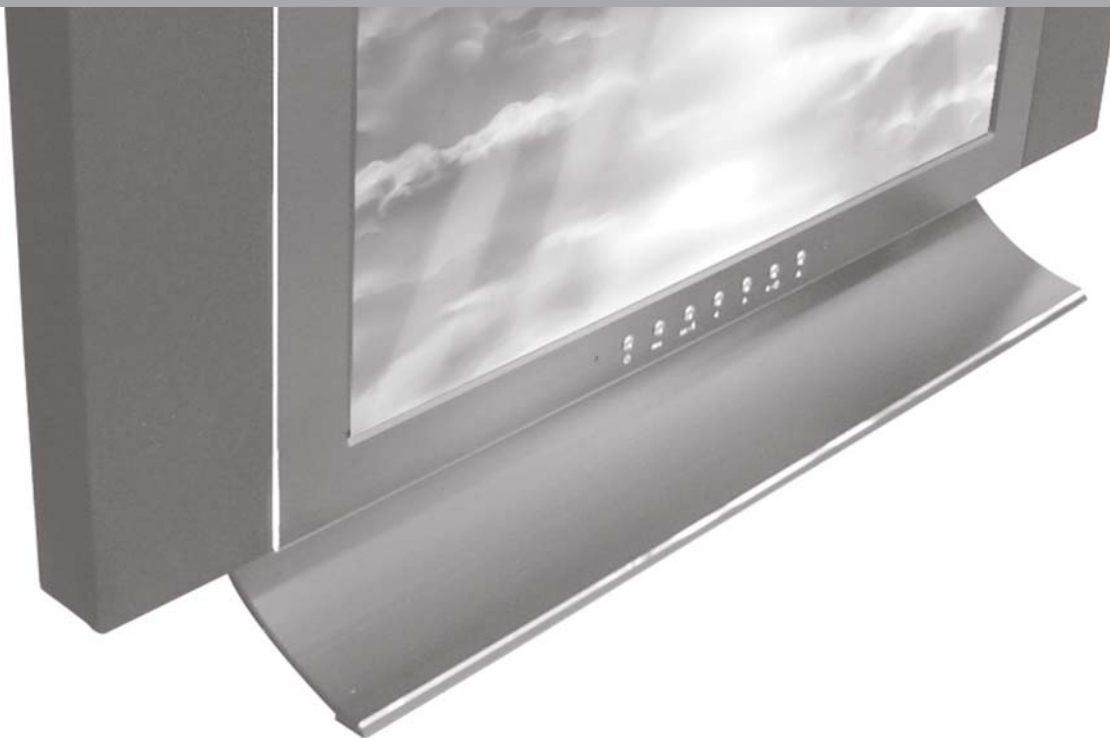

**Multi-Function  
LCD DISPLAY**

# **TFT LCD Display Owner's Instruction Manual**

 **Before operating the unit,  
please read this manual  
thoroughly and retain it  
for future reference**

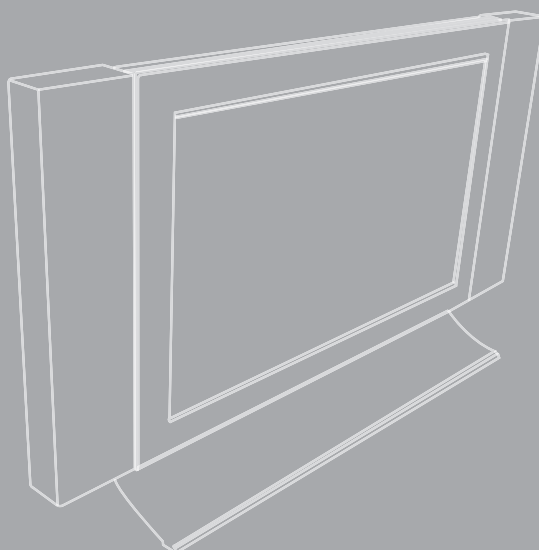

## FCC Compliance Statements

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Warning : You are cautioned that any change or modifications to the equipment not expressly approved by the party responsible for compliance could void your authority to operate such equipment.



## Multi-Function LCD DISPLAY

### Safety Instruction



**WARNING**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



**Warning:**

**To reduce the risk of electric shock do not remove cover(or Back)..  
No user serviceable parts inside. Refer servicing to qualified service personnel.**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of insinuated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.

**Warning:**

**To prevent fire or shock hazard, do not expose the set to rain or moisture. Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.**

**Caution:**

- Do not attempt to modify this product in any way without written authorization.
- Read and keep these Instruction manual
- Heed all warnings and follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heats.
- This TV is not completely disconnected from a power supply line, as minute current is consumed even when the POWER switch is turned off.
- Do not place hot objects or naked flame sources, such as lighted candles or nightlights on, or close to the TV. High temperatures can melt plastic and lead to fires.
- Do not set on top of the TV. Any object or container that might spill liquids or small objects into the TV.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury form tip-over.
- Unplug this apparatus during lighting storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel., Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects has fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## **Installation**

### **Power:**

This set operates on an AC main supply, the voltage is as indicated on the label on the back cover.

Never apply any DC power to the set directly. Connect the power cord to an AC mains. In the event of thunderstorms or power cuts, please pull out the mains and aerial plug of the set.

Do not allow anything to rest upon or roll over the power cord, and do not place the set where the power cord is subject to damage.

### **Warning:**

To prevent fire or shock hazard, do not expose the set to rain or moisture. Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

### **Service**

Never remove the back cover of the unit, this can expose you to high voltage and other hazards.

If the unit does not operate properly, unplug it and call your dealer.

Antenna connect the antenna cable to the connection marked Ant. (on the rear).

For best reception, use an outdoor antenna.

### **Location**

Position your unit so that no bright light or sunlight will shine directly on the screen.

Do not expose the unit to vibration, moisture, dust or heat. Also ensure that the unit is placed in a position that allows a free flow of air. Do not cover the ventilation openings on the back cover. You can install the unit on a wall or place it on a table-top or similar flat surface. Mounted the unit securely to eliminate the risk of injury from the unit falling. Contact your dealers to purchase the optional ceiling mount.

 
### **Cleaning**

Unplug the unit before cleaning the face or the LCD Screen. Dust the unit by wiping the screen and cabinet with a soft, clean cloth. If the screen requires additional cleaning use a clean, damp cloth. Do not use liquid or aerosol cleaners.

## Contents

	Page	
<b>Safety</b> Instruction	01	Safety
<i>Installation</i>	02	
The Front Panel	04	Basic
Viewing the Connection of Back Panel	05-07	
Viewing the Connection of External equipments	08	
■ <i>Watching DTV</i>		
<b>Remote Control Handset</b>	09	Operation
<i>Inserting the Batteries in the Remote Control</i>	10	
<i>Viewing and Selecting an Input source from External sources</i>		
Switching On and Off (LED light: Red & Green)	11	Power ON/OFF Info
<i>Displaying Information</i>		
Use of OSD(On Screen Display) menu	12	TV
Storing Channels Automatically	13	
Storing Channels Manually	14	
Storing Channels Fine Tuning	15	
Viewing Closed Captions	16	
Set up Restrictions Using the TV Guidelines	17	
Set up Restrictions Using the MPAA Ratings	18	
Changing the <b>Picture</b> Standard	19	
Setting the <b>Window</b>	20	<b>Window</b>
Changing the <b>Sound</b> Standard	21-22	<b>Sound</b>
<b>Function</b>	23	<b>Function</b>
Features of Product	24	Spec
Overview Specification	24-26	
Supported Timings(* TBD)	27-28	
<b>Troubleshooting</b>	28-29	


## The Front Panel

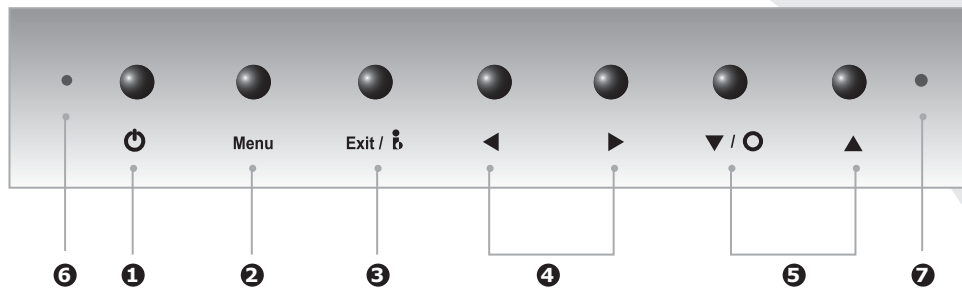

- ① [Power Key ] **Power On/Off** your set
- ② [MENU Key] Press the **MENU** button, the OSD (On Screen Display ) Menu will be displayed on screen.
- ③ [EXIT/Source Key : ] During OSD operation, return to the normal viewing Or return to the previous menu.  
 ■ : Use it as the Source Key if there is no menu on the screen  
 (Ex: TV -> PC -> DVI -> DTV -> DVD -> Video -> S-Video)
- ④ [Left/Right Key / / ] **Volume Buttons**  
 During OSD operation, adjust certain sub menu or setting value.  
 When you select / , it is "Enter " function  
 Decrease or Increases the level of audio volume and the volume of the selected function
- ⑤ [Up/Down Key / , ] **Channel Buttons**  
 Decreases or Increases the channel number.  
 Or make a cursor move to the item you want to adjust during OSD operation.  
 ■ : **Auto Configuration** on PC mode : Hotkey
- ⑥ [Power Indicator ] **LED Light** (2 Colors : red, green )  
 Light up when you turn the Power Off  
 Red Light shows in **Stand by** mode, Green light shows in Power-**On** mode.
- ⑦ Remote control Sensor

**Multi-Function  
LCD DISPLAY**

**Viewing the Connection of Back Panel (Over 26 inch)**

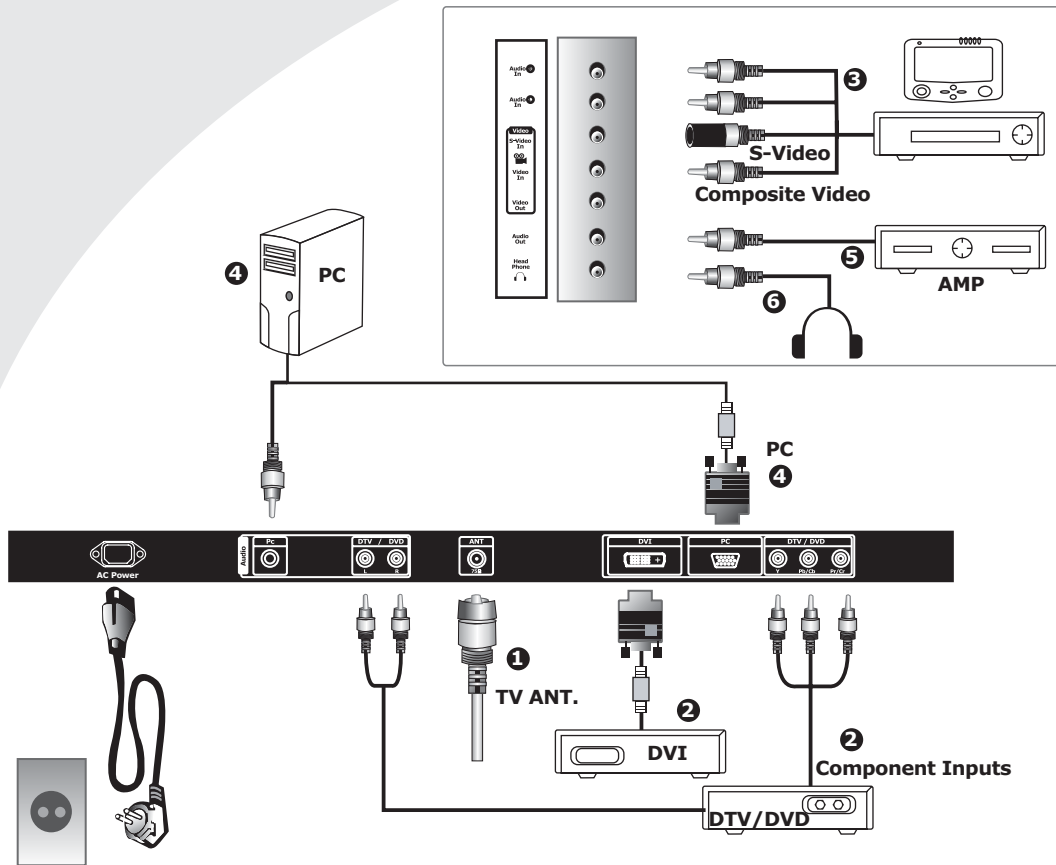 


- Whenever you connect an audio or video system to your set, ensure that all elements are switched off. Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.



## Multi-Function LCD DISPLAY

 
### Viewing the Connection of Back Panel (22, 23 inch)

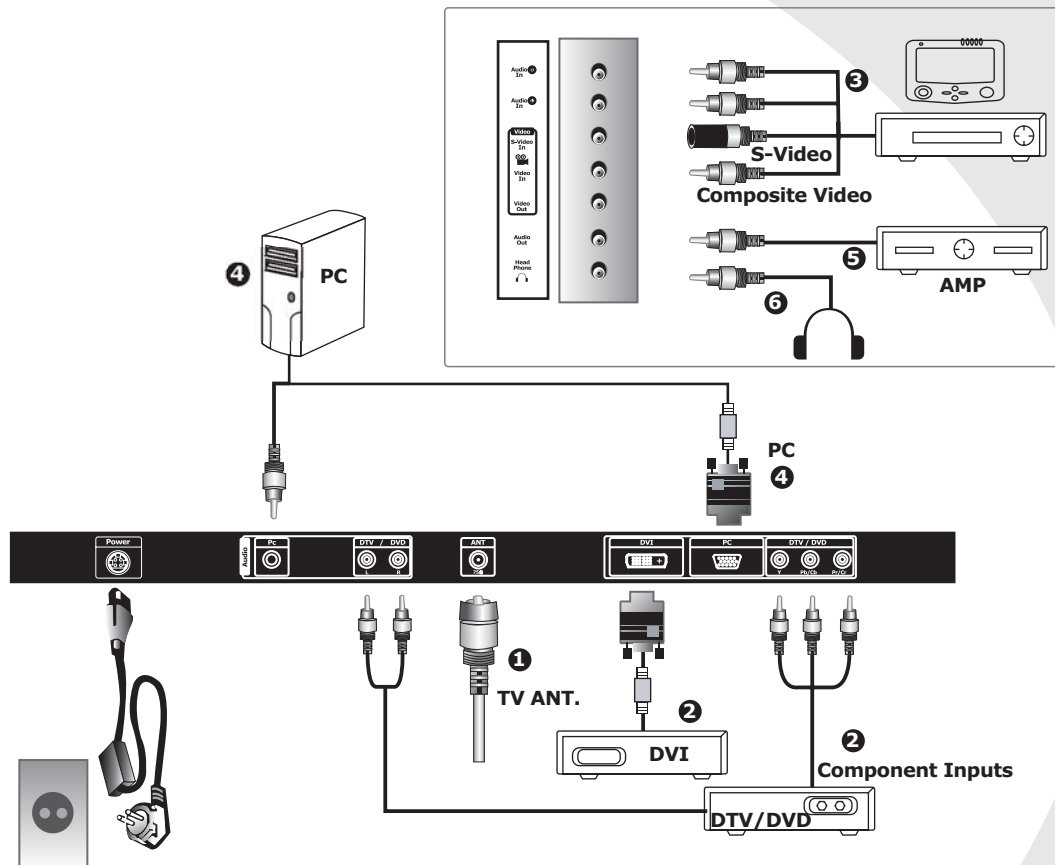

- Whenever you connect an audio or video system to your set, ensure that all elements are switched off. Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.

**Multi-Function  
LCD DISPLAY**

**Viewing the Connection of Back Panel (Under 20 inch)**

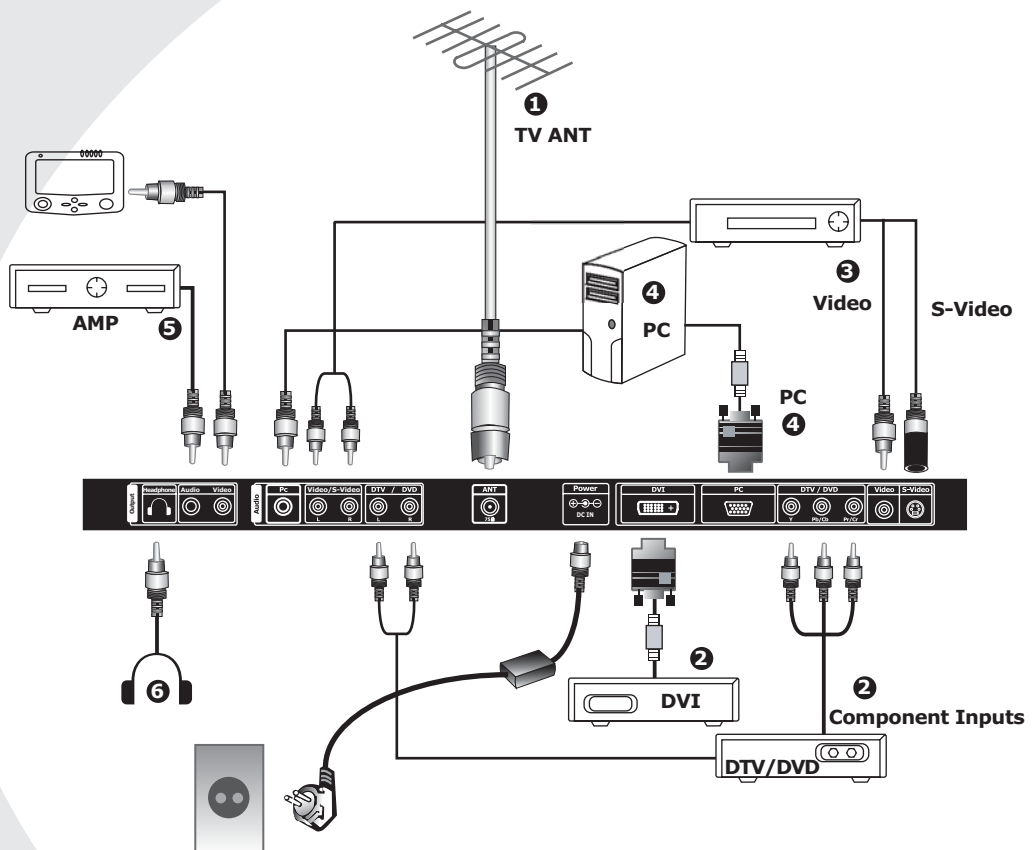 

- Whenever you connect an audio or video system to your set, ensure that all elements are switched off. Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.

## Viewing the Connection to External equipments

### ❶ Connecting an Aerial or Cable Television Network (depending on the model)

To view television channels correctly, a signal must be received by the set from one of the followngs sources;

- An outdoor aerial
- A cable television network
- A satellite network

### ❷ Connecting a Set-Top Box, VCR or DVD

**Component 1 and 2** : Connect the VCR, or DVD or PVR or DTV component cable to the comopnent input ports.

\* You can get better picture quality if you connect DVD player with component input ports

### Watching DTV

To watch digitally broadcast Programs, purchase and connect a digital set-top box

#### How to connect

Use the set's RGB, Component or DVI jack for video connections, connectors, depending on your set-top box. Then, make the corresponding audio connections.

#### How to use

Turn on the digital set-top box (Refer to the owner's manual for the digital set-top box)  
Use Sources Input Select on the remote control to select Component (DTV), RGB or DVI.

### ❸ Connecting External A/V Devices

Connect RCA or S-Video cables to an appropriate external A/V device such as a VCR, DVD, Camcorder or Game box.

### ❹ Connecting a Computer

Connect the 15pin D-SUB connector or DVI socket to the PC RGB or DVI connector.  
Connect the stereo audio cable from the sound card of PC to the PC Audio Input socket of the set.

### ❺ Audio Out (Line Out)

Connect to the External Audio Amplifier.

### ❻ Connecting Headphones

Plug a set of headphones into the 3.5mm mini-jack socket on the left-side of the set  
While the headphones are connected, the sound from the built-in speaker will be disabled.

**Multi-Function  
LCD DISPLAY**

**Remote Control Handset**

**Power**  
TV ON/OFF

**Mute**  
Switches the sound on or off

**Input Source**  
Select TV,PC/DVI,DTV,  
DVD,S/VIDEO

**Numeric buttons for  
direct channel access**

**PIP PR +/-**  
Selects a program  
for the sub picture

**MTS/Sound**  
TV select the language during  
dual language & Stereo  
broadcast.

**Auto Adjust**  
Adjust automatically  
PC mode(Resolution)

**PSM**  
Adjust the factory  
preset picture according  
to the room

**Menu**  
OSD ON

**VOLUME +/-**  
Increases / Decreases  
sound level  
Adjust menu settings

**Sleep**  
Sets the sleep timer

**TV Program**  
Auto Program  
Channel setting,  
Manual setting,  
Add, Del, CC,  
V-Chip



**Source**  
Display all input sources

**PIP Size**  
Adjust the sub picture size  
on or off

**PIP input**  
Switches the sub picture

**Position**  
Switches the sub picture to  
← ↑ → ↓ direction

**S-Swap**  
Alternates between  
main and sub sound

**Info**  
Use to see information  
on the current broadcast

**Aspect**  
Select Screen aspect Ratio  
Fill, 4:3, 1:1, Zoom1,Zoom2

**SSM**  
To select the sound appropriate  
to your viewing program character

**CH +/--(PR+/-)**  
Select a Program / Channel or  
a menu

 
**EXIT**  
Previous menu

### Inserting the Batteries in the Remote Control

You must insert or replace the batteries in the remote control when you ;

- Purchase your set
  - Find that the remote control is no longer operating correctly
1. Remove the cover on the rear of the remote control by pressing the symbol downwards and then pulling firmly to remove it.
  2. Install two AAA size batteries.
    - + on the battery against + on the remote control
    - - on the battery against - on the remote control
  3. Replace the cover by aligning it with the base of the remote control and pressing it back into place.

\* Do not mix battery types, (Ex), alkaline and manganese.

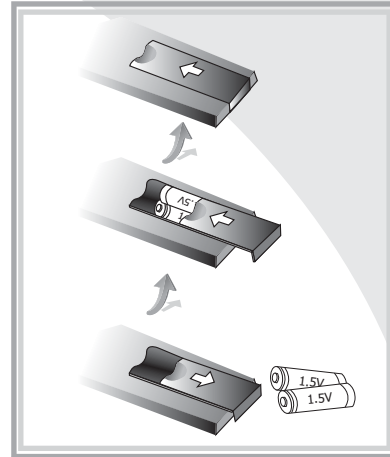

### Viewing and Selecting an Input source from External sources

Once you have connected up your various audio and video systems, you can view the different sources by selecting the appropriate input.

1. Check that all the necessary connections have been made
2. ■ Press the **SOURCES(EXIT/ i)** button of Front panel or **Source** of Remote Control
  - The input sources are displayed in the picture.
3. There are also "Video, S-Video, **DVD, DTV, DVI** and PC" one of which you can select to fit a input source.

## Multi-Function LCD DISPLAY

### Switching On and Off (LED light : Red & Green)

 **POWER**



1. Plug the mains lead into an appropriate socket.  
When the power cord is plugged in, the LED turns red.
2. Press the **POWER** button to switch on. Then the LED turns green.
3. To switch off, press the **POWER** button again. Then the LED turns red.

 


 **POWER**

**LED light**


### Displaying Information

You can see the setting status of selected by pressing the "**INFO**" button on the remote control. the information displayed varies according to the selected source.

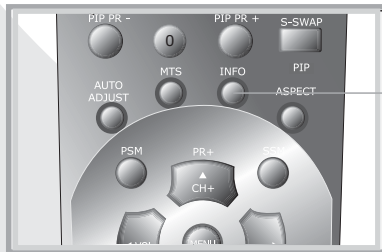

**INFO**
 
## Multi-Function LCD DISPLAY

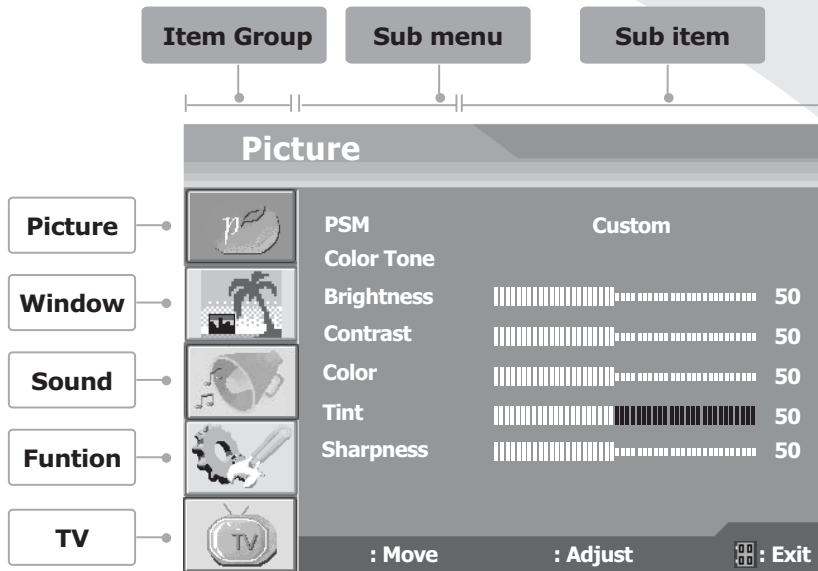

### Use of OSD(On Screen Display) menu

 
If you want to adjust the displaying, please follow the following procedure.

1. Press the **MENU** button, then main Menu will be displayed.
2. Press / button to select the item Group you want to adjust
3. Press button to enter. (to select Sub menu)
4. Sub item or adjusting Menu will appear. If Sub item shows up, repeat two or three times until you can see an adjusting Menu.
5. At the state of adjusting Menu, adjust the condition with / or / buttons
6. press the **EXIT** button to previous menu.


**Multi-Function  
LCD DISPLAY**

**Storing Channels Automatically**

You can scan for the frequency ranges available to you (and availability depends on you country). Automatically allocated programm numbers may not correspond to actual or desired programm numbers. However you can sort numbers manually and clear any channels you do not wish to watch.

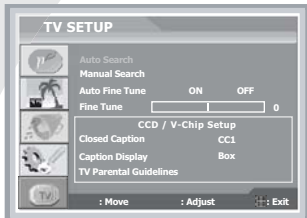

 1. Press the **MENU** button.  
The main menu is displayed.
2. Press the **TV** button to select the **TV**.  
The options available in the TV group are displayed.
3. Press the **Auto Search** button to select **Auto Search** for auto search.
4. Press the **Search** button to search the channels.
5. To stop the search before it has finished. Press the **Exit** button to search the channels.
6. When the channels have been stored, you can;  
Stored channel is indicated in orange color, can not be stored channel is indicated in gray color.

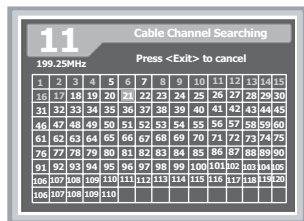





## Storing Channels Manually

You can store up to 125 channels(Air : 2~69Ch), including those received via cable networks. When storing channels manually, you can choose;

- + Whether or not to store each of the channels found.

  1. Press the **MENU** button.  
The main menu is displayed.
2. Press the **TV** button to select the **TV**.  
The options available in the TV group are displayed.
3. Press the **Manual Search** button to select the **Manual Tuning**.  
Press **Enter** button to enter
4. Setting list of channel will be displayed.
5. Press **Left**, **Right**, **Up**, **Down** button to select the channel.
6. Press Menu Key to store/Delete the channel.
7. press Exit Key to disappear from setting list of channel if setting is finished.

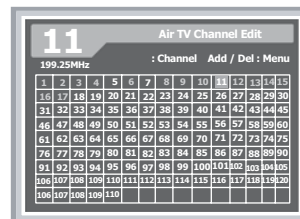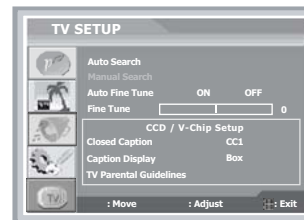


Stored channel is indicated in orange color, can not be stored channel is indicated in gray color.

## Multi-Function LCD DISPLAY
 
### Storing Channels Fine Tuning

You can set the fine picture, when the received picture is poor.

+ Each channels can be stored after tuning.

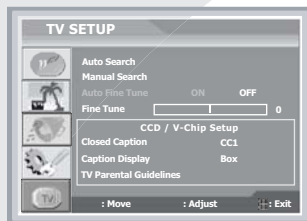

1. Press the Menu button.  
The main menu is displayed.
2. Press the or button to select the **TV**.  
The options available in the TV group are displayed.
3. Press the or button to select the **Auto Fine Tune**.
4. Select auto fine tune On or Off by pressing the or button.
5. Press the **Exit** button to exit.  
On : When change the channel, automatically correct frequency.



6. If you need to tuner the channel precisely, Press the or button to select **Fine Tune**.  
Start the Fine Tune by pressing the or button.  
When Auto Fine Tune is off.

## Viewing Closed Captions

Your TV decodes and displays the closed captions that are broadcast with certain TV shows. These captions are usually subtitles for the hearing impaired or foreign-language translations. All VCRs record the closed caption signal from television programs, so home-recorded video tapes also provide closed captions. Most pre-recorded commercial video tapes provide closed captions as well.

1. Press the **MENU** button.  
The main menu is displayed.

2. Press the **TV** button to select the **TV**.  
The options available in the TV group are displayed.

3. Press the **CC** button to select the **Closed Caption**.

4. Press the **CC** button to select the CCD Mode.  
Off -> CC1 -> CC2 -> CC3 -> CC4 -> Text1 ->  
Text2 -> Text3 -> Text4 -> XDS

XDS : indicated information regard to recent broadcast.  
(Broadcasting company / time /limited level / rest of time and so on)

6. Press the **EXIT** button to exit.

 
\* Set up background of closed caption.

1. Press the **MENU** button.  
The main menu is displayed.
2. Press the **TV** button to select the **TV**.  
The options available in the TV group are displayed.

3. Press the **CD** button to select the **Caption Display**.

4. Press the **Box** or **Shadow** button.  
Box : set up the background of caption as black box - recommend  
Shadow : set up background of caption as clarity.

5. Press the **EXIT** button to previous menu.

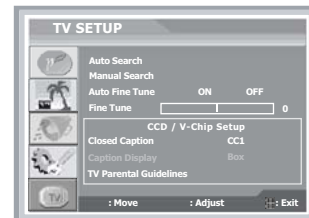


## Multi-Function LCD DISPLAY

### Set up Restrictions Using the TV Guidelines

The V-Chip feature automatically locks out programming that is deemed inappropriate for children.

 First, set up a personal identification number (Password), and enable the V-Chip. Parental restrictions can be set up using either of two methods:  
The TV guidelines.

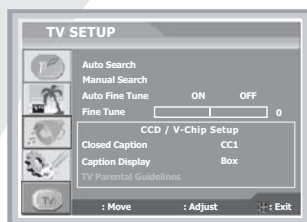

1. Press the **MENU** button.  
The main menu is displayed.
2. Press the or button to select the **TV**.  
The options available in the TV group are displayed.
3. Press the or button to select the **TV Parental Guidelines**.  
Press the button to enter.
4. The "Enter Password" screen will appear.  
Enter your 4-digit Password number.  
The default Password number for a new TV set is "0-0-0-0".
5. Press the or button to select the **TV Guidelines**.  
Press the button to enter.
6. The **TV Guidelines** screen will appear.  
Press the or button to select one of the six age-based categories:
  - TV-Y Young children
  - TV-Y7 Children 7 and over
  - TV-G General audience
  - TV-PG Parental guidance
  - TV-14 Viewers 14 and over
  - TV-MA Mature audience
7. Press the or button to select TV-Rating.
  - All : For all of age
  - FV : Fantasy Violence
  - D : Sexual suggestive Dialog
  - L : Adult Language
  - S : Sexual situation
  - V : Violence
8. Press the **EXIT** button to previous menu.


## Set up Restrictions Using the MPAA Ratings

 The MPAA rating system uses the Motion Picture Association of America (MPAA) system, and its main application is for movies.

When the V-Chip lock is on, the TV will automatically block any programs that are coded with objectionable ratings (either MPAA or TV-Ratings).


The user must first enter a Password (personal ID number) before any of the V-Chip restrictions can be set up or changed.

1. Take the same step as shown on the page 15 from No.1 to No.4.
2. Press the or button to select the **MPAA Rating**. Press the button to enter.
3. Repeatedly press the or button to select a particular MPAA category.
  - G : General audience (no restrictions).
  - PG : Parental guidance suggested.
  - PG-13 : Parents strongly cautioned.
  - R : Restricted. Children under 17 should be accompanied by an adult.
  - NC-17 : No children under age 17.
  - X : Adults only.
  - NR : Not rated.

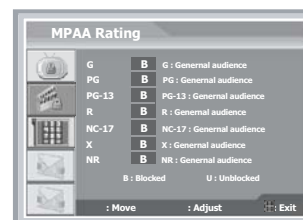

### Blocking : Enable/Disable the V-Chip

 1. Same the previous page step 1 to 4.
2. Press the or button to select the **Change Password**. Press the button to enter.
3. Press the or button to select the **Blocking**. To enable the V-Chip feature, press the or buttons so that the **Blocking** is set to **On**. (Pressing the or buttons will alternate between On and Off)

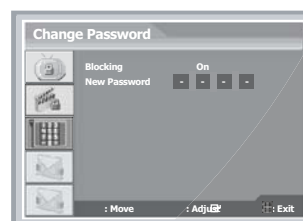


### Setting Up Your Password Number

1. Same the previous page step 1 to 4.
2. Press the or button to select the **Change Password**. Press the button to enter.
3. Press the or button to select the **New Password**. Choose any 4-digits for your **Password Number** and button to enter. Password Number select to the Remote-Control Numeric Button.
4. press the **EXIT** button to previous menu.

## Multi-Function LCD DISPLAY

### Changing the Picture Standard

 You can select the type of picture which best corresponds to your viewing requirements.

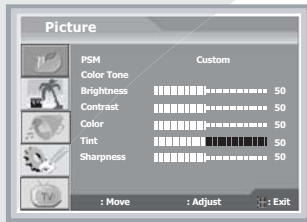

- ❶ Press the **Menu** button.  
The main menu is displayed.
- ❷ Press the **or** button to select the **Picture**.  
The options available in the **Picture** group are displayed.
- ❸ Press the button to select **sub-Menu** button.
- ❹ Press the **or** button to select the **sub-Menu** item.
- ❺ Press the button to select to change the value.

#### 1. PSM(TV / Video / S-Video / DVD)

Press the button to change the sub-item

**Dynamic -> Cinema -> Custom -> Standard**

If you make any changes to these settings, the picture standard is automatically switched to **Custom**.

You can also recall a desired picture (**Standard, Cinema, Custom, Dynamic**) with **PSM** button on the remote control. The Picture **Standard, Cinema** and **Dynamic** are programmed for good picture reproduction at the factory, and cannot be changed.

Select the option (**Contrast, Brightness, Color, Sharpness or Tint** only) to be adjusted by pressing the **or** button.

#### 2. Color Tone

You can control the 6 kinds temperature of screen color.

Press the button to change the sub-item

**Cool1 -> Cool2 -> Nomal -> Warm1 -> Warm2-> User**

#### 3. Brightness

Adjust screen brightness as bright or darkly. Press **or**, adjust the amount from 0 to 100.

#### 4. Contrast

Adjust contrast gap between the object in screen and background as softly or strongly.

Press **or**, adjust the amount from 0 to 100.

#### 5. Color

Adjust the density of color as mild or deep. Press **or**, adjust the amount from 0 to 100.

#### 6. Tint (not available for TV mode)

Adjust the shadow of color. Press **or**, adjust the amount from 0 to 100.

#### 7. Sharpness

Adjust the outline of object in screen as clear or misty. Press **or**, adjust the amount from 0 to 100.

 
#### 8. Phase(PC,DTV), Frequency(PC Only)

Press the **or** buttons to adjust the screen quality, vertical stripes may appear or the picture may be blurry.

## Setting the Window

If you want to change the feature.

- 1 Press the **Menu** button.
- 2 Press the **or** button to select the **Window**.  
The options available in the Window group are displayed.
- 3 Press the **button**
- 4 Press the **or** button to select the sub-item.

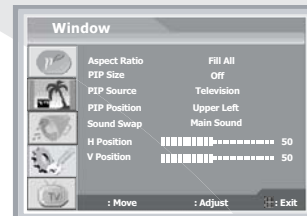

### 1. Aspect Ratio (Picture Format)

You can watch TV in various picture formats; Fill All, Zoom2, Zoom1 or One to One. Repeatedly press the Aspect button to select your desired aspect ratio picture format.

**Wide LCD :** Fill All->Zoom2->Zoom1->4:3(TV, Video, S-Video, DVD), Fill All->4:3(PC, DTV, DVI)

**Normal LCD :** Fill All->Zoom2->Zoom1->Wide(TV, Video, S-Video, DVD), Fill All->Wide(PC, DTV, DVI)

### 2. PIP Size(PC, DTV, DVI)

 
PIP is the picture in picture. Adjust the size of PIP window.  
Press The **button** Select the sub-item.

**Off -> Small -> Large**

### 4. PIP Source

Choose the input source in PIP window. Press The **button** Select the sub-item.

**TV, Video, S-Video**

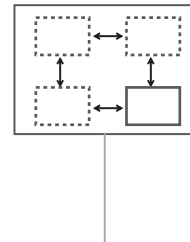

### 5. PIP Position

Move the position of PIP window Press the **button** select the sub-item.  
Or press the Remote-control POSITION button.

Upper Left -> Upper Right -> Lower Left -> Lower Right

### 6. Sound Swap

Exchange the main and sub sound.  
Press The **button** to exchange the sub-item.

Main ↔ Sub

### 7. H Position(PC Only)

Press the **or** buttons to adjust the Horizontal Position.

 
### 8. V Position(PC Only)

Press the **or** buttons to adjust the Vertical Position.

Multi-Function  
LCD DISPLAY

## Changing the Sound Standard

You can select the type of special sound effect to be used when watching a given broadcast.

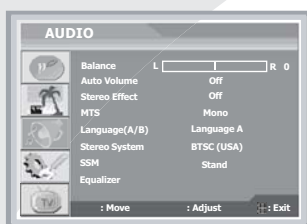

- ❶ Press the **Menu** button.
- ❷ Press the **or** button to select the **Sound**.  
The options available in the Sound group are displayed.
- ❸ Press the **or** button to select the sub-menu.
- ❹ Press the **or** button to select the sub-item.
- ❺ Press the **EXIT** button to previous menu.

**1. Balance**

Press the **or** button to change the balance level between the left and right sound.

**2. Auto Volume**

Reduces the differences in volume level between broadcasters.

Press the **or** button to select **Off / On**.

**3. Stereo Effect**

Press the **or** button to select **Off / On**.

**4. MTS**

Mono/Stereo/SAP reception.

Press the **or** button to select Mono, Stereo or SAP.

**Language selection** for dual language broadcast

If a programme received in two languages (dual language), you can switch to **Language A, Language B or Language A+B** by pressing the Language(A/B) sub-item.

**Language A** sends the primary broadcast language to the loudspeakers.

**Language B** sends the secondary broadcast language to the loudspeakers.

**Language A+B** sends a separate language to each loudspeakers.





**5. Stereo System**

Select the stereo system by nation .

 
Press the **or** button to select **BTSC(USA), A2(KOREA) or EIA-J(JAPAN)**.






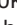


### 6. SSM(Sound Status Memory)

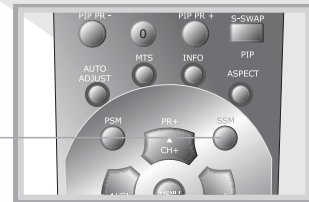Press the  or  button to select **SSM**.  
Press the  or  button to select a sound setting on the **SSM** menu.

You can also recall a desired sound (**Stand, Music, Movie, Speech or User**) with **SSM** button on the remote control. The sound Stand, Music, Movie and Speech are programmed for good sound reproduction at the factory and cannot be changed.



### 7. Equalizer

Press the  or  button to select the **Equalizer**.  
Press the  or  button to select the frequency bands of 0.1 0.5 1.5 5.0 10KHz.  
Press the  or  button to adjust the appropriate value of the selected frequency band.





## Function


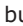
When you start using your set for the first time, you must select the language which will be used for displaying menu and indicators.

### 1. LANGUAGE

Press the **Menu** button.


Press the  or  button to select the **Function**.




The options available in the **Function** group are displayed.

Press the  or  button to select the **Language**.



### 2. Auto Adjust (PC only)

Press the **MENU** button and then use  or  button to select the **FUNCTION** menu.


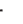
Press the  button and then use  or  button to select **Auto Adjust**.




When **Auto adjust** has finished, **OK** will be shown on screen.

If the position of the image is still not correct, try Auto adjustment again.

Although the image is still not correct, your set is functioning properly but needs further adjustment.

### 3. Osd Time-Out

Press the MENU button and then use  or  button to select the FUNCTION menu.



Press the  button and then use  or  button to select **Osd Time-Out**.




The preset time out intervals :



10 -> 15 -> 20 -> 25 -> 30 -> 35 -> 40 -> 45 -> 50 -> 55 -> 60 (Minutes)

### 4. Sleep Timer

You can select a time period of between off and 240 minutes after which your set automatically switches off.

Press the MENU button and then use  or  button to select the FUNCTION menu.

Press the  button and then use  or  button to select **Sleep Timer**.

Select the number of minutes after which your set switch on by pressing the  or  button repeatedly.

The preset time intervals :

Off -> 10 -> 20 -> 30 -> 60 -> 90 -> 120 -> 180 -> 240 (Minutes)

## 1. Features of Product

NTSC TV(One Tuner)  
 One Component Jacks(DTV, DVD)  
 One Composite and S-Video  
 (option : mounted in left-hand Side of case for user friendly)  
 DVI-D  
 PC input  
 TV Stereo  
 PIP Window  
 new & graphic Multi OSD language  
 (English, French, Spanish, Korean, Chinese, Japane)  
 Audio Output Power (Over 22inch : 4Watts/Ch, Under 20inch : 2.5Watts/Ch )  
 Channel Edit/Delete  
 Closed Caption  
 V-Chip  
 Power Board Built-In(Over 26inch)  
 Remote Control Unit(57keys)

## 2. Overview Specfication

### A. Summary of Specifications

Items		Specifications
<b>Display</b>	<b>Target Panel Size</b>	LCD 17/22/23/26/32 inch
	<b>Aspect Ratio</b>	4:3, 16:9 or 15:9
	<b>Resolution</b>	SXGA(1280x1024), WXGA(1280x768, 1280x720, 1366x768)
	<b>Refresh Rate</b>	50Hz, 60Hz
	<b>Maximum Pixel Rate</b>	110 MHz
	<b>Interface</b>	Daul Channel LVDS, Single Channel LVDS

## Multi-Function LCD DISPLAY

<b>Supported Signals</b>	<b>Analog PC</b>	H Frequency Range : 20 ~ 82 kHz	
		V Frequency Range : 55 ~ 90 Hz	
		Maximum resolution : 1280x1024 75Hz	
		Maximum pixel rate : 135 MHz	
		DTV mode support : 720P, 1080i	
		Separate / Composite / SOG sync support	
	<b>Digital PC (DE Mode)</b>	H Frequency Range : 20 ~ 82 kHz	
		V Frequency Range : 55 ~ 75 Hz	
		Maximum resolution :1280x1024 75Hz	
		Maximum pixel rate : 135 MHz	
	<b>CVBS, S-Video</b>	NTSC-M PAL-B/G/H/I SECAM	
		<b>DVD Component</b>	480i
		<b>DTV Component</b>	1080i
720P			
480P			
<b>TV</b>	NTSC M Systems		
<b>Connection (Video)</b>	<b>TV</b>	ANT In (75 ohms coaxial cable)	
	<b>CVBS</b>	Composite RCA In (75 ohms 0.7/1.0 Vp-p)	
	<b>S-Video</b>	Mini Din-4Pin x 1 S-Video In	
	<b>Component</b>	RCA x 3 (75 ohms, 0.7/1.0 Vp-p) YPbPr : DTV / YCbCr : DVD	
	<b>PC Analog</b>	RGB D-Sub 15Pin (75 ohms $\pm 10\%$ , 0.7Vp-p $\pm 5\%$ )	
	<b>Component 2</b>	Y-Pb-Pr DVD RCA In (75 ohms , 0.7/1.0 Vp-p)	
	<b>PC DVI</b>	DVI- D	
	<b>Video Out</b>	RCA x 1(75 ohms, 0.7/1.0 Vp-p)	
<b>Connection (Audio)</b>	<b>TV</b>	Tuner SIF In	
	<b>PC / DVI</b>	RCA x 2, Stereo Sound In (500mVrms)	

## Multi-Function LCD DISPLAY

<b>Connection (Audio)</b>	<b>Video / S-Video</b>	RCA x 2, Stereo Sound In (500mVrms)
	<b>Component</b>	RCA x 2, Stereo Sound In (500mVrms)
	<b>Speaker Out</b>	2.5W(under 20 inch), 4W(Over 22 inch) x 2
	<b>Headphone Out</b>	Stereo Headphone Jack
	<b>Audio Out</b>	Stereo Headphone Jack
<b>TV</b>	<b>Tuning System</b>	NTSC-M
	<b>Tuning Supports</b>	Air / Cable (STD, HRC, IRC)
	<b>Tuning Range</b>	Air Ch : 2 ~ 69 Ch, Cable Ch : 1 ~ 125 Ch
	<b>Channel Save Capacity</b>	All Channel for Air and Cable (181 Ch)
	<b>Sound System</b>	BTSC (USA), A2 (KOREA), EIA-J (Japan)
	<b>MTS Support</b>	Mono, Stereo, SAP
<b>OSD</b>	<b>Color</b>	16 colors
	<b>OSD Type</b>	Graphic & Text
	<b>Language Support</b>	English, French, Spanish, Korean, Chinese, Japanese
	<b>Maximum OSD Size</b>	512 (H) x 360 (V)
<b>User Functions</b>	<b>Picture</b>	Contrast, Brightness, Sharpness, Color, Tint, Color Temp, PSM(Picture Status Memory) Phase, Frequency
	<b>Window</b>	Aspect Ratio, PIP Size, PIP Source, PIP Position, Sound Swap, H Position, V Position
	<b>Audio</b>	Balance, Auto Volume, MTS, Language (A/B), Stereo System, 5 Band Equalizer SSM(Sound Status memory)
	<b>Function</b>	Language, Auto Adjust, OSD Time Out, Sleep Timer
	<b>TV</b>	Auto Search, Manual Search, Auto Fine Tune, Fine Tune, Closed Caption, Caption Display V-Chip : TV Guidelines, MPAA Rating, Blocking On / Off, Change the Password
<b>Power</b>	<b>Supply Voltage</b>	DC 12V (17 inch), AC 220 / 110V 50~60Hz
	<b>Power Consumption</b>	-

## Multi-Function LCD DISPLAY

### B. Supported Timings(\* TBD)

Section	Resolution	H Frequency ( kHz )	V Frequency ( Hz )	Pixel Frequency ( MHz )	Comment
PC	640x400	37.861	85.08	31.5	
	640x350	31.469	70.087	25.175	
	640x350	37.861	85.08	31.5	
	640x480	31.469	59.94	25.175	
	640x480	35.000	66.667	30.24	
	640x480	34.940	69.884	28.513	
	640x480	37.861	72.809	29.765	
	640x480	37.500	75.0	31.5	
	640x480	43.269	85.008	36.0	
	720x400	31.469	70.087	28.322	
	720x400	37.927	85.039	35.5	
	800x600	35.156	56.25	36.0	
	800x600	37.879	60.317	40.0	
	800x600	43.764	70.02	45.513	
	800x600	48.077	72.188	50.0	
	800x600	46.875	75.0	49.5	
	800x600	53.674	85.061	56.25	
	832x624	49.726	74.551	57.284	
	1024x768	48.780	60.001	64.11	
	1024x768	56.476	70.069	75.0	
	1024x768	57.703	72.039	78.476	
	1024x768	60.241	74.927	81.724	
	1024x768	60.030	75.029	78.75	
	1024x768	68.677	84.997	94.5	
1024x768	68.677	84.997	94.5		

## Multi-Function LCD DISPLAY

	1280x1024	79.976	75.025	135.0	
	1280x1024	64.754	60.06	108.992	
	1280x1024	78.125	72.005	135.0	
	1280x1024	63.600	60.0	108.883	
	1280x1024	74.620	70.0	128.943	
	1280x1024	76.824	72.0	132.752	
	720x480	31.469	59.94	25.175	
	1280x720	44.964	59.94	74.176	
	1920x1080	33.750	60.0	74.25	Interlace

Please surely note above specifications can be changed as per further improvement without notice.

## Troubleshooting

If you cannot solve the problem using the instruction below, note the model and serial number of your set and contact your local dealer.

Problem	Check Item
No picture and sound	<ul style="list-style-type: none"> <li>- Make sure the main lead has been connected to a wall socket.</li> <li>- Make sure you have pressed the Power button. LED light of the Power/Standby indicator is in red.</li> <li>- Make sure picture contrast and brightness settings.</li> <li>- Check the volume</li> </ul>
No picture/No picture from AV terminal	<ul style="list-style-type: none"> <li>- Check the brightness setting of the display</li> <li>- Lamp may have malfunction</li> <li>- Make sure a cable with no Video input signal is connected to the S-Video Input terminal</li> </ul>

**Multi-Function  
LCD DISPLAY**

Normal picture, but no sound	<ul style="list-style-type: none"> <li>- Check the volume</li> <li>- Make sure the sound is not muted. MUTE button has been pressed on the remote control</li> <li>- Make sure the connections of the optional speaker systems are securely inserted</li> <li>- Make sure the setting of AV Output terminal</li> </ul>
Picture is too light	<ul style="list-style-type: none"> <li>- Make sure color and contrast settings</li> </ul>
Picture is too dark	<ul style="list-style-type: none"> <li>- Make sure brightness setting is not set too low</li> <li>- Check to see if brightness setting</li> <li>- Lamp may have malfunction</li> </ul>
Remote control does not work	<ul style="list-style-type: none"> <li>- Change the batteries</li> <li>- Make sure the infrared transmitter window is not receiving strong light such as light from fluorescent lamps</li> </ul>
No picture from AV OUT terminal	<ul style="list-style-type: none"> <li>- Make sure AV Input is not set</li> <li>- Make sure the input source other than AV</li> </ul>
The picture is not sharp	<ul style="list-style-type: none"> <li>- The reception may be weak</li> </ul>
The picture moves	<ul style="list-style-type: none"> <li>- The state of the broadcast may also be bad</li> <li>- Make sure the antenna is facing the right direction</li> <li>- Make sure outside antenna is not disconnected</li> </ul>
The picture is doubled or tripled	<ul style="list-style-type: none"> <li>- Make sure the antenna is facing the right direction</li> <li>- There may be reflected electric waves from mountains or buildings</li> </ul>
The picture is spotted	<ul style="list-style-type: none"> <li>- There may be interference from automobiles, trains, high voltage lines, neon lights, etc.</li> </ul>
There are stripes on the screen or colors fade	<ul style="list-style-type: none"> <li>- Is the unit receiving interference from other devices? Transmission antennas of radio broadcasting stations and transmission antennas of amateur radios and cellular phones may also cause interference</li> <li>- Use the unit as far apart as possible from devices that may cause possible interference</li> </ul>