onn.

ONN 32" 2.1 SOUNDBAR



Model:100004118

User Manual

onn.

Ver.01 Rev. 18/07/2019

(+ -) (- +): HDMI Cable , length 1.7m 2 x AAA

SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

ensure that all electrical connections (including the mains plug, extension leads

and inter-connections between the pieces of equipment) are properly made and

in accordance with the manufacturer's instructions. Switch off and withdraw the

consult your dealer if you are ever in doubt about the installation, operation or

tandards but, like any electrical equipment, care must be taken if you are to obtain the

DO read the operating instructions before you attempt to use the equipment.

mains plug before making or changing connections.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DON'T allow electrical equipment to be exposed to dripping or splashing, or objects

DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close, to equipment. High temperatures can melt plastic and lead to fires

DON'T use makeshift stands and NEVER fix legs with wooden screws. To ensure complete

DON'T listen to headphones at high volume, as such use can permanently damage your

DON'T continue to operate the equipment if you are in any doubt about it working

T use equipment such as personal stereos or radios that will distract you from the requirements of traffic safety.

sure that your family knows how to do this. Special arrangements may need to be

rmally or if it is damaged in any way – switch off remove the mains plug from

NEVER let anyone especially children push anything into holes, slots or any other

NEVER guess or take chances with electrical equipment of any kind. It is better to

ening in the equipment – this could result in a fatal electric shock

Thank you for purchasing your new ONN 32" 2.1 SOUNDBAR

Read all the safety instructions carefully before use and keep this

also find some hints and tips to help you resolve any issues

instruction manual for future reference.

Unpacking

The following items are included:

We recommend that you spend some time reading this instruction manual

so that you fully understand all the operational features it offers. You will

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so

DO be careful with glass panels or doors on the equipment.

filled with liquids, such as vases.

provided and according to the instructions.

made for infirm or handicapped people.

best results and safety is to be assured.







 






Ver.01 Rev.18/07/2019

Ver.01 Rev. 18/07/2019



Product Overview

Front View

Volume status LED

Source led indicator Standby: LED indicator show dim red

Volume mute: Solid White HDMI:Solid Red

Blue I FD fast flash (Pairing mode)

Blue LED slow flash(Disconnect)

. Remote Control Sensor

Safety Warnings

Unplug the unit from the mains socket before a

Service

How to get service:

will pay for return shipping.

Call 1-800-925-6278. contact: Walmart Inc. Walmart.com, Bentonville, AR 72716

based upon the Walmart, Inc. Limited Warranty Statement.

the unit's date of purchase, place of purchase and model/serial number ready. The model/seria

your unit requires service, the service location will be at the sole discretion of Walmart, Inc.

At the sole discretion of Walmart, Inc., item will either be repaired at an Authorized Service Centre or directly exchanged for a new or refurbished/remanufactured unit. If repaired

at an Authorized Service Center, a pre-paid shipping label will be provided and Walmart, Inc.

which is evidence that the product is within the warranty period must be presented to obtain

A unit sold in "As-Is". "Factory Reconditioned". "Factory Re-Certified". or "Refurbished" condition or with faults

The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

FCC RF Radiation Exposure Statement Csution:To manintain compliance with the FCC'S RF


Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO AN

A 32" Smart Soundbar that has been modified or incorporated into other products.

CAUTION ISSUE DISCUSS DISCUSI DISCUSI

Remote Control

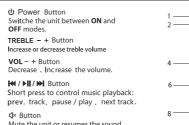





Battery Replacement for the Remote Control

 (+) and (-) ends of the batteries match the






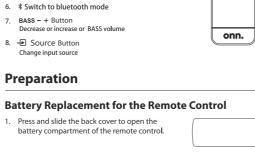

(+) and (-) ends indicated in the battery

Using the Audio Connection

 
Using the AUX Connection Depend on connector of TV.you can either use a 3.5mm to RCA stereo audio cable (included o connect the TV's audio output socket to the soundbar's AUX IN socket Bottom view of the unit



Using the OPTICAL Connection

Connections

Use an optical cable (included) to connect the TV's **OPTICAL OUT** socket to the

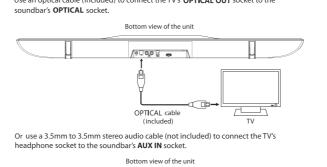





Ver.01 Rev.18/07/2019

Connecting to the Power outlet Supply

 This unit is designed to operate with the provided mains adapter soundbar's AUDIO IN (L/R) socket



Using the HDMI Connection **Connection | Section | Connection | Connect the TV's | HDMI | Socket to the soundbar's HDMI socket.

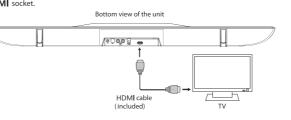

Establish Bluetooth connection The speaker is equipped with Bluetooth to allow wireless playback from any Bluetooth-enabled

phone or tablet. . When unit power on, press source button on soundbar change to bluetooth mode, and then

short press this button about 2s to enter bluetooth pairing mode, blue led indicator fast flash, 3. Select "Onn 32" soundbar". your device is paired with the soundbar when the blue indicator light

I. After the speaker and your device are paired, you can stream music from your device to the soundbar.



Connect the other end of the Power Cord cable to the AC 100-240V socket at the rear of

Pairing the subwoofer

Soundbar and subwoofer be paired in factory default setting, when unit power on, will be connected automatically in few seconds; if cannot be connected in 10S, subwoofer's red led will be slow blinking until them be paired. Pair manually: Long press source and vol+ button at same time

Connecting the unit to any other power source may damage the unit. Unwind the mains adapter cable to its full length. Connect the end of the cable to the **DC IN** Socket at the bottom of the unit and then connect the AC power adapter to the Power outlet.

To switch the unit off completely, unplug AC power adapter from the Power outlet.

Rear View of the Subwoofer

on soundbar for 3s, and then long press pairing button on subwoofer for 3s, Soundbar's current LED indicator and subwoofer's red led will fast blink until be paired each other. After connected, led indicator stay solid bright.

If subwoofer and soundbar is disconnected somehow (lose power etc), it will always automatically reconnect, when unit still stay unconnection, please goes to manual pair, follow above

When soundbar in standby mode, after 1min, subwoofer will go to standby mode as well, led indicator goes off.

Ver.01 Rev. 18/07/2019

Maintenance Cleaning the Unit

. Drill 2 parallel holes (Ø 8 mm each according to wall type) in the wall. The distance between


Ver.01 Rev.18/07/2019

10 Ver.01 Rev.18/07/2019

Align and attach the adhesive side of the pad to the foot pad cutaway section on

Hints and Tips

If a problem occurs, it may often be due to something very minor. The following table

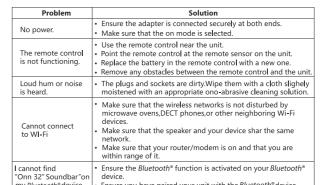

Ver.01 Rev. 18/07/2019

To control this AirPlay 2-enabled speaker, iOS 11.4 or later is required on your

When you first connect the unit to the Power outlet, the unit will be in **OFF** mode. Set up your device in the Apple Home app located on your The LED indicator will not light up. iPhone or iPad Press & on the unit or the remote control to switch the unit to ON mode. The LED

VΠ

elect one music player, such as Apple music app, Click the Airplay ico

I Select the device name and click to connect, Play control when casting, like

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

2. Follow the Apple Home app configure process

Open Apple Home app.
Click the "+" icon , select "Add Accessory"

Click "Don't Have a Code or Can't Scan"

Search the device and when you find the device, click the device name.

When prompted "Add Accessory to Network" click Allow Waiting for network connection

volume down/up, play/pause, prev/next etc

After networking successfully, Accessory Added.

Go to My Home, you can find there has a new device that you added.



Ver.01 Rev. 18/07/2019

Input AC 100-240V ~50/60Hz, 1.2 A

812mm(W) x 68mm(D) x 82mm(H

internal power supply input 100-240V AC 50/60Hz US standard

Ver.01 Rev.18/07/2019

Output DC 18V, 2.0A

2 x 15 W(RMS)

1.6 Kg

General Operation

indicator will light up Red.

Press θ to switch the unit back to **OFF** mode.

If you wish to turn the sound off, press d× on the remote control. Press d× again to

Source change

WiFi streaming: Once detect signal from AirPlay 2, auto switch to WiFi mode to play music. In standby mode, still can detect signal and wake up to stream

Bluetooth: In Bluetooth mode, once unit be paired with device, can play music if WiFi is playing music, stop or pause WiFi playing first.

Factory Default Resetting

when speaker power on, hold the Volume+ and- for 15s, the speaker will reset factory default setting.

The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE).

All trademarks are the property of their respective owners and all rights are acknowledged.

Walmart, Inc. Limited Warranty

LIMITATION OF WARRANTY

VERBAL OR WRITTEN INFORMATION GIVEN BY WAL-MART STORES, INC., ITS AGENTS OR EMPLOYEE IALL CREATE A GUARANTEE OR IN ANY WAY INCREASE OR MODIFY THE SCOPE OF THIS

 
REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF
THE CONSUMER. WAL-MART STORES, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR
CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF
ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF
WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF ARKANSAS.
 EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLED WARRANTY OF
MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

S-3049 PRODUCT GUIDE Ver.01 Rev. 08/07/2019 Unfold dimension: 450X300mm, fold dimension: 150X90mm (accordions) Material: 80g writing paper Printing: black, double sides Material Number: 47301096

www.walmart.com
















1. Source LED (AUX in:Green Bluetooth: Blue Optical: Purple ARC: Red Volume Mute: White)

1 2 3 4 5

2. De Source Button 3. VOL - Buttor

Remote Control Sensor

 Solid blue(Connected)









Ver.01 Rev. 18/07/2019

Ver.01 Rev.18/07/2019









Bottom View

Rear View of Subwoofer

POWER Indicator

. PAIR Button

Light up red when the pairing succeed

/0.00 P

AUX IN Port 2. OPTICAL Port 3. AUDIO IN (L/R) Port

3. AC 100~240V Power Socket

 
Switch the subwoofer **ON** or **OFF**

Ver.01 Rev.18/07/2019


Ver.01 Rev.18/07/2019







Preparation

 

Ver.01 Rev. 18/07/2019

Ver.01 Rev.18/07/2019

Please note that the operating distance may vary depending on the brightness of $% \left\{ 1,2,...,n\right\}$




battery leakage may occur and result in physical injury, and / or property damage, and / or fire When the battery is exhausted, the remote control will not function.


Do not dispose of used batteries as domestic waste. Dispose of them in accordance with loca

Handling the Battery
Improper or incorrect use of batteries may cause corros personal injury or damage to property.
Only use the battery type indicated in this manual.

Remote Control Operation Range The remote control sensor on the front unit is sensitive to the remote control's

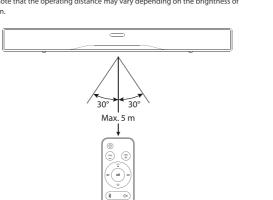


commands up to a maximum of 5 metres away and within a maximum of a 60° arc.

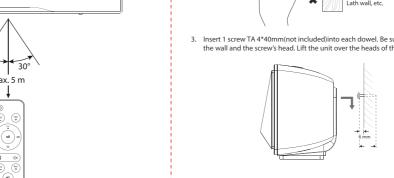

Ver.01 Rev. 18/07/2019

 
Wall Mounting



. Firmly fix 1 dowel D10.2*L30mm (not included) into each hole in the wall if necessar



the wall and the screw's head. Lift the unit over the heads of the screws and slot into place

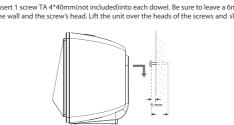


To clean the unit, wipe the case with a slightly moist, lint-free clot

Do not use any cleaning fluids containing alcohol, ammonia or abrasive

Do not spray aerosol at or near the unit. Attaching Self Adhesive Pads

Peel back the adhesive cover on the foot pad.

Press the pads firmly to ensure they are well secured

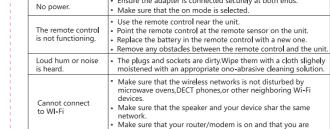

Dimension 123mm(W) x 266mm(D) x 230mm(H) Features and specifications are subject to change without prior notice.

Specifications

Soundbar

Subwoofer

Model: ONN 32" 2.1 SOUNDBAR

AC Power Adapter

Peak Power

Net Weight

Dimension

Power Cord

Peak Power

Power Consumption

Speaker Output Power 40W(RMS)

Net Weight 2.7 Kg

Speaker Output Power

(The remote control supplied with) This product contains a button cell battery. If the button cell battery is swallowed,it can cause severe internal burns in just 2 hours ar Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

Notes for battery disposal preserve our environment, dispose of used batteries according to your local laws or regulations

If you think batteries might have been swallowed or placed inside any part of the body, seek

 
For more information, please contact the local authority or your retailer where you purchased t

Ver.01 Rev. 18/07/2019

Press **VOL** +/- on the unit or the remote control to adjust the volume.

Disconnect the AC power adapter from the Power outlet if you want to switch the

When the unit is idle for approximately 30 minutes, it will automatically switch to Standby.



Ver.01 Rev. 18/07/2019

Warranty