

**User Manual of MID
(Tablet PC)**

User Manual For MID

<i>Welcome</i>	4
<i>Important Notices</i>	5
<i>Keys and Functions</i>	6
<i>I. Getting Started</i>	7
<i>1.1 Turn on/off</i>	7
<i>1.1.1 Turn on</i>	7
<i>1.1.2 Turn off</i>	7
<i>1.2 Lock/unlock G-sensor</i>	7
<i>1.3 Lock/unlock the screen (sleepmode)</i>	7
<i>1.4 Connect to a computer</i>	8
<i>1.4.1 Connect to PC via USB cable</i>	8
<i>II. Your Home Screen</i>	9
<i>2.1 Icons on Home Screen</i>	9
<i>2.2 Operations on Home Screen</i>	10
<i>2.2.1 Add app icon to home screen</i>	10
<i>2.2.2 Delete app icon from home screen</i>	10
<i>2.2.3 Add widgets to your home screen</i>	10
<i>2.2.4 How to set wallpaper</i>	10
<i>2.2.5 How to hide status bar</i>	10
<i>2.2.6 Find your recent operations</i>	10
<i>III. Network Connection</i>	11
<i>3.1 Wi-Fi</i>	11
<i>3.1.1 Turn on Wi-Fi</i>	11
<i>3.1.2 Turn off Wi-Fi</i>	11
<i>3.1.3 Add a Wi-Fi network</i>	12
<i>3.1.4 Forget a Wi-Fi network</i>	12
<i>3.3 Tethering & portable hotspot</i>	13
<i>3.3.1 USB tethering</i>	13
<i>3.3.2 Portable Wi-Fi hotspot</i>	13
<i>3.3.3 Portable Wi-Fi hotspot settings</i>	13
<i>3.3.4 Help</i>	13
<i>3.4 VPN settings</i>	14
<i>3.4.1 Add VPN</i>	14
<i>3.4.2 VPNs</i>	14
<i>3.5 Mobile networks</i>	14
<i>3.5.1 Data enabled</i>	14
<i>3.5.2 Data roaming</i>	14
<i>3.5.3 Access Point Names</i>	14
<i>3.5.4 Use 2G/3G networks</i>	15

User Manual For MID

3.5.5Network operators.....	1 5
IV.Internet Browsing.....	1 6
4.1Internet Browsing.....	1 6
V.Install and Manage Apps.....	1 7
5.1Install and Manage Apps.....	1 7
VI.Multi-media Functions.....	1 9
6.1Music.....	1 9
6.2Video.....	2 0
6.2.1Video Playback.....	2 0
6.3Gallery.....	2 1
6.4Camera.....	2 2
6.4.1Take photos.....	2 2
6.4.2Record videos.....	2 3
6.4.3Turn off camera.....	2 3
6.5E-book reader.....	2 3
6.5.1Bookshelf.....	2 4
6.5.2Download Books.....	2 4
6.5.3Author and filename.....	2 4
VII.Settings.....	2 5
7.1Set display.....	2 5
7.2Set applications.....	2 5
7.3Set language & keyboard.....	2 6
7.4Storage.....	2 7
7.5Set location & security.....	2 7
VII.Battery.....	2 8
Troubleshooting.....	3 0

User Manual For MID

Welcome

Thank you for purchasing our MID (tablet PC) product.

It brings you much convenience for your business (supports Word, Excel, send & receive e-mails...) and entertainment (supports 3D game, chat with friends, watch movies, read eBooks.....).

Running on Android 4.0, with a 1.2 GHz processor and highly responsive capacitive touch screen, it brings you wonderful user experience.

Before beginning, please refer to this user manual carefully.

As the software of the tablet updates quickly, the user manual may not cover all aspects of new technologies.

Important Notices

- ⊙ The new battery will be in its best condition after 2-3 times full charge and discharge.
- ⊙ While using the earphone, if the volume is excessively high it may cause hearing damage. So please adjust the volume of the player to a moderate level and balance the time of using.
- ⊙ Do not disconnect the tablet suddenly when formatting or uploading and downloading, which can lead to program errors.
- ⊙ Do not dismantle the tablet by yourself, and do not use alcohol, thinner or benzene to clean its surface.
- ⊙ Do not use the tablet while driving or walking.
- ⊙ The tablet is not moisture and water resistant. Please do not use it in a damp environment.
- ⊙ Do not drop or hit it to hard surface, or the screen may get damaged.
- ⊙ Do not upgrade the firmware by yourself. The tablet should be upgraded with the right firmware and right method offered by us. If upgrade is needed, please contact us.

I. Getting Started

1.1 Turn on/off

1.1.1 Turn on

To start your tablet, pull and hold the power key downwards to “⏻” position for 2 seconds. You will be greeted with a Penguin icon, then an ANDROID logo,

and then your Home screen. Drag the slider





upwards on the lower righthand corner.



1.1.2 Turn off

When the tablet is on, to shut off your tablet, pull and hold the power key downwards to the “⏻” position until the “System options” dialog appears and tap “Power Off”, then “your device will shut down” dialog appears. Tap “OK”.

1.2 Lock/unlock G-sensor


When the G-sensor function is activated, the tablet screen rotates by gravity. Pull the power key upwards to the position of “⏻” to lock the G-sensor function. Pull it downwards to enable the function. The G-sensor indicator  turns into  after being locked.

1.3 Lock/unlock the screen (sleep mode)

To save battery, you should put your tablet in sleep mode by turning off the LCD display. To do this, pull the power key downwards and immediately release it. Do it again to bring up the lock screen.

1.4 Connect to a computer

1.4.1 Connect to PC via USB cable

When tethered to PC with a USB cable, the  icon appears at the left side of the status bar. Hold and slide the icon downwards, select and tap “USB connected”, then “Turn on USB storage”, then “Turn on USB storage” dialog appears. Tap “OK”.

Note: For the first time connecting it to PC, it may be required to install a driver to make your PC recognize it as USB flash disk. You can use the driver in the attached CD to install it according to your PC's OS like Vista, Win7....



II. Your Home Screen




 




2.1 Icons on Home Screen

An example of the home screen is shown above. You can fill the space with any combination of shortcuts, widgets, and folders you like. Some pre-installed shortcut icons will appear at the bottom, and a Google Search Widget appears at the top.

When you power up your tablet for the first time, you'll see the main home-screen panel. This panel is typically centered; you can access additional panels on either side of the main one by swiping your finger left or right.

At the top of the Home Screen is your Status Bar.


-  -Home: touch it to go back to the home screen
-  -Return: to return to the previous menu
-  -Menu: touch to show the submenu (at some interfaces, there may be not a submenu)
-  -Vol-: touch it to reduce the volume
-  -Vol+: touch it to increase the volume
-  -App Panel: touch it to view all apps

2.2 Operations on Home Screen

2.2.1 Add app icon to home screen

 
Within the App Panel, touch and hold any icon for about 2 seconds, the icon will be in the movable status and appear on the home screen.

2.2.2 Delete app icon from home screen

On the main screen, touch and hold undesired icon till it becomes movable. The panel turns into a trash can . Drag the item to the trash can and release it when it turns red.

2.2.3 Add widgets to your home screen

To add a widget, tap and hold your finger on any open space on your home screen, and select Widgets from the context menu that opens. From there, select any of the available widgets. For instance, you may add an Analog clock, calendar, picture frame, and other useful widgets to your Home Screen.

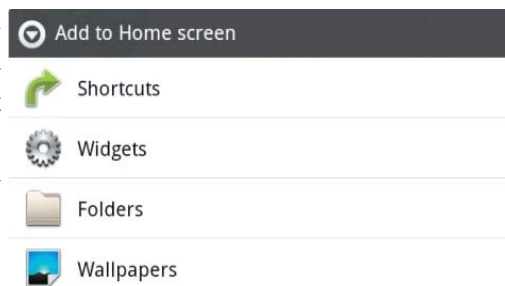


2.2.4 How to set wallpaper

To add a widget, tap and hold your finger on any open space on your home screen, and select Wallpapers from the context menu that opens. In the popup “Select wallpaper from” dialog, select a wallpaper from Gallery, Live wallpapers and Wallpapers.

2.2.5 How to hide status bar


On the home screen, you may hide your status bar or make it reappear by swiping your finger up or down.

 
2.2.6 Find your recent operations

Tap and hold  in the status bar to find your recent operations. Tap to continue.


III. Network Connection

3.1 Wi-Fi

Wi-Fi can only be used when it connects with home Wi-Fi Access Point (AP) or a free unsecured Wi-Fi hotspot. Under “Wireless & networks”, tap “Wi-Fi settings”. Ensure that both Wi-Fi and Network Notification are enabled with green check marks. After a moment, your Wi-Fi networks list should populate. If you need to rescan for available networks, tap , then tap Scan. For the secured one, you need to input password or some other form of access agreement acknowledgement via a browser.

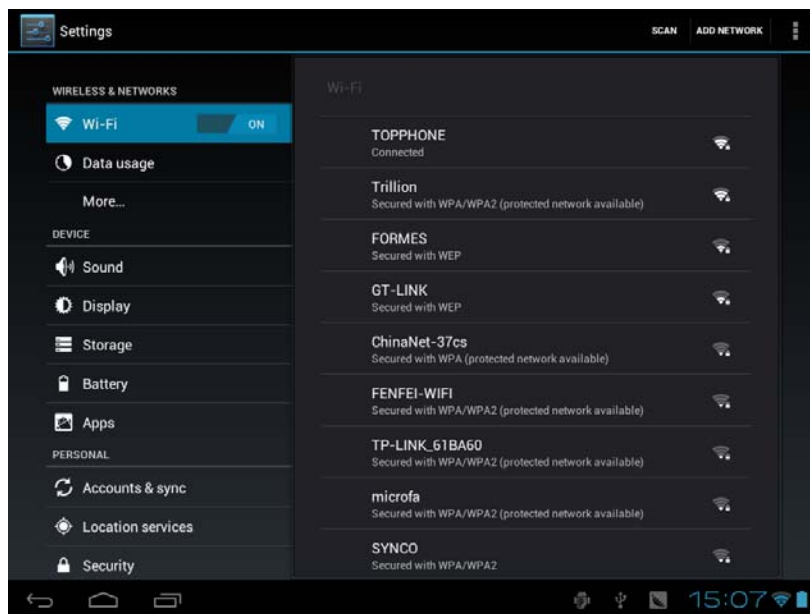

3.1.1 Turn on Wi-Fi

Within the App Panel, tap “Settings” → then “Wireless & networks” → “Wi-Fi” to turn on and scan. Your tablet lists the networks it finds within range. Tap a network to connect. If necessary, enter Network SSID, Security, and Wireless password, and tap “Connect”. When your tablet is connected to the network, the wireless indicator  appears in the status bar. Waves indicate connection strength

3.1.2 Turn off Wi-Fi


To turn off Wi-Fi, uncheck “Wi-Fi” under “Wireless & networks”. Turn off Wi-Fi when you’re not using it, to extend the life of your battery between charges.

3.1.3 Add a Wi-Fi network

Users may also add a Wi-Fi network under “Wi-Fi settings”. In “Wi-Fi settings”, tap “Add Wi-Fi network”. Enter the SSID (name) of the network. If necessary, enter security or other network configuration details. Touch Save.

3.1.4 Forget a Wi-Fi network

In the Wi-Fi settings screen, touch the name of the network. Touch “Forget” in the dialog that opens.

Note: Network status icons turn green  if you have a Google Account added to your tablet and the tablet is connected to Google services, for syncing your Gmail, Calendar events, contacts, for backing up your settings, and so on.

3.3 Tethering & portable hotspot

3.3.1 USB tethering

Check to share your tablet's mobile network data connection with your computer, via a USB connection.

3.3.2 Portable Wi-Fi hotspot

Check to share your tablet's mobile network data connection as a portable Wi-Fi hotspot.

3.3.3 Portable Wi-Fi hotspot settings

Opens a screen with settings to turn the hotspot on and off and to set the SSID (its broadcast name) and security.

3.3.4 Help

Opens a dialog with information about USB tethering, portable Wi-Fi hotspots, as well as information about where to learn more.

3.4 VPN settings

3.4.1 Add VPN

Opens a screen that prompts you to select the type of VPN to add. You are then prompted for VPN configuration details.

3.4.2 VPNs

The list of VPNs that you've previously configured

3.5 Mobile networks

Tap Settings → Wireless & networks → Mobile networks to show options for roaming networks, network selection, operator selection, and access point names.

3.5.1 Data enabled

Uncheck to prevent your tablet from transmitting data on any mobile network. This is useful if you are traveling in an area where you do not have a mobile data plan and want to avoid charges for data use on local carriers' mobile networks. Unchecking this setting does not prevent your tablet from transmitting data on other wireless networks, such as Wi-Fi or Bluetooth.

3.5.2 Data roaming

Uncheck to prevent your tablet from transmitting data on other carriers' mobile networks when you can't access your own carrier's mobile networks.

3.5.3 Access Point Names


(GSM/WCDMA mobile networks) Opens the APNs screen, where you can select mobile access point configurations; or touch the Menu button in the Application bar to add a new APN. Consult your carrier about how to use the tools on this screen.

3.5.4 Use 2G/3G networks

(GSM/WCDMA mobile networks only.) Check to obtain slightly better battery life, by preventing your tablet from connecting to higher-speed networks.

3.5.5 Network operators



(GSM/WCDMA mobile networks.) Opens a screen that searches for and displays mobile networks that are compatible with your tablet. Consult your carrier to understand the billing implications of selecting another carrier.

Notice: The tablet can support 3G USB dongle to use mobile network. Or you may insert your SIM card when your tablet is with a built-in 3G module. The  indicator appears in the status bar when mobile network is connected.

IV. Internet Browsing


4.1 Internet Browsing

 
Before using your browser, make sure Wi-Fi or internet is connected.

On the main screen, tap the Google text field  or the  icon to open your browser.

In the address bar, tap the text field to make the Android keyboard appear for entry of keywords or URL.

Tap and hold the text field to edit text or change input method. To get a required keyboard that perfectly suits your needs, you may download and install a .apk file of such keyboard on your tablet.

Tap  tab to see a submenu.

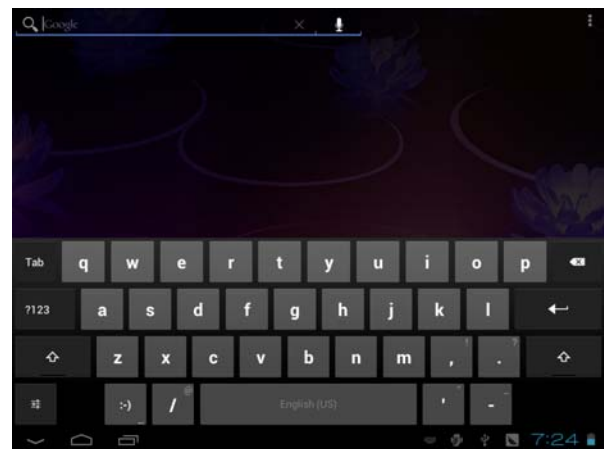


Android 4.0 OS also supports Adobe flash 10.1 and 11.1. That means you are able to view on-line flash videos.



V. Install and Manage Apps

 
5.1 Install and Manage Apps

If the tablet is preloaded with “Market”  , you can search and install apps here after login with your Google account.

Go to the “ApkInstaller” to install and manage your apps. To install an application, follow below steps:


1. Copy the .apk file to your tablet via USB cable from your PC.

2. Tap to open the ‘APKInstaller’ → ‘Install’ → then tap “Internal Memory” or “SD Card”. Available .apk files in SD card or internal memory then appear at the right side. Touch the required one to install it. In case a .apk is already installed, a “Replace application” dialog will appear. You can also download .apk files from third part software.


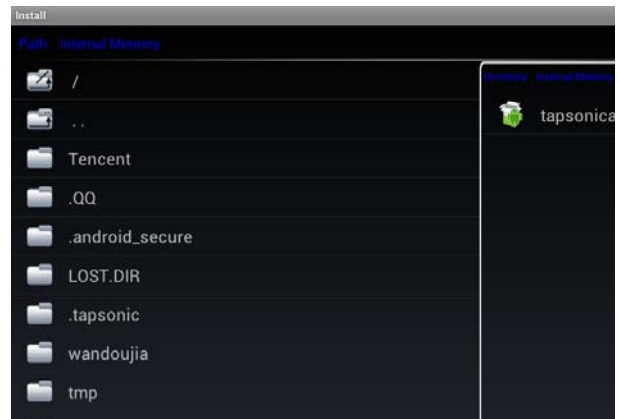


Note: Make sure the .apk file is workable on android 2.3, and the suffix is .apk. e.g. “air_attack_hd_1.apk”.

 
An “Install blocked” dialog appears as below after your first attempt to install a .apk file:

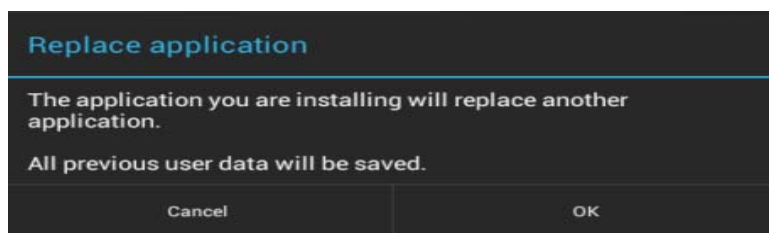

  
Tap “Settings” → “Unknown sources” → “OK” → install once again.

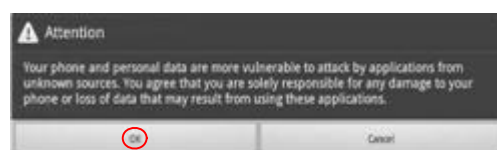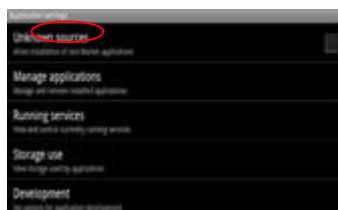


User Manual For MID

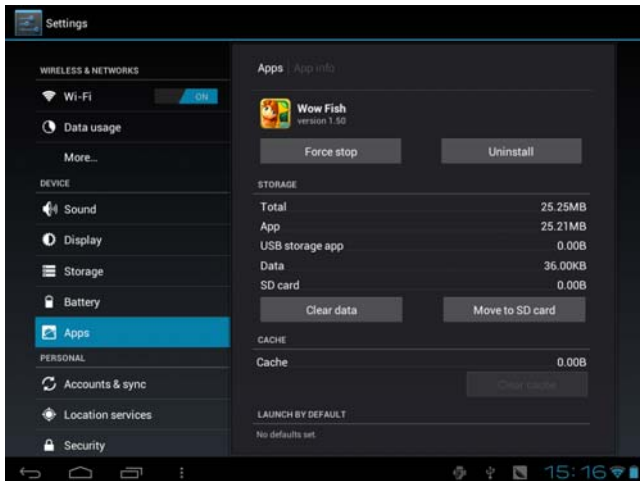 

In some cases, there may be no icon on in the App Panel after a .apk file is installed. Possible reasons may be that this app is not compatible with your OS or the downloaded .apk file is a broken one so you may need to download a full version.

 
Wheretomanageapplications? Manage an application in the “ApkInstaller”  . Tap to open the ‘APKInstaller’ → then ‘Manage’


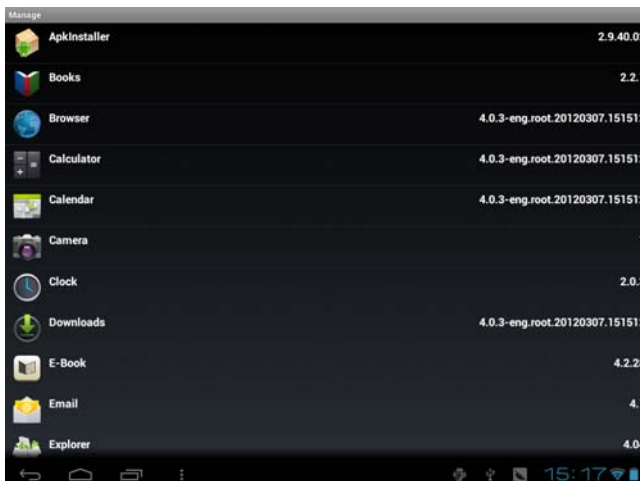



Tap an application to launch, export or uninstall it.

VI. Multi-media Functions

6.1 Music

  After loading your music onto your tablet, tap the music icon  (found by default on your home screen or by opening the App Panel). You'll be given the option of selecting by Artist, Song, Album, or custom Playlist. Tap to select. Your selection will begin to play through the tablet's built in speakers or through external headphones if attached via the headphone port. The media player allows you to shuffle, skip, or pause your current selection and even displays the album artwork when available.

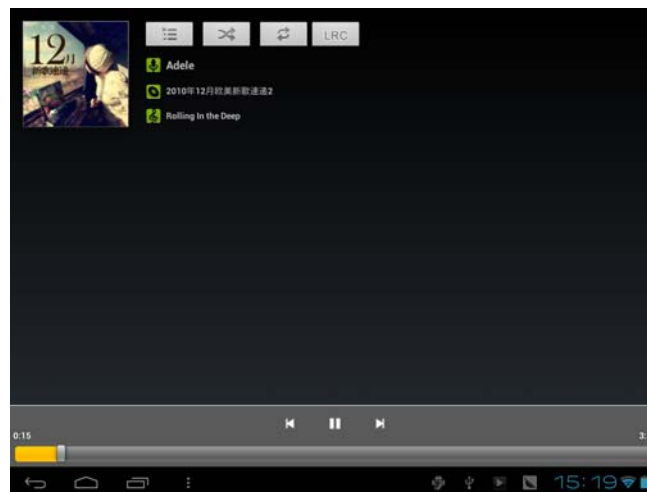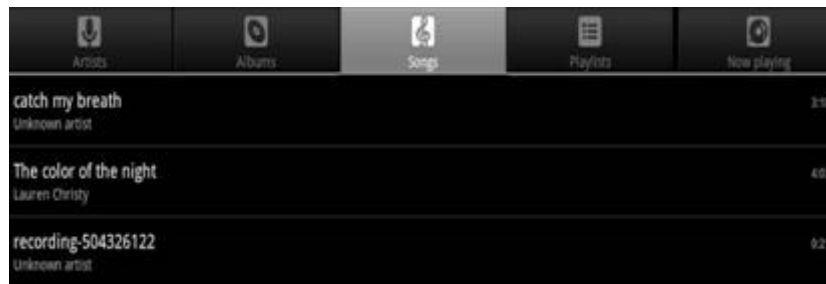


In audio playing mode, tap  to get more:



6.2 Video

6.2.1 Video Playback

You can play videos stored on your tablet or SD card. To play, tap Video  icon, then select the video you'd like to play. Your selection should begin automatically.

Pause or advance your video via the toolbar along the bottom of the screen.




With the Wi-Fi on, you are also able to view an on-line flash video as the tablet supports both Adobe flash 10.1 and 10.2.


User Manual For MID

 
Touch any point of the dark screen, on your TV screen will appear 'Vol+/Vol+', 'PLay', 'Pause'... To have required volume, proportion, brightness, etc., you may adjust before connecting the tablet to TV.


6.3 Gallery

You can view, show off, and even edit your digital pictures on the tablet's full color, high resolution display. After loading your media, tap Gallery  on your home


screen or within the App Panel. Tap the desired picture to display. To scroll through your collection, tap left or right. By tapping the menu icon, you may delete an image, or share it via picasa, Bluetooth or Gmail. You can even set images as your wallpaper.

To set a wall paper tap "Menu" → "More" → "Set as" .

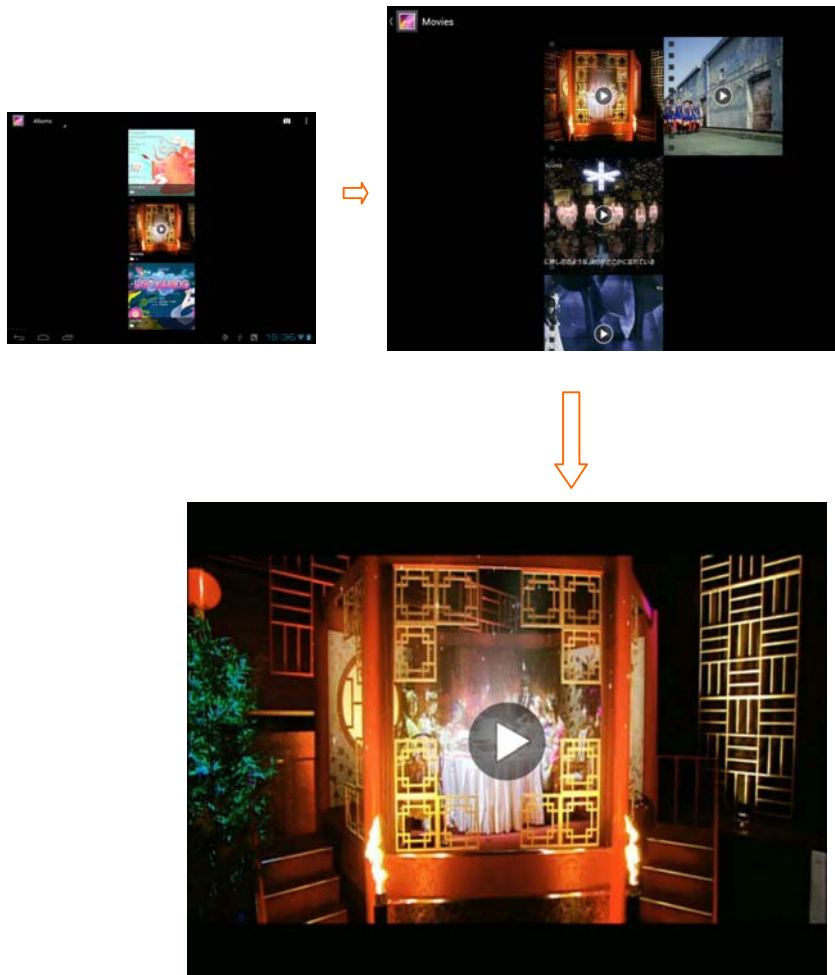


Tap  to get more

 
User Manual For MID

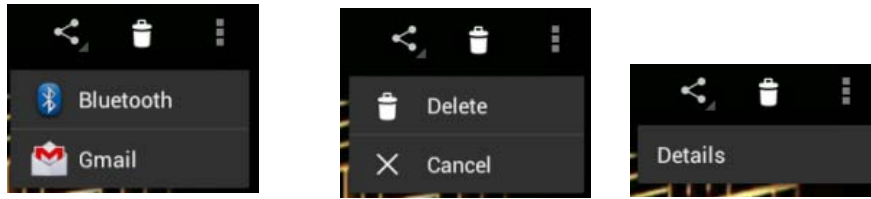

Note: When the submenu hides, you may tap any spot on an image to make it reappear.

6.4 Camera

 Tap the  icon in the App Panel to open it.

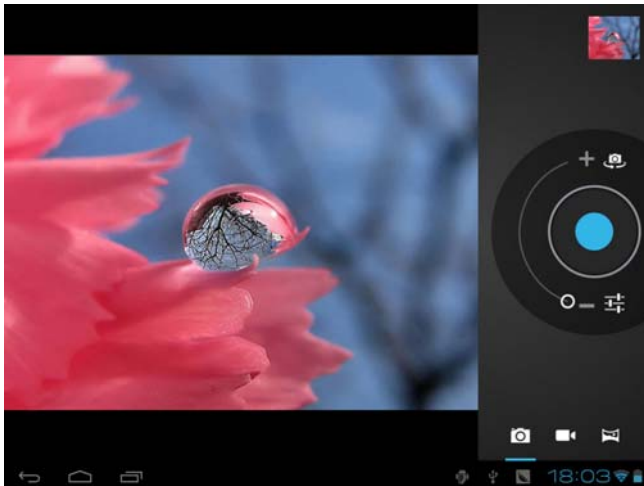


6.4.1 Take photos

Your tablet is provided with built-in 2M & 0.3M dual cameras.


Hold and move the roll ball to the “Camera” icon


Tap the  tab on the lower righthand corner each time for taking a photo.

 Where do you view the photos?

You may view the photos you have taken by tapping the  tab on the upper righthand corner. Or you may go back to 'Gallery'.

6.4.2 Record videos

Hold and move to the roll ball the recording icon to record videos .

Tap  on the lower righthand corner to start recording and tap it again to stop.


Recorded videos can be viewed in 'Video player'.

 
6.4.3 Turn off camera

When camera is on, press the 'ESC' key to exit the camera interface.

6.5 E-book reader

The tablet supports many eBook formats like PDF, PDB, E-Pub, FB2....

Tap the 'Shelves'  icon within the App Panel to open it.

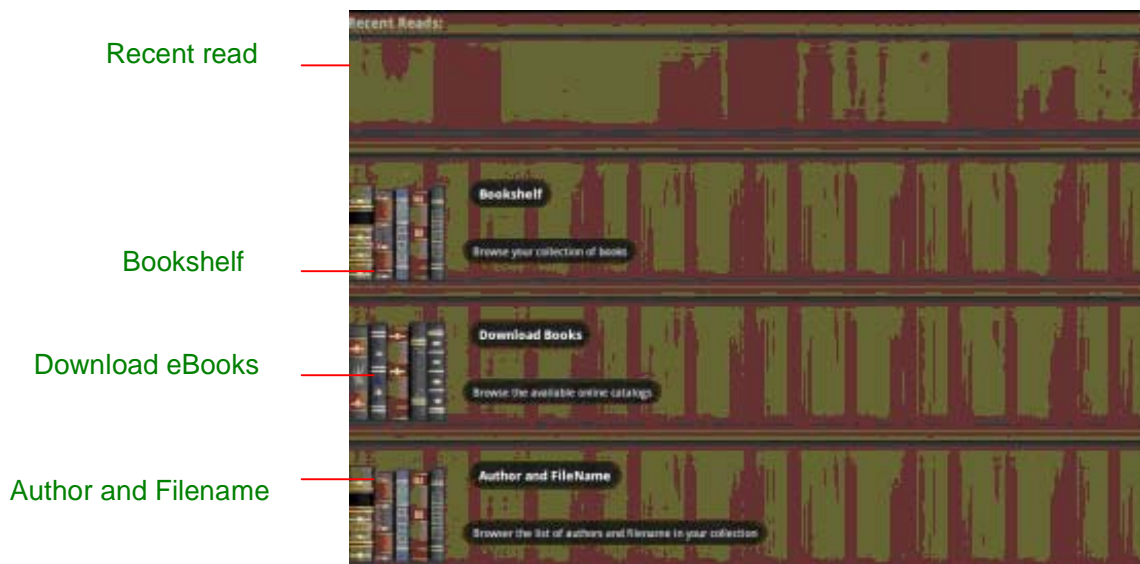


6.5.1 Bookshelf

Here you can read e-book stored in micro SD card or internal flash.

User Manual For MID

Touch an eBook  on the shelf to read it.

In reading, touch the  tab to get a submenu as shown below.




6.5.2 Download Books

With Wi-Fi on, or network on, you can download available eBooks.

6.5.3 Author and filename

You'll be given the option of sorting books by Author or Filename.

VII. Settings

Within the App Panel, tap the “Settings” icon  (or found by default on your home screen).



What being set here includes Wireless & networks, Sound, Display, Location & Security, Applications, Accounts & sync, Privacy, Storage, Language & keyboard, Voice input & output, Accessibility, Date & time and About phone.

7.1 Set display

Under “Settings”, tap 'Display' to set Brightness, Accelerometer coordinate system, Animation and Screen time-out.

For some games, special coordinate system may be needed. To do this, tap “Accelerometer coordinate system” → “Special coordinate system”.

The display has a screen timeout by default set to 1 min. If the unit is left inactive for that period of time, the screen will go dark as if turned off. However, it is simply in standby mode. Pull downwards and release the power button and a screen will appear with a green padlock button on the lower lefthand corner. This is your Lock Screen.

 
7.2 Set applications

Under “Settings”, tap 'Applications'. To view storage used by applications, tap “Storage use”:

User Manual For MID




Tap one application to view storage use.

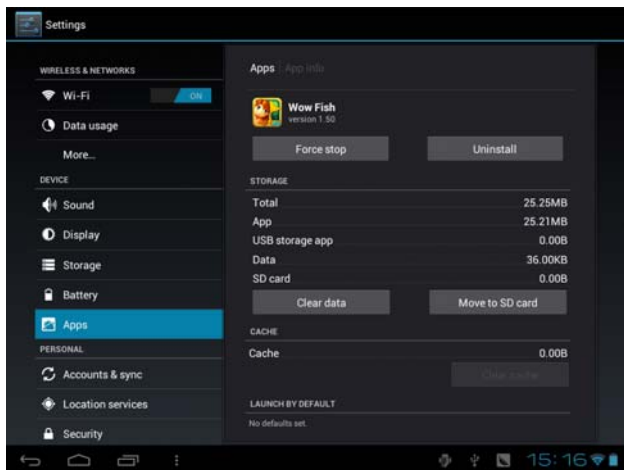

7.3 Set language & keyboard

Under “Settings”, tap “Language & keyboard”. You may set your language or keyboard here.

 
User Manual For MID

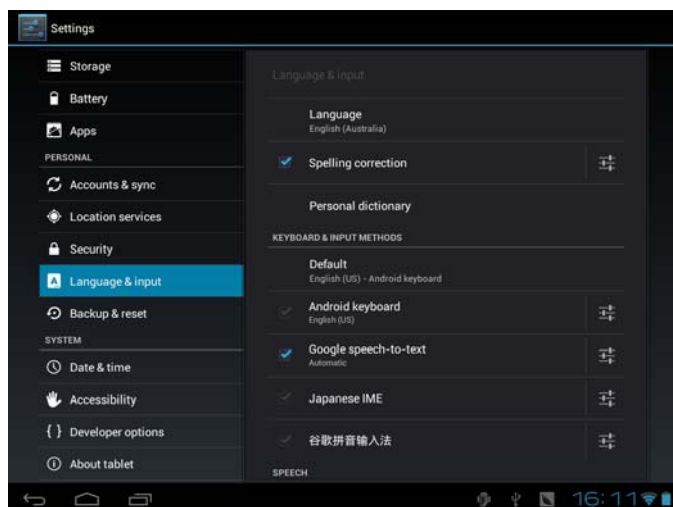

Up to 22 languages are available for your choice.

7.4 Storage

 To view your storage status, tap “Storage” under “Settings”.

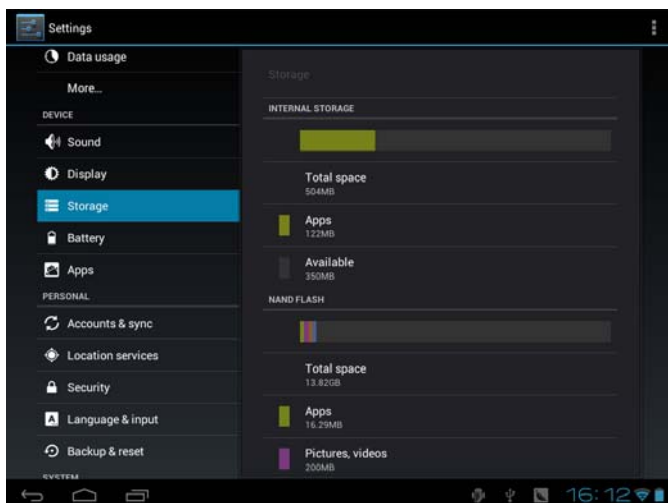

Note: As software takes up your tablet memory, the total memory is usually less than the actual flash memory.

7.5 Set location & security

Here to set up screen lock, and add or remove tablet administrators... With this setting, you are able to lock the screen with a pattern, PIN or password so as to avoid your tablet being used without permission.

VII. Battery




Very Low Battery

 


Full Battery




Charging Battery


 indicates that the power of Battery is full. When the battery level becomes too low, a prompt comes up to note you to charge your tablet.

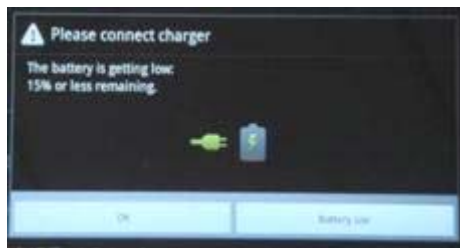

The tablet can be charged with AC adaptor when it is on or off.

There will be red light  in MIC hole during charging. It turns green when fully charged.

Note: Please charge it by the Adaptor we supplied.

On the lock screen before you pull up the slider , the charge status can be found on the upper lefthand corner, as shown below.



_____ Indicating 41% charged

The tablet may take 4-5 hours to charge to full.

Note: Sometimes 100% charging may not show up, even the tablet has been charged for a very long time (more than 5 hours). The battery is actually full, but the charging info is delayed. In this case, you may unplug the power cable.

User Manual For MID

Tipsonextendingbatteryli

1. Streaming audio or video apps will use a lot of battery life
2. Disable Wireless Network Positioning. You can turn it off from Settings → Location & Security → Use wireless networks.
3. Switch off Wi-Fi if you're not close to a strong Wi-Fi signal for extended periods of time. This puts strain on the tablet.
4. Use a Quick Screen Timeout. You can alter this option from Settings → Display → Screen timeout.
5. Reduce brightness to a comfortable level using a widget (Section IV) or at Settings → Display → Brightness.
6. Use Web Widgets wisely. Widgets that access the Web consume more power than widgets that do not.

Note:

1. Do not use other adaptors to charge your tablet which can cause damage to the battery.
2. The tablet can not be charged via USB cable when connected to your PC.

Troubleshooting

1. Can not turn on the tablet

Check the tablet's power level, please charge it before starting it. In case your tablet still can not be turned on, you may reset it before you turn it on.

2. No sound from earphone

Check if volume is set to '0'. Or earphone may be broken, please change another one.

3. Big noise

Check if there is dust in the earphone or speaker. Check if the file is broken.

4. Frozen to any operation

Please use a pin to reset and then restart your tablet.

5. Upgrade firmware

Please do not use other firmware or upgrading tool to upgrade the tablet. It might cause the tablet to work abnormally.

At present, the tablet can only run on the OS of Android 2.3.

6. Screen drift or unresponsive screen

To correct it, you may carry out panel calibration. Go to Settings → Accessibility → Touch panel calibration to calibrate it.

7. Application not workable

Possible reasons may be that this app is not compatible with your OS or the downloaded .apk file is broken so you may need to download a full version.

8. How delete a Google account?

If an account is added, the account is shown in "Accounts & sync" of "Settings", where you may also add another account. To delete an undesired account, go to "Settings" → "Privacy settings" → "Factory data reset". Your tablet's internal storage, downloaded apps, etc. will also be deleted, except the info in your flash memory. Be careful before you carry out this operation.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types MT0729B (FCC ID: RON-MT0729B) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.2867W/kg and when properly worn on the body is 0.9719W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.