

2.4G RF Gaming Mouse

User Manual

Model: R7

www.bloody.tw

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

Federal Communications Commission Requirements

The equipment has been tested and found to comply with the limits for Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient of relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THE CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and receiver.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. The equipment has very low levels of RF energy that it is deemed to comply without testing of specific absorption ratio (SAR).

System Requirement

Operate System: Windows XP/Vista/7/8

Hardware: PC system compatible

Define the Mouse Buttons:



Pair the Mouse or Keyboard with "Bloody Gaming Family "


1. Plug the Dongle of Bloody Series to USB port.
2. Follow below steps to pair wireless mouse or keyboard.



3. When connect successfully , you can use your keyboard or mouse.

Power-saving Management

1. Click the icon  at the system tray and select GUARD to manage the Power Management of mouse.

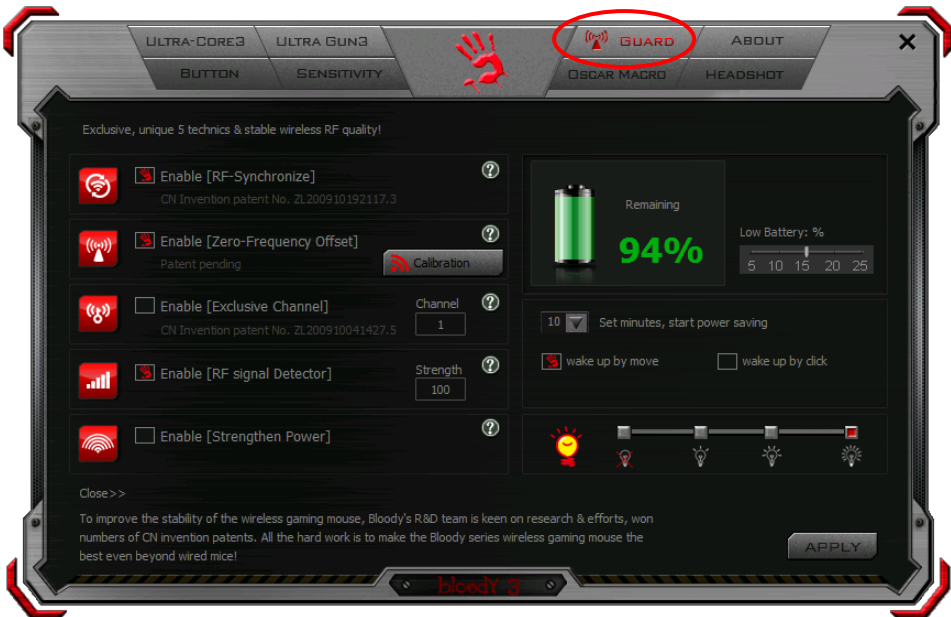

2. Software Low battery inform: Low battery informs will pop up at the right corner of your screen when battery low.



3. How to charge this Mouse:

RF Mouse Status

The Charging LED indicates:

- Low battery: the LED of wheel will be flicker (15sec). You could plug the USB cable in USB port of PC.
- Charging mode: When the cable connect to mouse, the LED of wheel display yellow message. If the Lithium battery is full charged, the LED will be red message.




Gaming Mouse Software (Bloody3) Introduction:

Bloody3 - HeadShot Firearm Adjustments

Features:


Before playing FPS games, you may use Armory in the HEADSHOT program to adjust firearms and save them to the mouse memory. Depending on FPS games and firearm features, there are “5-Gun-Adjust” modes you may select, e.g., [A-Burst], [B-Strafe], [C-Machine], [D-In_Game] and [M-Macro] respectively. For instance, in the game session while a gun or a rifle is picked up, without quitting the game, you may use [D-In_Game] mode to perform gun adjustments, to enhance the gun’s firepower with concentrated ballistics and improved accuracy to increase the headshot rate.

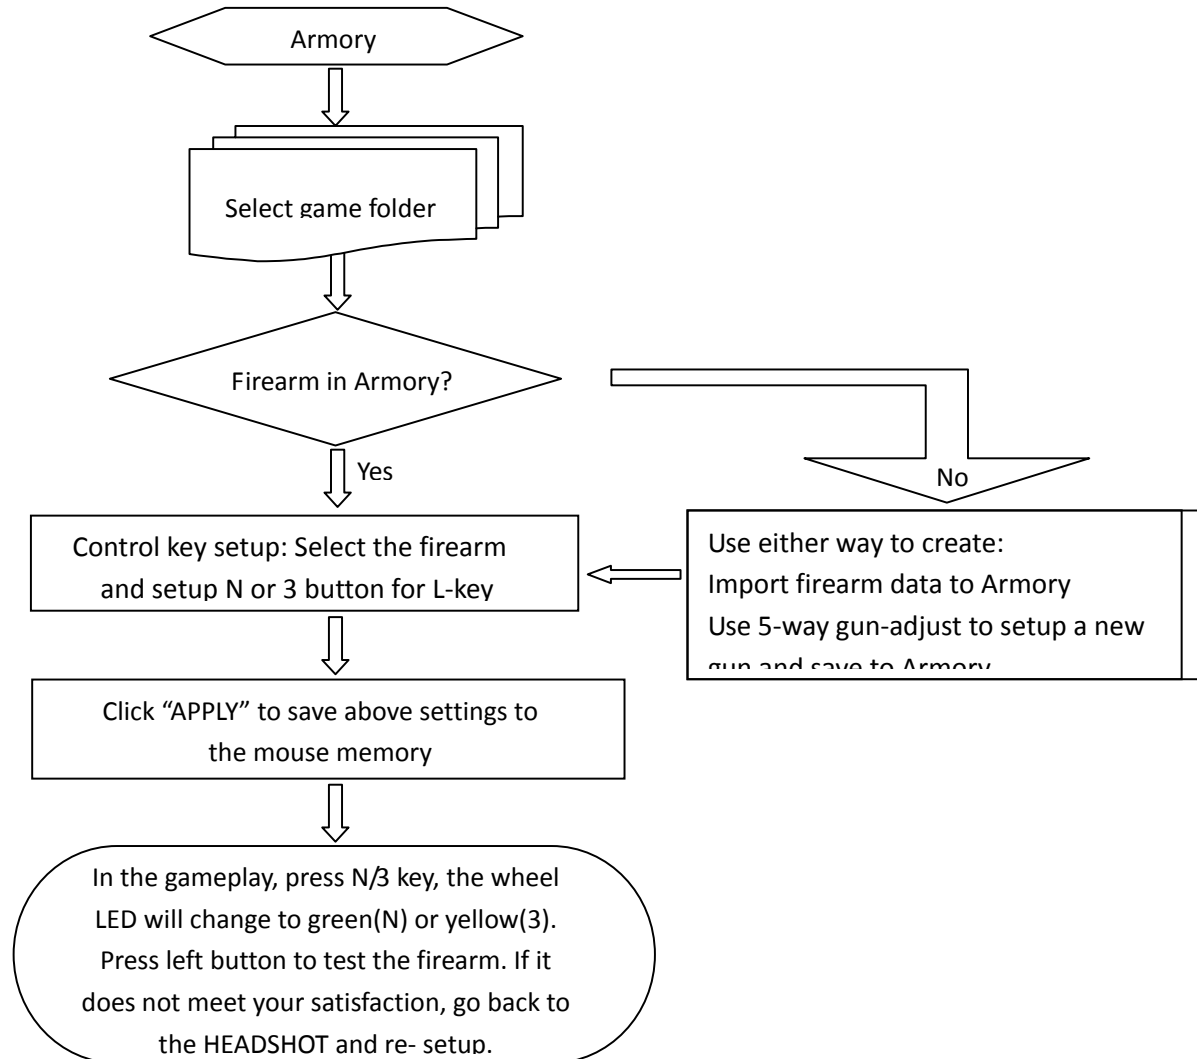

Firearm Adjustments and Settings:

In the firearm files, the initial mouse sensitivity setting of the game will be used. Before you start to adjust mouse sensitivity, check the current file settings. If it is the same as the game default, then go to adjustment page to adjust for best mouse sensitivity to improve points of impact with concentrated ballistics. For instance, some popular shooting games, default sensitivities are: AVA is 10, Cross Fire is 50, NZ is 30 and Counter-Strike is 3.0.

[A-Burst]:

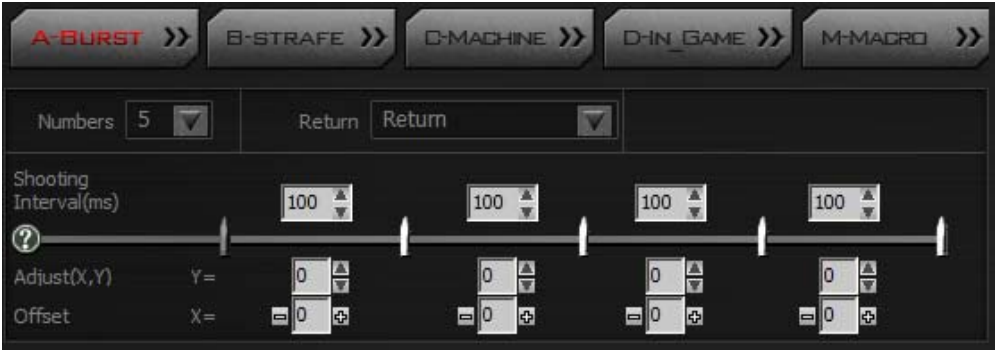

Items	Descriptions	Figures & illustrations
Setup bullet numbers	Setup the bullet numbers per burst when the L-Key is pressed. Bullet numbers may range from 1 to 5 bullets.	
Sight return	If offsets are added in HEADSHOT’s gun adjustments, after the shooting cycle is completed, you may decide to return the sight to the “first shot” position. Non-return: Remain in the last shot position, no compensation is added. Return: Return to the first shot position with compensation.	
Interval shot(ms/shot)	According to the firearms features in the game performance, you may make optimal time intervals for each shot.	(mini sec) ms = (1/1000 sec), value:0~999

Sight offset(x, y)

Y=

-1

X=

0

Negative:
Downwards

 
Negative:
Leftwards

Positive:
Rightwards


As the figure shows on the right, due to the recoil effects, the second shot of impact point is offset by (3, 4) in correspondence to the first shot. Reverse correction by input (X, Y)=(-3, -4) will compensate the offset generated by the recoil, as results, the second shot impact point is corrected to the first shot, a third shot can be corrected at the same way and so on. The offset unit is the display pixel, different game resolutions will affect the offset values.

Example: See the figure on the right which implies, Press the L-Key to perform [A-Burst] with 5 bullets per burst in the sequence as below:
1st shot→offset by (-2, 1)pixels →
2nd shot→offset by (-2, 2)pixels →
3th shot→offset by (-1, 1)pixels →
4th shot→offset by (-1, -1)pixels →
5th shot→End.

Trajectory Test



To understand how to setup the terms of; [Adjust(X, Y) Offset], [Shooting Interval(ms)], sight [Return], setup bullet [Numbers] and Main/ [Loop] ballistic, you may click the “Trajectory” tab to open the screen as shown on the right. You may test the gun’s performance and see how they are reacting to the various settings which are essential before starting to setup the optimal firearms performance.

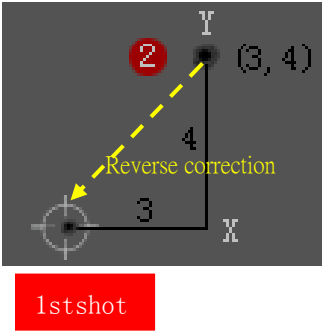

The 2nd shot is offset by (3,4), input (-3,-4) will correct the offset and return the sight to the first shot.

Shooting Interval(ms)

100

Adjust(X,Y)

Y=

-2

Offset

X=

1

100

-2

2

100

-1

1

100

-1


-1



Gun Test



On the lower right corner of “A-Burst” screen, click “Test” tab to open the reminder as shown on the right which explains current gun adjustment settings will be saved temporarily to the mouse memory(without saving the file) and can be activated by using the “N” key for immediate testing on the real gameplay. If results are not satisfactory, you may go back to “Gun Adjust” to reset settings and test them again until you are satisfied, then you may store results to the Armory and save to the firearms file.

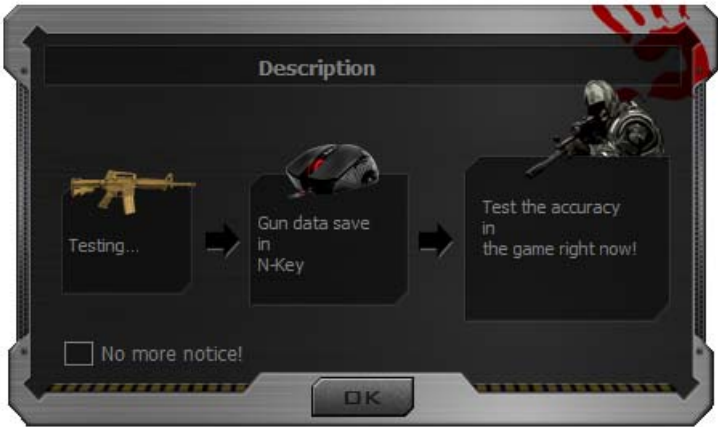


Pause L-Key N/3 functions

While L-key is working in N / 3 modes (LED indicators in green or yellow), you may require the left button default function. Hold down the left button a few seconds, to setup the C4 time bomb in AVA, click the right button options as shown on the right, the left button can be reset to default and backwards by clicking the right button again.





-  Press R-Key, disable Burst
-  Press R-Key, disable Strafe
-  Press R-Key, disable Offset
-  Press R-Key, disable D-In_ Game

[B-Strafe]:

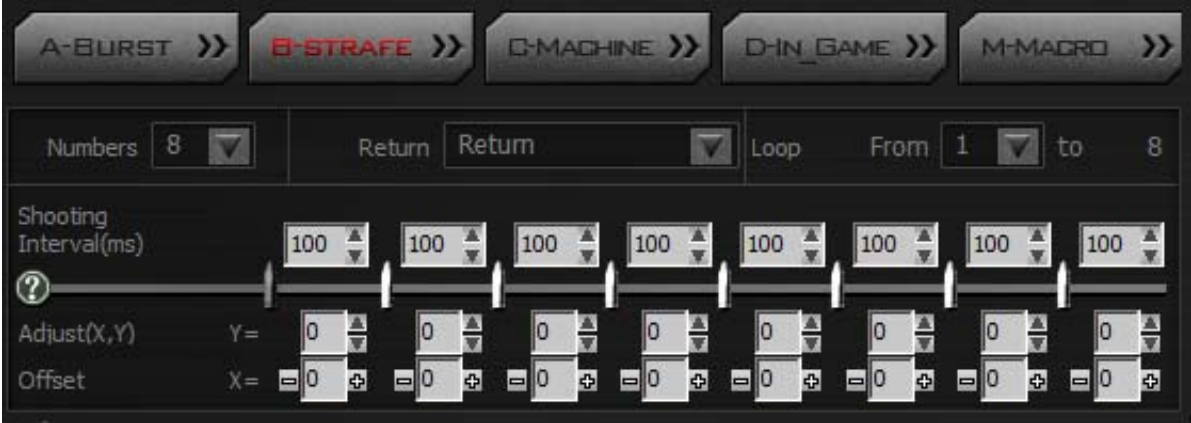


Setup bullet numbers	Setup bullet numbers per Strafe run.	Numbers8
Sight return	If offsets are added in HEADSHOT gun adjustments, after the shooting cycle is completed, you may decide to return the sight to the “first shot” position. Non-return: Remain in the last shot position, no compensation is added. Return: Return to the first shot position with compensation.	ReturnReturnNon-ReturnReturn
Ballistic cycle	Numbers6ReturnReturnLoopFrom3to6 Shooting Interval(ms) 100100100100100100 Adjust(X,Y) Y=-1-1-2-2-3-3 Offset X=0000000 Ballistic cycle: A typical [B-Strafe] mode usually consists one of main shooting cycle and followed by many repetitive loop cycles.	From1to6 Example: Main cycle consists of 6 shots from 1st to 6th. Loop cycle consists of 4 shots from 3rd to 6th of the main cycle, and then repetitively circulates the loop, e.g., in the sequence of 7th to 10th shot → 11th to 14th shot → 15th to 18th shot →...etc.
Example:	In the [B-Strafe] mode, setup the main and loop cycles with 150ms time intervals on the last 5th shot. Results: press and hold the L-Key, the [B-Strafe] will perform below shooting sequences with 150ms in each loop shooting cycle. Interval 150ms interval 150ms	Shooting Interval(ms) 100100100100150 Adjust(X,Y) Y=00000 Offset X=00000

[B-Strafe] Examples of Gun Adjustment:

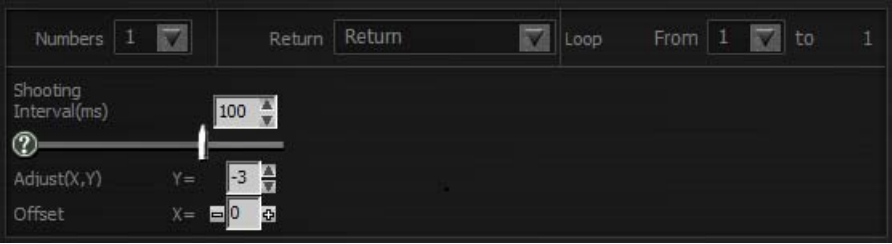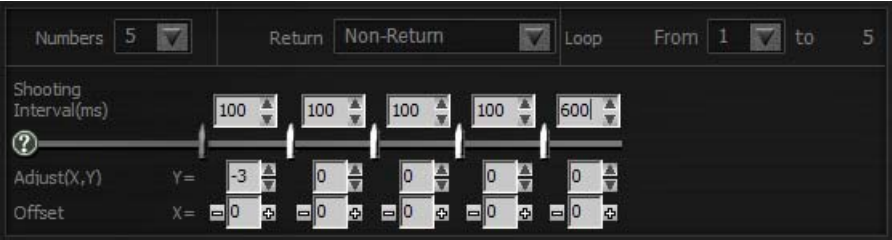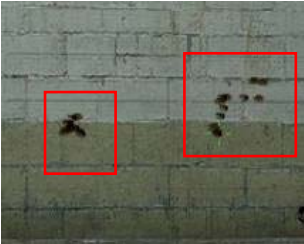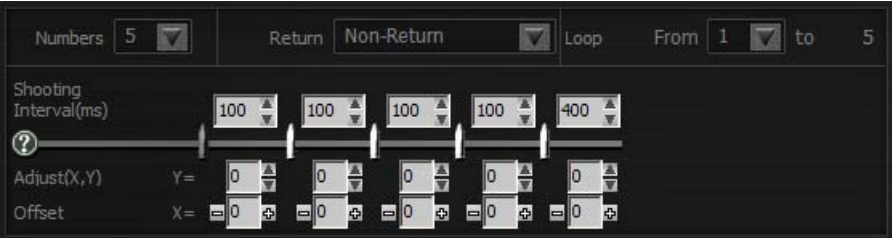
Game title: AVA Gun type: G36 Settings: Time interval: 100 ms Offsets: -1 pixel Sight return: enabled Sensitivity: 10	Adjust time Intervals & offset to yield focused impact points. 		Results: The left focused impact points shows the amazing effect of gun adjustment vs. the right scattered impact points without any gun adjustment.
Game title: CF Gun type: M16 Settings: Time interval: 100 ms with 600 ms for the last shot Offsets: 0 pixel Sight return: disabled Sensitivity: 50	Adjusting Intervals. Offsets and add longer delay at the last shot to yield the focused impact points. 		Results: The left focused impact points shows the amazing effect of gun adjustment vs. the right scattered impact points without any gun adjustment.
Game title: CS Gun type: M4A1 Settings: Time interval: 125 ms with 600 ms for the last shot Offset: 0 pixel Sight return: disabled Sensitivity: 3.0	Adjusting Intervals, Offsets and add longer delay at the last shot to yield the focused impact points. 		Results: The left focused impact points shows the amazing effect of gun adjustment vs. the right scattered impact points without any gun adjustment.
Game title: NZ Gun type: AR-15 Settings: Time interval: 100 ms with 400 ms for the last shot Offset: 0 pixel Sight return: disabled Sensitivity: 30	Adjusting Intervals, Offsets and add longer delay at the last shot to yield the focused impact points. 		Results: The left focused impact points showing the amazing effect of gun adjustment vs. the right scattered impact points without any gun adjustment.

[C-Machine]:

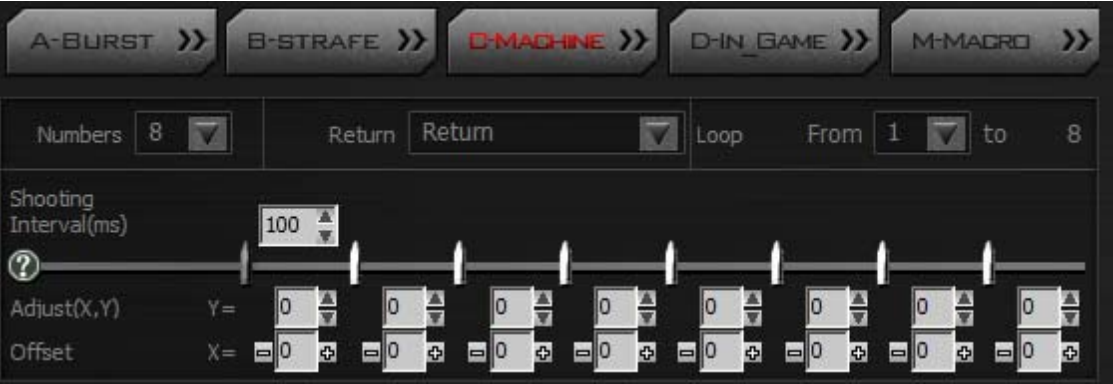


Machine gun recoil suppression	In the [C-Machine] mode, press and hold the L-key and the machine gun will start to shoot at the speed defined by the game default, you may add fixed time intervals and offset to yield which focuses machine gun firepower.
Time interval settings	In this [C-Machine] mode, the machine gun will shoot at the fixed speed defined by the games, before you can start to adjust the offset, you have to tune the shooting speed closer to the game default speed.

[C-Machine] Examples of Gun Adjustment:

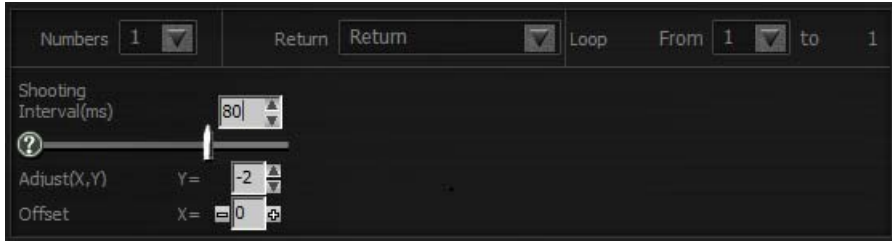Game title: APB Reloaded Gun type: SHAW 556 R&D III Settings: Time interval: 80 ms Offsets: -2 pixels Sight return: enabled Sensitivity: same as game default	Use the machine gun with recoil suppression: The shooting speed will be defined by the game default, and you may add time intervals for 80ms and offset by -2 pixels, as shown below: 
	Test results: The left impact points are drifted upwards. After gun adjustment, the right impact points are much focused. 

[D-In_Game]:

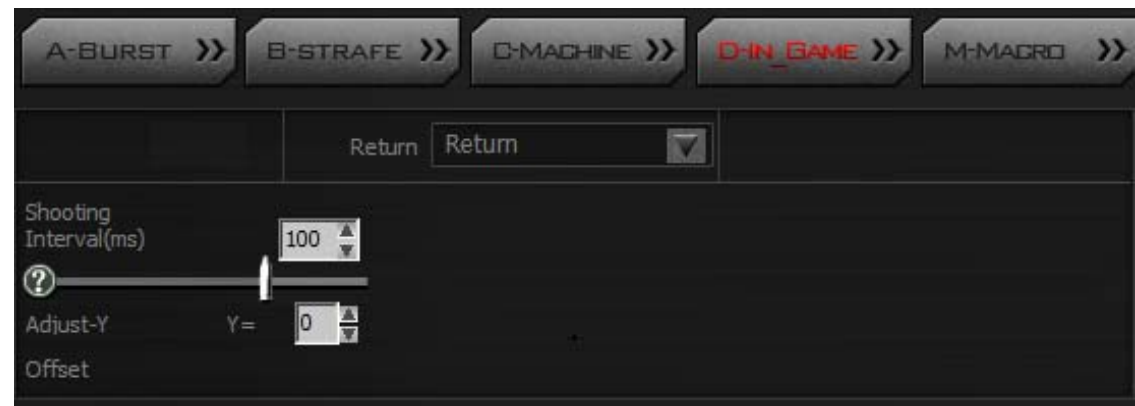

Usage	[D-In_Game] is similar to [B-Strafe] mode, except the usage is different. The [D-In_Game] mode is used in the middle of the game session, for instance, when a gun is picked up in the game, without quitting the game, you may use [D-In_Game] to perform real-time gun adjustments by double clicking the control key “N” or “3”. The corresponding data will be automatically saved and updated to the original firearms file for future use.
Application	In the [D-In_Game] mode, preset sight to [return] add fixed time interval , adjust Y [Offset], then save data to firearms file and designate to control key “N” or “3”.

In the gameplay, double click “N” or “3” to perform [D-In_Game], the following screen will show up:

An in-game screenshot of the [D-In_Game] interface. It features a 3D model of a gun. A control wheel is visible with a red LED indicator. The wheel has '100' at the top and '0' at the bottom. Text on the screen includes 'Adjust [In_Game]', 'Shooting Interval: Wheel Scrolling to +/-', and 'Suppression: Click [4-Key] to reset and click [5-Key] to'. Red arrows point from the wheel's top and bottom to the 'Adjust shooting interval' and 'Offset' labels respectively.

In the gameplay, double click “N” or “3”(the wheel LED will start to blink)

Adjust shooting interval: Adjust shooting interval in mini-second, roll the wheel upwards to increase or downwards to decrease the value(unit: ms).

Offset: (unit: pixel)

- Press mouse 4th button to reset, (which is equivalent to without recoil suppression)..
- Press mouse 5th button to add offset(one click to subtract 1 pixel)

Press “N” or “3” key again to quit the editing mode(the wheel LED will stop blinking)

In practical testing [D-In_Game] on some popular games, the [D-In_Game] screen may not show up properly, however, you still can perform the settings with immediate effect.

Adjust [Y offset]:

1. Press mouse 4th button to reset Y to 0 (which is equivalent to without recoil suppression).
2. Press mouse 5th button to adjust Y offset, one click will subtract 1 pixel (-1).
3. Press "N" or "3" key again to quit the editing mode (the wheel LED will stop blinking)



Adjust[Shooting interval] :

Roll the wheel one step up will increase 1 ms.

Roll the wheel one step down and it will decrease 1 ms.



[M-Macro]:



Usage	Via Oscar Macro editing, [M-Macro] can be prograded and assigned to the mouse left button. It is suitable to incorporate serious of actions after you snipe shoots. You can incorporate actions like jumping, squatting, getting on the ground...etc., so that the enemy cannot aim at you easily. At the same time, if you need to perform trajectory adjustment, you can add relevant offsets to adjust the gun. Editing Oscar [M-Macro] requires basic programing knowledge, and it also can be downloaded via the shared platform.	
Application	Clicking [M-Macro] tab will list out all the available macros as shown above, tick the ones you want and open “Oscar Editor” to start editing. You may save the macros to the Armory for future use after satisfactory gun testing.	
Example of using M-Macro for sniper shoot	It is highly demanded to be a sniper, not only does it require very high technical skills, but also you need to get familiar with your hiding spot and be well-disguised. when a target appears, the sniper has to locate the objective and start to aim and shoot, then reload for the next target. In general, the following actions are executed in sequence: - After clicking left button to shoot, add actions like jumping, squatting, get on the ground...etc., in the meantime, shift gun to pistol and backwards, then reload and get ready for the next shot. - After clicking the left button to shoot, add actions like Jumping, Squatting, Get on the ground...etc., in the meantime, press Q to shift gun and press Q again to resume, then reload and get ready for the next shot.  Select "Play Macro Once Only", clicking the left button once will execute M-Macro one time.	The following example will perform the actions after you click the left button, shoot the sniper rifle, shift gun to pistol and backwards, reload and use the sight telescope for the next shot. You may edit and save it to mouse the left button, and once you click to the button it will perform all the actions automatically. <pre>1 Press_left_button 2 Delay 64 Millisecond 3 Release_left_button 4 Delay 64 Millisecond 5 Press <2> key 6 Delay 64 Millisecond 7 Release <2> key 8 Delay 64 Millisecond 9 Press <1> key 10 Delay 64 Millisecond 11 Release <1> key 12 Delay 64 Millisecond 13 Delay 580 Millisecond 14 Press_right_button 15 Delay 64 Millisecond 16 Release_right_button 17 Delay 64 Millisecond</pre> Sniper rifle shoots Shift to pistol and back Use sight telescope, reload and get ready for the next shoot.

Bloody3 file type introduction:

File type

List all firearm file types:


- All file (*.*)
- All file (*.*)
- A-*.bwp (A-Burst)
- B-*.bwp (B-Strafe)
- C-*.bwp (C-Machine)
- D-*.bwp (D-In_Game)
- M-*.mgn (M-Macro gun)

Figures & illustrations

5 file types of Bloody3 firearm adjustments:

				
A-*. bwp	B-*. bwp	C-*. bwp	D-*. bwp	M-*. mgn

Select firearm file type to list out all the files, then open the file. Example: select "B-*.bwp-B-STRAFE" to locate "B-AK-47.bwp" as shown below,

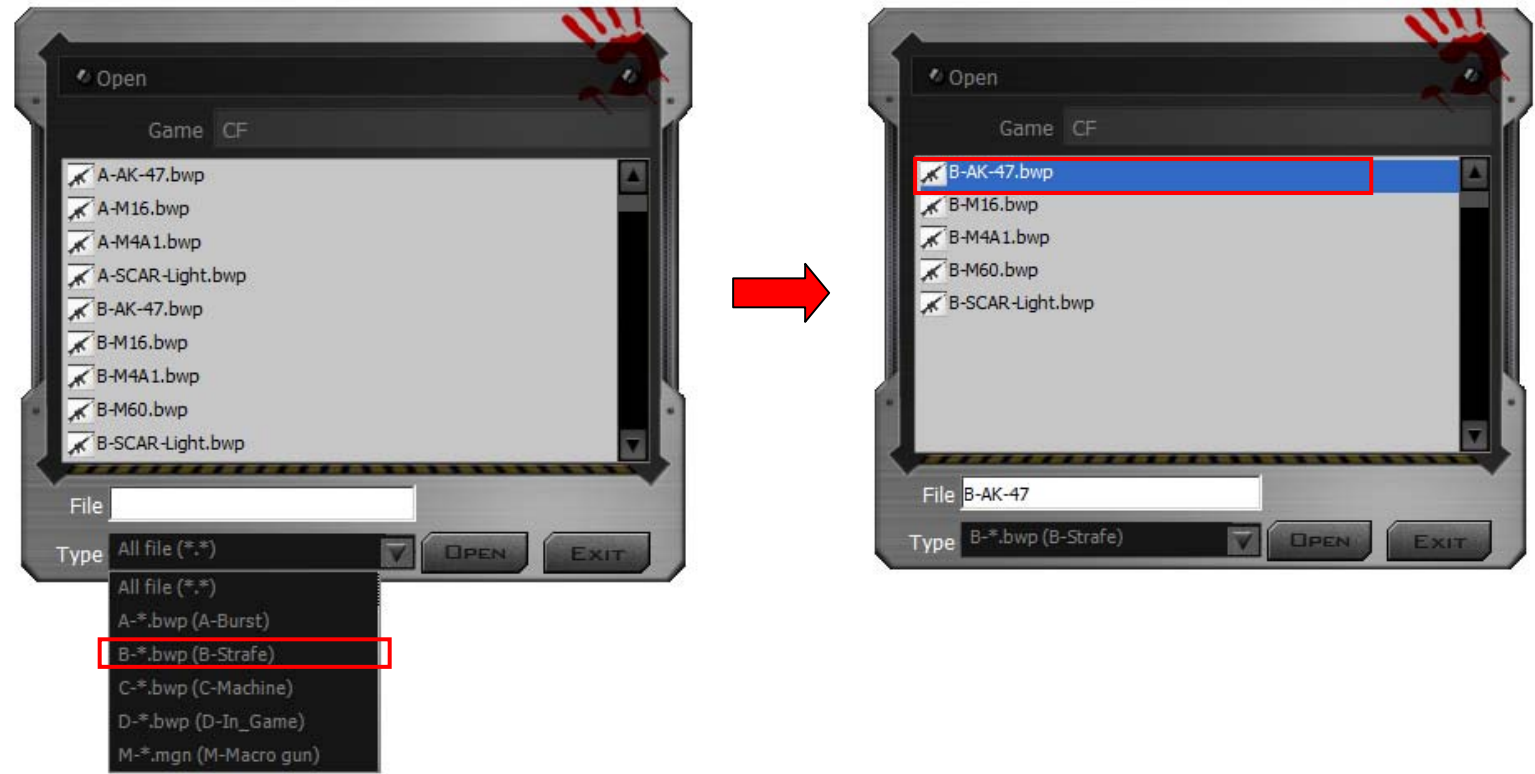

All macro file types :

- All Macro file *.*
- All Macro file *.*
- *.amc (Macro)
- *.mgn (Macro gun)


Macro file type breifing:

*.amc – for mouse button application:




Example:

Assign the 4th button with macro file as shown and click “Apply”, then the macro file is assigned to 4th button for immediate use.

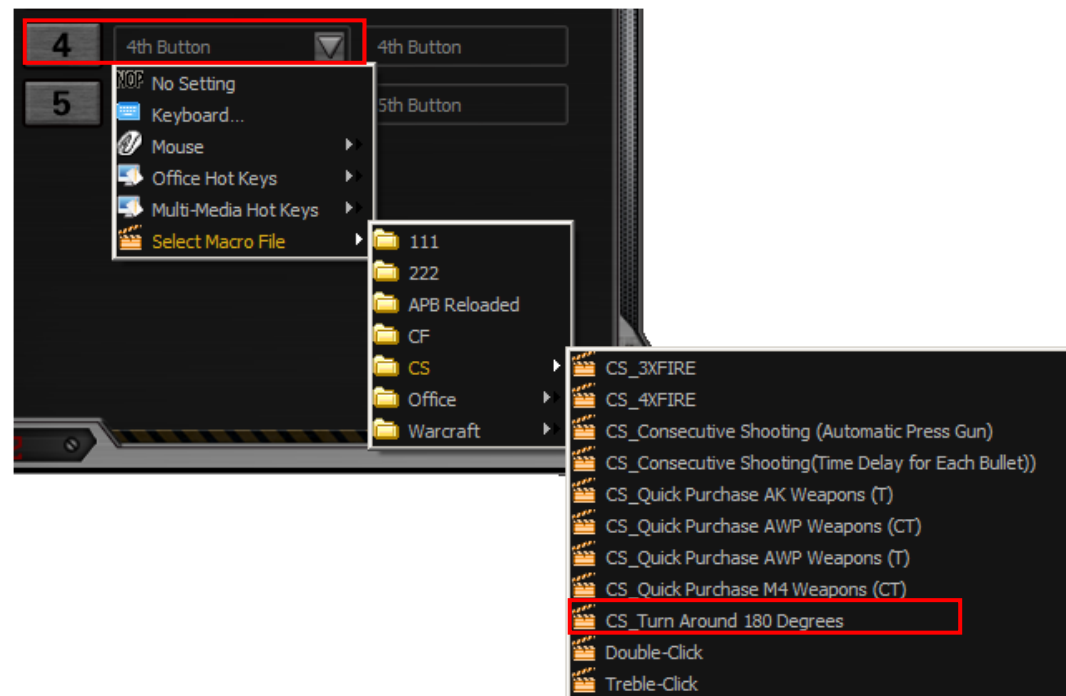

***.mgn - for M-Macro application:**

To edit *.mgn files, you may open the file using Oscar Editor as shown below:

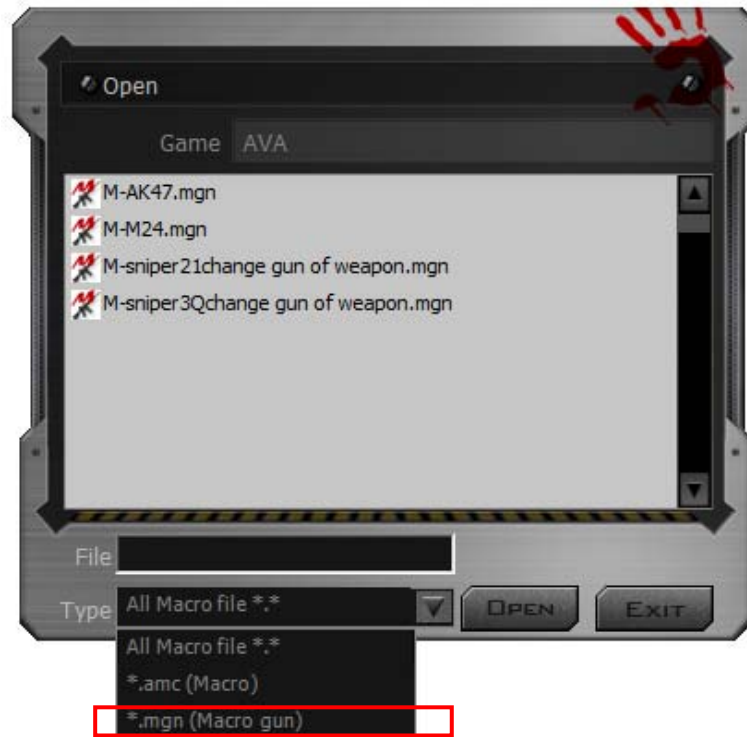

Example: How to transfer a general macro “*.amc” file to a “*.mgn” M-Macro file:


In the M-Macro file management, select a gernal marco file and save it to M-Macro “*.mgn” file as shown below.



Notice: To ensure that your keyboard sends and receives perfectly, please read below instructions for your reference:

1 Avoid Interference from iron panel of PC.

Please plug the Dongle USB Ports.

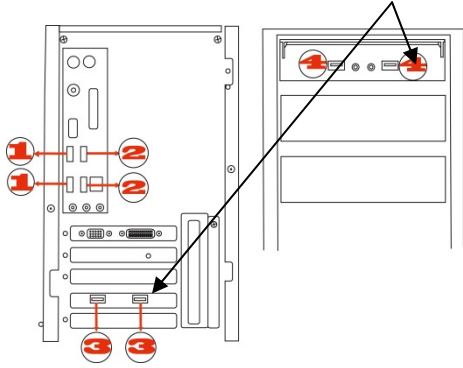

2. Use USB extension cable to position the Dongle at a far location to prevent electromagnetism interference from devices

3. Avoid using the wireless keyboard/mouse on a metal surface. Metals such as iron, aluminum, or copper shield the radio frequency transmission and slow down the response time of keyboard or mouse ,or cause the keyboard /mouse to fail temporarily.

The radio frequency is 2.4GHZ, it is safe for our bodies, but please be cautious in using cardiac pacemaker or other body auxiliary instruments.

Troubleshooting

If the keyboard/mouse is not working:

1. Make sure the keyboard/mouse was paired .
2. Check battery power is full.
3. Check Dongle(receiver) installation.
4. Try another USB port.

Product Support

Need help with technical support? Please go to: <http://www.bloody.tw> and our support team will respond within 72 hours.

**All pictures and description mentioned above is for reference only and is subject to change without notice.