 


**'THE ILLUMINATOR'
Bluetooth Speaker
SB245BT**

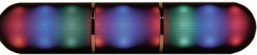

INSTRUCTION MANUAL
PLEASE READ ALL INSTRUCTIONS CAREFULLY
& RETAIN FOR FUTURE USE

Getting Started

- Remove the unit from the box.
- Please ensure all packaging you have been checked and counted all the parts and the contents against the parts list.

Package Contents

- Bluetooth Speaker with LED Flashing Lights
- USB Charging Cable
- 1.5mm Auxiliary cord
- Instruction manual

Features

 
- Bluetooth LED Flashing Speaker
- Bluetooth with LED Flashing Lights
- Built-in Rechargeable Battery
- Stream Music Wirelessly
- Use as a Hands-free speaker phone device, with a built-in microphone
- Built-in remote support (play, pause, forward, backward, track and volume)
- Play music through Bluetooth, Auxiliary, TF Card & USB
- Built-in FM Radio

IMPORTANT SAFETY INFORMATION

- Read all instructions before using this product.
- Do not leave this product unattended while connected to the power supply.
- Do not immerse in water or any other liquid.

- Do not use unit has been dropped or damaged in any way.
- Repair to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- Place unit on sound even surface, free of vibrations and away from sources of heat.
- Do not use with wet hands.
- Do not put objects into openings.
- Keep fingers clear of flash etc.
- Do not use this unit for anything other than its intended use.
- Keep this product out of reach of children.
- This product is not a toy.
- This product may cause excessive heat, especially near children, as damage to hearing may occur.

DESCRIPTION OF PARTS

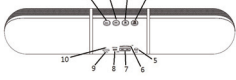

1	Skip Forward / Increase Volume	5	TF Card Slot
2	Skip Backward / Decrease Volume	7	USB Slot
3	Mode Button	8	ON/OFF Switch
4	MP3 Play/Pause/LED On/Off Button	9	USB Charging Port
5	AUX/Headset	10	LED Light Indicator

INSTRUCTIONS FOR USE

Charging the speaker

For best results, fully charge the speaker before use.

- Connect the USB cord (included) to the charging port of the speaker and insert the other end into a port on your computer or similar suitable power source.
- The Red LED turns on, indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It takes about 4 hours to charge the speaker fully.

Turn On/Off the Speaker

- Turn "ON": Add the "ON/OFF" switch to the ON Position.
- Turn "OFF": Add the "ON/OFF" switch to the OFF Position.

Switch the speaker to Bluetooth pairing mode:

- Turn On the speaker.
- You would hear the indicator tone and LED Flashing Lights are on. The speaker is now in pairing mode. (Note: Speaker will automatically pair with previously paired device)

Pairing your device with Bluetooth Speaker:

Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth enabled device within 27-33 Feet. Simply follow the below steps:

- Turn On the speaker.
- You would hear the indicator tone and LED Flashing Lights are on. The speaker is now in pairing mode.
- Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
- It will show for various devices.
- The pairing name of our Bluetooth Speaker is "THE ILLUMINATOR", pair with this device.
- If required, enter the password "0000" to confirm to finalize pairing.
- Once paired successfully, you would hear an indication tone.
- If you fail to pair it within the time frame or you want to pair it with a new device please follow the steps outlined above.

Select your favorite song or the Bluetooth device and music would now stream through Bluetooth speaker

Listening using Bluetooth Speaker:

Please ensure that your cell phone is paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Access Incoming Call	Incoming Call	Press the MP3 button once to answer an incoming call.
End Call	Incoming Call	After your phone connection, short press the MP3 button.
Volume Increase	During a call	Long press on the MP3 button will increase the volume.
Volume Decrease	During a call	Long press on the MP3 button will decrease the volume.
Redial last number	Standby mode and connected to device.	Short press the MP3 button twice.

Listening to Music Wirelessly

Please ensure that your device (Phone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase Volume	Playing music	A long press on the MP3 button will increase the volume.
Decrease Volume	Playing music	A long press on the MP3 button will decrease the volume.
Play	Playing music	Short press MP3 once to pause the music.
Pause	Playing music	Short press MP3 once to resume the music.
Previous track	Playing music	Short press the MP3 button to the previous track.
Next track	Playing music	Short press the MP3 button to the next track.

Note: An indication tone will alert you when the volume is adjusted to minimum or maximum level.

Note: Function of the Speaker (to play music) from non-Bluetooth devices is limited to the auxiliary port of the speaker. And, connect the other end of the cable to the audio device (such as MP3 Players, computer / tablet, etc.).

Note: Safety you always wear the sound device.

Note: Once AUX cable is connected to the Speaker, music through the Bluetooth will be stopped. Function

Accept increase/decrease volume like Skip Backward, Skip Forward etc can be only controlled through source device, while playing music in auxiliary mode.

Listening to Music using USB/TF Card Slot

- Turn on the speaker.
- Insert TF card or USB flash drive into the TF Card Slot or USB Slot. Music would be automatically streamed.
- Short press **MP3** button to move forward or backward on your playlist.
- Short press **MP3** button to Play or Pause a track.

Note: While using Bluetooth, if you insert TF Card or USB flash drive, speaker would disconnect the Bluetooth connection and switch to TF card or USB card function. You can short press Mode button each time until you press back Bluetooth mode.

TF Card/USB flash drive not included.

FM Radio

- Turn On the Speaker.
- Insert the auxiliary cord (included) into the auxiliary port. Leave the other end of the cord open. Auxiliary cord serves as FM Antenna while in FM Radio mode.
- Short press Mode button each time until FM mode is selected.
- Short press **MP3** button and the device would automatically search and store all the FM Radio stations.
- Short press **MP3** button to change the FM Radio stations.

Tip!

- Short press the Mode button each time to switch different functions of the speaker. The modes appear in the following sequence: Bluetooth / USB/TF / FM Radio / AUX In.

2. When the unit is not in use, turn OFF the device to save the battery power.

Do's and Don'ts

Do not play music at excessive levels as damage to hearing or equipment may result.

Do not use wet or in damp surroundings.

Specification

Bluetooth version	2.1 + EDR
Speaker Output	2x 3W
FM frequency	87.5 ~ 108MHz
Unit Size	115.8*72.1*38.4*
Unit Weight	162.5g
Play time	up to 2 hours
Charge Voltage	DC5V/0.5A
Bluetooth Range	27 ~ 33 Feet
Built-in Rechargeable Battery	3.7V 1700mAh

Note: Battery life & charging time may vary based on usage & types of devices used.

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Quiet, Tired, Noisy, Phone, Laptop, etc.	Adjust source volume.
Battery not hold	Battery check	Charge Battery.
Sound muted	Battery nearly dead	Charge Battery.

Problem	Possible Cause	Solution
No sound at all	Source is Tired, Mobile, Phone, Laptop, turned off.	Turn the source on.
	Speaker turned off.	Turn the speaker on.
	Volume turned down source.	Adjust volume source.
	Not a paired up source.	Re-pair from source.

Care and Maintenance

Clean the unit with soft, damp cloth. Never use chemicals or hard brushes.

Keep this unit away from wet, damp, dust, heavy use, chemicals or hard brushes.

The crossed out wheeled bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for recycling.

FCC Information

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B Digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment

off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: Materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repair by unauthorised personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with the product, including but not limited to: LCD Screens, glass parts, lenses, bulbs, etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contract, commercial law including but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract, under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: Service is required for this product, you should first contact Midwest Trading Group Customer Service or Information/Inquiries on by calling: 1-800-815-8714, Monday to Friday, 9am to 5pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to include the following details with the product your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Telephone No. 1-800-815-8714 E-mail: service@midwest.com