

# Bluetooth Remote Controller

## Operation Manual Android

### A : Music Mode•Video Mode

- 1 : @+Y is for Music Mode. The volume is controlled with the rocker in standard mode.Y for pause or play; X/B for volume
- 2 : Some brands of mobile phones support video playing in music mode, Y for play, pause and touch & hold for fast forward.

### B : Game Mode (Landscape)

- 1 : @+A is for landscape gamepad game mode. The direction is controlled by the rocker, B for shooting, Y for taking off. It depends on keyboardset of different brands of mobile phone.

### C : VR Mode Self-timer Mode, Video Mode

- 1 : @+X switches to VR Mode. When playing game, the direction is controlled by rocker, the front side key for shooting and taking off.
- 2 : @+X switches to Self-timer Mode. Some brands of mobile phone possibly do not support self-timer. Mouse mode self-timer is advised to be switched by @+B.
- 3 : @+X switches to Video Mode when the rocker control fast-forward-fast-backward. Some brands of mobile phone possibly do not support volume control.

### D : Mouse Mode、Self-timer Mode


- 1 : @+B switches to Mouse Mode when the rocker controls mouse, X/B for volume and Y/A for confirm and quit.
2. When some brands of mobile phone are not to be used under the self-timer mode, the mouse mode is suggested.

### E : Apple IOS System

- It needs to switch the side key to IOS direction to realize mobile connection due to the unopened IOS system. The C key is for self-timer and X/A for the volume up and down, Y for mute.

### G.Simple operation instruction please open battery cover

Look up bottom of battery cover by Phone Torch to see simple application operation.

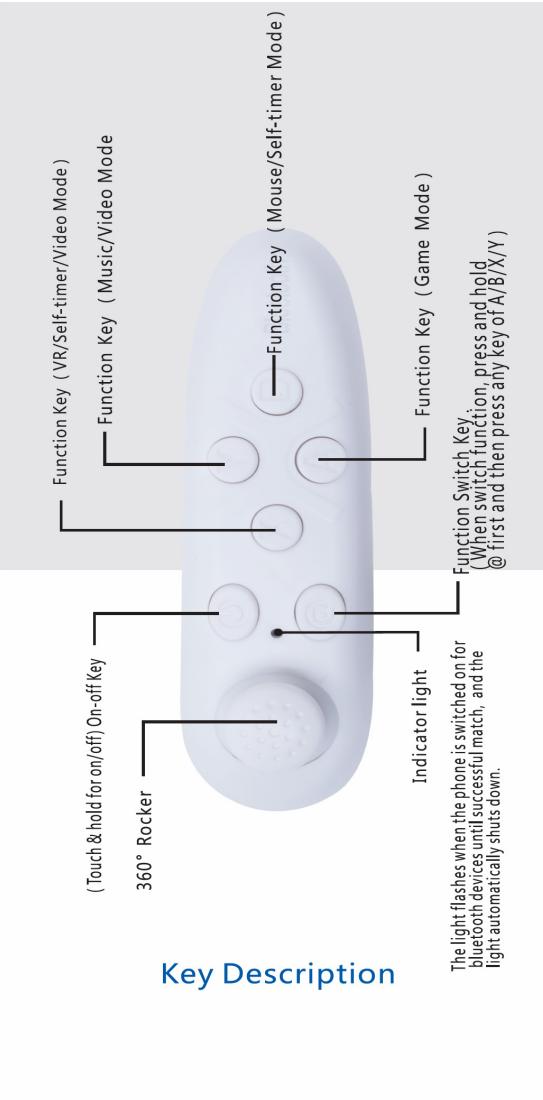

## Key Description



Change-over switch for Android apple.

FCC Statement  
Changes or modifications not expressly approved by the party responsible for compliance  
control and the user's authority to operate the equipment.  
This equipment has been tested to comply with the limits for a Class B digital device,  
 pursuant to Part 15 of the FCC Rules. These are the highest level of protection  
 reasonable protection against harmful interference. It is unlawful to change  
 the equipment's protection against harmful interference by installing filters or  
 other changes unless specifically permitted by FCC regulations. The user  
 may cause harmful interference if the equipment is not operated in accordance  
 with the instructions. The user is responsible for any damage caused by  
 such interference.  
This equipment has not been tested to the limits required for operation in  
 a residential environment. The user must take all necessary steps to  
 ensure that the equipment does not cause harmful interference.  
- Disconnect the equipment before moving it.  
- Connect the equipment into an outlet of a circuit different from that to which it is connected.  
- Consult the dealer or an experienced technician for help.  
This device complies with part 15 of the FCC Rules. Operation is subject to the following  
conditions: (1) this device may not cause harmful interference; and (2) this device must  
accept any interference received, including interference that may cause  
undesired operation.

## Technical Parameters

Product model: JPVRO4
Size: 118*33*42MM
Wireless Protocol : Bluetooth 3.0 compliant
Support System : Android/IOS/PC
Support Game : Android/PC ( GAMEPAD )
NES/GB/SMDSX/GBC/N64/MAME; AndroidAPK
Game Apple/IOS:Icade Game
CPU: ARM968E-S Coer
Battery: two 7th batteries of R03 1.5 v
Working Current: 0.5-8Ma Standby Current 0.5-1mA
Shutdown Current : 0
Continuous Game Time: about 40-120 hours

## FAQ:

- Low battery may cause the rocker not sensitive. Please replace the battery.
- When it fails in connection with the bluetooth pairing, please restart your cell phone to connect again
- Using the WIFI will affect the bluetooth connection.
- Some brands of mobile phone keyboard settings may be non-standard Android keyboard, when this bluetooth gamepad is designed for the standard Android system which may not perform well or mismatch after connection. Please select @ + any key of A, B, X, Y to test the match.
- If there is a crash, please unplug battery and put it on.
- Applied for games such as Angry Robot, Hatsune Miku, the PC version of Eternity Warriors, and so on.
- When there is any problem in using bluetooth devices, please scan the QR code below to enter our company's public Wechat platform, and put forward your valuable advice. We will continue to improve the applicability of the bluetooth device.

Company: SHENZHENACADA ELECTRONIC CO., LTD  
Address: 39 Building, B Industry Zone Teng Lang, Xili Lake, Shenzhen, China  
Contact person: Mr. SUN  
Telephone: 008613502054047 Email: kaisun@163.com