

Bluetooth Speaker
User manual



SP3172

BLUETOOTH® CONNECTIVITY

Wirelessly connect to your Smartphone, tablet, or laptop. The Armor Craft speaker is compatible with most devices equipped with Bluetooth® 2.1 or above. Audible voice prompts guide you through the connection process.

IPX5 SPLASH AND SHOCK RESISTANT


With its protective silicone housing and IPX5 rating, the Armor Craft speaker is ideal for camping, boating, poolside, and outdoor entertaining.

HANDS-FREE PHONE ANSWERING WITH TALKING CALLER ID

Make and answer calls on your mobile phone, hands-free. Talking Caller ID audibly announces the phone number of the caller.

RECHARGEABLE LI-ION BATTERY

Supplies up to 5 hours of operating time.

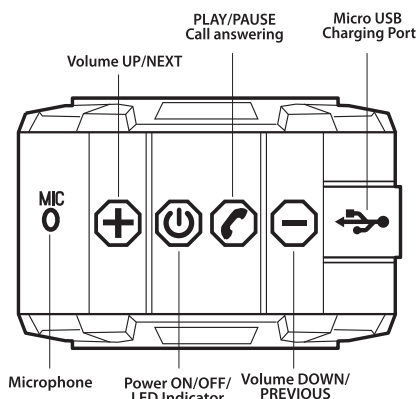

FIRST-TIME BATTERY CHARGING

Fully charge your speaker before using. Connect the unit via the charging port to the USB port on your computer, or to a USB Wall Charger or Car Charger, using the included Micro USB charging cable. The Charging Indicator LED will light up red. Once charging is complete, the indicator light will turn off. Full charging time is approximately 2 hours. A full charge will provide about 5 hours of playing time.

POWER ON/OFF

Press and hold the Power button for 3 seconds. Press and hold the button for 3 seconds to turn the unit off.

PAIRING

The unit will automatically go into Bluetooth® search mode when you turn it on. Turn on the Bluetooth mode on your phone or other device settings. The LED indicator (blue light) will flash quickly, and the voice prompt will announce, "Welcome" and then "Waiting to connect to Bluetooth device".

Find the pairing name "iHip Armor Craft" in your device's Bluetooth® settings, click on it, and wait for connection. If asked for a password, enter 0000 and confirm. The light will flash slowly when a connection is established. The voice prompt will announce, "Connected to Bluetooth device".

PLAY/PAUSE

Press the PLAY/PAUSE button to play or pause.

VOLUME CONTROL

Press and the "+" button to increase the volume. Press the "-" button to decrease the volume.

PREVIOUS/NEXT

Press and hold the "+" button to skip to the next song. Press and hold the "-" button to rewind to the previous song.

PHONE ANSWERING

When connected to your phone in the Bluetooth® mode, an incoming call will automatically transfer to your speaker.

Music will automatically pause during a call and the Talking Caller ID function will audibly announce the phone number of the caller. Music will resume after the call.

Press the PLAY/PAUSE/CALL ANSWERING button to answer a call, and again to hang up.

TROUBLESHOOTING

PROBLEM	REMEDY
No sound	Make sure the speaker is properly connected to the output device. See the "PAIRING" section of this manual. Make sure that the volume of your connected device is turned on. Turn up the volume on the speaker. Make sure the speaker is charged. Make sure the speaker is within 30 feet, without obstructions, of the output device.
Can't answer or hang up calls	Some mobile devices will not support hands-free functions. Please check your phone's user guide.
Can't connect to two Bluetooth devices simultaneously	The speaker does not support connection of more than one output device at a time.
Can't connect wirelessly	Make sure your phone or other device is in the Bluetooth mode. See the "PAIRING" section of this manual. Make sure the speaker is within 30 feet, without obstructions, of the output device.
Hear a crackling noise or interference	Bluetooth is a wireless radio technology. Walls or large objects between the speaker and output device may interfere with the transmission. Make sure the speaker is within 30 feet, without obstructions, of the output device.

PRECAUTIONS

This product's water resistance rating is IPX5, meaning it is protected against low pressure jets or streams of water from any direction.

Do not fully immerse the unit in water or other liquid. Always store the unit with the power off.

Avoid storing in places that are subject to extreme temperatures or high humidity.

Store in well-ventilated areas.

Make sure to recharge the battery if the unit is not in operation for a long period.

Keep the unit away from dirt, dust and liquids.

Do not attempt to open the unit up.

Keep the unit away from children.

SPECIFICATIONS

Drivers: 5W, Ø 2" full range Neo driver
Battery: 3.7V 500mAh rechargeable lithium ion battery
Frequency response: 100Hz - 20kHz
Bluetooth® version: V2.1 + EDR
Bluetooth® range: Line of sight, 30 ft. (10m)

©2016 Zeikos, Inc. iHip is trademark of Zeikos, Inc.

All Rights Reserved.

United States and international patent pending.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

All other trademarks and trade names are those of their respective owners. The illustrated product and specifications may differ slightly from that supplied.

Designed by Zeikos, Inc. Manufactured in China.

For ages 12+. This is not a toy. This product contains chemicals known to the state of California to cause cancer

and/or birth defects or other reproductive harm.

Limited One Year Warranty.

Customer service: 1-800-500-4434.

To activate your product warranty, go to our website, www.ihip.com, and register this product.

Zeikos, Inc., 19 Progress Street, Edison, NJ 08820

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation