



PowerA™

## ENHANCED WIRELESS CONTROLLER

### USER MANUAL

Manuel de l'utilisateur  
Bedienungsanleitung  
Manual de usuario  
Manuale per l'uso  
Manual do usuário



**Customer Service**  
Service client  
Kundendienst  
Servicio a clientes  
Assistenza clienti  
Apio ao Cliente

BDA Inc.  
15525 Woodinville-Redmond Rd NE  
Woodinville, WA 98072

CustomerService@PowerA.com

2-Year Limited Warranty: Visit PowerA.com for details and to register your product



Garantía limitada de 2 años. Visita PowerA.com para obtener detalles y para registrarte.

Garantia limitada de 2 anos: Visita PowerA.com para obter detalhes e registrar o teu produto

Beschränkte 2-Jahres-Garantie – Details und Informationen zur Anmeldung finden Sie unter PowerA.com.

Garantie limitée de 2 ans – Rendez-vous sur PowerA.com pour de plus amples informations et pour enregistrer votre achat.

Garantia limitada de 2 anos: Visita PowerA.com para obter detalhes e registrar o teu produto

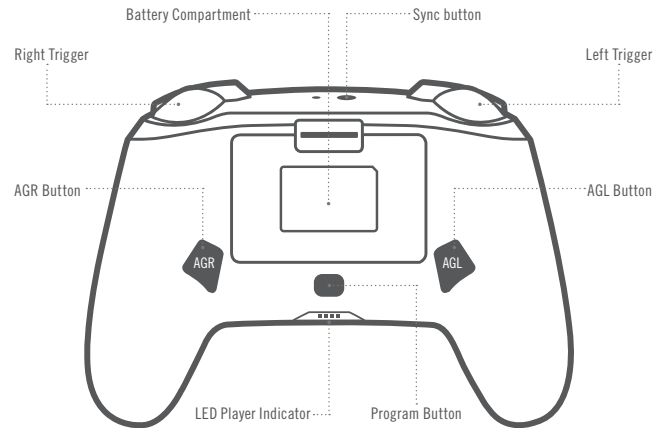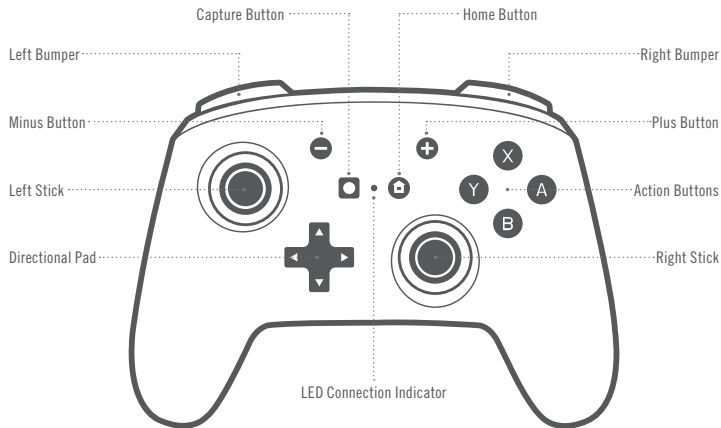

### CONTENTS

- Enhanced Wireless Controller for Nintendo Switch
- (2) AA Batteries
- User Guide

### SET UP

Check for system update. Nintendo system update version 6.0.0 or later is required for use of PowerA Wireless controllers.

1. Connect your Nintendo Switch to the Internet
2. Typically, system updates will be downloaded automatically when connected online.
3. Select 'System Settings' from HOME menu, then scroll down to 'System' to see System Update version and automatically check for system update.

For additional help, search "system update" from Nintendo Support website.

### INSTALL BATTERIES

1. Remove the battery door, and install (2) AA Alkaline Batteries (included)
2. Confirm your Nintendo Switch Console is powered ON.

### WIRELESS PAIRING

From the HOME Menu, select "Controllers," then "Change Grip and Order." While the following screen is displayed, press and hold down the SYNC Button for at least one second on the Controller you wish to pair.

*NOTE: Once controller is paired once, it will auto-connect next time.*

### UNDERSTANDING LED INDICATORS

There are three LED locations on this controller: top, front and bottom. 1. The top LED near the Sync button will flash Red when the Alkaline batteries are getting near depletion. Replace Alkaline batteries once low battery indicator is flashing to avoid interrupting gameplay. 2. The front LED (between Home/View buttons) indicates controller is powered and will flash during programming of Advanced Gaming Buttons. 3. The four LED on the bottom indicate player number 1-8 and will cycle from left to right during wireless pairing.

### ASSIGNING ADVANCED GAMING BUTTONS

1. Press and hold the program button for 2-3 seconds on the back of the controller. The program LED indicator will flash, signaling the controller is in assign mode.
2. Press 1 of the following buttons (A/B/X/Y/L/R/ZL/ZR/D-pad) to re-assign. Then press the Advanced Gaming Button (AGR or AGL) that you wish to assign. The Program LED indicator will stop flashing, signaling the Advanced Gaming Button has been set.
3. Repeat for the remaining Advanced Gaming Button.

*NOTE: Advanced Gaming Button assignments will remain in memory even after disconnected.*

### RESETTING ADVANCED GAMING BUTTONS

1. Hold the program button down for 2-3 seconds. The LED Connection Indicator will slowly flash, signaling the controller is in program mode.
2. Press and hold the Assign Program Button for 5 seconds to reset to no function.

### TROUBLESHOOTING

Q1. My Wireless Controller is not pairing

- A1. Confirm batteries are properly installed, and are not drained, used or damaged
- A2. Confirm you are following the pairing process listed above
- A3. Remove and replace the Alkaline batteries to reset the Wireless controller

### SUPPORT

For support with your authentic PowerA accessories, please visit the Support section of PowerA.com, email CustomerService@PowerA.com or call (866)-308-4031. Mon-Fri 5:00AM-5:00PM PST

### MOTION WARNING

Playing video games can make your muscles, joints, skin or eyes hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain: • Avoid excessive play. Take a 10 to 15 minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play. • If your hands, wrists, arms or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning or stiffness, stop and rest for several hours before playing again. • If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

*Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

**NOTE:** This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### CAN ICES-3(B)/NMB-3(B):

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

### BATTERY LEAKAGE WARNING

Leakage of battery fluid can cause personal injury as well as damage to your controller. If battery leakage occurs, thoroughly wash the affected skin and clothes. Keep battery fluid away from your eyes and mouth. Leaking batteries may make popping sounds.

To avoid battery leakage:

- Do not mix used and new batteries (replace all batteries at the same time).
- Do not mix different brands of batteries.
- Alkaline batteries recommended. Do not use Lithium ion, nickel cadmium (nicad), or carbon zinc batteries.
- Do not leave batteries in the remote for long periods of non-use.
- Do not recharge alkaline or non-rechargeable batteries.
- Do not put the batteries in backwards. Make sure that the positive (+) and negative (-) ends are facing in the correct directions. Insert the negative end first.
- When removing batteries, remove the positive end first.
- Do not use damaged, deformed or leaking batteries.
- Remove exhausted batteries from the remote
- Rechargeable batteries must be removed from the remote before being charged
- Rechargeable batteries should be charged under adult supervision
- Do not short circuit the supply terminals

### AUSTRALIAN WARRANTY STATEMENT:

This product comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If purchased within Australia or New Zealand, this product comes with a One-year warranty from date of purchase. Defects in the product must have appeared within One year from date of purchase, in order to claim the warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailer's return policies and

procedures. Any expenses incurred, as a result of returning the product to the retailer of purchase are the full responsibility of the consumer.

### AU WHOLESALE DISTRIBUTOR:

Level 2, 2 Darling Street South Yarra,  
Australia VIC 3141 bluemouth.com.au  
Email: support@bluemouth.com.au +613 9646 4011

### MANUFACTURED BY:

Bensussen Deutsch & Associates, Inc. (BDA, Inc.)  
15525 Woodinville-Redmond Rd. NE Woodinville, WA 98072  
BDAINC.com | POWERA.com

### SUPPORT/ADDITIONAL LEGAL

For more FAQs and support, visit support.powera.com. PowerA, and the PowerA logo are trademarks of Bensussen Deutsch and Associates, Inc. TM and © Bensussen Deutsch and Associates, Inc.

### GERMAN INHALT:

- Erweiterter kabelloser Controller für Nintendo Switch
- AA-Batterien (2)
- Bedienungsanleitung

### AUF SYSTEMAKTUALISIERUNG PRÜFEN:

Für die Nutzung von kabellosen PowerA-Controllern wird die Nintendo Systemaktualisierung Version 6.0.0 oder höher benötigt.

1. Verbinden Sie Ihren Nintendo Switch mit dem Internet
  2. Im Normalfall werden Systemaktualisierungen automatisch heruntergeladen, wenn eine Verbindung mit dem Internet besteht.
  3. Wählen Sie im Home-Menü Systemeinstellungen aus, und scrollen Sie dann bis zu System nach unten, um die Version der Systemaktualisierung festzustellen und automatisch auf Systemaktualisierungen zu prüfen.
- Für weitere Hilfe suchen Sie nach Systemaktualisierung auf der Support-Website von Nintendo.

### BATTERIEN EINLEGEN

1. Öffnen Sie die Batteriefachklappe und legen Sie zwei AA-Alkalibatterien ein
2. Stellen Sie sicher, dass Ihre Nintendo Switch-Konsole eingeschaltet ist.

### KABELLOSE KOPPLUNG

Wählen Sie im Home-Menü Controller, dann Griffweise/Reihenfolge ändern. Halten Sie, während der folgende Bildschirm angezeigt wird, die SYNC-Taste für mindestens eine Sekunde lang an dem Controller gedrückt, den Sie verbinden wollen. Wenn der Controller einmal verbunden wurde, verbindet er sich beim nächsten Mal automatisch.

### LED-ANZEIGEN VERSTEHEN

An diesem Controller gibt es drei LED-Positionen: Oben, vorne und unten.

1. Die obere LED-Leuchte nahe der Sync-Taste blinkt

