
Please read this manual before using the machine.
Please keep this manual within easy reach for quick reference.

ELECTRONIC EYELET BUTTON HOLER





This service manual is intended for RH-981A; be sure to read the RH-981A instruction manual before this manual.
 Carefully read the "SAFETY INSTRUCTIONS" below and the whole of this manual to understand this product before you start maintenance.
 As a result of research and improvements regarding this product, some details of this manual may not be the same as those for the product you purchased.
 If you have any questions regarding this product, please contact a Brother dealer.

SAFETY INSTRUCTIONS







1. Safety indications and their meanings

This instruction manual and the indications and symbols that are used on the machine itself are provided in order to ensure safe operation of this machine and to prevent accidents and injury to yourself or other people.
 The meanings of these indications and symbols are given below.

Indications

	DANGER	The instructions which follow this term indicate situations where failure to follow the instructions will almost certainly result in death or severe injury.
	CAUTION	The instructions which follow this term indicate situations where failure to follow the instructions could cause injury when using the machine or physical damage to equipment and surroundings.

Symbols

-  This symbol () indicates something that you should be careful of. The picture inside the triangle indicates the nature of the caution that must be taken.
 (For example, the symbol at left means "beware of injury".)
-  This symbol () indicates something that you must not do.
-  This symbol () indicates something that you must do. The picture inside the circle indicates the nature of the thing that must be done.
 (For example, the symbol at left means "you must make the ground connection".)

2. Notes on safety

DANGER



Wait at least 5 minutes after turning off the power switch and disconnecting the power cord from the wall outlet before opening the face plate of the control box. Touching areas where high voltages are present can result in severe injury.

CAUTION

Environmental requirements



Use the sewing machine in an area which is free from sources of strong electrical noise such as high-frequency welders. Sources of strong electrical noise may cause problems with correct operation.



Any fluctuations in the power supply voltage should be within $\pm 10\%$ of the rated voltage for the machine. Voltage fluctuations which are greater than this may cause problems with correct operation.



The power supply capacity should be greater than the requirements for the sewing machine's electrical consumption. Insufficient power supply capacity may cause problems with correct operation.



The pneumatic delivery capability should be greater than the requirements for the sewing machine's total air consumption. Insufficient pneumatic delivery capability may cause problems with correct operation.



The ambient temperature should be within the range of 5 °C to 35 °C during use. Temperatures which are lower or higher than this may cause problems with correct operation.



The relative humidity should be within the range of 45% to 85% during use, and no dew formation should occur in any devices. Excessively dry or humid environments and dew formation may cause problems with correct operation.



Avoid exposure to direct sunlight during use. Exposure to direct sunlight may cause problems with correct operation.



In the event of an electrical storm, turn off the power and disconnect the power cord from the wall outlet. Lightning may cause problems with correct operation.

Installation



Machine installation should only be carried out by a qualified technician.



Contact your Brother dealer or a qualified electrician for any electrical work that may need to be done.



The sewing machine weighs more than 87 kg. The installation should be carried out by two or more people.



Do not connect the power cord until installation is complete, otherwise the machine may operate if the start switch is pressed by mistake, which could result in injury.



Be sure to connect the ground. If the ground connection is not secure, you run a high risk of receiving a serious electric shock, and problems with correct operation may also occur.



All cords should be secured at least 25 mm away from any moving parts. Furthermore, do not excessively bend the cords or secure them too firmly with staples, otherwise there is the danger that fire or electric shocks could occur.



Install the belt covers to the machine head and motor.



If using a work table which has casters, the casters should be secured in such a way so that they cannot move.



Be sure to wear protective goggles and gloves when handling the lubricating oil and grease, so that they do not get into your eyes or onto your skin, otherwise inflammation can result. Furthermore, do not drink the oil or eat the grease under any circumstances, as they can cause vomiting and diarrhoea. Keep the oil out of the reach of children.

CAUTION

Sewing



This sewing machine should only be used by operators who have received the necessary training in safe use beforehand.



The sewing machine should not be used for any applications other than sewing.



Be sure to wear protective goggles when using the machine.

If goggles are not worn, there is the danger that if a needle breaks, parts of the broken needle may enter your eyes and injury may result.



Turn off the power switch at the following times, otherwise the machine may operate if the start switch is pressed by mistake, which could result in injury.

- When threading the needle
- When replacing the needle
- When not using the machine and when leaving the machine unattended



If using a work table which has casters, the casters should be secured in such a way so that they cannot move.



Attach all safety devices before using the sewing machine. If the machine is used without these devices attached, injury may result.



Do not touch any of the moving parts or press any objects against the machine while sewing, as this may result in personal injury or damage to the machine.



If an error occurs in machine operation, or if abnormal noises or smells are noticed, immediately turn off the power switch. Then contact your nearest Brother dealer or a qualified technician.



If the machine develops a problem, contact your nearest Brother dealer or a qualified technician.

Cleaning



Turn off the power switch before carrying out cleaning, otherwise the machine may operate if the start switch is pressed by mistake, which could result in injury.



Be sure to wear protective goggles and gloves when handling the lubricating oil and grease, so that they do not get into your eyes or onto your skin, otherwise inflammation can result.

Furthermore, do not drink the oil or eat the grease under any circumstances, as they can cause vomiting and diarrhoea.

Keep the oil out of the reach of children.

Maintenance and inspection



Maintenance and inspection of the sewing machine should only be carried out by a qualified technician.



Ask your Brother dealer or a qualified electrician to carry out any maintenance and inspection of the electrical system.



Turn off the power switch and disconnect the power cord from the wall outlet at the following times, otherwise the machine may operate if the start switch is pressed by mistake, which could result in injury.

- When carrying out inspection, adjustment and maintenance
- When replacing consumable parts such as the loopers and knife



Disconnect the air hoses from the air supply and wait for the needle on the pressure gauge to drop to "0" before carrying out inspection, adjustment and repair of any parts which use the pneumatic equipment.



If the power switch and air need to be left on when carrying out some adjustment, be extremely careful to observe all safety precautions.



Use only the proper replacement parts as specified by Brother.



If any safety devices have been removed, be absolutely sure to re-install them to their original positions and check that they operate correctly before using the machine.



Any problems in machine operation which result from unauthorized modifications to the machine will not be covered by the warranty.

3. Warning labels


The following warning labels appear on the sewing machine.

Please follow the instructions on the labels at all times when using the machine. If the labels have been removed or are difficult to read, please contact your nearest Brother dealer.


1

	⚠ DANGER	⚠ GEFAHR	⚠ DANGER	⚠ PELIGRO
	Hazardous voltage will cause injury. Turn off main switch and wait 5 minutes before opening this cover.	Hochspannung verletzungsgefahr! Bitte schalten sie den hauptschalter aus und warten sie 5 minuten, bevor sie diese abdeckung öffnen.	Un voltage non adapté provoque des blessures. Eteindre l'interrupteur et attendre 5 minutes avant d'ouvrir le capot	Un voltaje inadecuado puede provocar las heridas. Apagar el interruptor principal y esperar 5 minutos antes de abrir esta cubierta.

2

	⚠ CAUTION
	Moving parts may cause injury. Operate with safety devices. Turn off main switch before threading, changing bobbin and needle, cleaning etc.


3



Do not touch the knife or press any objects against the machine while sewing, as this may result in personal injury or damage to the machine.


Safety devices
 Eye guard
 Finger guard
 Needle bar guard
 Belt cover, etc.

4




Be careful not to clamp your fingers when closing the front cover.

5




Be sure to connect the ground. If the ground connection is not secure, you run a high risk of receiving a serious electric shock, and problems with correct operation may also occur.

6

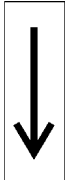

Direction of operation

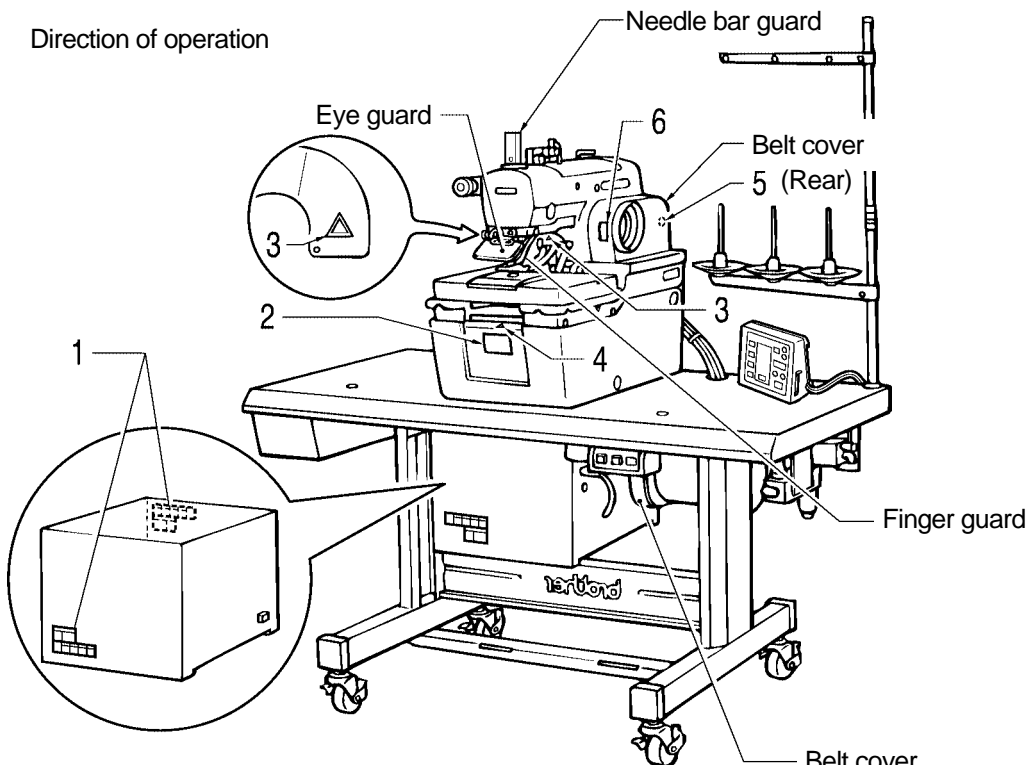


CONTENTS

1. MECHANICAL DESCRIPTIONS	1
1-1. Upper and lower shaft mechanisms	1
1-2. Needle bar mechanism	2
1-3. Thread take-up mechanism	2
1-4. Zigzag mechanism	3
1-5. Needle bar rocking mechanism	3
1-6. Feed mechanism	4
1-7. Work clamp mechanism.....	5
1-8. Cloth opener mechanism	6
1-9. Cutter mechanism.....	7
1-10. Looper mechanism	7
1-11. Spreader mechanism	8
1-12. Double chain stitch looper mechanism.....	9
2. DISASSEMBLY	10
2-1. Covers and work clamp mechanism	10
2-2. Feed mechanism	11
2-3. Lubrication mechanism	11
2-4. Looper and spreader mechanisms.....	12
2-5. Needle bar rotating mechanism.....	13
2-6. Looper base mechanism.....	14
2-7. Needle bar, thread take-up, and zigzag mechanisms.....	15
2-8. Knife pipe assembly.....	17
2-9. Lower shaft mechanism	17
2-10. Synchronizer mechanism.....	18
2-11. Upper shaft mechanism	18
2-12. Cutter mechanism.....	19
2-13. Zigzag fork mechanism	19
3. ASSEMBLY	20
3-1. Zigzag fork mechanism	20
3-2. Cutter mechanism.....	21
3-3. Upper shaft mechanism	22
3-4. Lower shaft mechanism	23
3-4-1. Adjusting the timing belt.....	23
3-5. Upper thread trimmer mechanism	24
3-5-1. Adjusting the thread trimmer lever hammer stroke	24
3-6. Knife pipe and the knife bracket.....	25
3-7. Driving gear shaft mechanism	26
3-8. Needle bar, thread take-up, and zigzag mechanisms	27
3-8-1. Eliminating end play of the thread take-up on the arm	27
3-8-2. Applying grease to the ends of the thread take-up spring.....	27
3-8-3. Eliminating end play of the needle bar driving lever.....	27
3-8-4. Eliminating end play of the driving rod	28
3-8-5. The strength to tighten the set screw of ball bearing 25/20.....	28
3-8-6. Eliminating end play of the zigzag rock shaft	28
3-8-7. Eliminating end play of the zigzag lever.....	29
3-8-8. Attaching the needle bar yoke and the needle bar level feed link	29
3-8-9. Attaching the needle bar bush U and the needle bar	30
3-8-10. Eliminating end play of the needle bar block.....	31
3-8-11. Adjusting the needle bar in the radial direction	31
3-8-12. Attaching the needle bar block assembly....	32
3-8-13. Adjusting the height of the needle bar	32
3-9. Looper base.....	33
3-10. Needle bar rocking mechanism.....	34
3-10-1. Driving looper shaft	34
3-10-2. Needle bar rocking mechanism	35
3-11. Looper and spreader mechanisms	37
3-12. Lubrication mechanism	40
3-12-1. Machine head	40
3-12-2. Driving gear shaft.....	41
3-13. Feed mechanism	42
3-13-1. X direction	42
3-13-2. Y direction	43
3-13-3. Attaching the X-feed guide shaft	45
3-14. Synchronizer.....	46
3-15. Covers and work clamp mechanism.....	47
3-16. Safety switch.....	47
4. ADJUSTMENT	48
4-1. Adjusting the work clamp lift height	48
4-2. Adjusting the position of the work clamp plate	49
4-3. Adjusting the cloth opening amount.....	50
4-4. Adjusting the position of the work clamp.....	51
4-5. Adjusting the X-axis home position	52
4-6. Adjusting the Y-axis home position	52
4-7. Adjusting 0 position (reference line) of the needle	53
4-8. Adjusting the home position of the looper base	53
4-9. Fine adjustment of knife position	54
4-10. Adjusting the sideways movement of the cutter lever.....	55
4-11. Adjusting the height of the throat plate.....	55


4-12. Adjusting the height of the spreader and looper.....	56
4-13. Adjusting the needle and looper timing.....	57
4-14. Adjusting the loop stroke	58
4-15. Adjusting the height of the needle bar	59
4-16. Adjusting the clearance between the looper and needle	59
4-17. Adjusting the needle guard.....	60
4-18. Adjusting the spreader mounting positions	60
4-19. Adjusting the spreader timing.....	61
4-20. Adjusting the amount to pull the upper thread and tension release	61
4-21. Adjusting upper thread trimming	62
4-21-1. Adjusting the upper movable knife mounting position.....	62
4-21-2. Adjusting the position of the thread trimmer lever bracket.....	63
4-22. Adjusting the lower thread trimmer (-01 specification).....	63
4-22-1. Adjusting the knife pressure	63
4-22-2. Adjusting the position of the thread trimmer arm	64
4-22-3. Adjusting the thread clamp assembly and thread clamp opener.....	65
4-22-4. Adjusting the thread handler	66
4-22-5. Adjusting the thread guide plate.....	67
4-22-6. Adjusting the amount to pull the lower thread required for thread trimming	67
4-22-7. Adjusting the amount to pull the lower thread for safety stitching.....	68
4-22-8. Adjusting the amount to pull the gimp.....	68
4-23. Adjusting the lower thread trimmer (-02, -52 specifications).....	69
4-23-1. Adjusting the knife engagement.....	69
4-23-2. Adjusting the knife pressure	70
4-23-3. Adjusting the gimp pull force	70
4-23-4. Adjusting the gimp tension	71
4-23-5. Using gimp thread work clamp	72
4-23-6. Adjusting the auxiliary clamp arm	73
4-23-7. Adjusting the length of the lower thread to be pulled for a safe sewing start.....	74
4-24. Adjusting the position of the lower thread presser (-02, -52 specifications)	75
4-25. Adjusting the rotating centers of the needle bar and the looper base	76
4-26. Adjusting the needle bar stop position	77

5. POWER SUPPLY EQUIPMENT	78
5-1. Components inside the control box	78
5-2. Fuse explanation	80
5-2-1. Before replacing a fuse	81
5-3. Connectors.....	82
5-3-1. Connector positions.....	82
5-3-2. Signal names for connectors and probable symptoms due to poor contact	86
5-4. Specification harness connections	97
5-5. Summary of DIP switches.....	98
5-5-1. Panel DIP switches	98
5-5-2. Circuit board DIP switches	99
5-6. CHANGING FUNCTIONS USING THE MEMORY SWITCHES.....	101
5-6-1. Memory switch table.....	102
5-7. Sensors positions and functions.....	103
6. AIR PRESSURE MECHANISM.....	107
6-1. Solenoid valves and air tubes	107
6-1-1. Adjusting the solenoid valve speed controllers.....	107
6-1-2. Air tubes	108
6-2. Air tube layout.....	109
7. SOFTWARE.....	112
7-1. Motion flowchart.....	112
7-2. Input check list	113
7-3. Output check list	116
7-4. List of error codes	118
7-5. Troubleshooting.....	121
7-6. Control circuit block diagram (1)	128
7-7. Control circuit block diagram (2)	129

 


1. MECHANICAL DESCRIPTIONS

1-1. Upper and lower shaft mechanisms

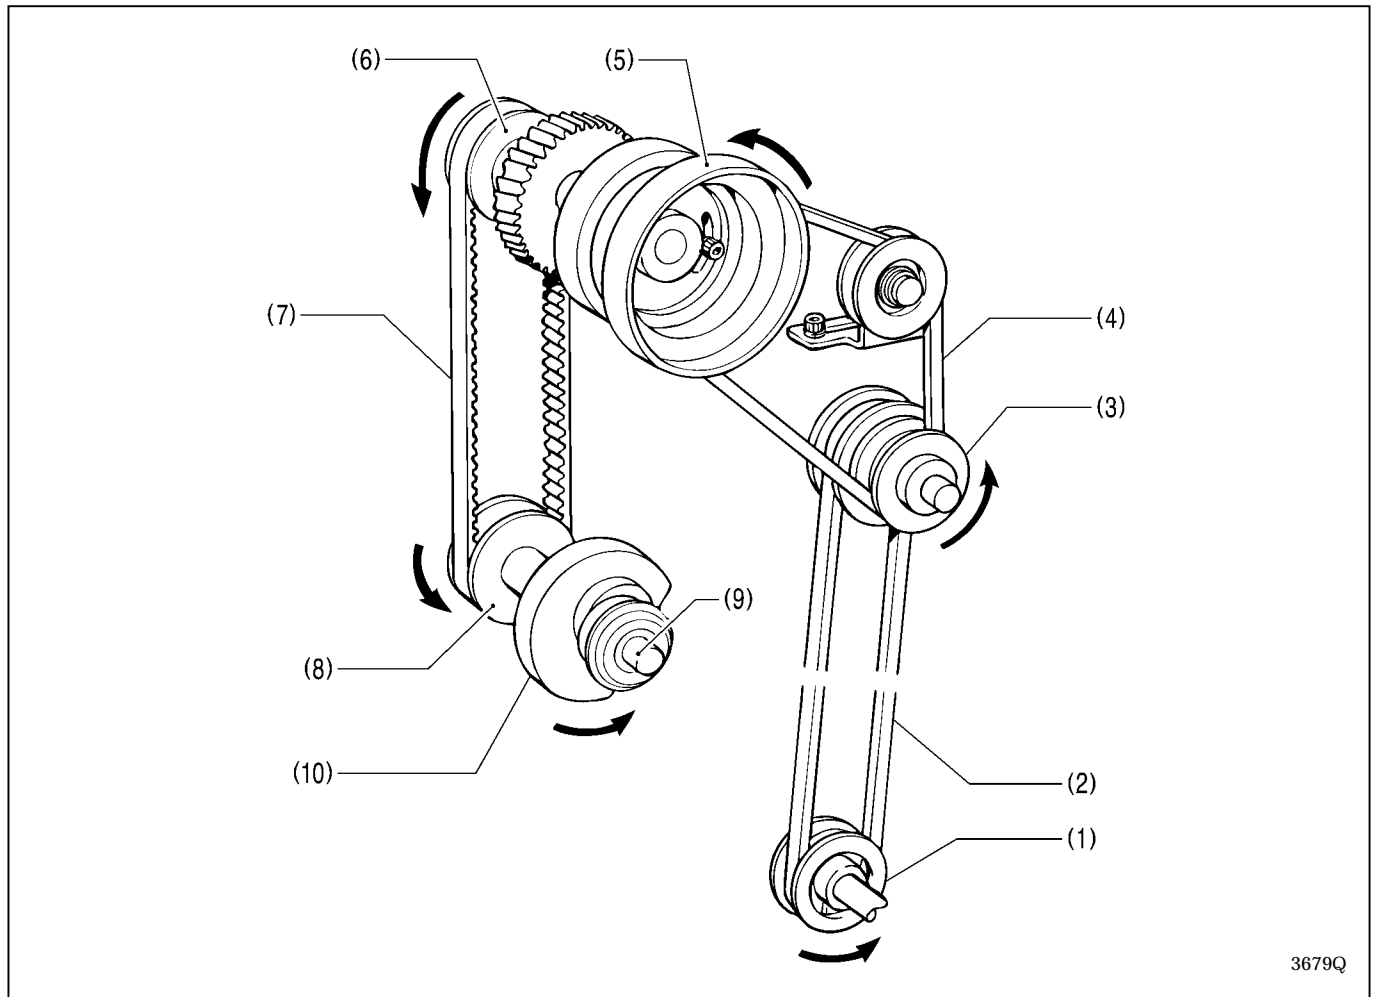

1. When the motor pulley (1) rotates, its motion is transmitted to the V belt (2), the idler pulley (3), and the V belt (4), and finally to the pulley (5).
2. When the pulley (5) rotates in the direction of the arrow, its motion is transmitted to the upper shaft timing pulley (6), the timing belt (7), and the lower shaft tension pulley (8), and the lower shaft (9), causing the lower shaft cam (10) to turn in the direction of the arrow.


1-2. Needle bar mechanism

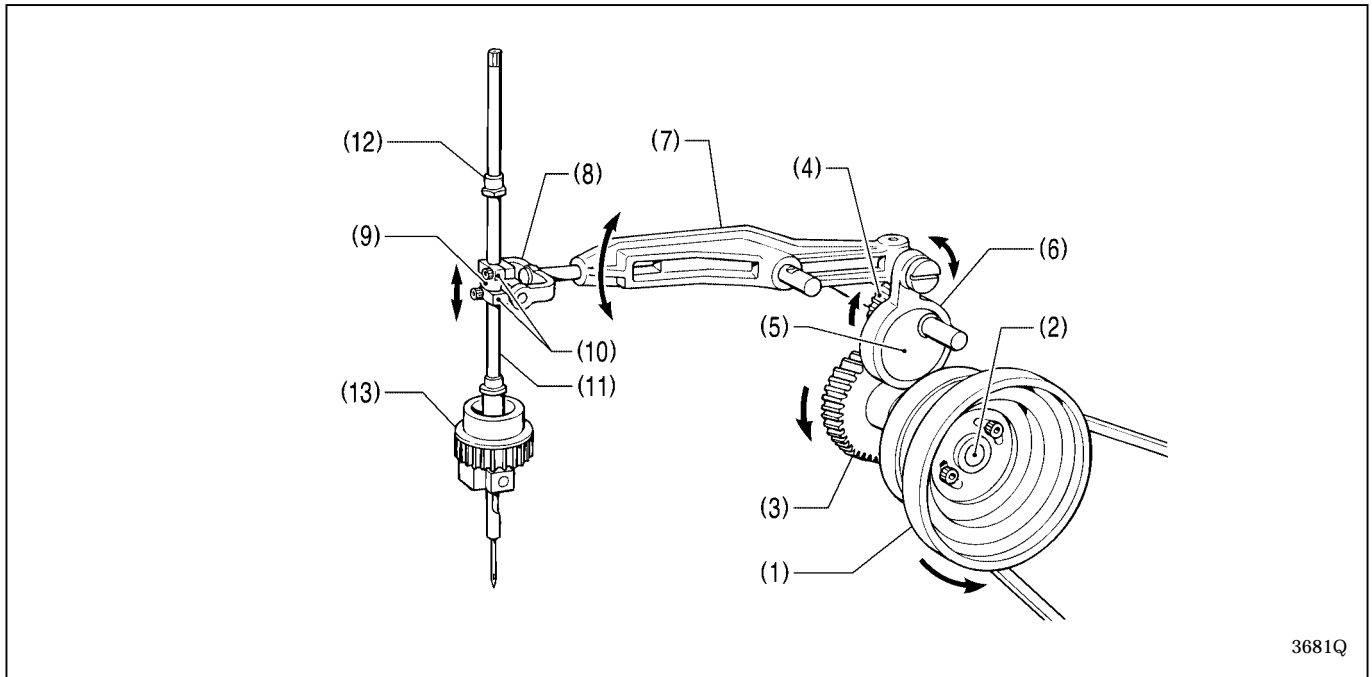

3681Q

1. When the pulley rotates in the direction of the arrow (towards you), its rotation is transmitted to the upper shaft (2), the needle bar gear (3), and the driving gear (4), that makes the eccentric rod (5) rotate.
2. The driving rod (6), which is engaged with the eccentric rod (5), rocks the needle bar driving lever (7).
3. The rocking motion of the needle bar driving lever (7) is transmitted to the needle bar yolk (8), the needle bar level feed link (9), and the needle bar clamp (10), and then the needle bar (11) moves up and down.
4. The needle bar (11) is guided by needle bar bush U (12) and the needle bar block (13).

1-3. Thread take-up mechanism

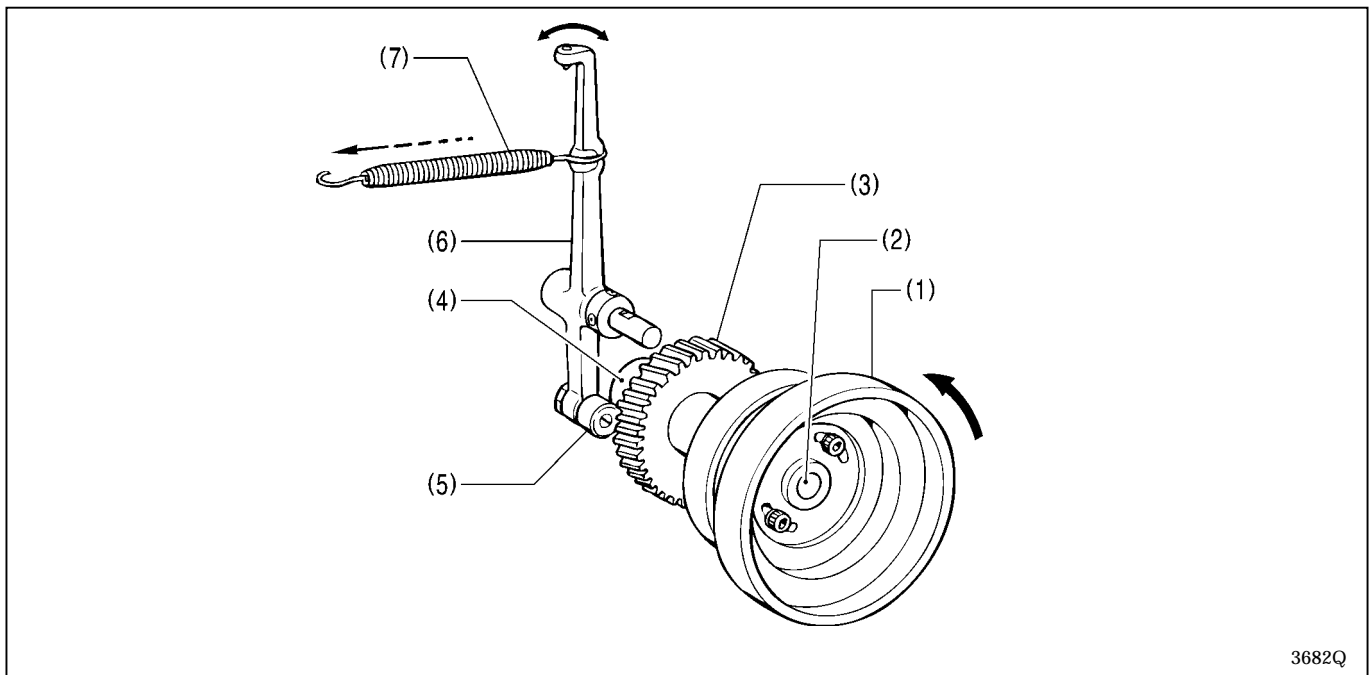


3682Q

1. When the pulley (1) rotates in the direction of the arrow, the needle bar gear (3) rotates via the upper shaft (2).
2. The thread take-up cam (4), which is attached to the needle bar gear (3), moves the thread take-up (6) via the thread take-up cam roller (5).
3. The thread take-up cam roller (5) is always kept in contact with the cam (4) by the thread take-up spring (7) attached to the thread take-up (6).


1. MECHANICAL DESCRIPTIONS

1-4. Zigzag mechanism

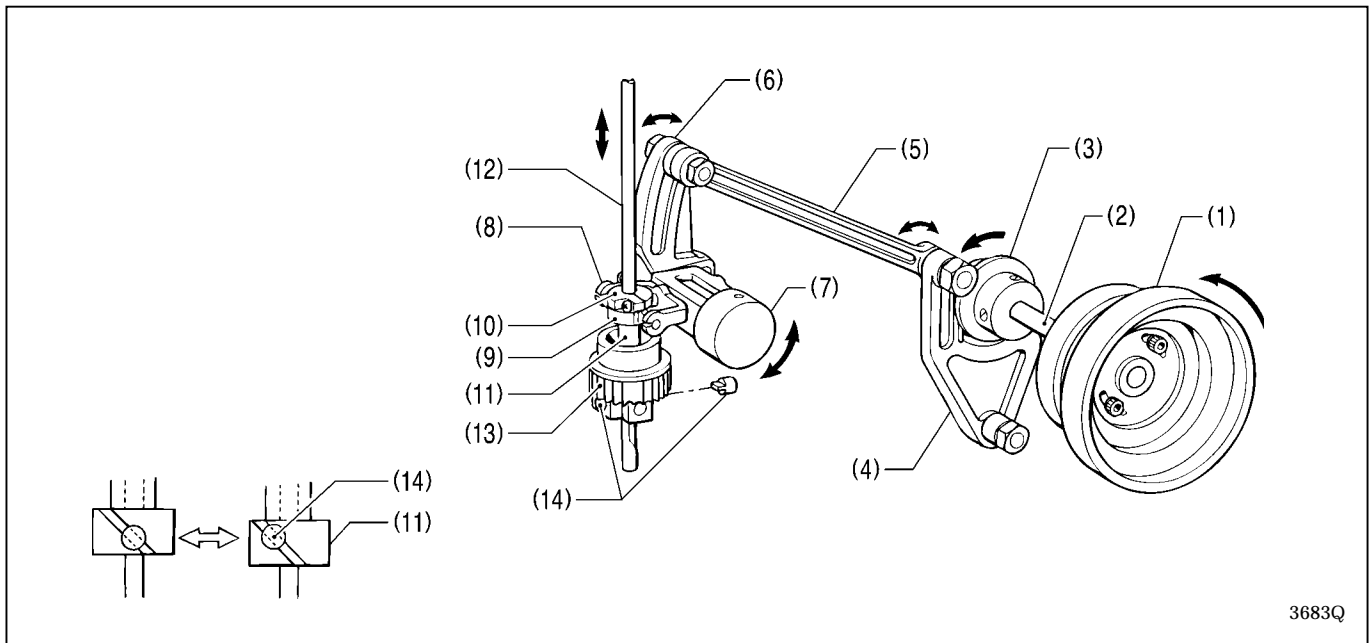


1. When the pulley (1) is turned in the direction of the arrow, its motion is transmitted to the upper shaft (2) that rotates the zigzag cam (3), and the zigzag fork (4) rocks.
2. The zigzag rock shaft (7) is rocked by the zigzag fork (4), via the zigzag connecting rod (5), and the zigzag crank (6).
3. The rocking motion of the zigzag rock shaft (7) is transmitted to the zigzag lever (8), the needle bar lever feed link (9), and the needle bar block clamp (10), those move the needle bar block (11) up and down.
4. The needle bar (12) is fitted on the needle bar block (11), and the needle bar guide (14) is fitted in the notch of the needle bar block (11). When the needle bar block (11) moves up and down, the needle bar (12) oscillates.

1-5. Needle bar rocking mechanism

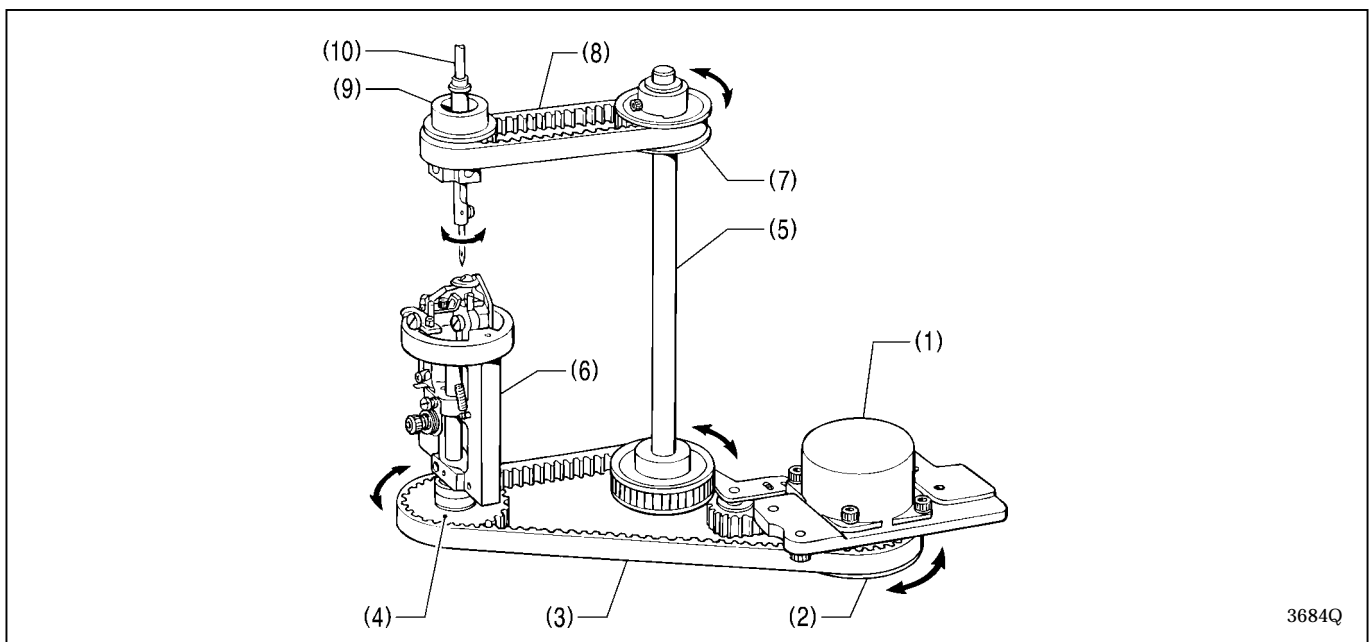

1. When pulse motor R (1) operates, the motion is transmitted to the driving needle pulley assembly (2), timing belt D (3), and the looper pulley assembly (4), which then moves the driving looper shaft assembly (5).
2. The looper base (6) is rotated by the looper pulley assembly (4).
3. When the vertical shaft T pulley U assembly (7), which is attached to the driving looper shaft assembly (5), rotates, the motion is transmitted to timing belt U (8), and the needle bar block assembly (9) that rotates the needle bar (10).

1-6. Feed mechanism

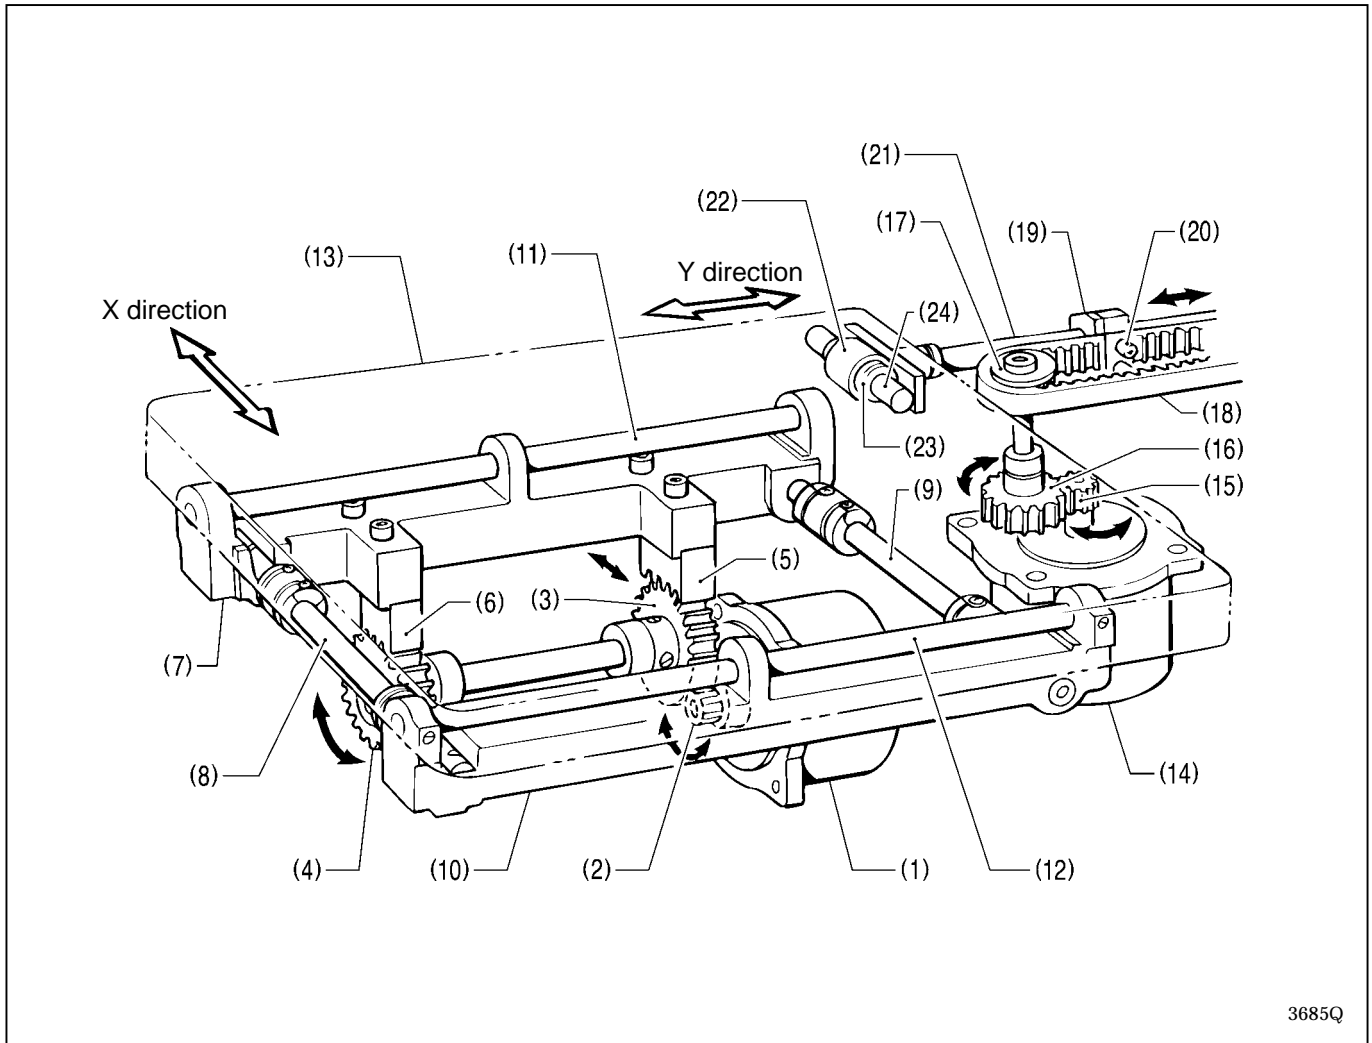

3685Q


[X-direction feeding]

1. When pulse motor X (1) operates, its motion is transmitted to the actuating gear (2), the idle gears (3) and (4), and the X racks (5) and (6), that finally moves X-feed shaft holder L (7).
2. The X-feed guide shafts A (8) and B (9), which are connected to X-feed shaft holder L (7), move X-feed shaft holder R (10).
3. The Y-feed guide shafts (11) and (12), which are attached to X-feed shaft holders L (7) and R (10), move the feed bar (13) in the X direction.

[Y-direction feeding]

1. When pulse motor Y (14) rotates, its motion is transmitted to the actuating gear (15), the idle gear (16), timing pulley A (17), that finally moves the Y-timing belt (18).
2. The Y-timing belt (18) is secured by the Y-driving shaft holder (19) and the belt holder (20), and that moves the Y shaft (21).
3. The linear bush (23), which is fitted in the ball bearing (22), is fitted in the Y-guide shaft (24) to move the feed bar (13) in the Y direction.


1-7. Work clamp mechanism

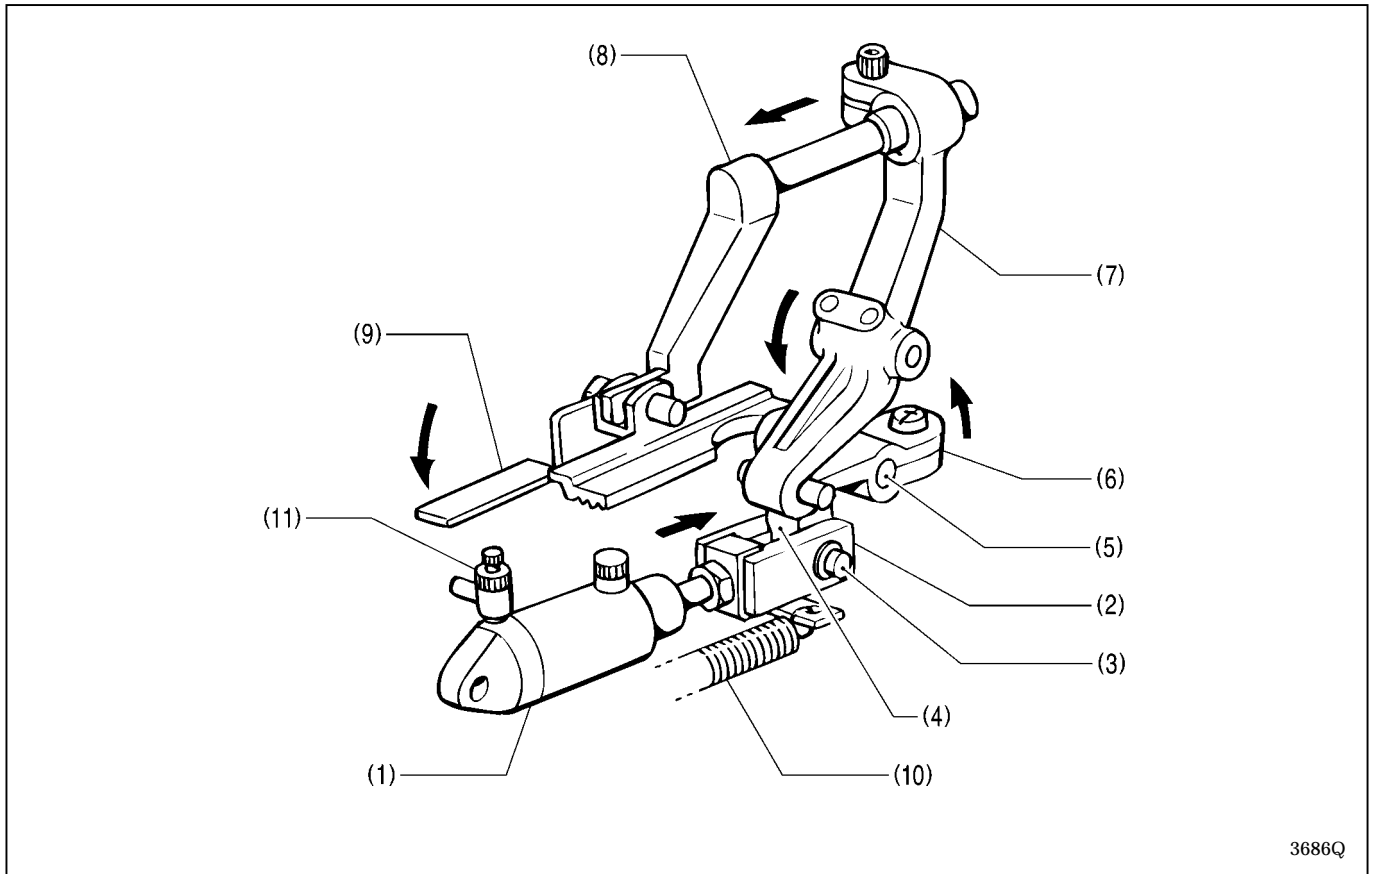

3686Q

1. Cylinder 16 X 10 (1) moves clamp lever B (6) in the direction of the arrow according to the cylinder's motion, via the presser cylinder rod (2), the cylinder rod pin (3), the presser driving lever (4), and the clamp lever shaft (5).
 2. The end of clamp lever B (6) is fitted on clamp lever L (7), and the work clamp (9) attached to clamp arm L (8) lowers.
 3. When the cylinder (1) is returned by the presser spring (10), the work clamp (9) rises. The speed controller (11) attached to the cylinder (1) controls the rising speed of the work clamp (9).
- * The work clamp mechanism is activated by independently-operated left and right cylinders, that can equalize the pressure of the work clamp.
The pressure of the work clamp is always applied to the material equally even when the material thickness changes.


1-8. Cloth opener mechanism

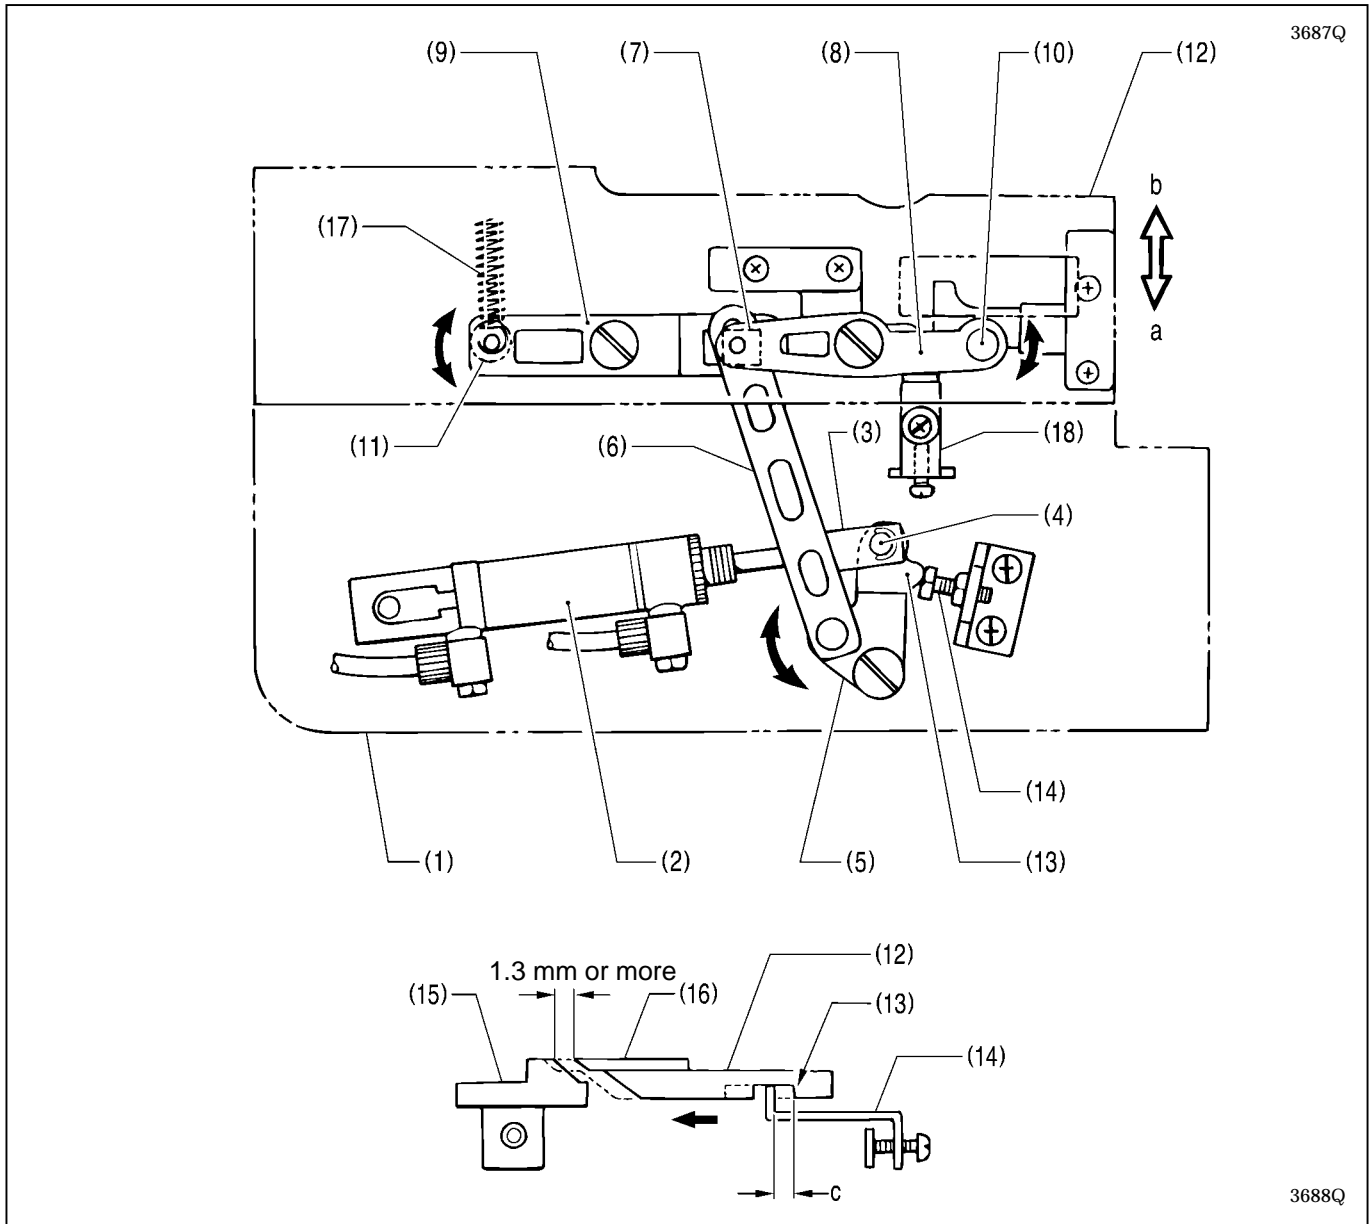

1. The feed bracket (1) carries the cylinder 16 X 15 assembly (2), whose end is connected to the opening cylinder rod (3), cylinder rod pin B (4), and the opening driving lever (5).
 2. The opening connecting rod (6) attached to the opening driving lever (5) is connected to the fulcrum lever plate (8) and the lever (9) via the slide block (7).
 3. The projection (10) of the fulcrum lever plate (8) and the pin (11) of the lever (9) are fitted on the hole of the work clamp plate (12) and the slide block on it.
 4. When the cylinder 16 X 15 assembly (2) operates, and the stopper (13) of the opening driving lever (5) and the bolt (14) make contact, the work clamp plate (12) moves in the direction of a, consequently opening a button eyelet on the material.
 5. At this time, there should be at least 1.3 mm clearance between the throat plate (15) and the needle plate (16). Adjust the clearance using the bolt (14).
 6. When the cylinder 16 X 15 assembly (2) is not pressurized, the work clamp plate (12) is moved in the direction of b by the opening spring (17). At this time, the stopper (13) of the work clamp plate (12) makes contact with the stopper plate (18).
- * The c indicates the movement of the work clamp plate (12).


1. MECHANICAL DESCRIPTIONS

1-9. Cutter mechanism

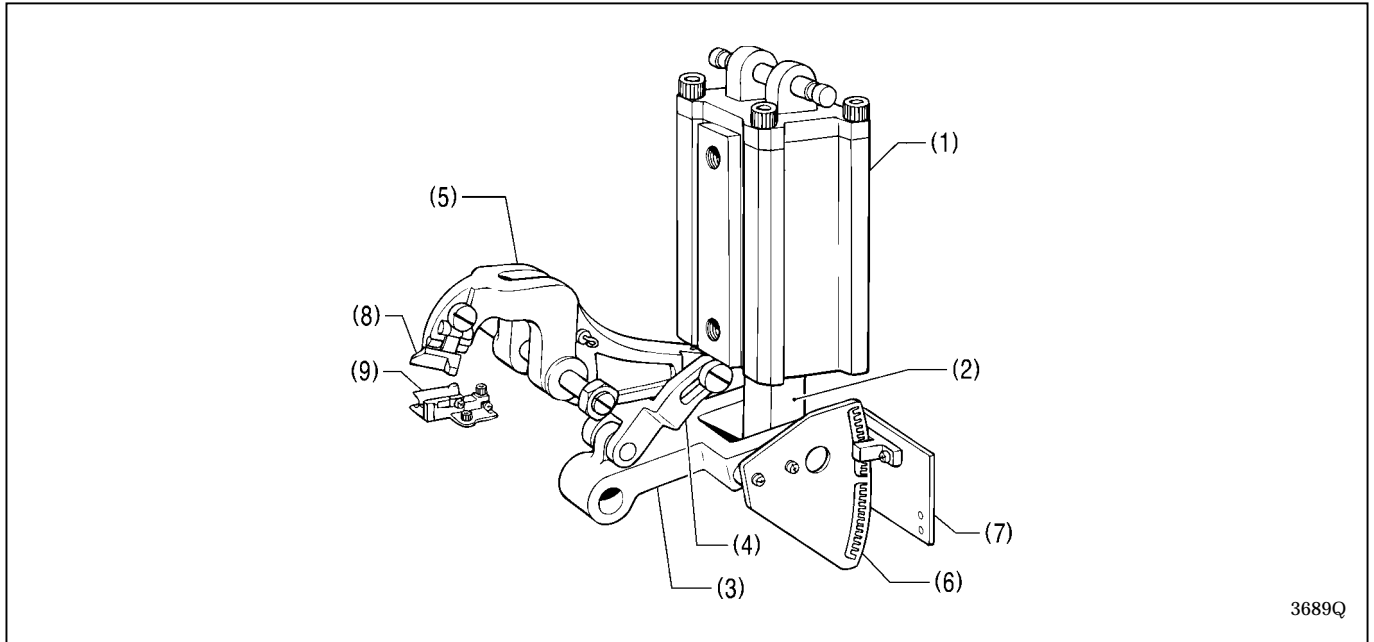


1. When cylinder 63 X 100 (1) operates, the motion is transmitted to the cylinder rod (2), link C (3), and link A (4), which then activates the cutter lever assembly (5).
2. The cutter sensor partition plate (6) attached to link C (3), and the cutter sensor assembly (7) monitor the motion of the cutter sensor assembly (5).
3. Engagement of the hammer (8) attached to the end of the cutter sensor assembly (5) and the cutter (9) attached to the bed, cuts the material requiring button eyelets.

1-10. Looper mechanism

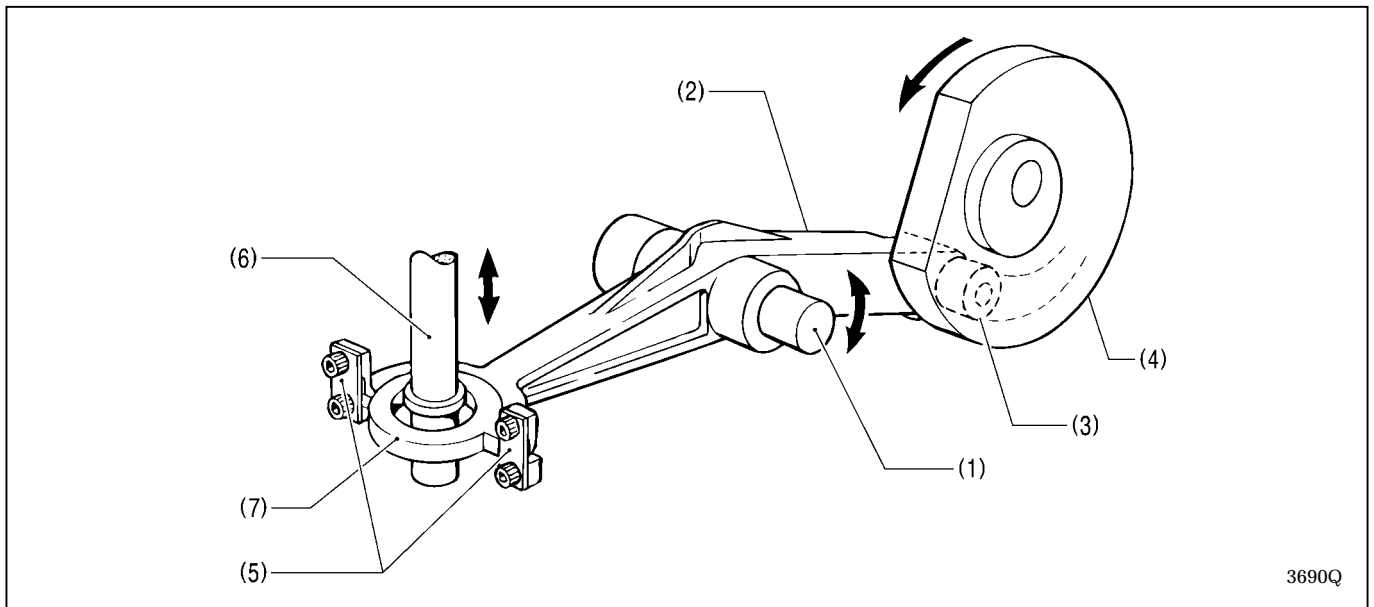

1. At the end of the looper link assembly (2) which has the looper link support shaft (1) as the pivot of the rocking motion, the looper cam roller (3) is fitted in the groove in the lower shaft cam (4). The two looper link springs (5) are attached to the other end.
2. The looper link springs (5) are secured by the looper driving plate (7) through which the looper driving shaft (6) passes.
3. When the lower shaft cam (4) rotates in the direction of the arrow, the looper link assembly (2) is rocked via the looper cam roller (3).
4. The looper driving shaft (6) moves up and down due to the motion of the looper link assembly (2).


1-11. Spreader mechanism

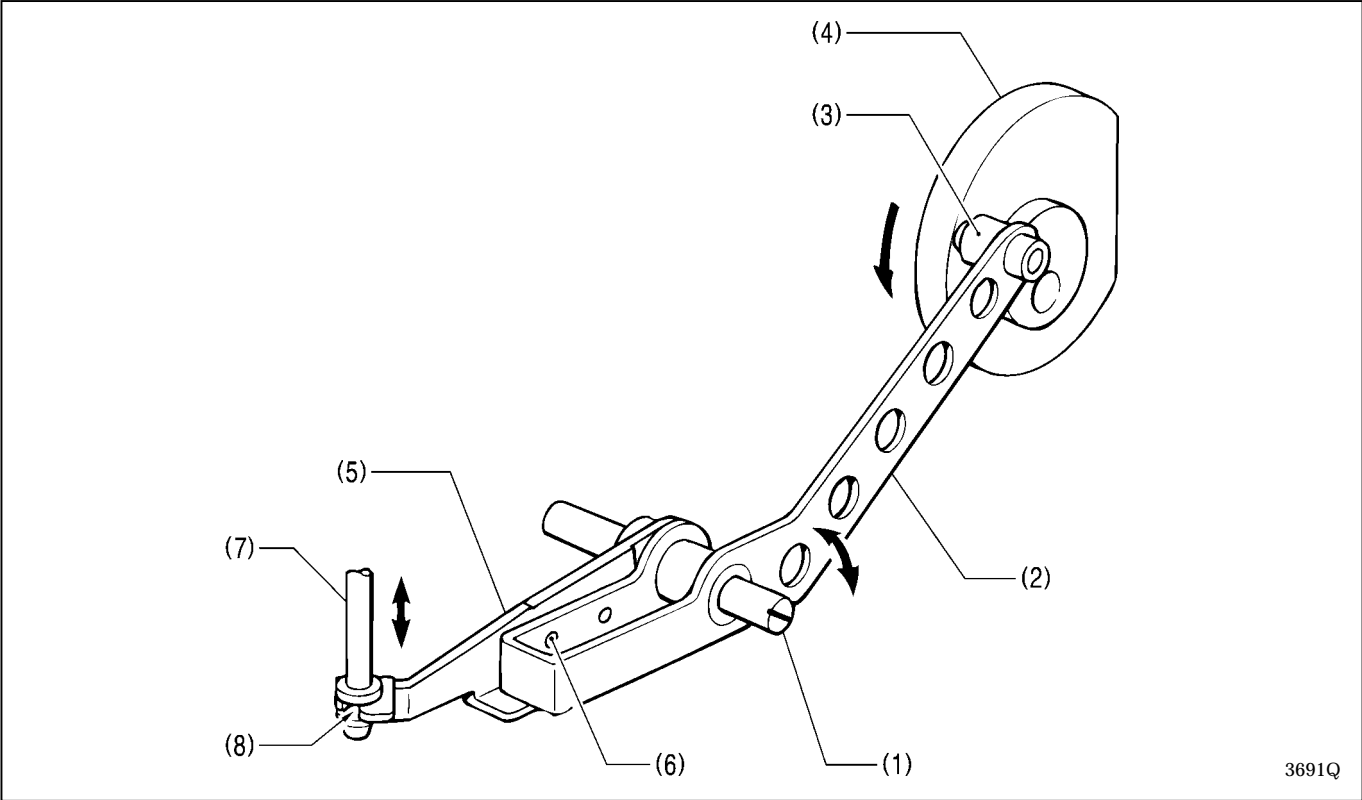


3691Q

1. At the end of the spreader cam lever (2) which has the looper link support shaft (1) as the pivot of the rocking motion, the spreader cam roller (3) makes contact with the circumference of the lower shaft cam (4), and the spreader driving lever (5) is attached to the other end using the screw (6). The forked part of the spreader driving lever (5) is fitted in the groove (8) of the spreader link shaft (7).
2. When the lower shaft cam (4) rotates in the direction of the arrow, the spreader cam lever (2) is rocked via the spreader cam roller (3).
3. The spreader link shaft (7) moves up and down due to the motion of the spreader cam lever (2).

1-12. Double chain stitch looper mechanism

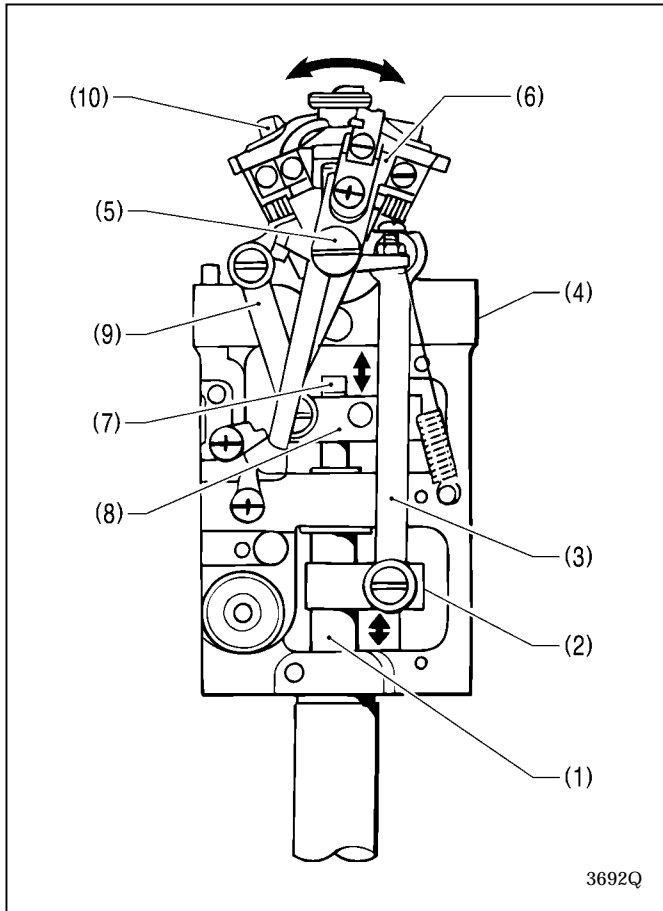

1. When the looper driving shaft (1) moves up and down, the motion is transmitted to the looper link clamp (2), and the looper link (3), which rocks LS-holder bracket (6) with the holder support shaft (5) secured to the loop base (4) regarded as the pivot.
2. When the spreader link shaft (7) moves up and down, the motion is transmitted to the spreader link base (8) and the spreader cam link (9), which then rocks the spreader differential cam (10) with the holder support shaft (5) secured to the loop base (4) regarded as the pivot.

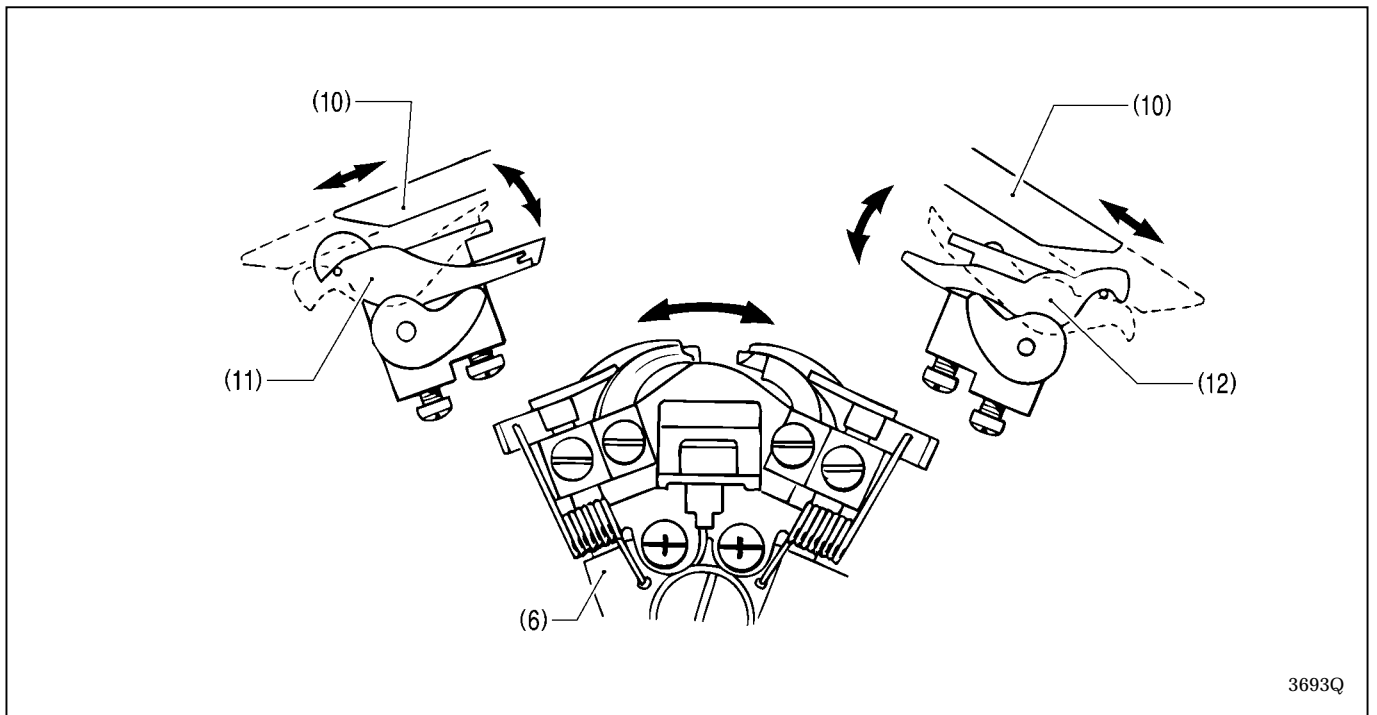

3. The rocking motions of the LS-holder bracket (6) and the spreader differential cam (10) cause spreader L (11) to rock.
4. In the same way, spreader R (12) is rocked.

2. DISASSEMBLY

⚠ CAUTION



Disassembly should only be carried out by a qualified technician.



Turn off the power switch before disassembly, otherwise the machine may operate if the start switch is pressed by mistake, which could result in injury.



Be sure to wear protective goggles and gloves when handling the lubricating oil and grease, so that they do not get into your eyes or onto your skin, otherwise inflammation can result. Furthermore, do not drink the oil or eat the grease under any circumstances, as they can cause vomiting and diarrhea. Keep the oil out of the reach of children.



Disconnect the air hoses from the air supply and wait for the needle on the pressure gauge to drop to "0" before disassembly of any parts which use the pneumatic equipment.



Use only the proper replacement parts as specified by Brother.




If any safety devices have been removed, be absolutely sure to re-install them to their original positions and check that they operate correctly before using the machine.



Any problems in machine operation which result from unauthorized modifications to the machine will not be covered by the warranty.

If disassembly is not performed in the correct order, it may be hard to remove parts. Disassemble as follows. The following is the main points of disassembly.


2-1. Covers and work clamp mechanism

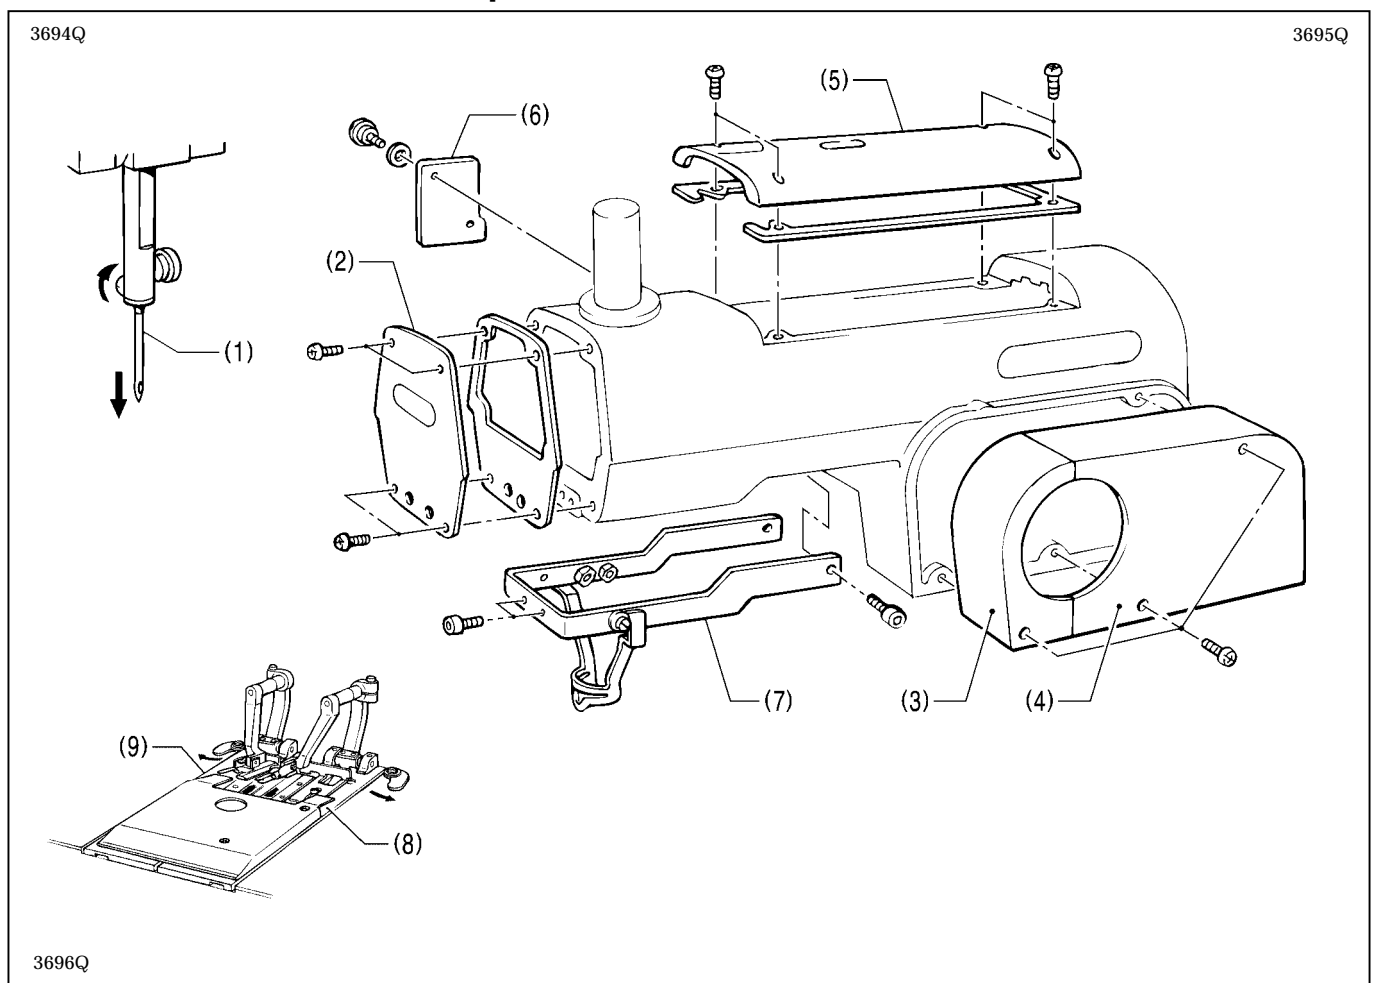

1. Remove the needle (1).
2. Remove the face plate (2), the belt cover F (3), the belt cover R (4), the top cover (5), the zigzag window cover (6), and the driving needle guard cover (7).
3. Remove the work clamp plates R (8) and L (9).

2. DISASSEMBLY

2-2. Feed mechanism

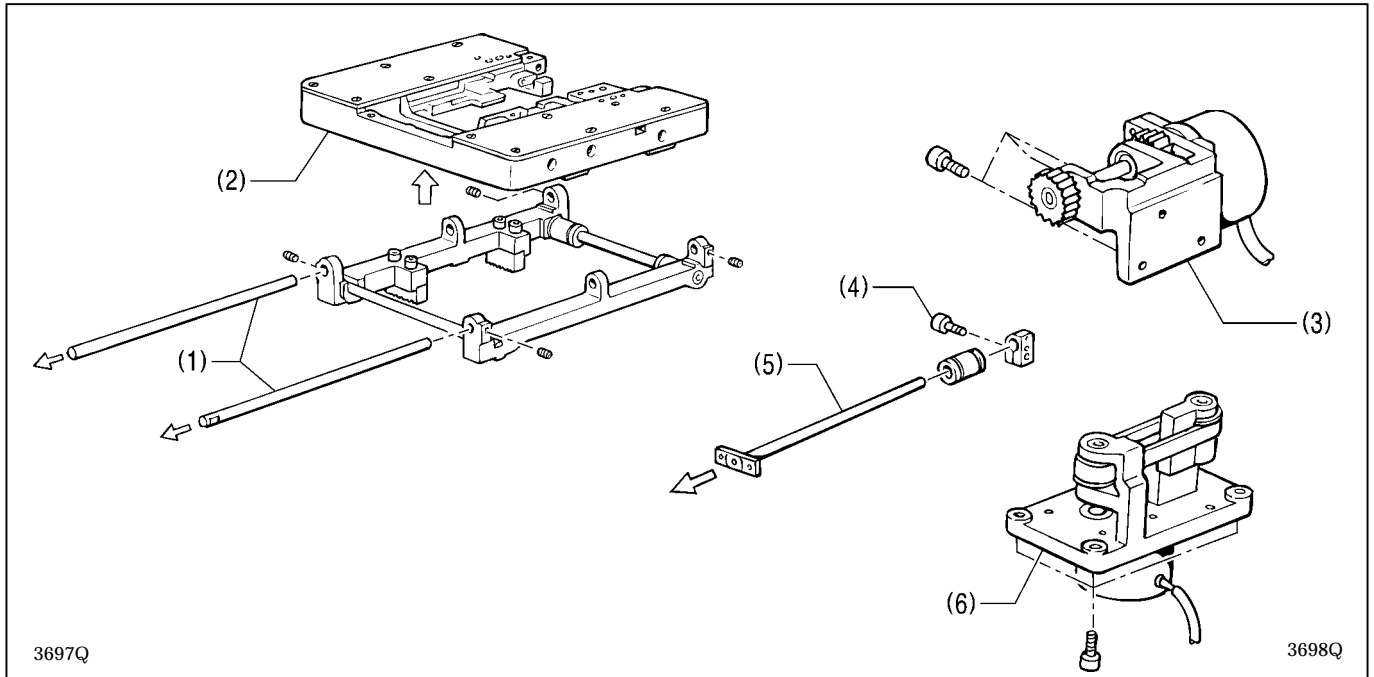

[Feed bracket]

Remove the two Y-feed guide shafts (1) toward you. The feed bracket (2) unit will come off.


[X motor unit]

Remove the motor support (3), which includes the X motor unit.

[Y motor unit]


Loosen the screw (4) of the Y driving shaft holder, pull out the Y-shaft (5) toward you, and remove the Y-feed base (6), including the Y motor unit.

2-3. Lubrication mechanism

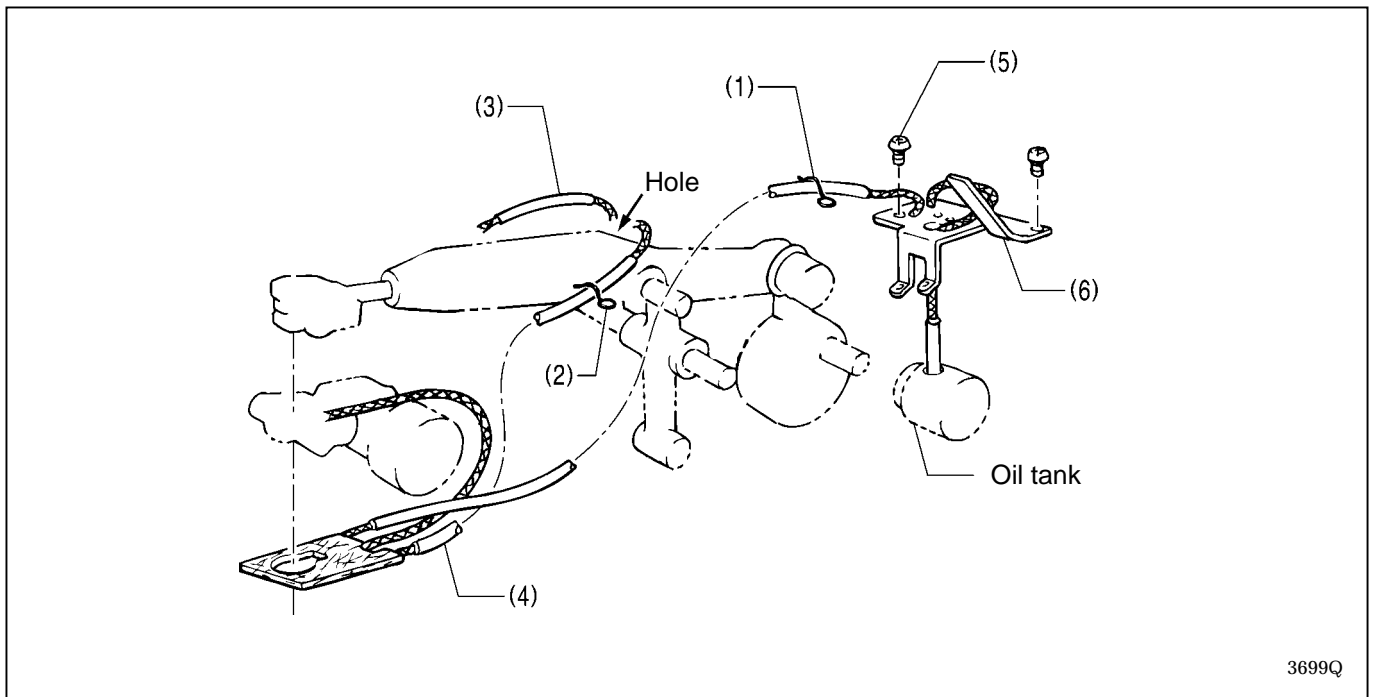


1. Remove the wick supports (1) and (2).
2. Remove the wicks (3) and (4) from the hole.
3. Remove the two screws (5) and wick support L (6).

2-4. Looper and spreader mechanisms

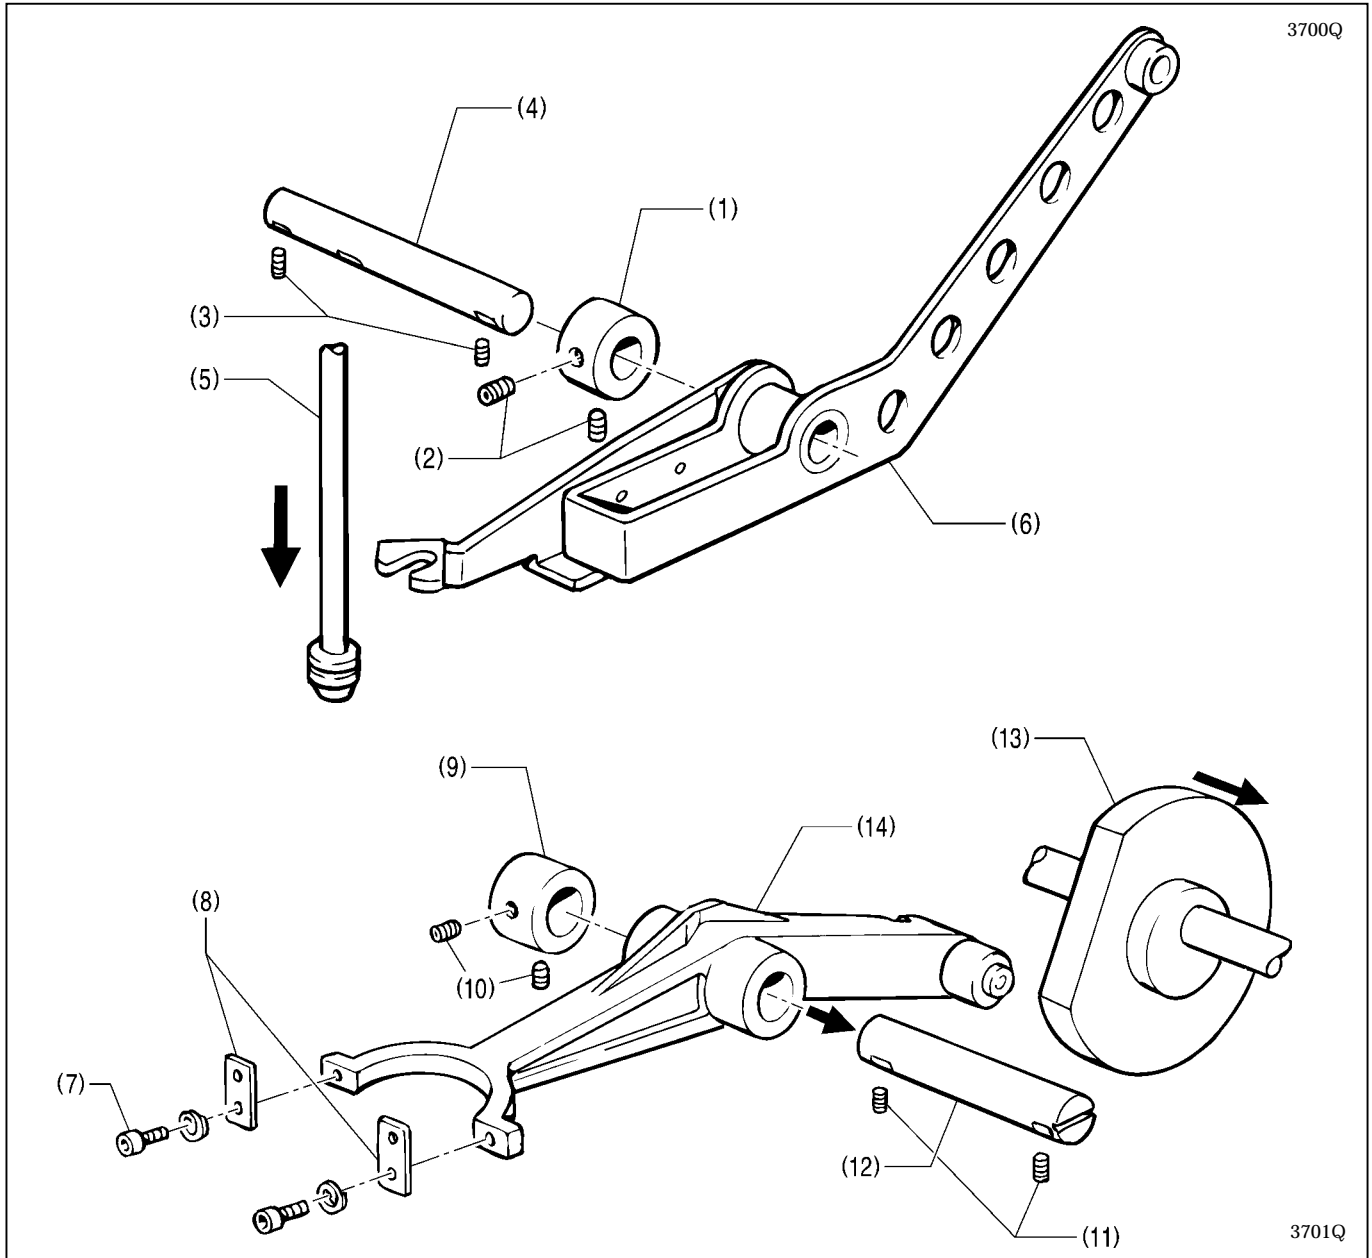


1. Loosen the two set screws (2) of the set collar (1), and the two set screws (3), and remove the looper link support shaft (4).
2. Position the needle at its lower position. Pull the spreader link shaft (5) downward, and remove the spreader cam lever (6).
3. Remove the two bolts (7) and the looper link springs (8).
4. Loosen the two set screws (10) of the set collar (9) and the two set screws (11), and remove the looper link support shaft (12).
5. Slide the lower shaft cam (13) in the direction of the arrow, and remove the looper link (14).

2-5. Needle bar rotating mechanism

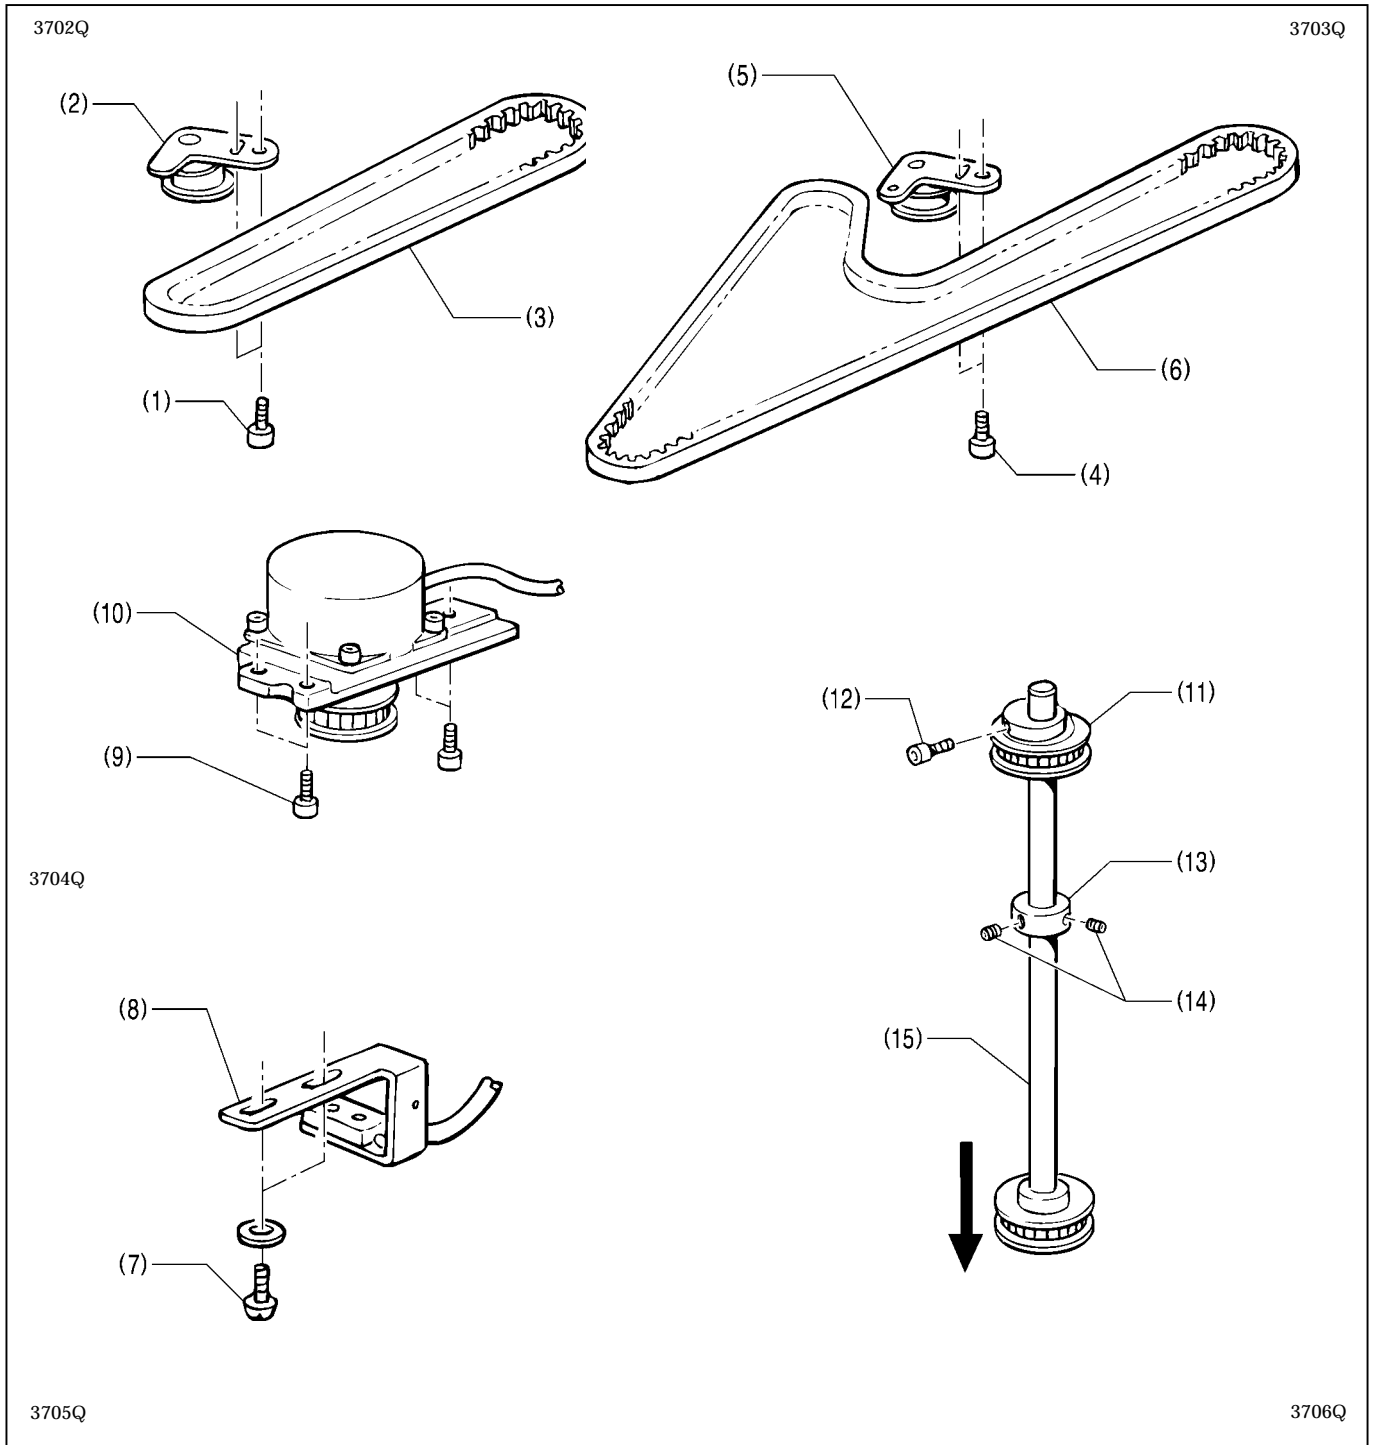

1. Remove the two bolts (1), then remove the tension pulley U assembly (2) and timing belt U (3).
2. Remove the two bolts (4), then remove the tension pulley D assembly (5) and timing belt D (6).
3. Remove the two screws (7) and the R-sensor setting plate (8).
4. Remove the four bolts (9) and the motor base (10).
5. Loosen the bolt (12) of the vertical shaft T-pulley U assembly (11) and the two set screws (14) of the set collar (13).
6. Remove the driving looper shaft assembly (15) downward.

2-6. Looper base mechanism

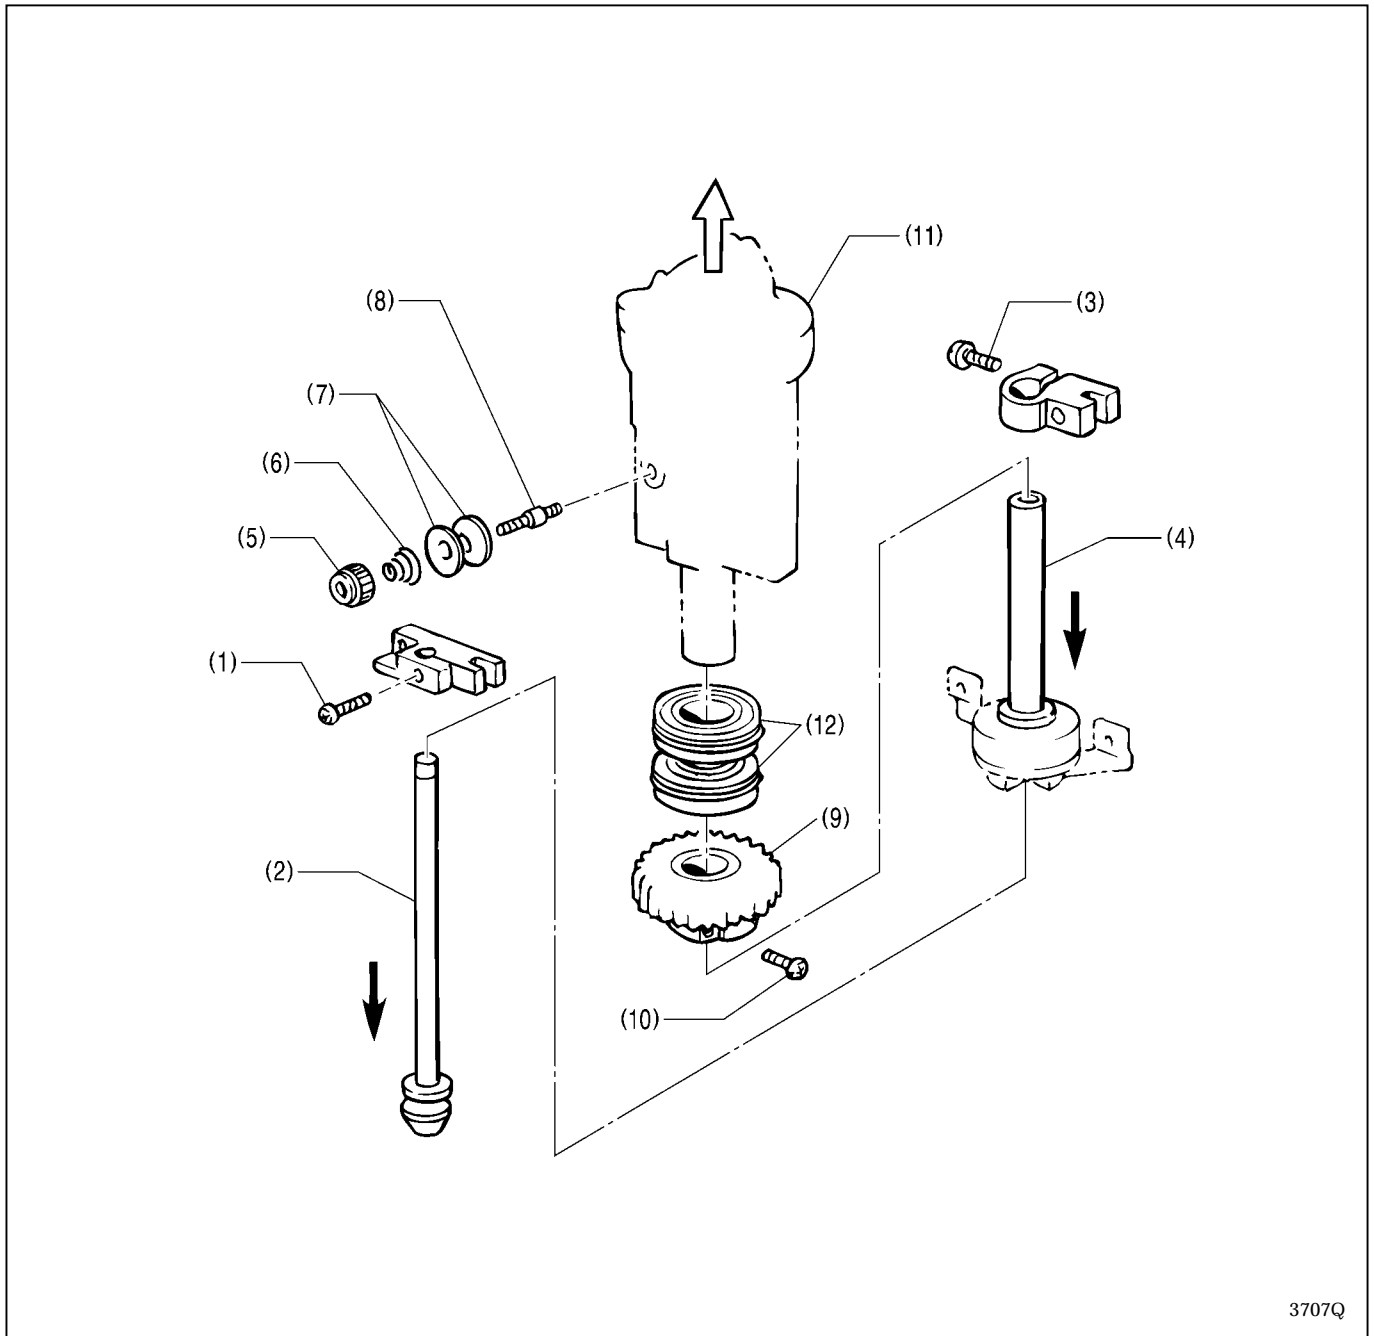


3707Q

1. Loosen the screw (1), and remove the spreader link shaft (2) in the direction of the arrow.
2. Loosen the screw (3), and remove the looper driving shaft (4) in the direction of the arrow.
3. Remove the tension nut (5), pre-tension spring B (6), the thread guide discs (7), and the L-tension stud (8). Loosen the screw (10) of the looper pulley assembly (9), and remove the looper base (11) in the direction of the arrow.

* Be careful not to drop the two ball bearings (12) when removing the looper pulley assembly (9).

2-7. Needle bar, thread take-up, and zigzag mechanisms

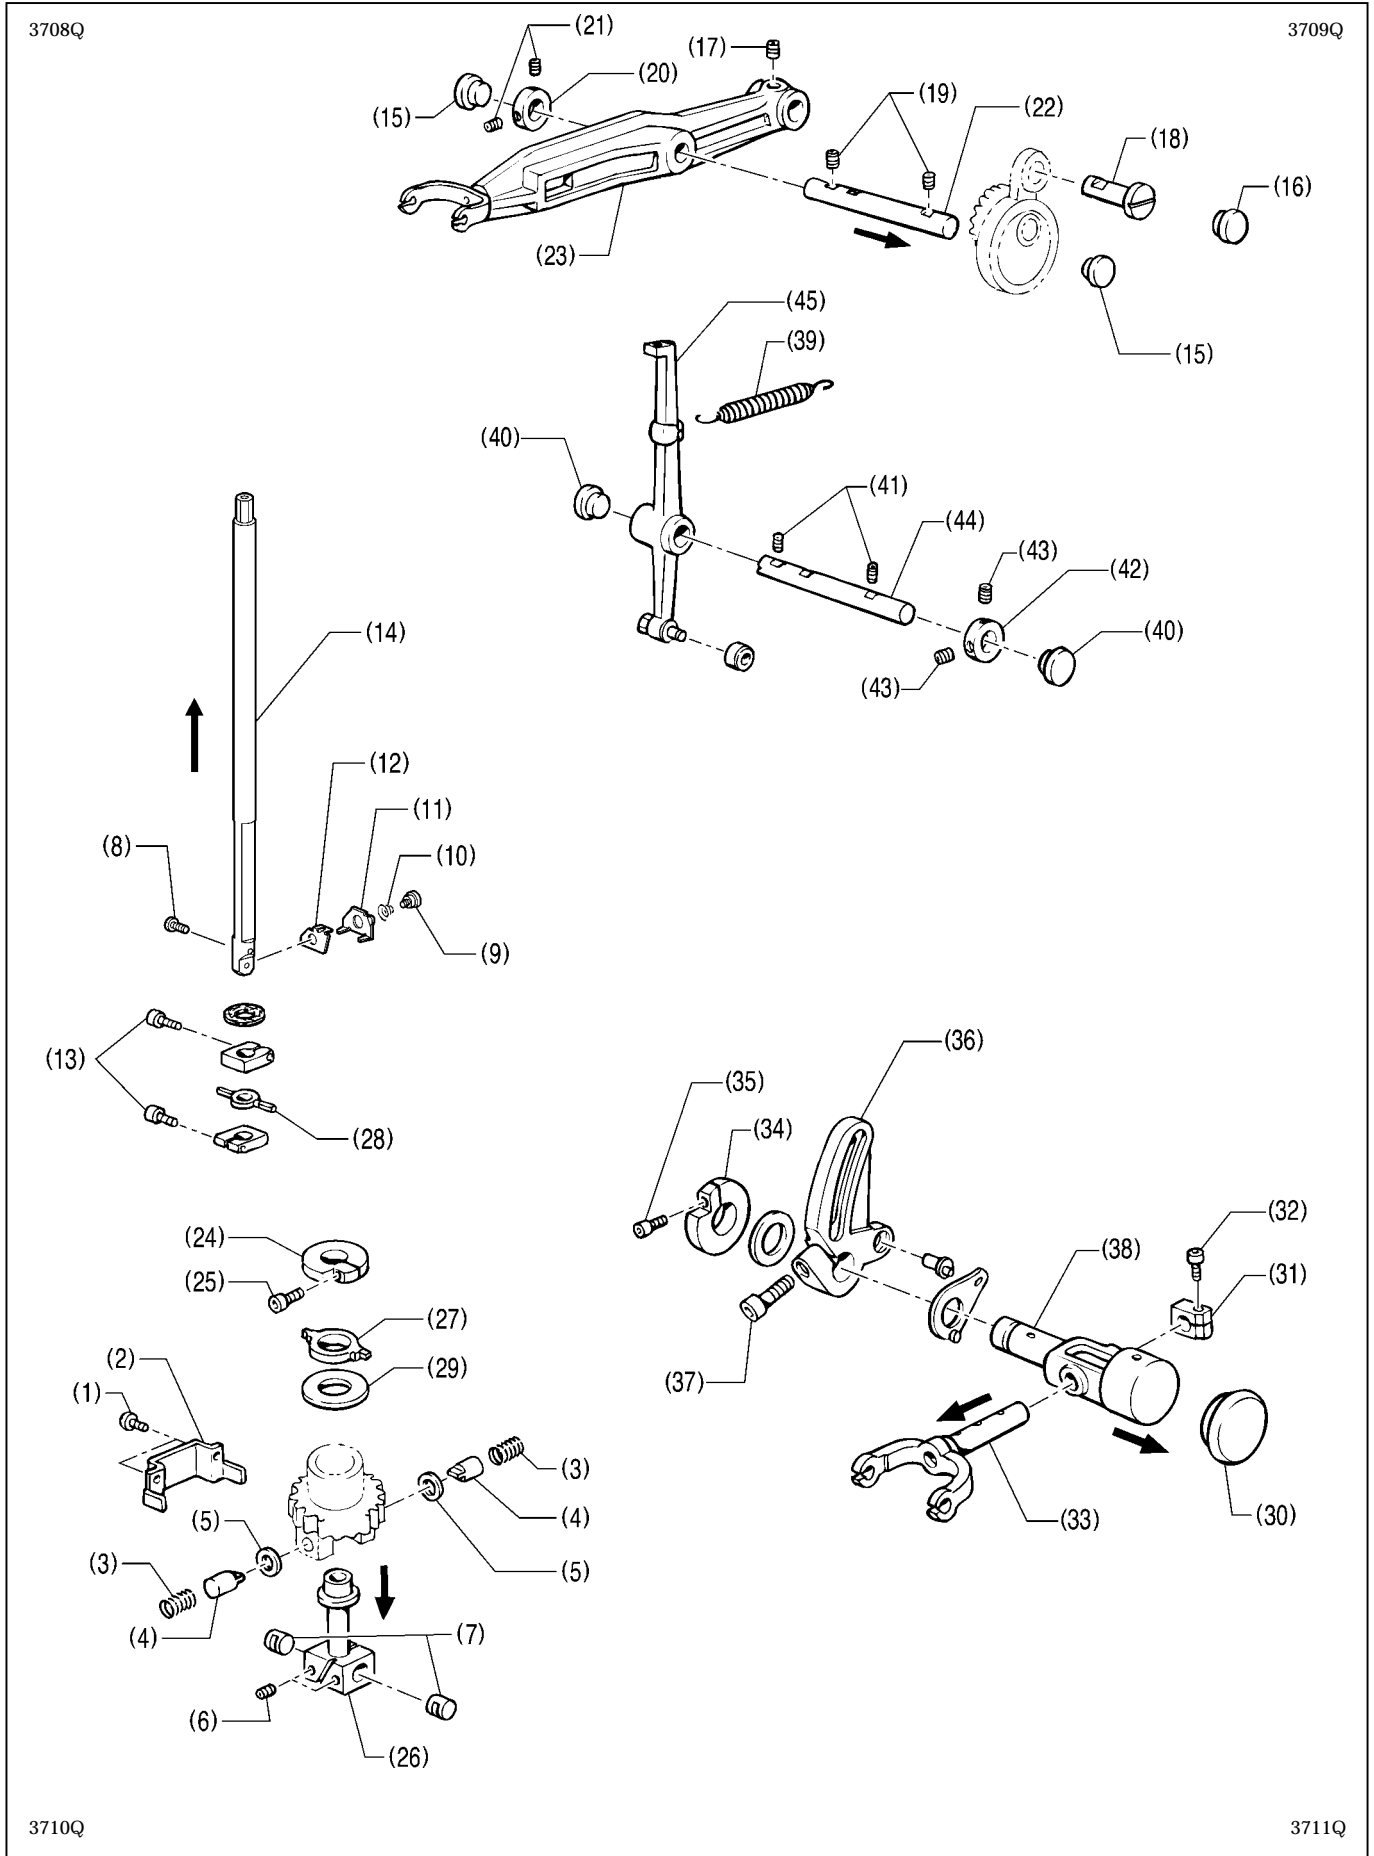

[Needle bar mechanism]

1. Remove the two screws (1), the needle bar guide support plate (2), the two springs (3), the two needle bar guides (4), and the two washers (5).
2. Loosen the two set screws (6), and remove the two needle bar guide collars (7).
3. Remove the set screw (8), the stud screw (9), the tension spring (10), the needle thread holder plate A (11), and the guide A (12). Loosen the two bolts (13), and remove the needle bar assembly (14) in the direction of the arrow.
4. Remove the rubber caps (15) and (16).
5. Loosen the set screw (17), and remove the driving rod pin (18).
6. Loosen the two set screws (19) and the two set screws (21) of the set collar (20), and then pull out the driving lever shaft (22) in the direction of the arrow.
7. Remove the needle bar driving lever assembly (23).


[Zigzag mechanism]

1. Loosen the bolt (25) of the needle bar block clamp (24), and remove the needle bar block (26) in the direction of the arrow.
2. Remove the needle bar block clamp (24), the needle bar level feed links (27) and (28), and the needle bar block collar (29).
3. Remove the rubber cap (30). Loosen the bolt (32) of the needle bar clamp (31), and remove the zigzag lever (33) in the direction of the arrow.
4. Loosen the bolt (35) of the needle bar block clamp (34), and the bolt (37) of the zigzag crank (36), and remove the zigzag rock shaft (38) in the direction of the arrow.

[Thread take-up mechanism]

1. Remove the spring (39) and the two rubber caps (40).
2. Loosen the two set screws (41) and the two set screws (43) of the set collar (42), and remove the support shaft (44).
3. Remove the thread take-up lever assembly (45).


2-8. Knife pipe assembly

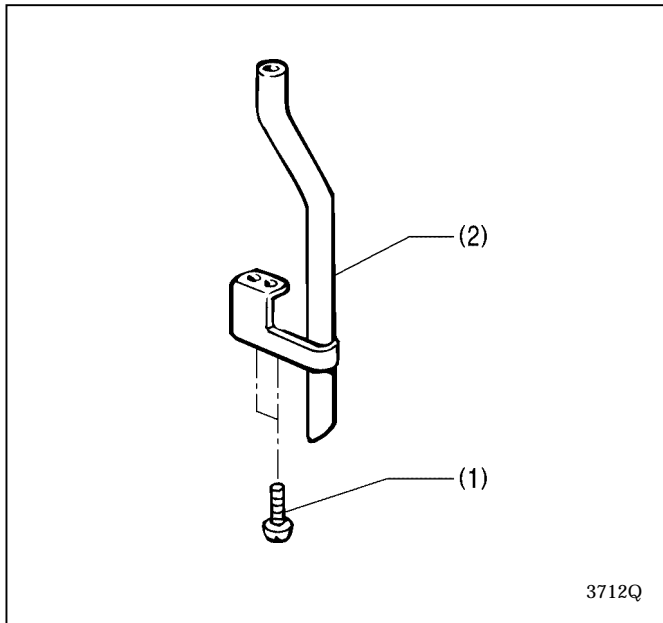

1. Remove the two screws (1).
2. Remove the knife pipe assembly (2).


2-9. Lower shaft mechanism

Before removing the cam shaft, loosen the timing belt, referring to "3-4-1. Adjusting the timing belt".

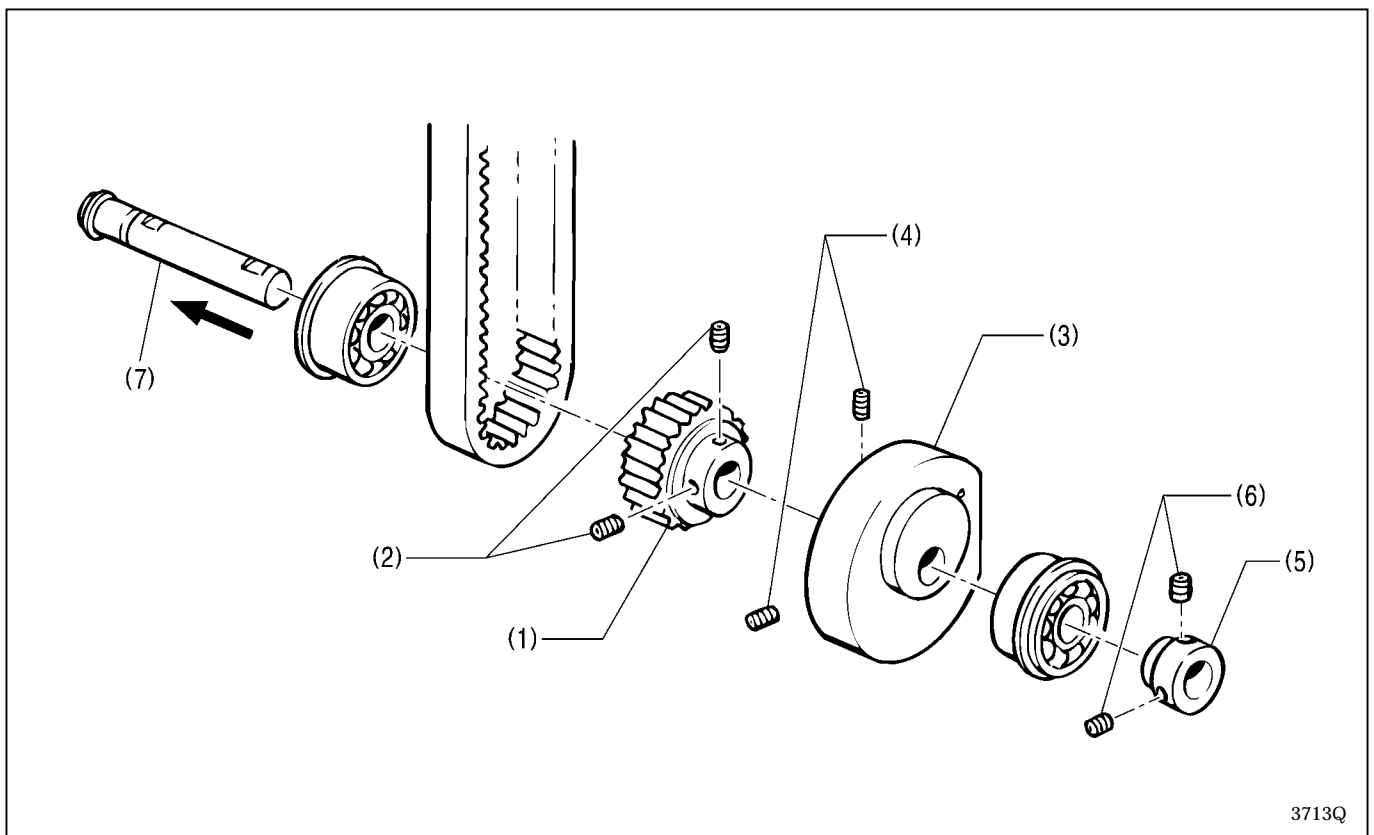

1. Loosen the two set screws (2) of the lower shaft tension pulley assembly (1).
2. Loosen the two set screws (4) of the lower shaft cam (3).
3. Loosen the two set screws (6) of the set collar (5).
4. Remove the cam shaft (7) in the direction of the arrow.


2-10. Synchronizer mechanism

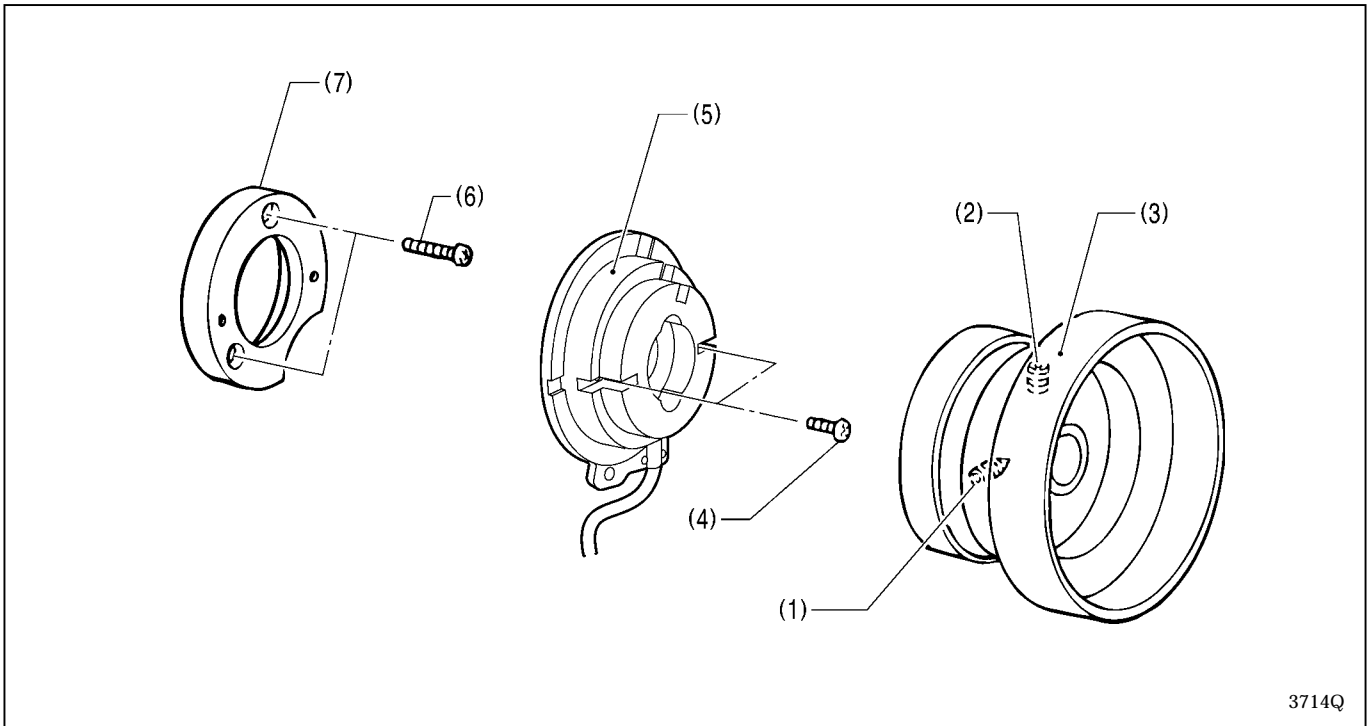

3714Q

1. Loosen the two set screws (1) and (2), and remove the pulley assembly (3).
2. Loosen the two screws (4), and remove the synchronizer assembly B (5).
3. Remove the two screws (6), and the NP support bracket B (7).


2-11. Upper shaft mechanism

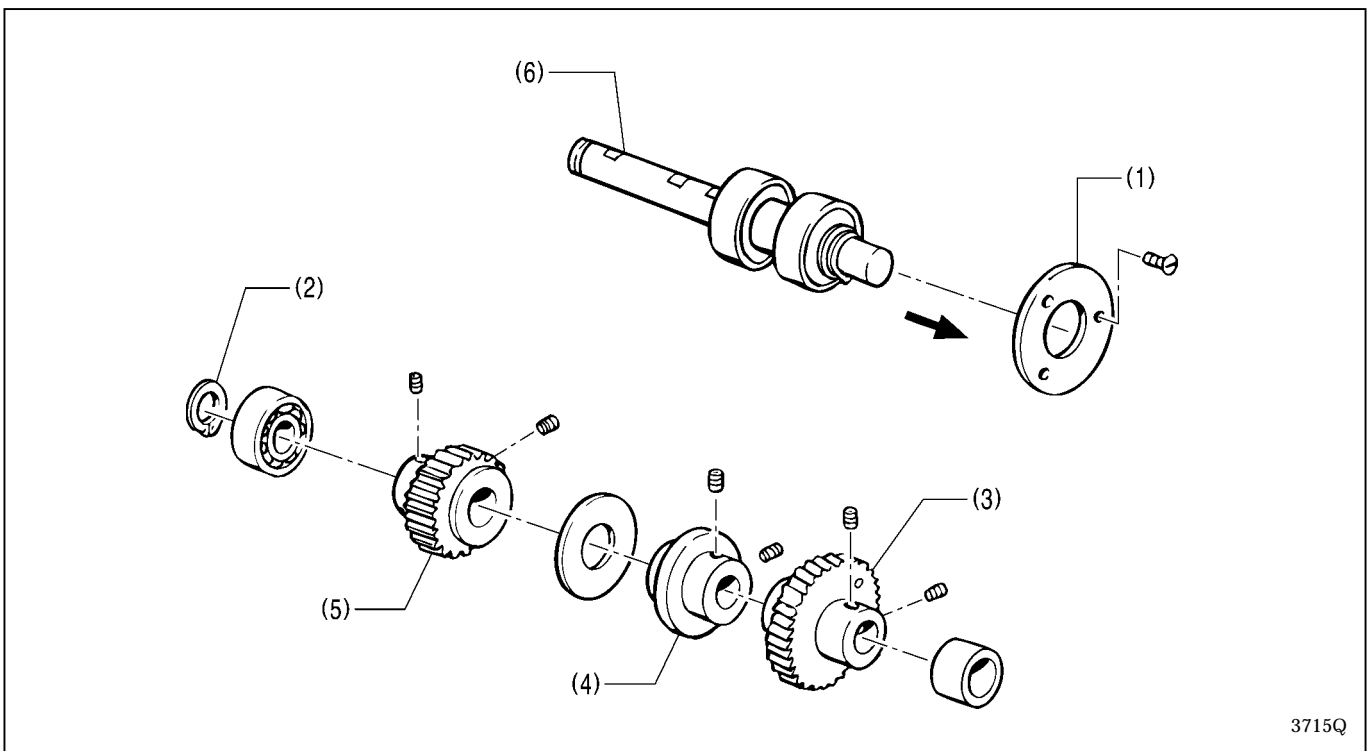

3715Q


1. Remove ball bearing cap S (1) and the retaining ring (2).
2. Loosen each set screw (2 each) of the needle bar gear (3), the zigzag cam (4), and the upper shaft tension pulley assembly (5).
3. Pull the upper shaft (6) in the direction of the pulley to remove it. The upper shaft unit will come off.

2-12. Cutter mechanism

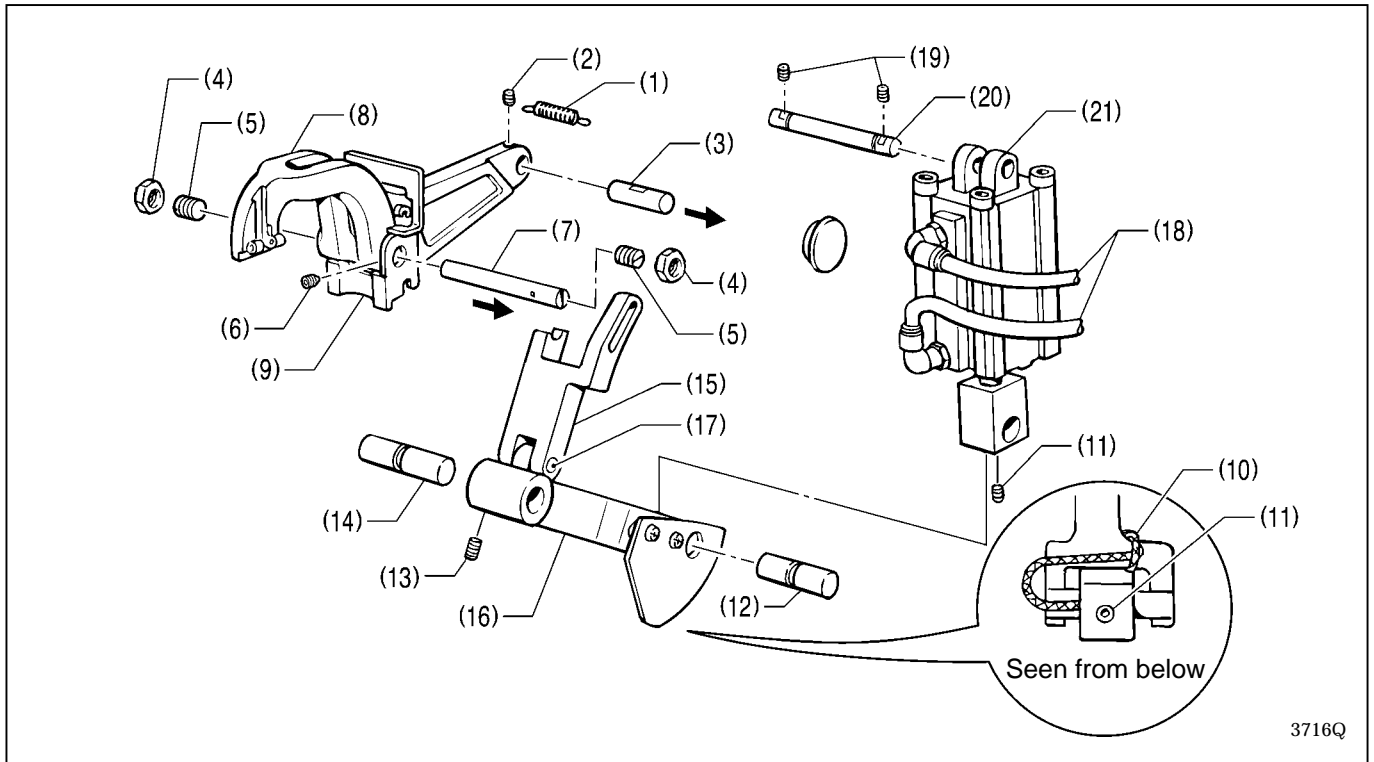

1. Remove the extension spring (1), loosen the set screw (2), and remove the link shaft B (3) in the direction of the arrow.
2. Remove the two nuts (4) and the two support screws (5).
3. Loosen the set screw (6), and remove the cutter lever shaft (7) in the direction of the arrow, and the cutter lever (8) along with the knife lever cover (9).
4. Remove the wick (10), and loosen the set screw (11). Remove the cylinder rod shaft (12).
5. Loosen the set screw (13), and remove the link shaft A (14), and the combination of link A (15), link C (16), and link shaft C (17) downward.
6. Remove the two air tubes (18).
7. Loosen the two set screws (19), and remove the cylinder support shaft (20) and the cutter cylinder (21).

2-13. Zigzag fork mechanism

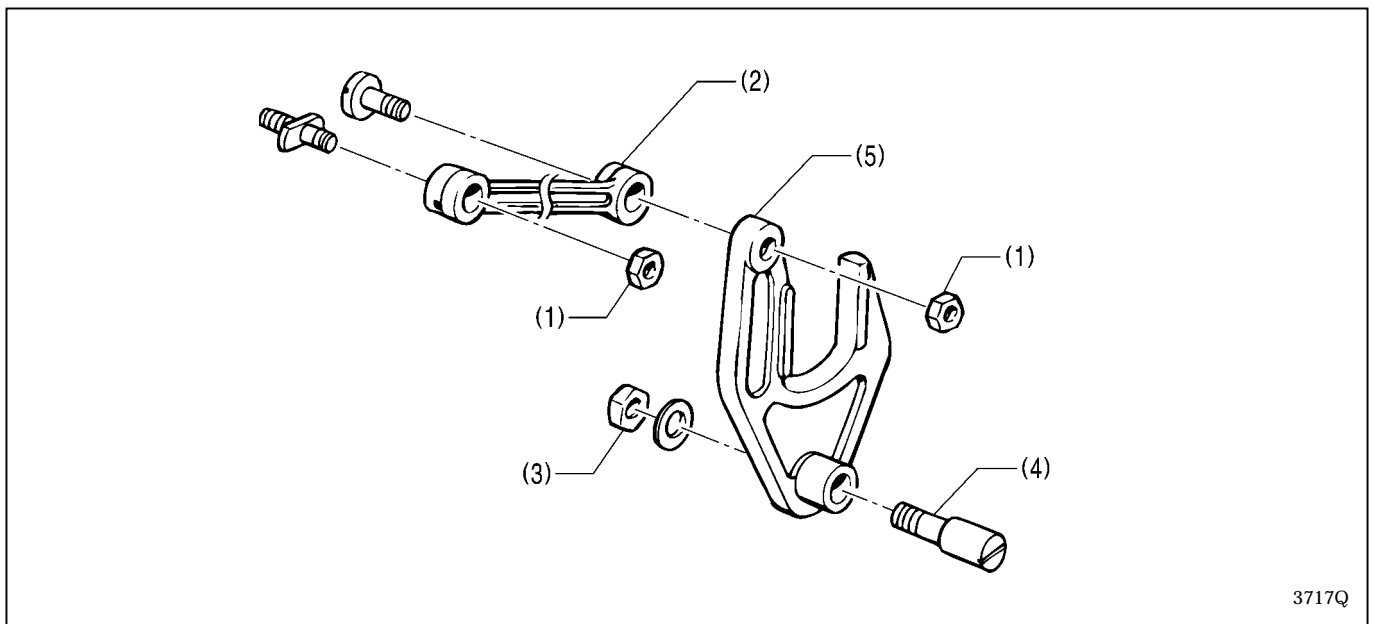

1. Remove the two nuts (1), and the zigzag connection rod assembly (2).
2. Remove the nut (3), the zigzag fork support pin (4), and the zigzag fork (5).

3. ASSEMBLY

⚠ CAUTION



Assembly should only be carried out by a qualified technician.



Turn off the power switch before assembly, otherwise the machine may operate if the start switch is pressed by mistake, which could result in injury.



Be sure to wear protective goggles and gloves when handling the lubricating oil and grease, so that they do not get into your eyes or onto your skin, otherwise inflammation can result.

Furthermore, do not drink the oil or eat the grease under any circumstances, as they can cause vomiting and diarrhea.

Keep the oil out of the reach of children.



Disconnect the air hoses from the air supply and wait for the needle on the pressure gauge to drop to "0" before disassembly of any parts which use the pneumatic equipment.



Use only the proper replacement parts as specified by Brother.




If any safety devices have been removed, be absolutely sure to re-install them to their original positions and check that they operate correctly before using the machine.



Any problems in machine operation which result from unauthorized modifications to the machine will not be covered by the warranty.


If assembly is not performed in the correct order, it may be hard to attach parts. Assemble as follows. The following is the main points of assembly.

3-1. Zigzag fork mechanism

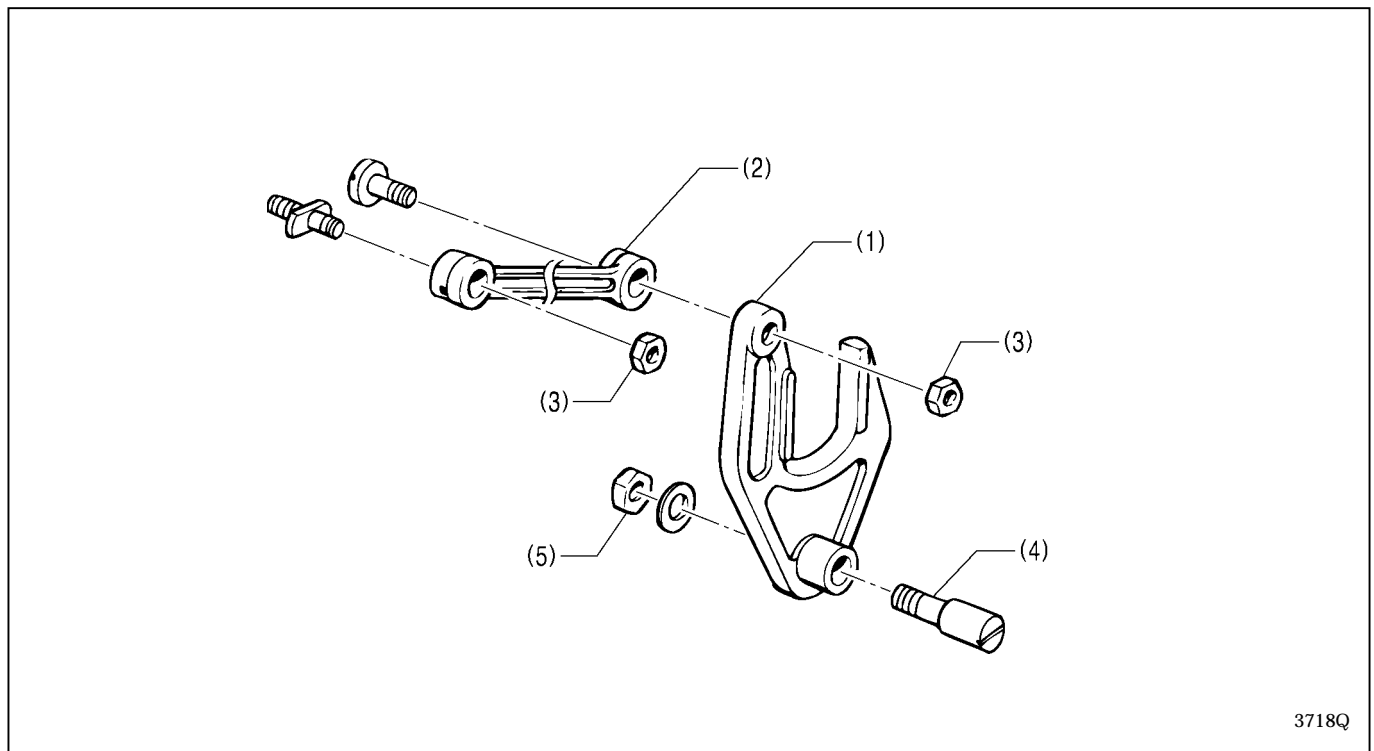

1. Combine the zigzag fork (1) and the zigzag connecting rod assembly (2) using the two nuts (3). Insert the zigzag fork support pin (4) into the hole in the zigzag fork (1), and put them into the arm from above.
2. Insert the zigzag fork support pin (4) into the hole in the side of the arm, and secure it using the nut (5).


3-2. Cutter mechanism

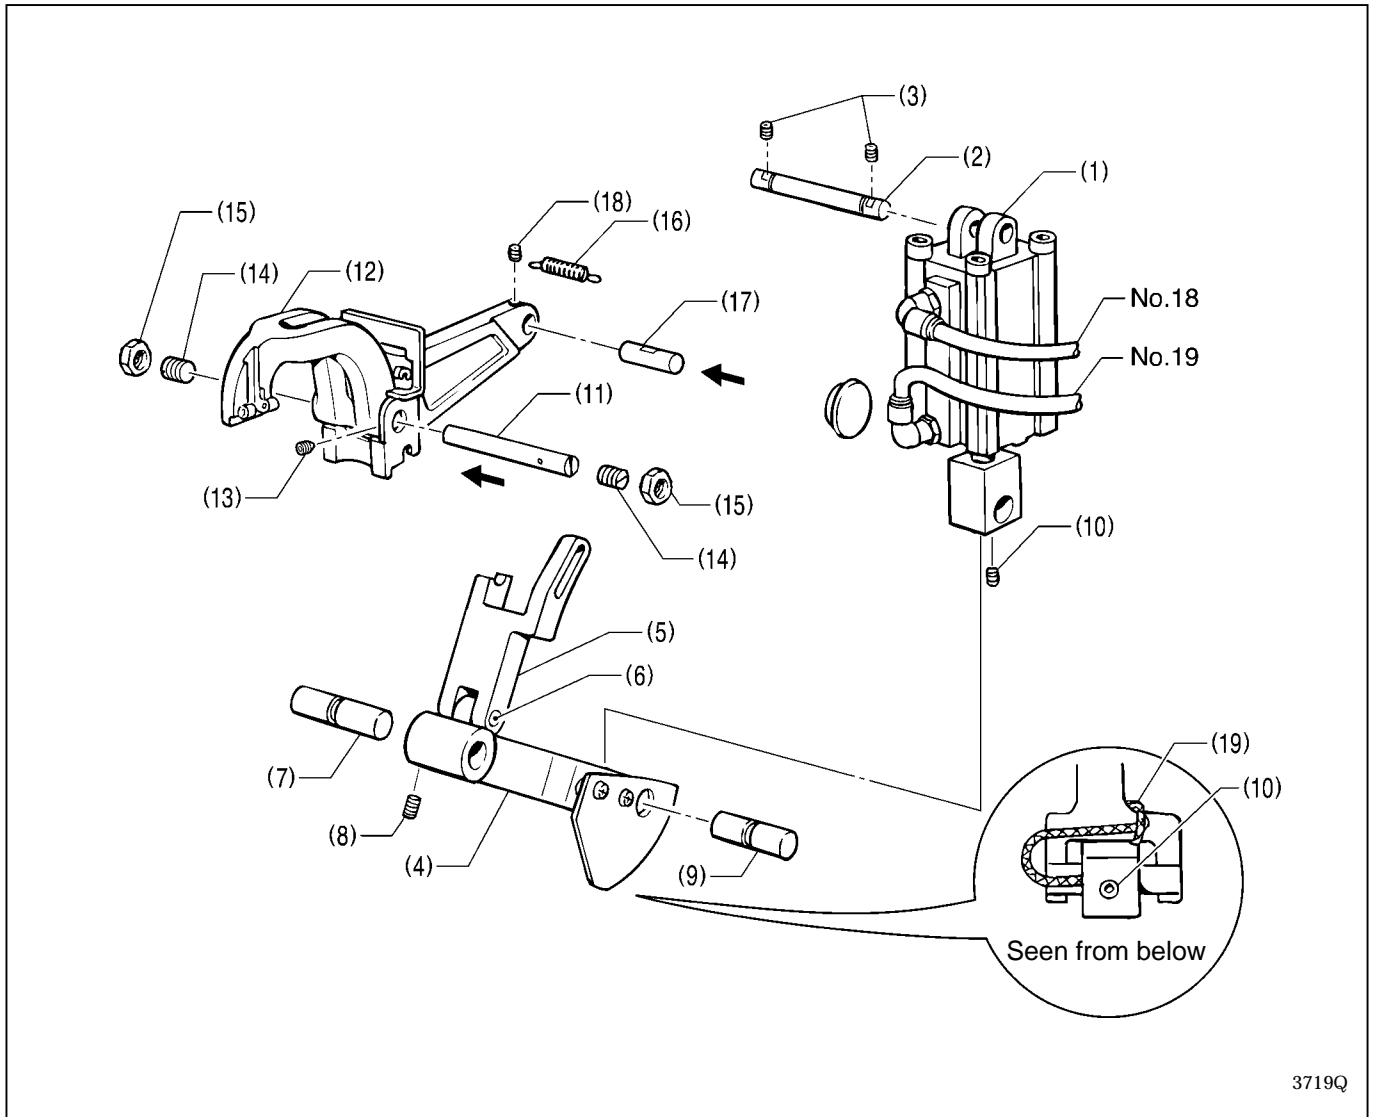

3719Q

1. Put the cutter cylinder (1) into the arm with the joints facing the front. Insert the cylinder support shaft (2) into the hole in the cutter cylinder (1), and secure it using the two set screws (3).
2. Attach No.18 air tube to the upper tube, and No.19 air tube to the lower tube of the cutter cylinder (1).
3. Combine link C (4), link A (5), and link shaft C (6). Position them in the bed from below, and attach link shaft A (7) to them using the set screw (8).
4. Attach the cylinder rod shaft (9) with the lubrication hole facing the left to the link C (4) and the cylinder rod, and secure it using the set screw (10).
5. Insert the cutter lever shaft (11) with its slit facing the right, into the hole in the bed, the cutter lever (12), and the hole in the bed, and tighten the set screw (13) on the screw flat of the cutter lever shaft (11).
6. Tighten the two support screws (14) on each end of the cutter lever shaft (11), and secure it using the two nuts (15).
7. Hook the extension spring (16) over the cutter lever (12) and the tab of the bed.
8. Pass link shaft B (17) with its slit facing the right, through the slot of link A (5), and the hole in the cutter lever (12), and tighten the set screw (18).
9. Wind the wick (19) around the right of link C (4), and insert the end of the wick into the lubrication hole in the cylinder rod shaft (9).

3-3. Upper shaft mechanism

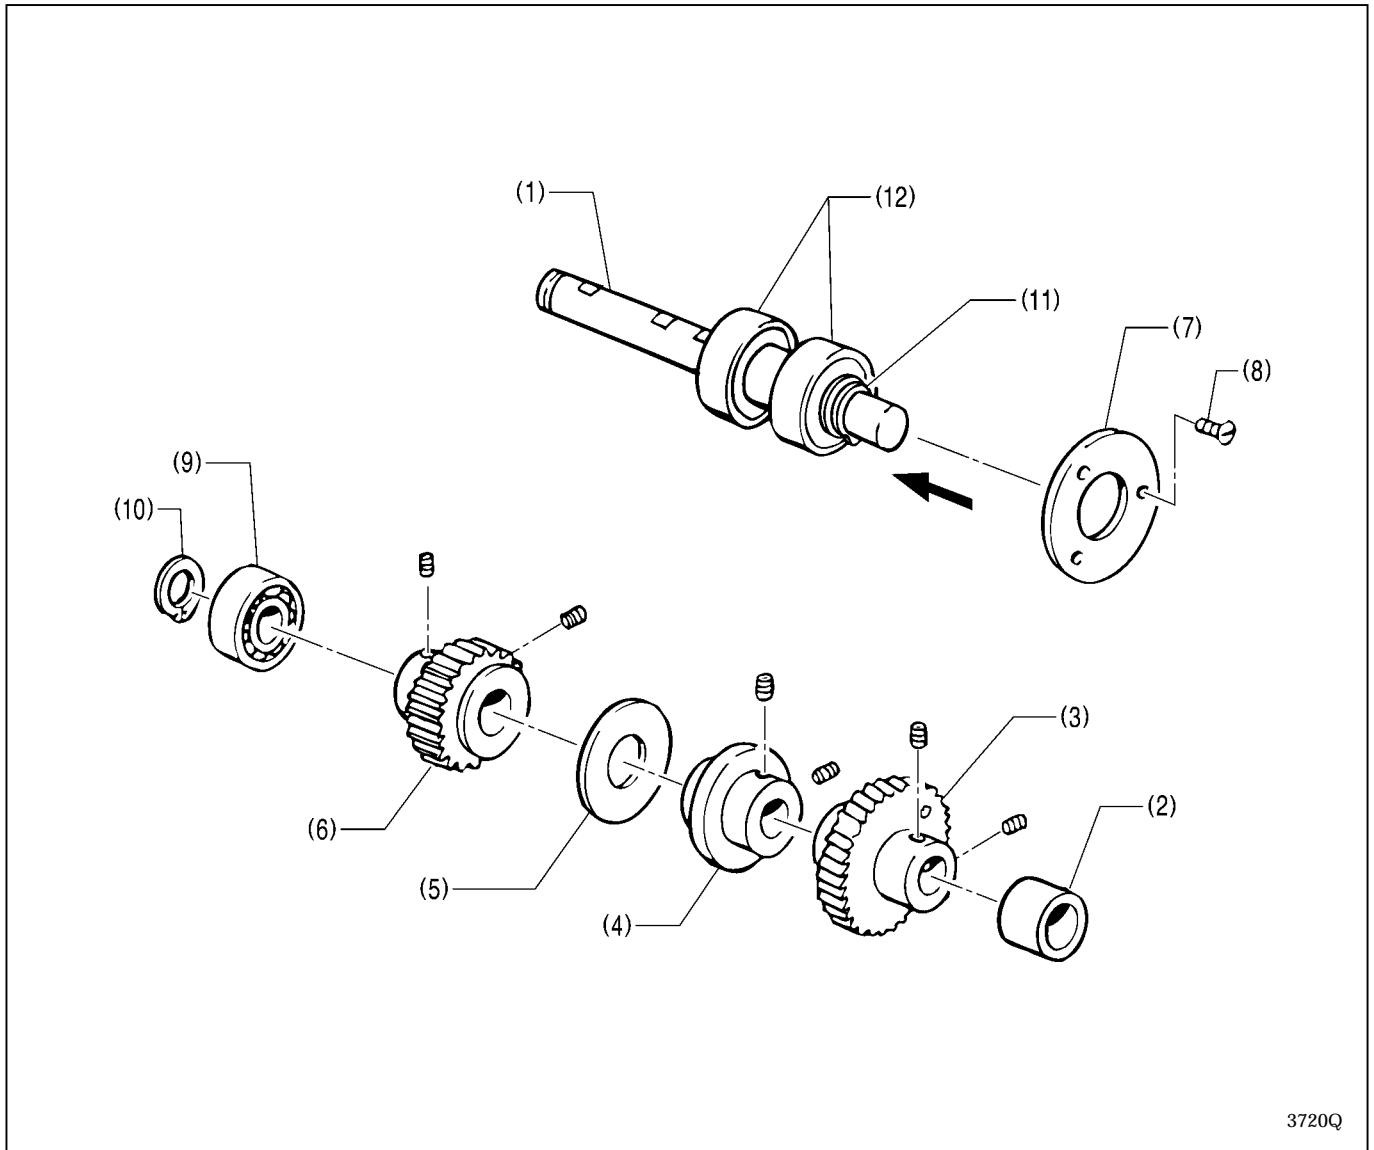


3720Q

1. Insert the upper shaft (1) into the arm from the right, and place the upper shaft collar (2), the needle bar gear (3), the zigzag cam (4), the thrust washer (5), the upper shaft tension pulley assembly (6), and the timing belt on it.
 - * The emergency stop switch cord should be routed above the upper shaft.
2. Position the zigzag fork so that the zigzag cam (4) is between the arms.
3. Attach the ball bearing cap S (7) using the three flat screws (8).
4. Place the ball bearing (9) on the upper shaft, and secure it using the retaining ring (10).
5. Lightly press the needle bar gear (3) and the zigzag cam (4) toward the pulley so that the ball bearing (12) is pressed between the retaining ring (11) and the upper shaft collar (2).
 - Tighten the set screw which comes first when the shaft is rotated in the rotation direction, against the screw flat.
6. Position the zigzag fork between the zigzag cam (4) and the thrust washer (5) so that there is no play between them, face the screw flat to the front, and secure the upper shaft tension pulley assembly (6) by tightening the set screw which comes first when rotated in the rotation direction, against the screw flat. Then tighten the other set screw.
7. Temporarily tighten the pulley with its screw flat facing the front.


3. ASSEMBLY

3-4. Lower shaft mechanism

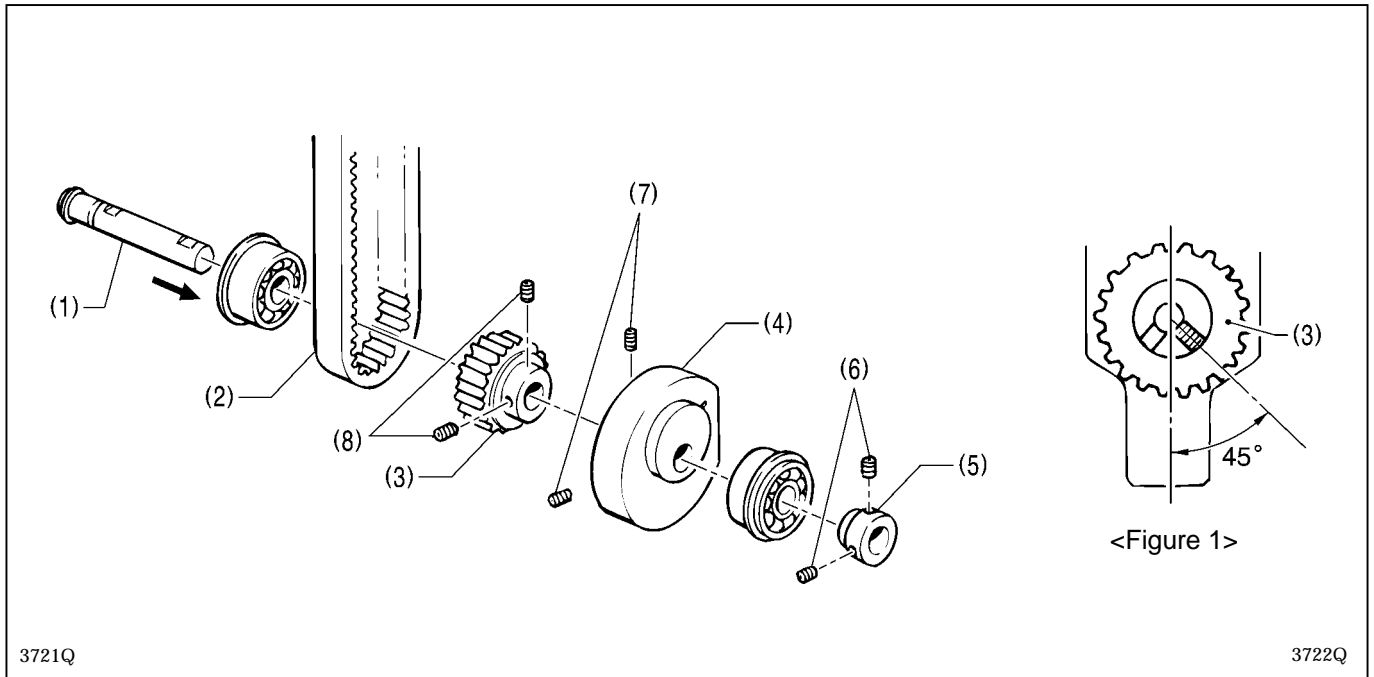


1. Fit the two ball bearings into the holes in the bed, insert the lower shaft (1) from the left.
2. Put the timing belt (2), the lower shaft tension pulley assembly (3), the lower shaft cam (4), and the set collar (5), in this order, on the lower shaft (1), and tighten the two set screws (6) of the set collar (5) so that there is no play between the parts on the lower shaft (1).
3. Lightly press the lower shaft tension pulley assembly (3) and the lower shaft cam (4) against the left ball bearing, and tighten the two set screws (7) of the lower shaft cam (4).
 - * The screw flat should align with the set screw which comes first when the lower shaft is rotated in the rotation direction.
4. When the screw flat of the upper shaft is at the top, and the two set screws (8) of the lower shaft tension pulley assembly (3) are as shown in figure 1, loop the timing belt over the lower shaft tension pulley assembly (3).

3-4-1. Adjusting the timing belt

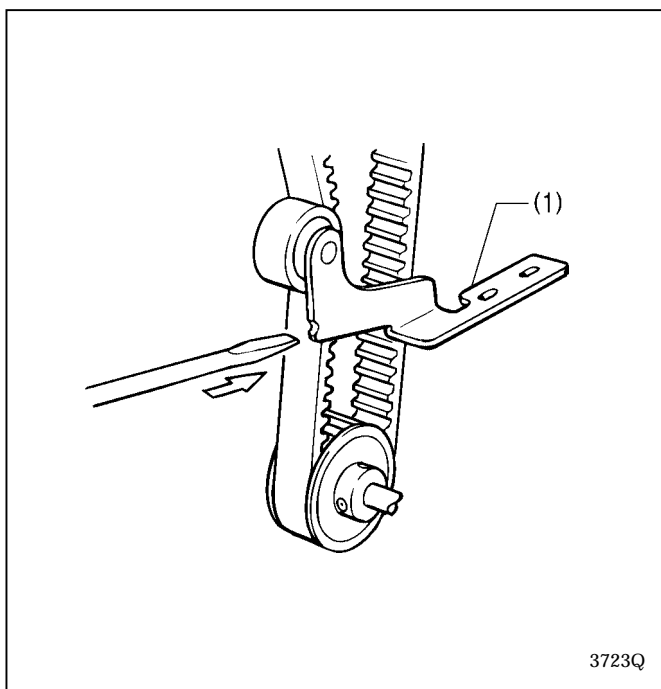


Use a screwdriver or similar tool to press the notch of the tension pulley arm assembly (1) with a force of 39.2 N, and attach the tension pulley assembly.

3-5. Upper thread trimmer mechanism

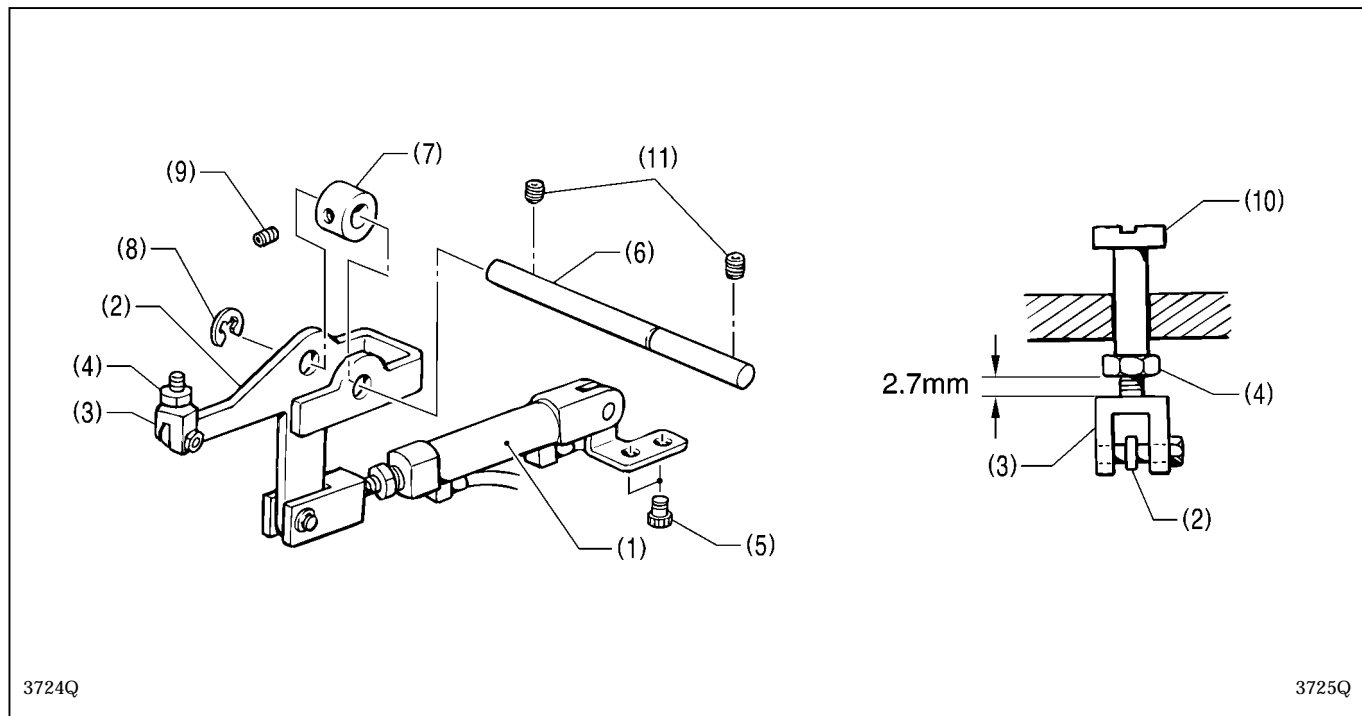


1. Assemble the thread trimmer lever (2), the adjust screw (3), and the nut (4), and attach them to the cylinder 10 X 15 assembly (1). Insert them into the tubular part of the bed, and temporarily tighten the two bolts (5).
2. Insert the thread trimmer lever shaft (6) into the hole in the bed, and pass it through the thread trimmer lever (2) and the set screw collar (7).
3. Secure the thread trimmer lever (2) using the retaining ring (8) and the set screw collar (7), and tighten the set screw (9).
4. Insert the thread trimmer lever hammer (10) into the hole in the bed, and tighten the adjusting screw (3) and the nut (4), until there is 2.7 mm between the nut and the head of the adjusting screw (3).
5. Manually move the thread trimmer lever hammer (10) up and down, and tighten the two set screws (11) where the thread trimmer lever hammer (10) motion is the smoothest.
6. In the same way, move the thread trimmer lever hammer (10) up and down manually, and tighten the two bolts (5) where the thread trimmer lever hammer (10) motion is the smoothest.

3-5-1. Adjusting the thread trimmer lever hammer stroke

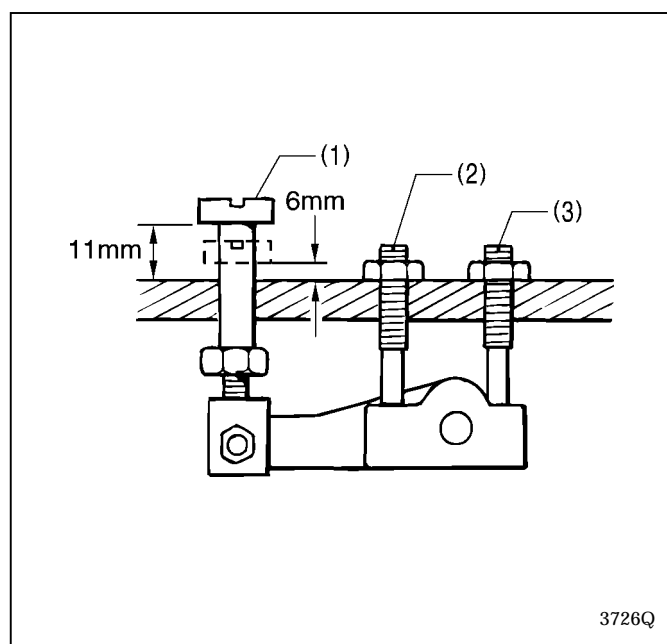


1. Raise the thread trimmer lever hammer (1), and adjust the set screw (2) so that the clearance with the bed is 11 mm.
2. Lower the thread trimmer lever hammer (1), and adjust the set screw (3) so that the clearance with the bed is 6 mm.

3-6. Knife pipe and the knife bracket

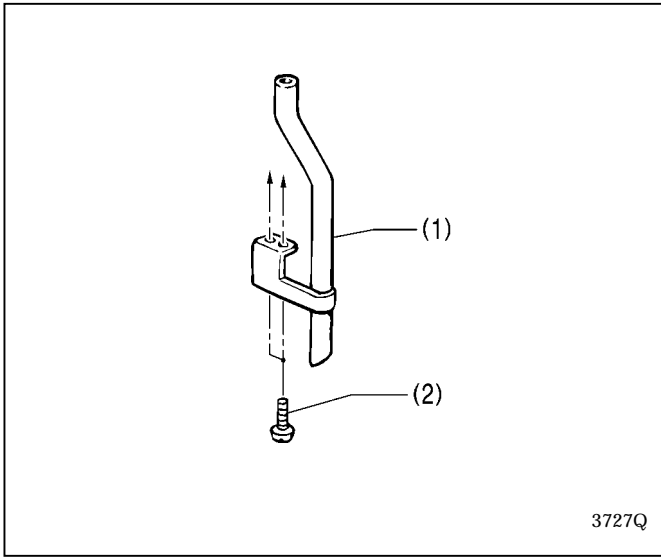

Knife pipe


Insert the knife pipe assembly (1) into the bed from below, and secure it using the two screws (2).

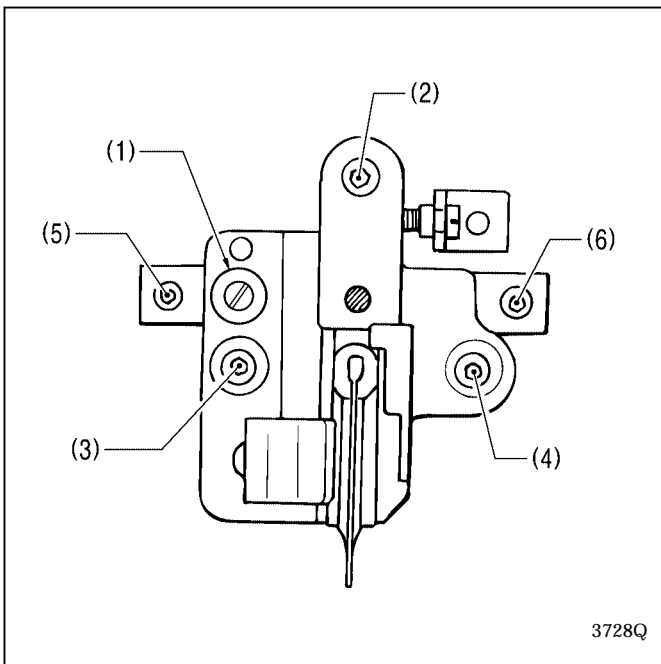

Knife bracket

Insert a bar with a diameter of 4 mm into the hole (1) in the knife bracket to fix the knife bracket position, and tighten the bolts (2) to (6).

3-7. Driving gear shaft mechanism

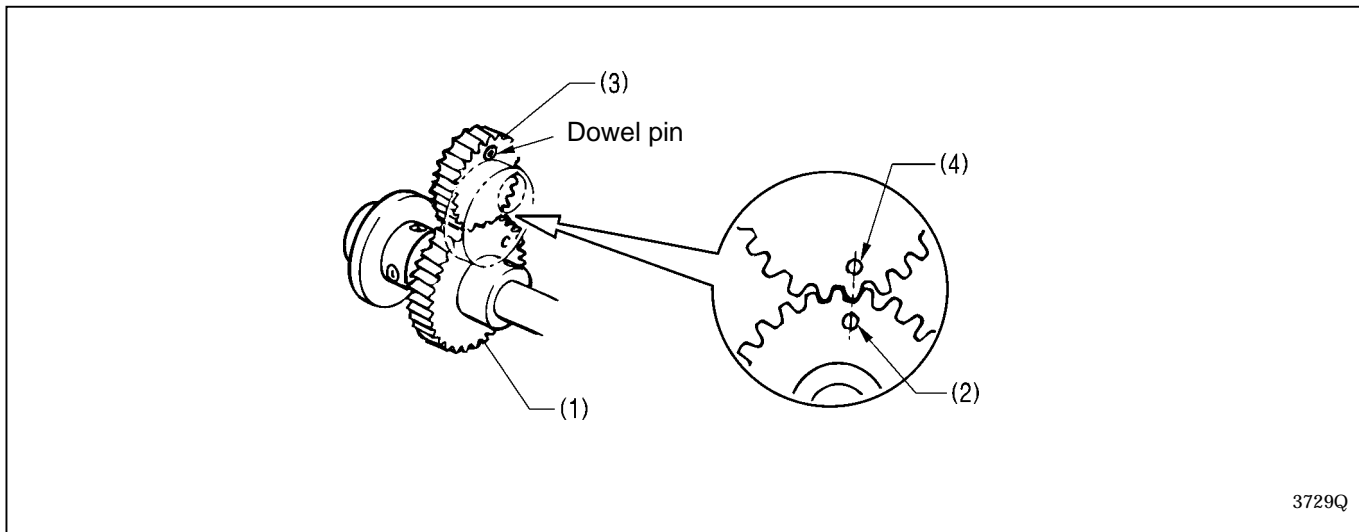


3729Q

Assembling the needle bar gear and the driving rod gear

Engage the needle bar gear (1) with the driving rod gear (3) by matching their identification holes (2) and (4).

Note: Do not mistake the hole (4) for the hole in which the dowel pin is inserted.

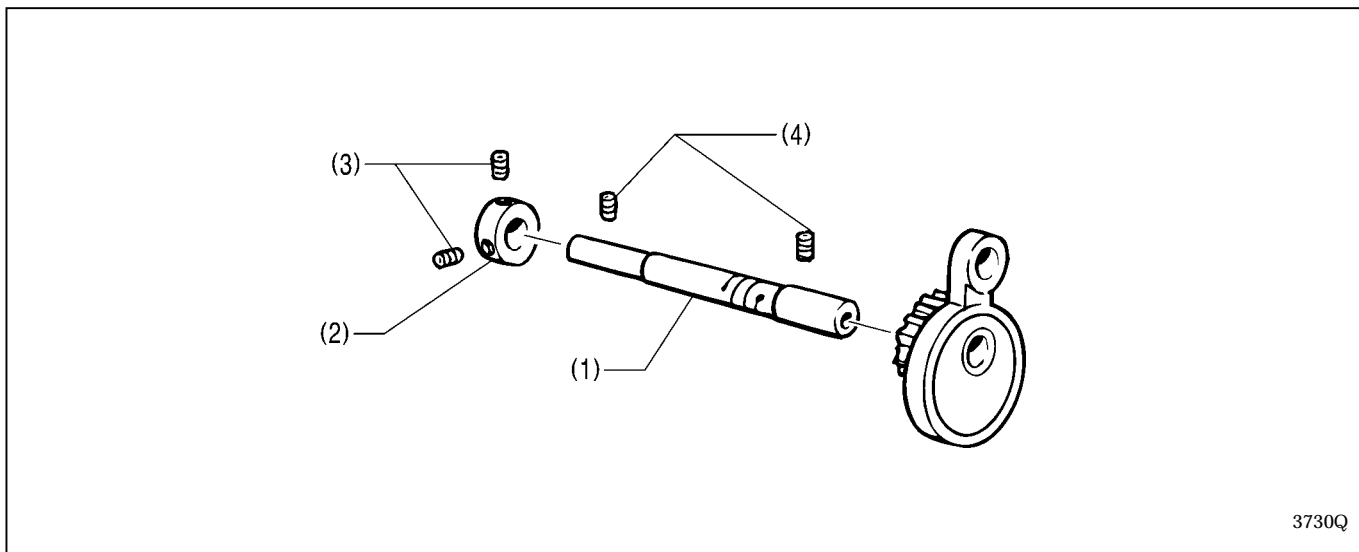

3730Q

Adjusting the set screw collar of the needle bar gear


Tighten the two set screws (3) of the set screw collar (2) with either set screw at the center of the screw flat on the driving gear shaft (1).

Adjusting the backlash between the needle bar gear and the driving gear

1. The driving gear shaft (1) is eccentric. Turn it to adjust the backlash.
 - * The driving gear shaft (1) should be turned in the direction where its lubrication hole is moving upward.
2. While pressing the set screw collar (2) toward the pulley so that the driving gear shaft (1) has no end play, tighten the two set screws (4).


3-8. Needle bar, thread take-up, and zigzag mechanisms

3-8-1. Eliminating end play of the thread take-up on the arm

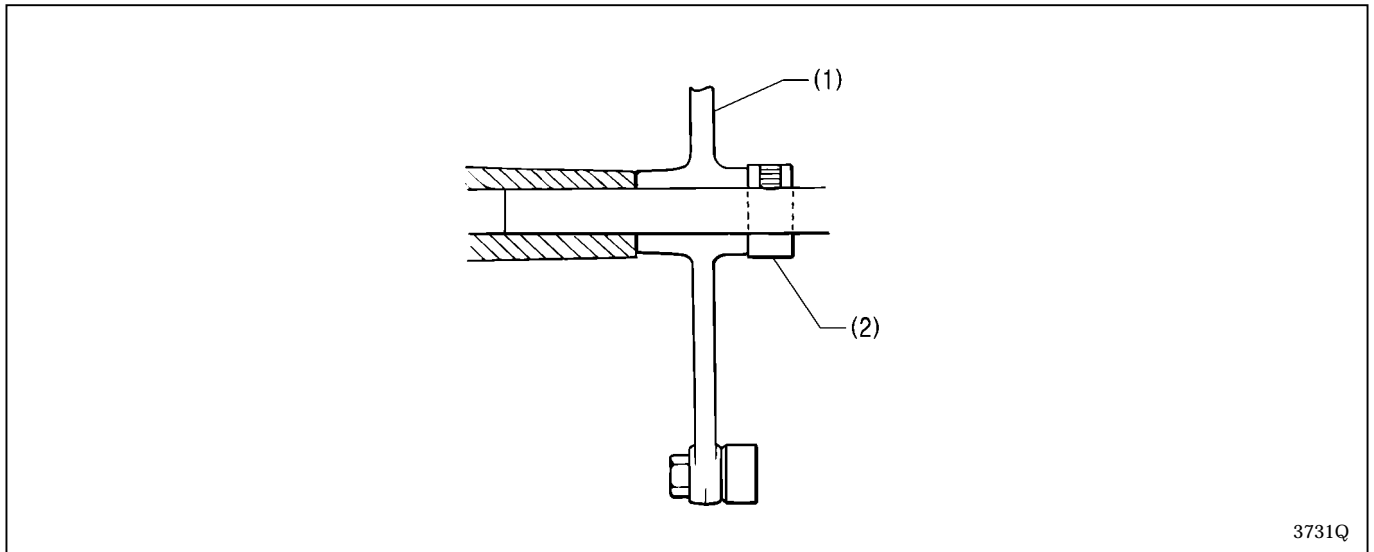


Eliminate end play of the thread take-up lever (1) on the arm by placing it between the end of the arm and the set screw collar (2).

3-8-2. Applying grease to the ends of the thread take-up spring

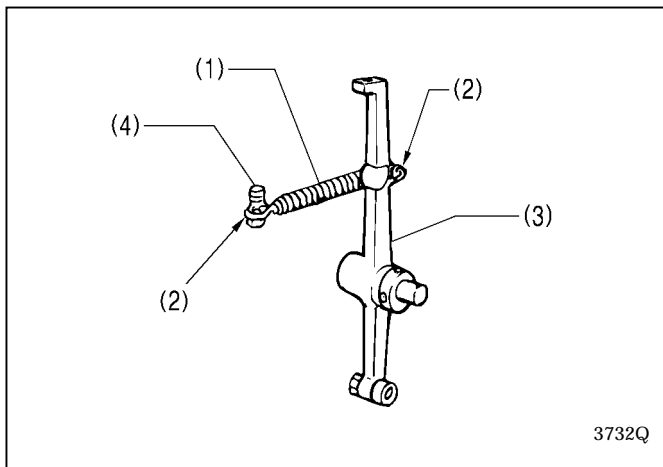


1. Apply grease to the ends (2) of the thread take-up spring (1).
2. Apply grease to the ends of the thread take-up lever (3) and the spring hook (4).

3-8-3. Eliminating end play of the needle bar driving lever

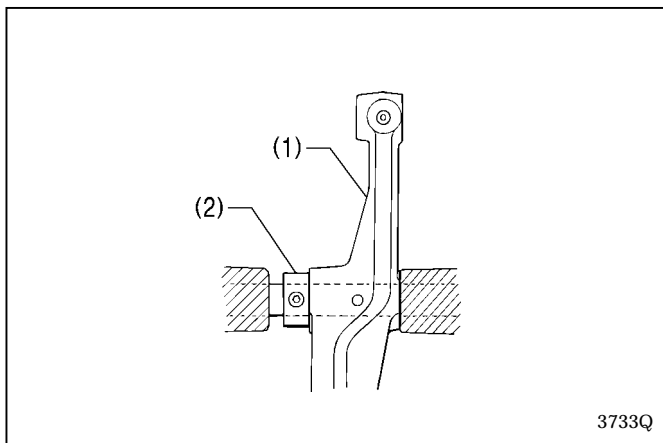

Adjust the position of the set screw collar (2) to eliminate end play of the needle bar driving lever assembly (1).


3-8-4. Eliminating end play of the driving rod

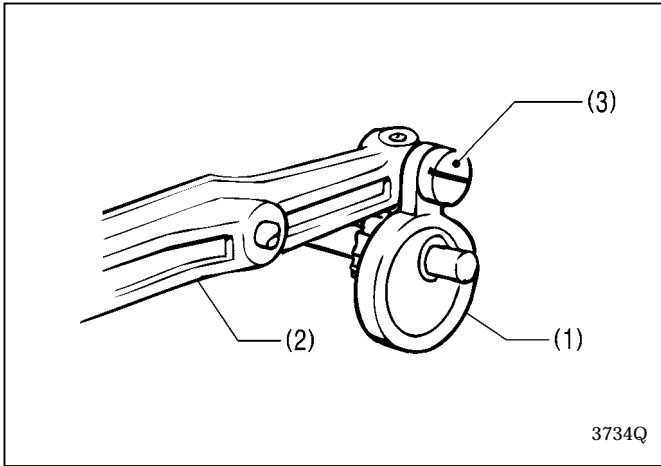

The driving rod assembly (1) is attached to the needle bar driving lever assembly (2) and the pin (3). The eccentric wheel of the driving rod assembly (1) is free in the thrust direction.

Place the driving rod assembly (1) between the edge of the needle bar driving lever assembly (2) and the head of the pin (3) to eliminate end play of the driving rod assembly (1).


3-8-5. The strength to tighten the set screw of ball bearing 25/20

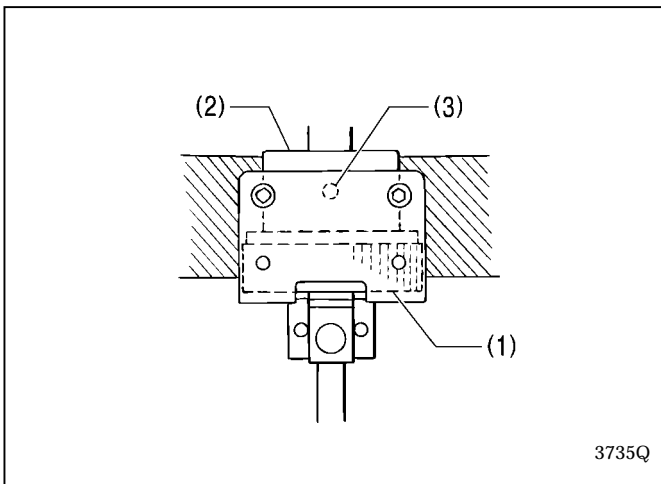

The set screw (3) of ball bearing 25/20 (2) for the needle bar gear (1) should be tightened as little as possible. If it is tightened excessively, unnecessary load may be applied to the needle bar gear (1), causing pulse motor R to go out of control.

* Be sure to apply the screw lock to the circumference of ball bearing 25/20 (2) before press fitting it.

3-8-6. Eliminating end play of the zigzag rock shaft

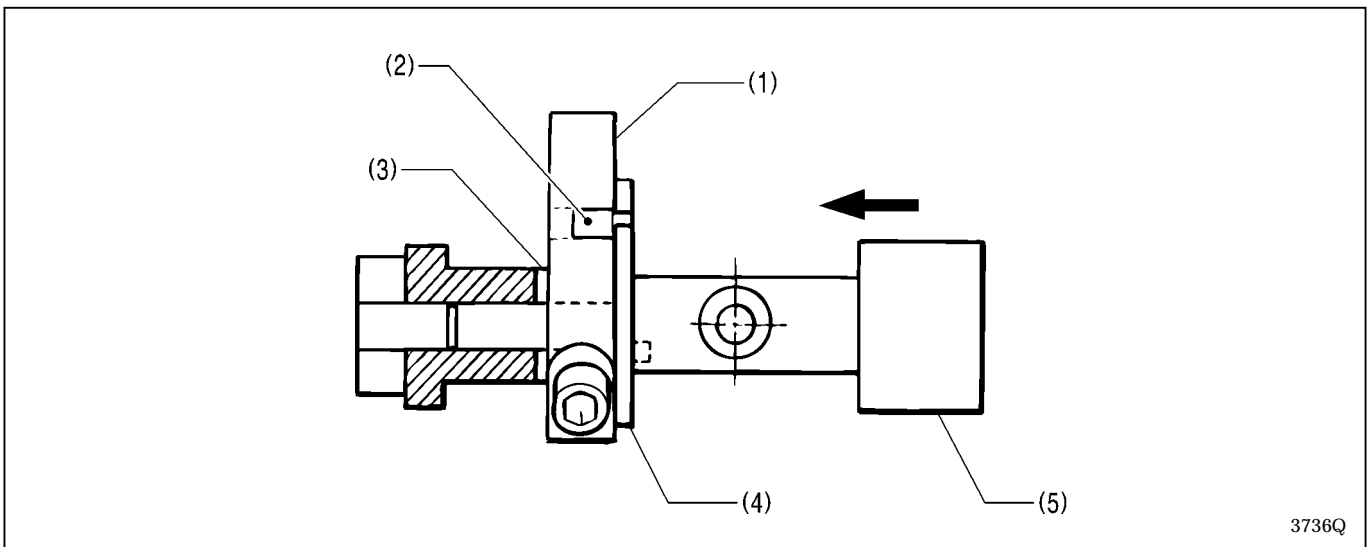


Insert the zigzag eccentric pin (2) into the zigzag crank (1), attach the washer (3) and the needle position control plate assembly (4) as shown in the above figure, and pass the zigzag rock shaft (5) through the arm from the right. At this time, insert a wedge or similar tool into the split of the zigzag crank (1) for easier adjustment.

Note: Do not fail to attach the washer (3).


3. ASSEMBLY

3-8-7. Eliminating end play of the zigzag lever

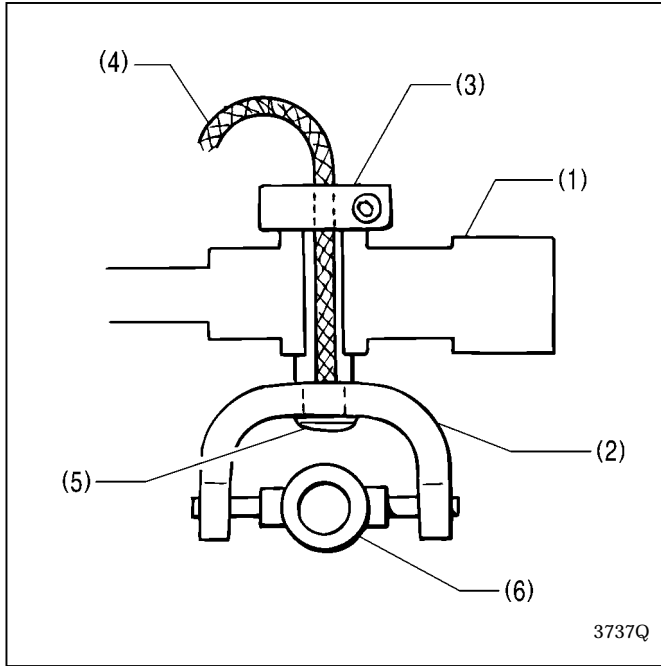


1. Adjust the needle bar clamp (3) so that there is no end play of the zigzag lever (2) which is connected to the zigzag rock shaft (1).
The zigzag lever (2) should rotate easily in the rotation direction.
2. Pass the wick (4) through the zigzag lever (2), and fit the cap (5).
3. Attach the needle bar level feed link (6) to the zigzag lever (2) vertically, and turn it 90°.

3-8-8. Attaching the needle bar yoke and the needle bar level feed link

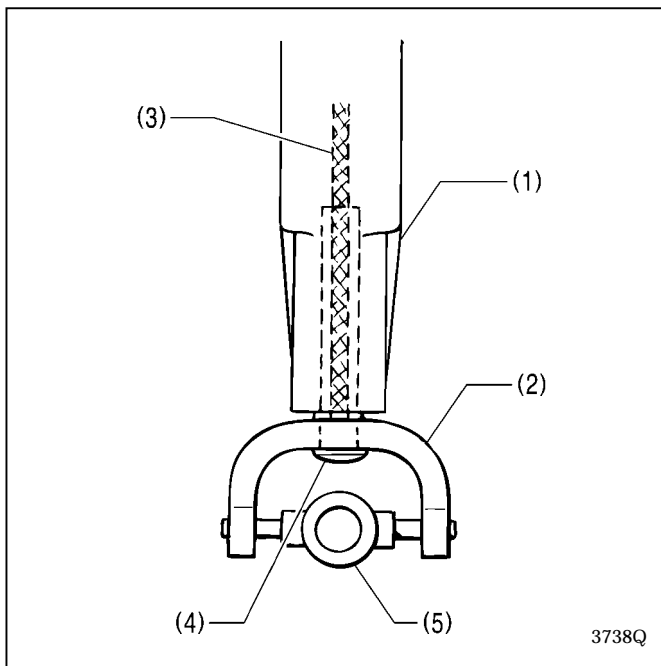

1. Combine the needle bar driving lever assembly (1) and the needle bar yoke (2), pass the wick (3) through the needle bar driving lever assembly (1), and fit the cap (4).
2. Attach the needle bar level feed link (5) to the needle bar yoke (2) vertically, and turn it 90°.

3-8-9. Attaching the needle bar bush U and the needle bar

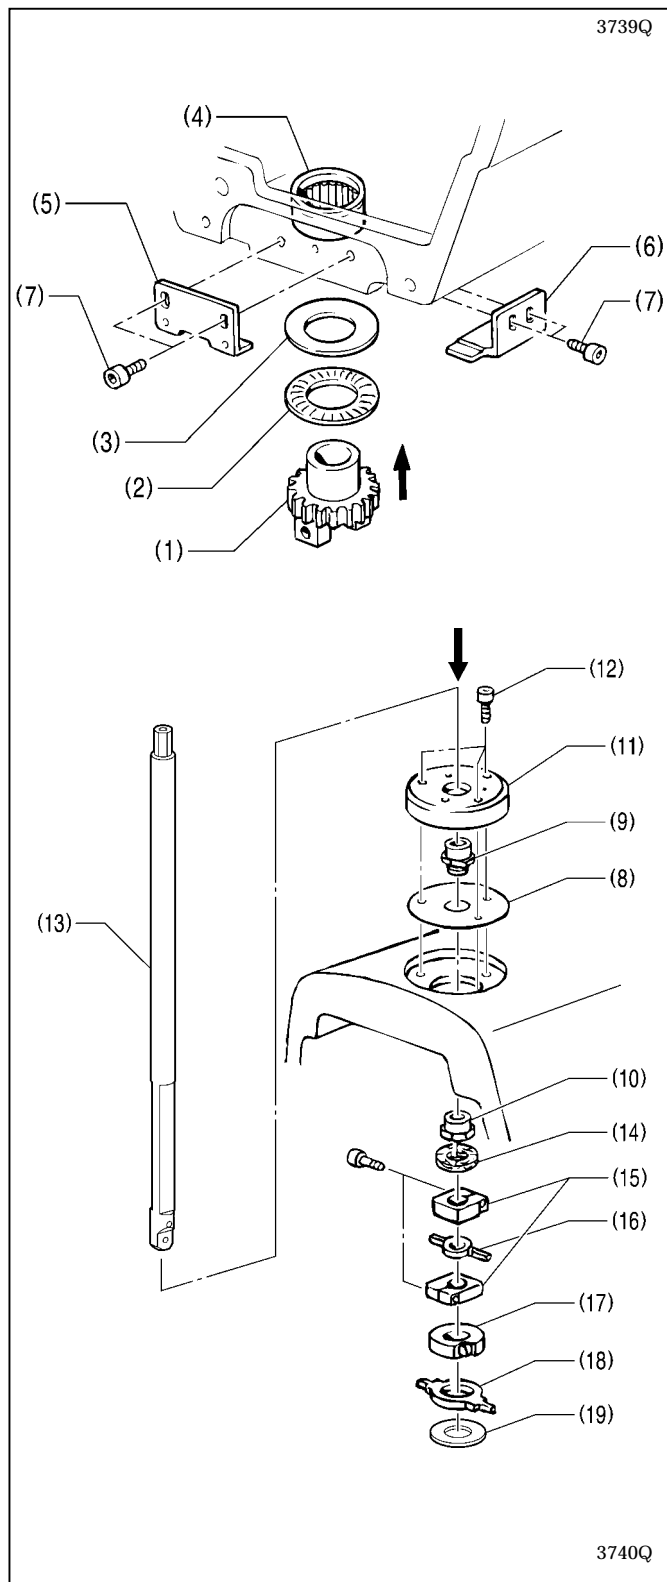


- Put the thrust bearing (2) and the thrust washer (3) on the needle bar gear (1). Attach them to bearing 25/20 (4), and secure them using gear supports A (5) and B (6) and the screws (7) so that the needle bar gear (1) can turn easily but without any end play.

* Do not forget to attach timing belt U.

- Insert the plate spring (8) into the hole in the arm, and bind it using needle bar bush U (9) and the needle bar bush nut U (10).
- Temporarily attach holder base B (11) using the three bolts (12).
- Pass the needle bar assembly (13) through the arm from above.
- Insert the needle bar felt (14), the needle bar clamp (5), the needle bar level feed link (16), the needle bar block clamp (17), the needle bar level feed link (18), and the needle bar block collar (19), through the needle bar assembly (13) in this order.

3. ASSEMBLY


3-8-10. Eliminating end play of the needle bar block

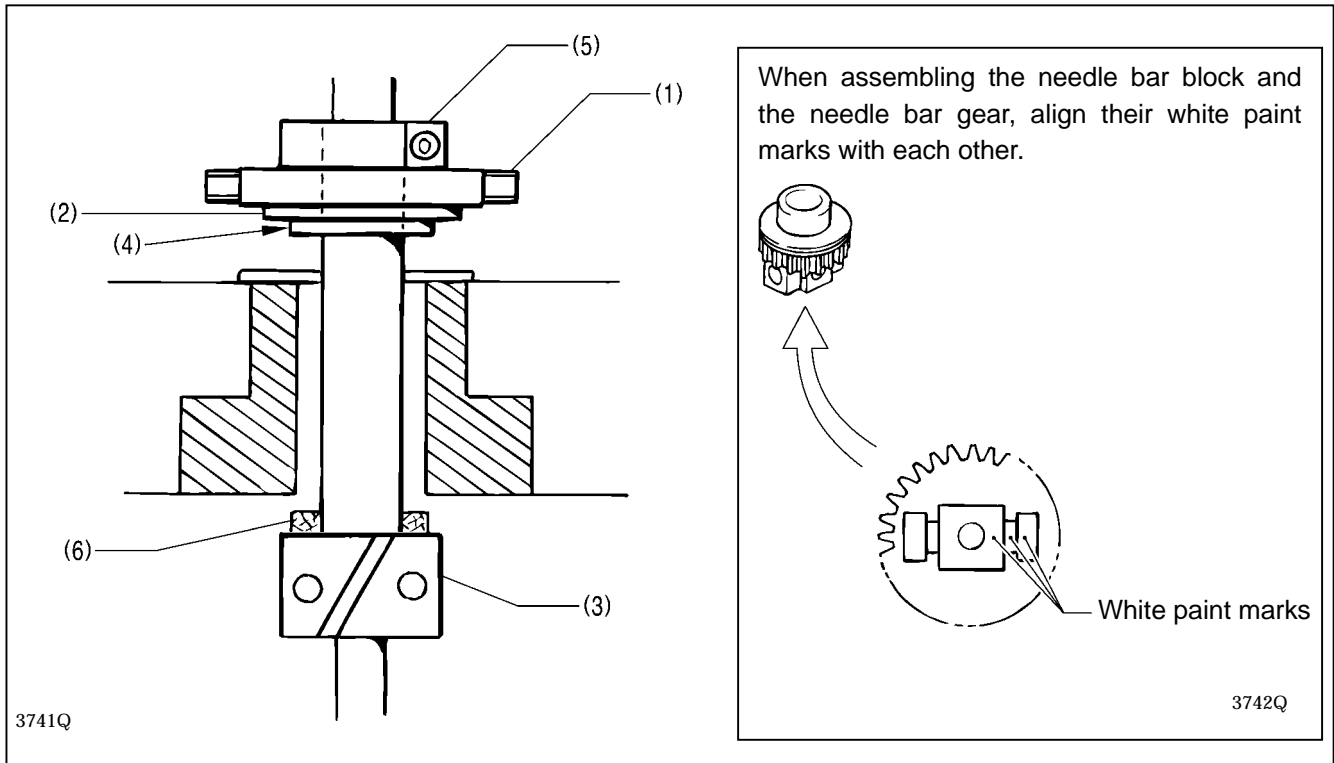

Adjust the positions of the needle bar level feed link (1) and the needle bar block collar (2) using the flange (4) of the needle bar block (3) and the needle bar block clamp (5), so that there is no end play.

Note: Be sure to insert the needle bar block felt (6).

3-8-11. Adjusting the needle bar in the radial direction

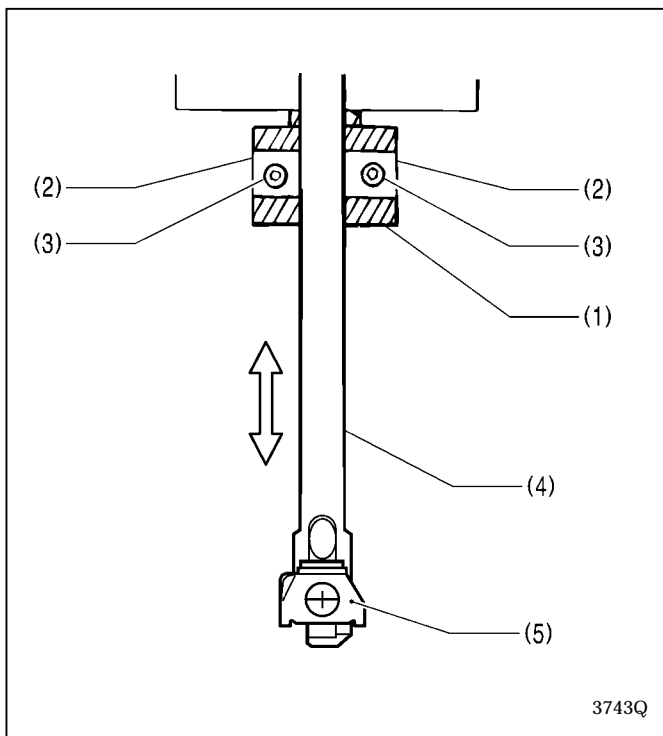


Insert the two needle bar guide collars (2) into the needle bar block (1), and adjust the position of the needle bar assembly (4) using the two set screws (3) so that the needle bar can move smoothly.

Note: Position the needle bar assembly (4) so that the holder plate A (5) will face the front when the set screws (3) are facing the front.


3-8-12. Attaching the needle bar block assembly

The needle bar block assembly is a set of the needle bar gear, the needle bar block, and the washers. When disassembling and then reassembling the needle bar block assembly, align the white marks of the needle bar gear, the needle bar block, and the collars with each other.

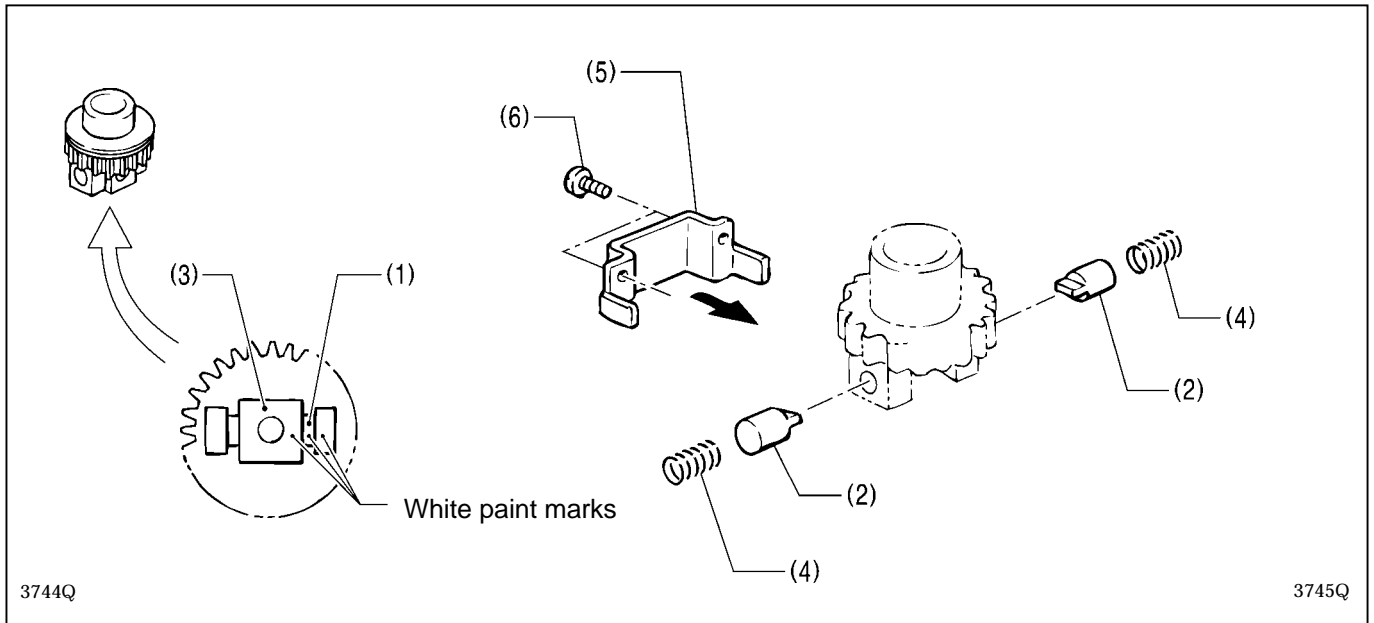


1. Insert the two needle bar guides (2) into the hole in the needle bar block (3) on each side, taking care of the white paint mark of the washer (1).
2. Attach the two spring (4) using the needle bar guide support plate (5), and tighten the two screws (6).

3-8-13. Adjusting the height of the needle bar

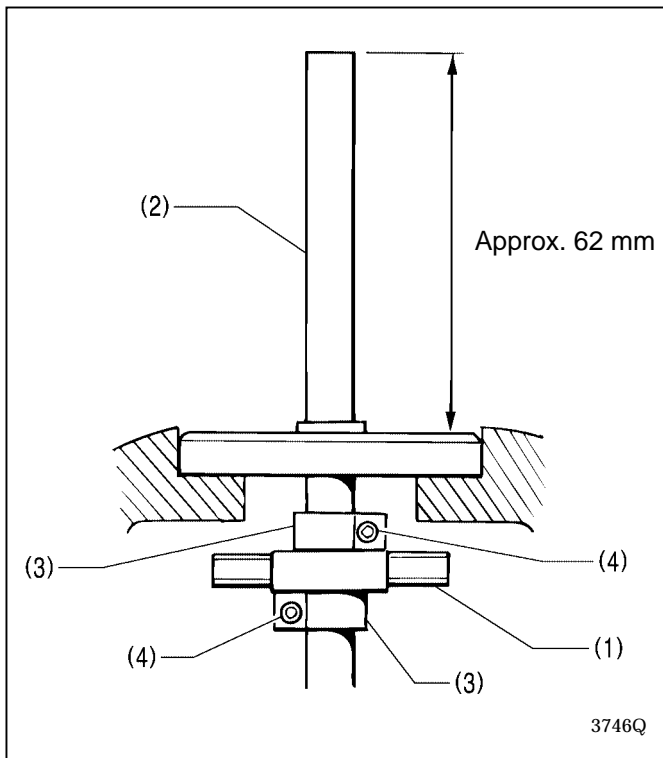

1. Turn the pulley to set the needle bar level feed link (1) at its highest position.
2. Set the height of the needle bar (2) to approx. 62 mm, eliminate end play between the two needle bar clamps (3) and the needle bar level feed link (1), and tighten the two screws (4).

3-9. Looper base

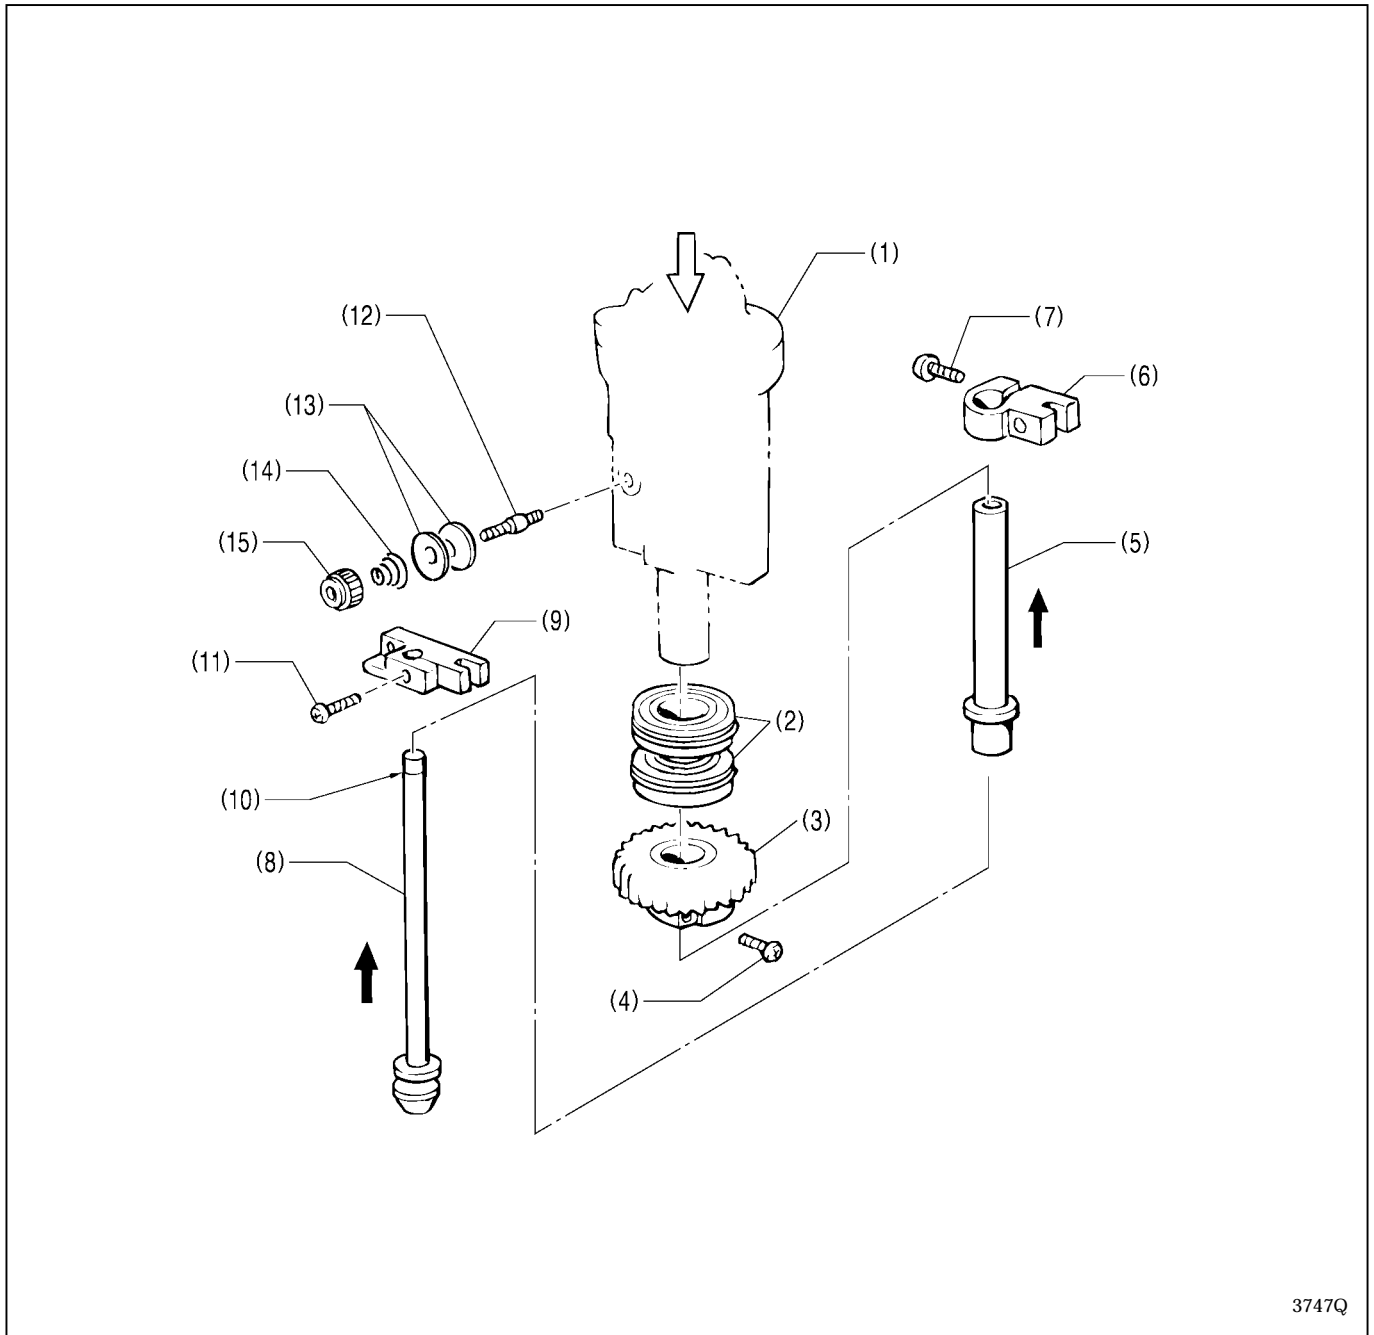


3747Q

1. Insert the shaft of the looper base (1) through the hole in the bed, attach the two ball bearings (2) and the looper pulley (3) to the shaft of the looper base (1) so that there is no end play, and tighten the screw (4).
2. Insert the looper driving shaft (5) into the shaft of the looper base (1), then the looper link clamp (6) into the looper driving shaft (5), and tighten the screw (7).
3. Insert the spreader link shaft (8) into the hole in the looper driving shaft (5), then the spreader link base (9) into the spreader link shaft (8). Align the reference line (10) with the top surface of the spreader link base (9), and tighten the screw (11).
4. Attach the L-tension stud (12), the thread guide discs (13), pre-tension spring B (14), and the tension nut (15) to the looper base (1).


3-10. Needle bar rocking mechanism

3-10-1. Driving looper shaft

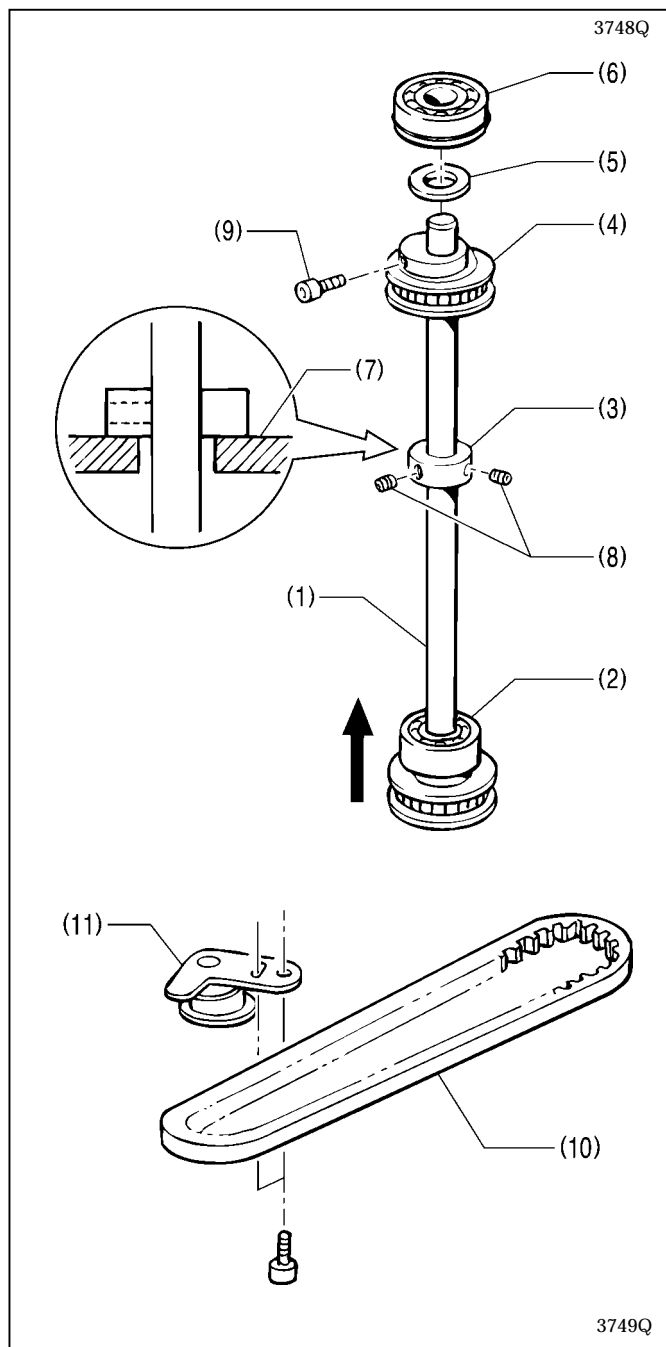

1. Insert the driving looper shaft assembly (1) through the hole in the bed from below, place the ball bearing (2), the set screw collar (3), the vertical shaft T-pulley U assembly (4), the washer (5), and finally the ball bearing (6) on the driving looper shaft assembly (1).
2. Set the clearance between the set screw collar (3) and the bed (7) to 0.02 – 0.03 mm in the thrust direction, and tighten the two set screws (8).
3. Press the vertical shaft T-pulley U assembly (4) and the washer (5) against the ball bearing (6), and tighten the screw (9).
 - * Be sure to pass the driving looper shaft assembly (1) through timing belt U (10).
4. Attach the tension pulley arm U assembly (11) while it is being pulled by a force of 19.6 N.
 - * Deflection in the center of span: 3 ± 0.5 mm when 4.9 N is applied.

3-10-2. Needle bar rocking mechanism

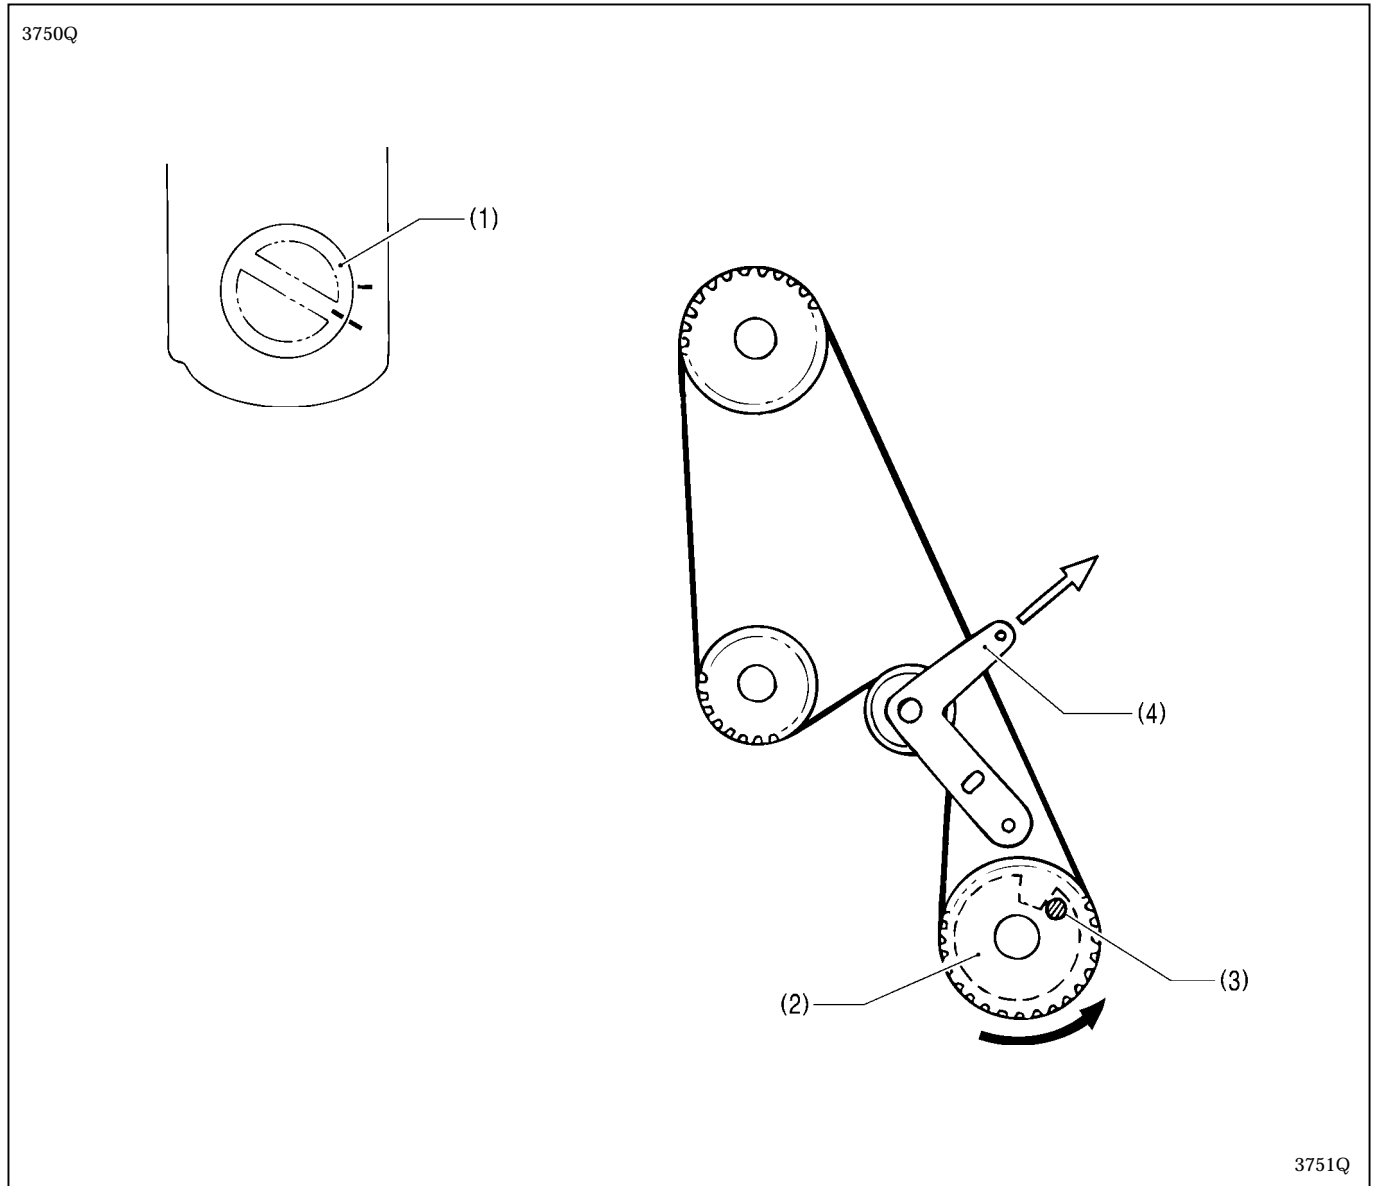


Adjusting the positional relationship between the needle rotation pulley assembly M and the looper base

1. Align the match mark in the looper base (1) with that in the bed, as shown in the figure.
 2. Turn the needle rotation pulley assembly M (2) until the pin (3) makes contact with the motor base.
 3. Attach the timing belt.
 4. Make sure that the looper base (1) can rotate through 360° easily.
- * Tighten the screw of the looper pulley at the front.

Adjusting the timing belt tension

Attach the timing belt D while the tension pulley arm D assembly is being pulled by a force of 68.6 N.


- * Deflection in the center of span: 6 ± 0.5 mm when 4.9 N is applied.

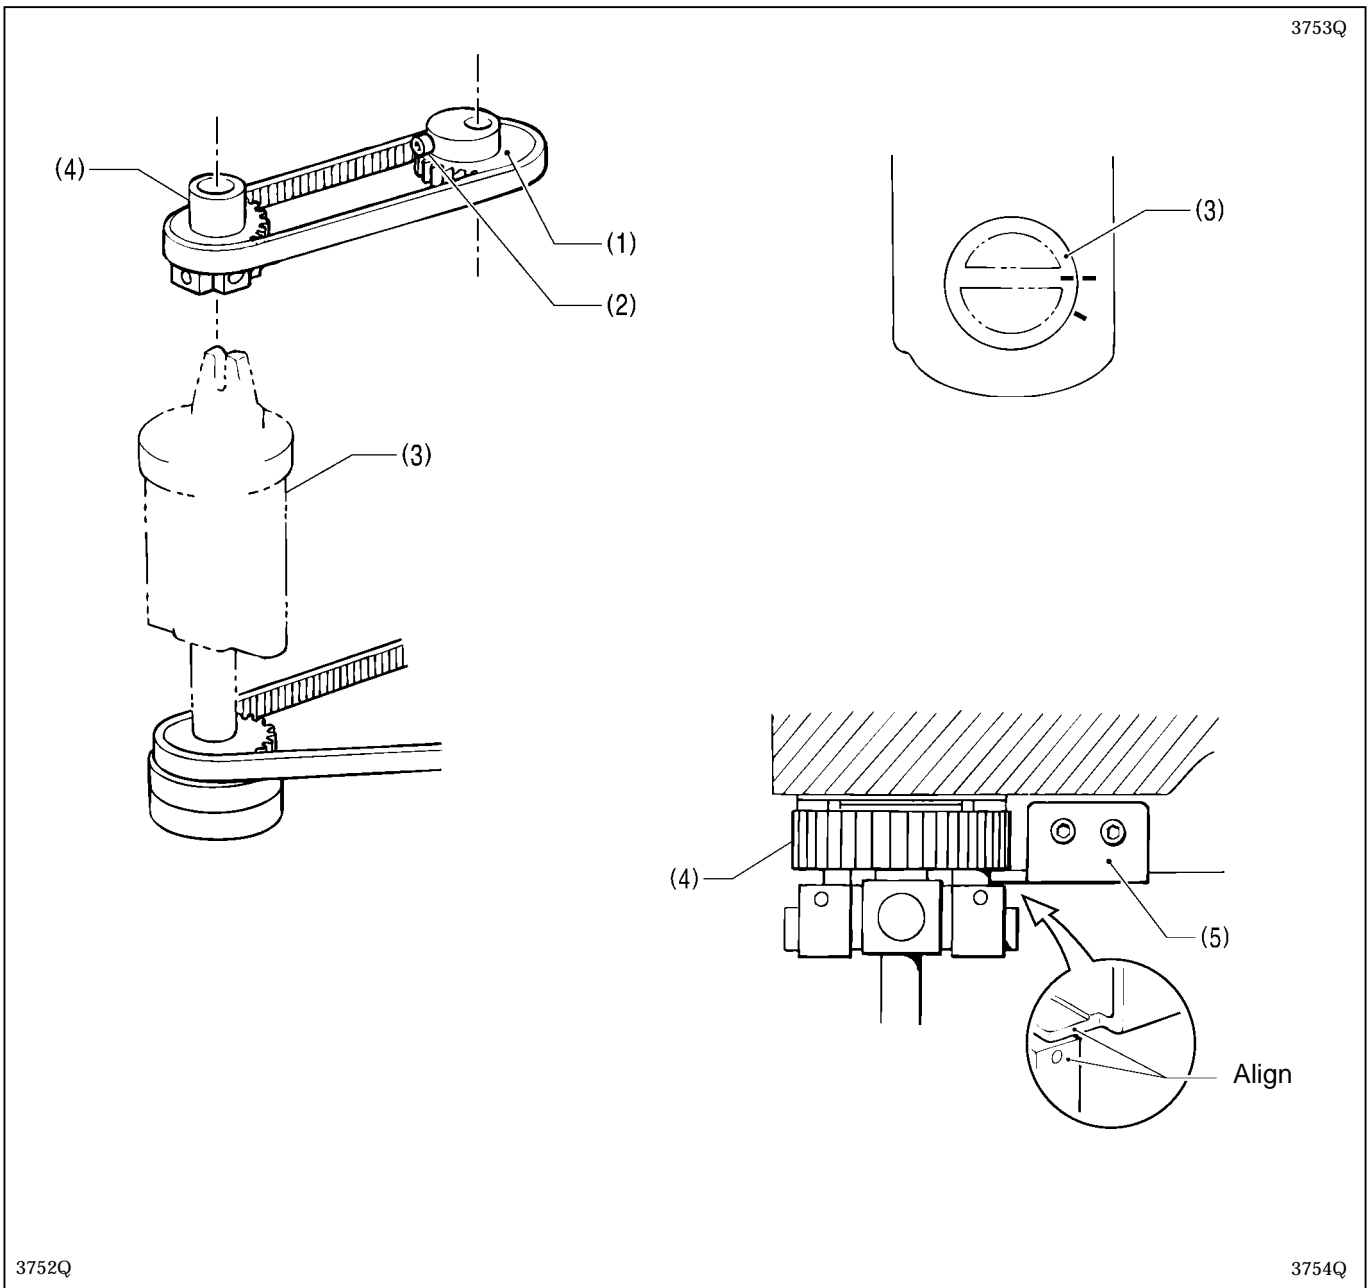

Adjusting the positional relationship between the looper base and the needle bar gear


1. Loosen the bolt (2) of the vertical shaft T-pulley U assembly (1).
2. Align the match mark in the looper base (3) with that in the bed, as shown in the figure.
3. Orient the needle bar gear (4) in the direction shown in the figure, and align it with gear support B (5).
4. Tighten the bolt (2) of the vertical shaft T-pulley U assembly (1).

3-11. Looper and spreader mechanisms

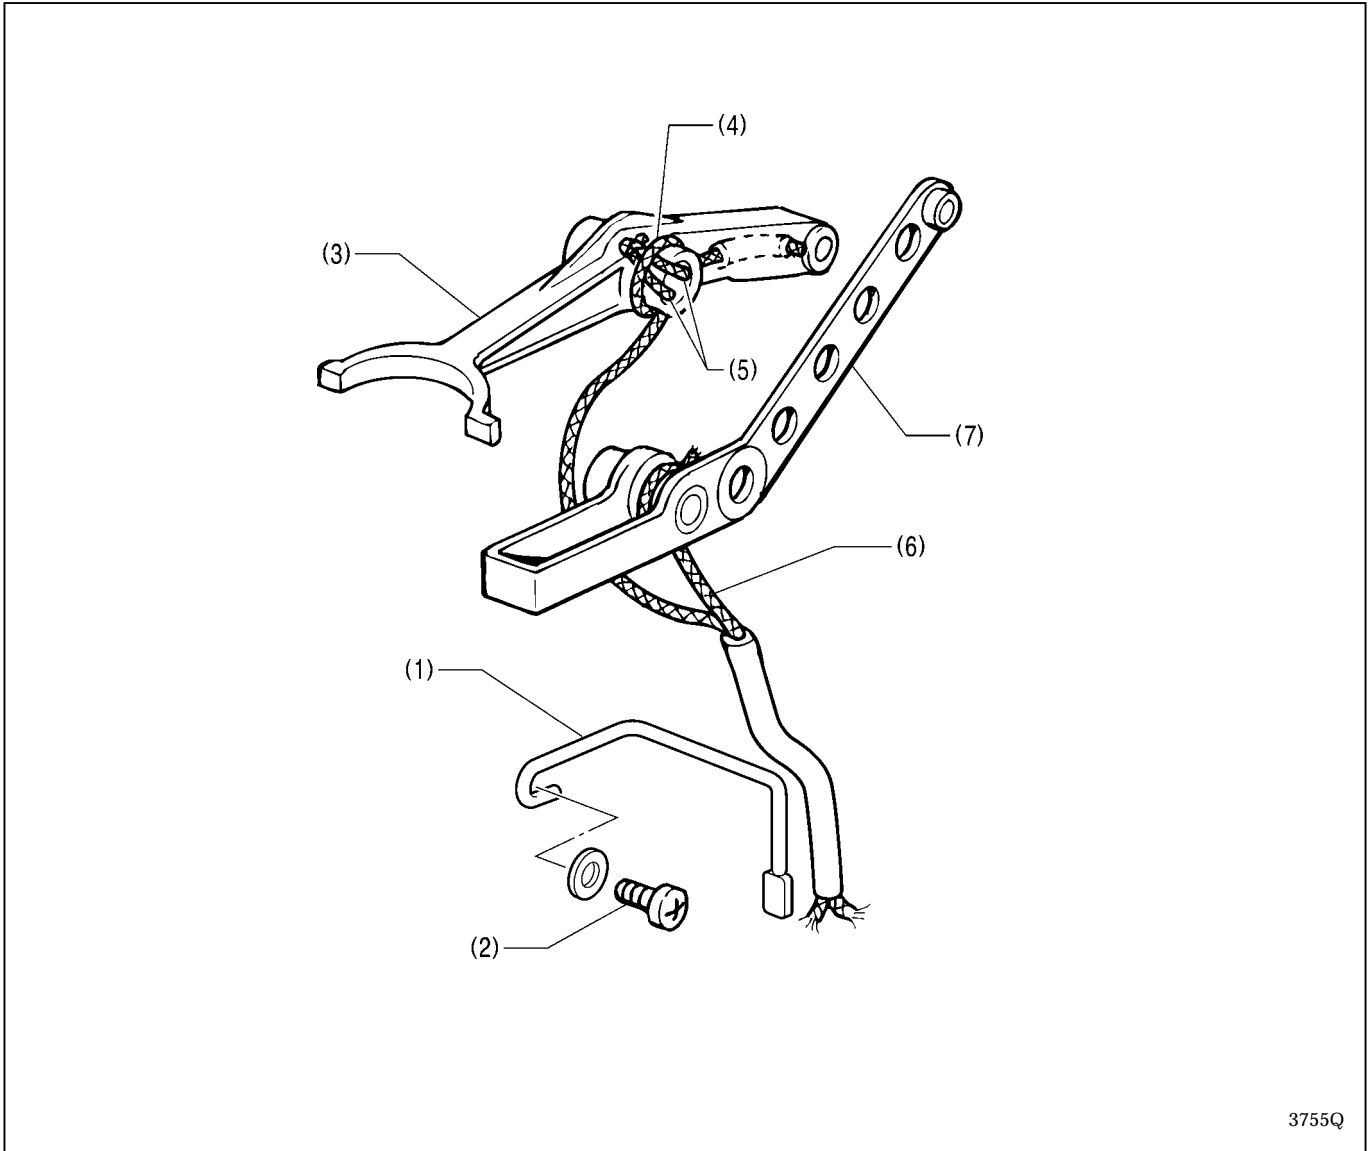


3755Q

1. Attach the looper oil guide (1) using the screw (2).
2. Wind the wick (4) around the boss of the looper link (3). Be sure to pass the two wicks (5) under the wick (4).
3. Wind the wick (6) around the spreader driving lever (7), as shown in the figure.

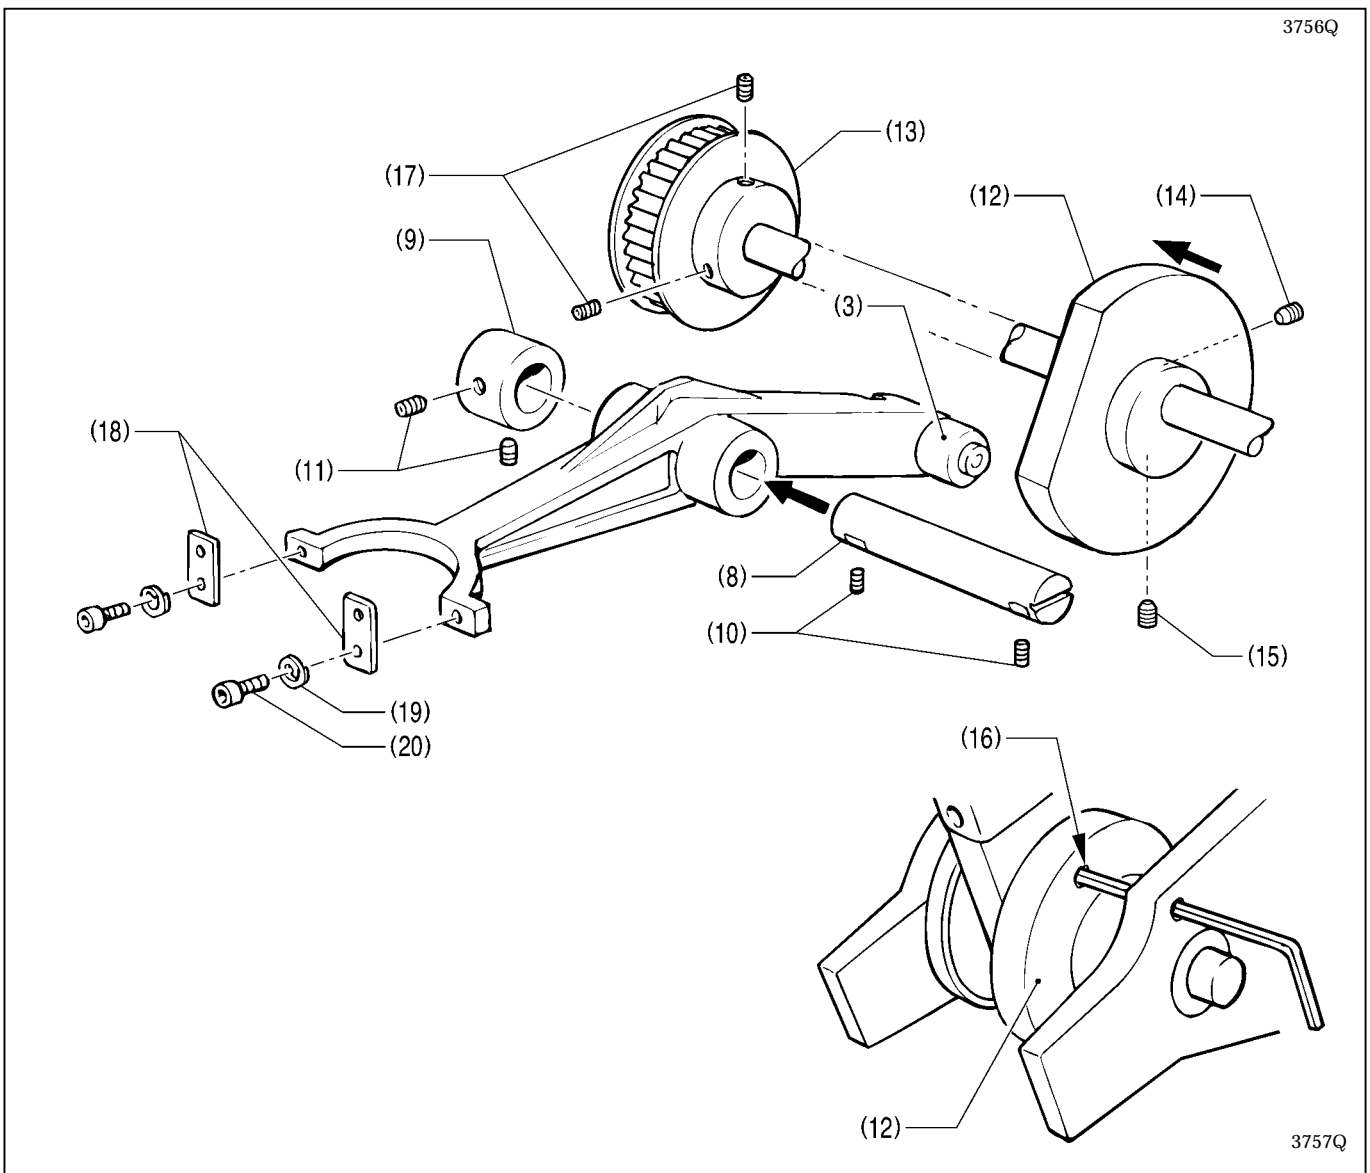

4. Place the looper link (3) and the set screw collar (9) on the looper link shaft (8), and secure the latter using the two set screws (10).
5. Tighten the two set screws (11) of the set screw collar (9) to eliminate end play.
6. Position the lower shaft cam (12) and the lower shaft tension pulley assembly (13) so that they lightly make contact, then tighten the screw (14) on the screw flat at the front and another screw (15).
7. Insert an allen wrench (2.5 mm across flats) into the hole in the bed and the hole (16) in the lower shaft cam (12). Position the screw flat of the upper shaft at the top (where the needle is at its lowest position), and tighten the two set screws (17) of the lower shaft tension pulley assembly (13).
8. Attach the two plate springs (18) to the looper link (3) using the two spring washers (19) and the two bolts (20).

3. ASSEMBLY

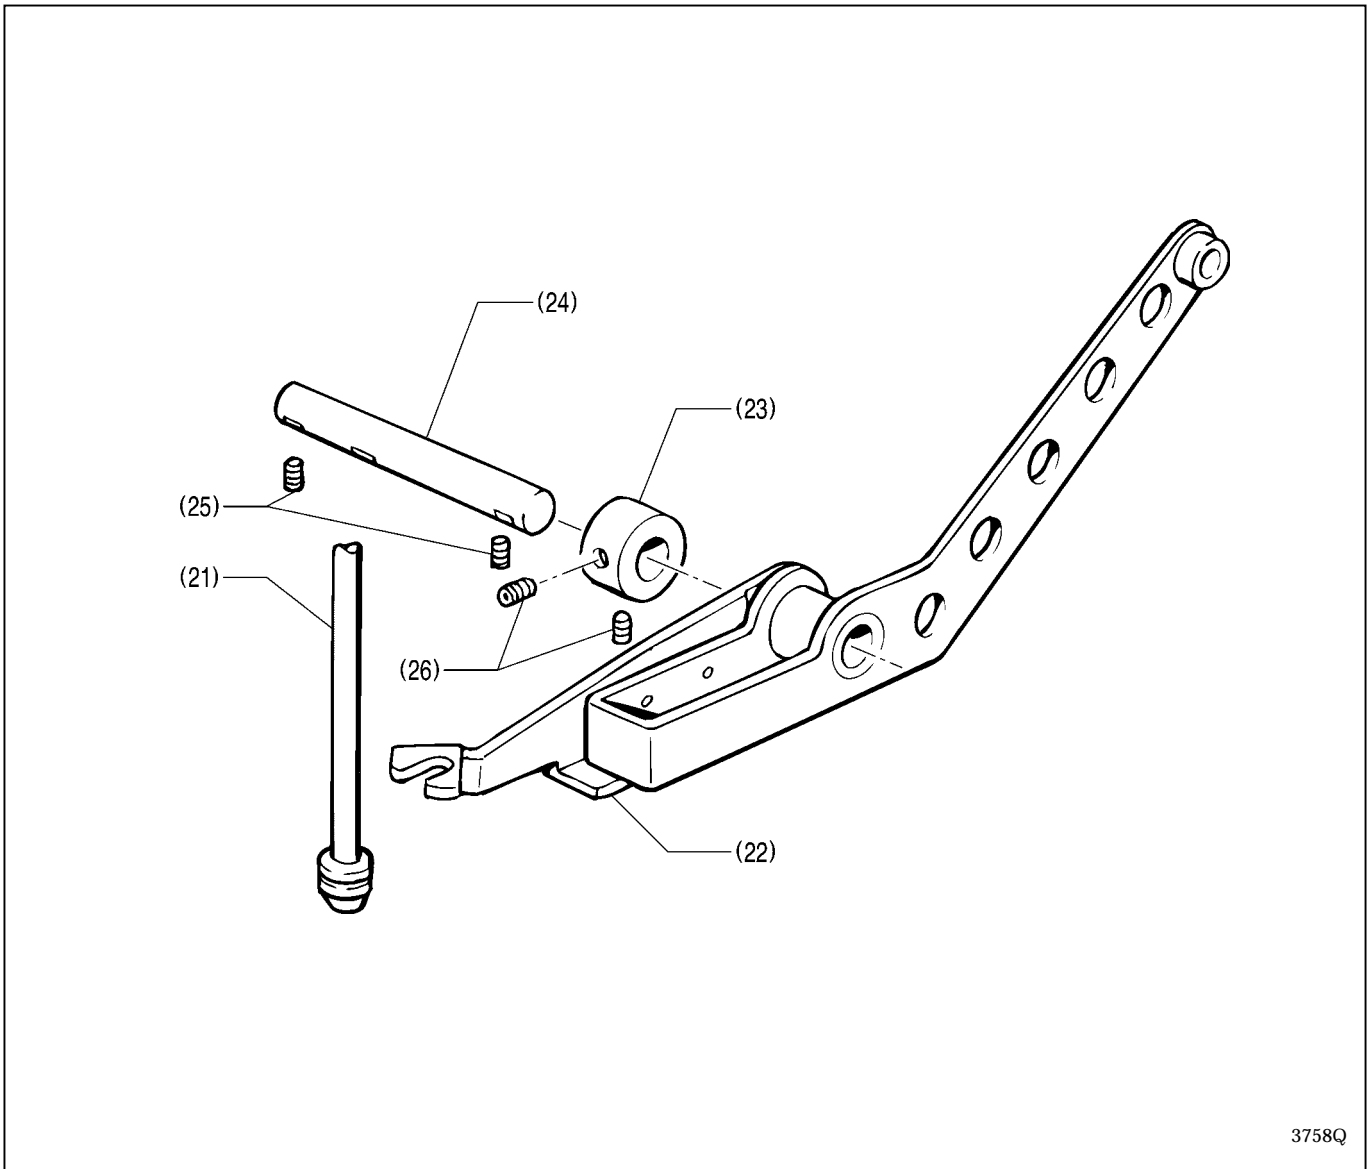


3758Q

9. Turn the pulley until it comes to its stop position, and attach the spreader link shaft (21) to the forked portion of the spreader driving lever (22) while pulling the former downward.
10. Pass the looper link support shaft (24) through the spreader driving lever (22) and the set screw collar (23), and secure them using the two set screws (25). (The split in the shaft should be facing the right.)
11. Tighten the two set screws (26) of the set screw collar (23) to eliminate the end play.

3-12. Lubrication mechanism


3-12-1. Machine head

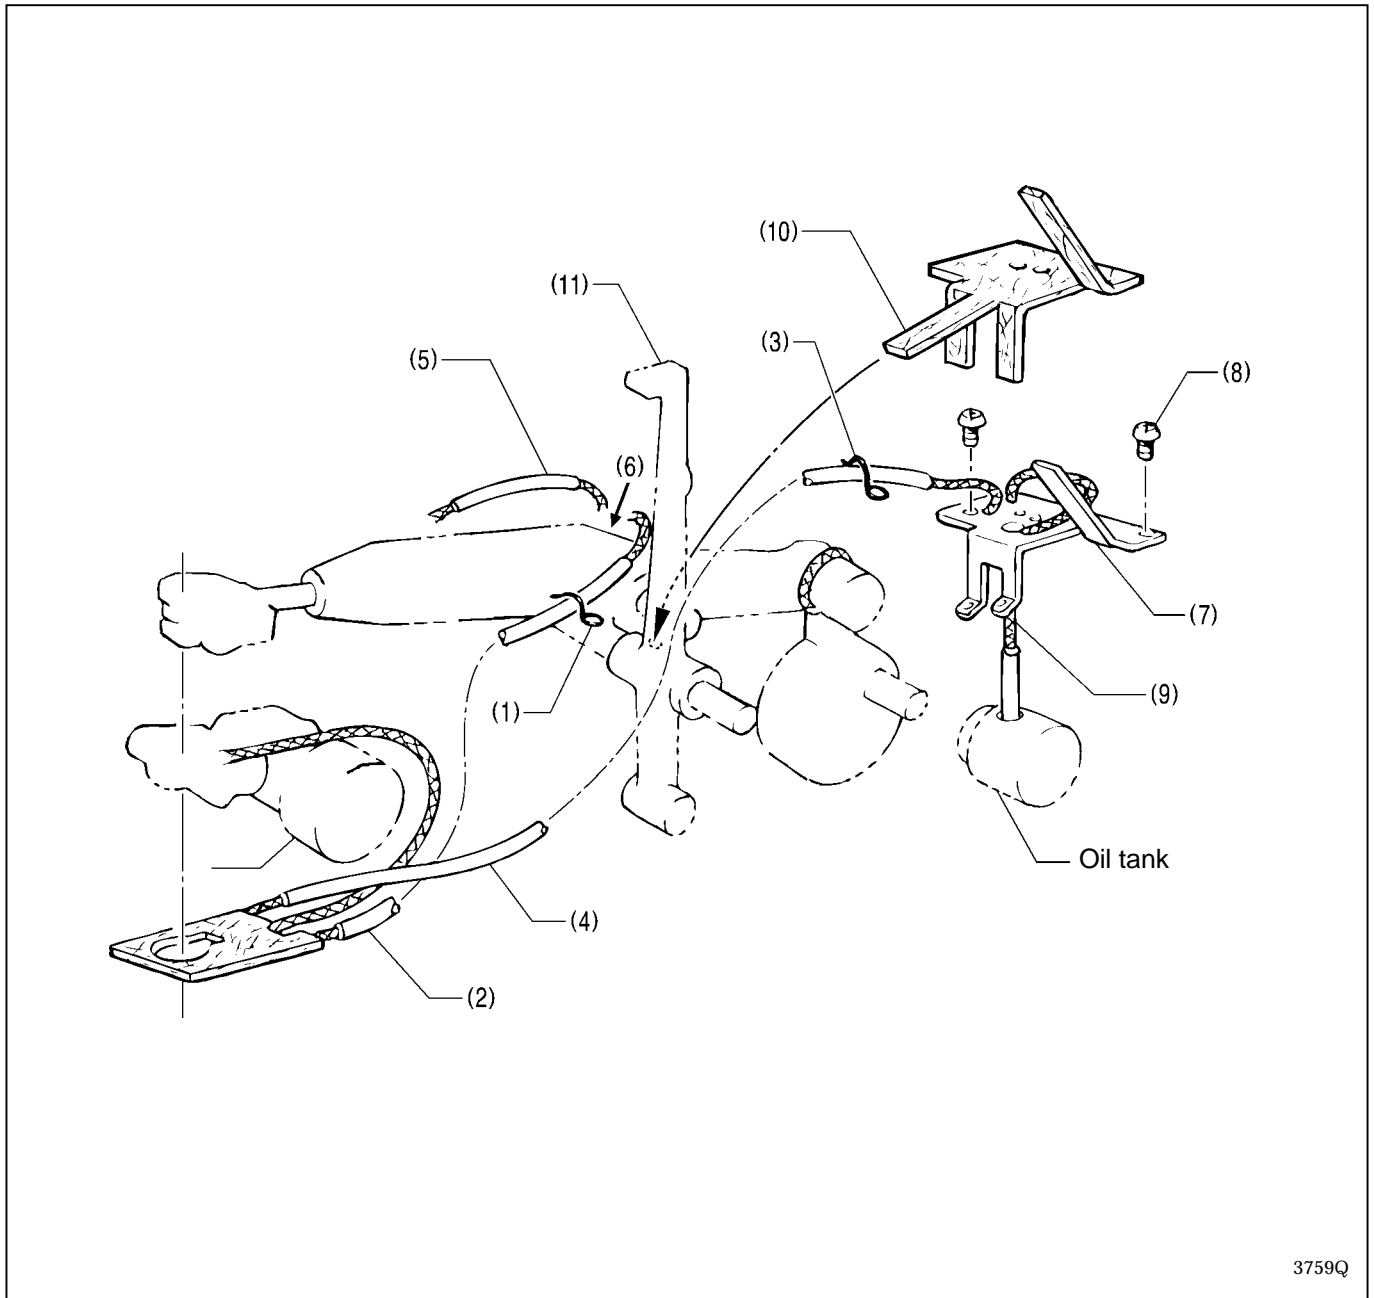

1. Hold the wick (2) using the cord holder (1).
2. Hold the wick (3) using the cord holder (4).
3. Insert the wicks (2) and (5) into the hole (6).
4. Attach wick support L (7) using the two screws (8).
 - * At this time, the emergency stop switch cord should be routed above wick support L (7).
5. Using a pair of tweezers, insert the wick (9) into the hole in the oil tank. At this time, insert the oil tube into the hole, as shown in the figure.
6. Pass the wick (4) under the felt (10).
7. Push the felt (10) into the lubrication hole in the thread take-up lever (11).

3. ASSEMBLY

3-12-2. Driving gear shaft

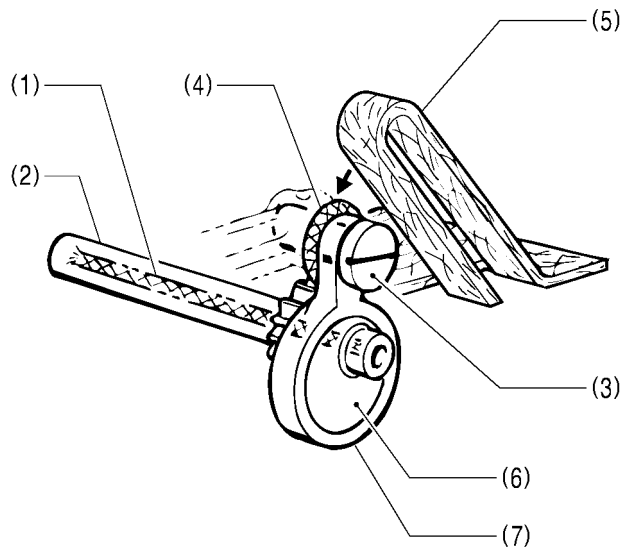

3760Q


1. Oil is supplied to the driving gear shaft (2) through the wick (1).
2. The wick (4), which is wound around the boss of the pin (3), makes contact with the felt (5), and oil is supplied to the pin (3), the eccentric wheel (6) and the driving rod (7).

3-13. Feed mechanism

3-13-1. X direction

Adjusting the backlash between the driving gear and the idle gear

Note: Be sure to remove the motor support. Adjustment should be carried out with the driving gear and the idle gear treated as a unit.

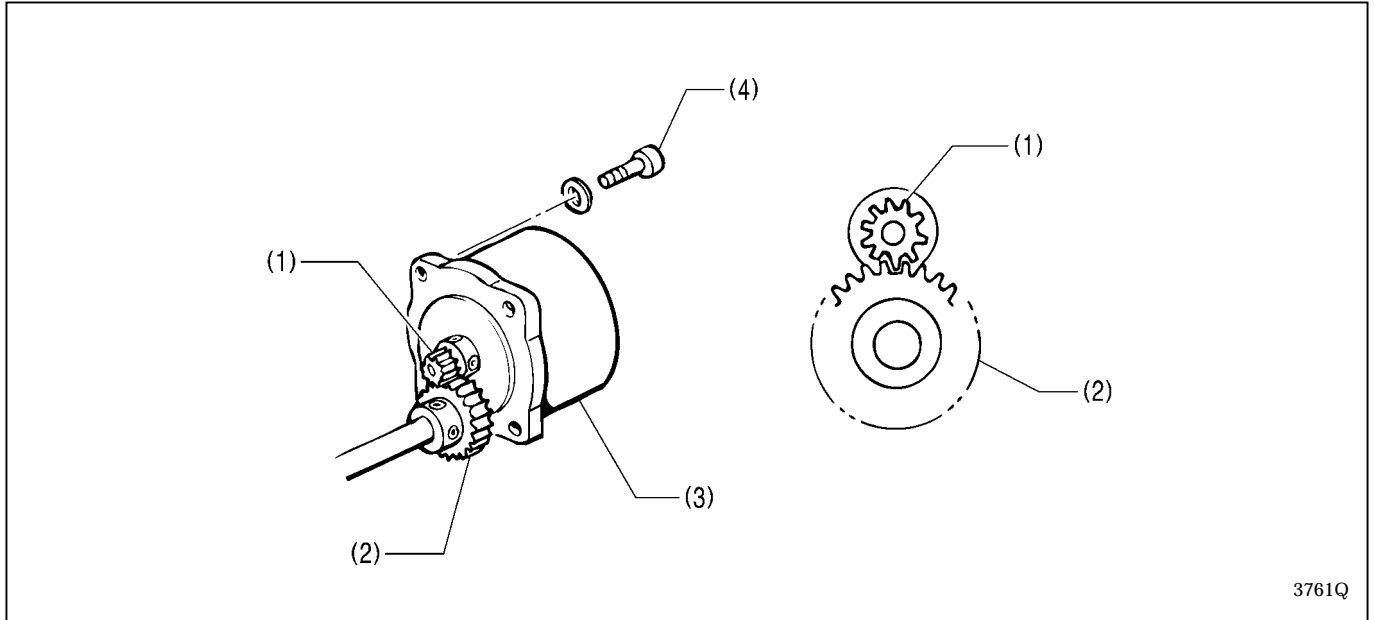


Adjust the backlash between the driving gear (1) and the idle gear (2) when they are engaged, using the weight of pulse motor X (3) (as shown in the figure above).

Tighten the four bolts (4).

Adjusting the idle gear

Adjust the positions of the X racks and the idle gear

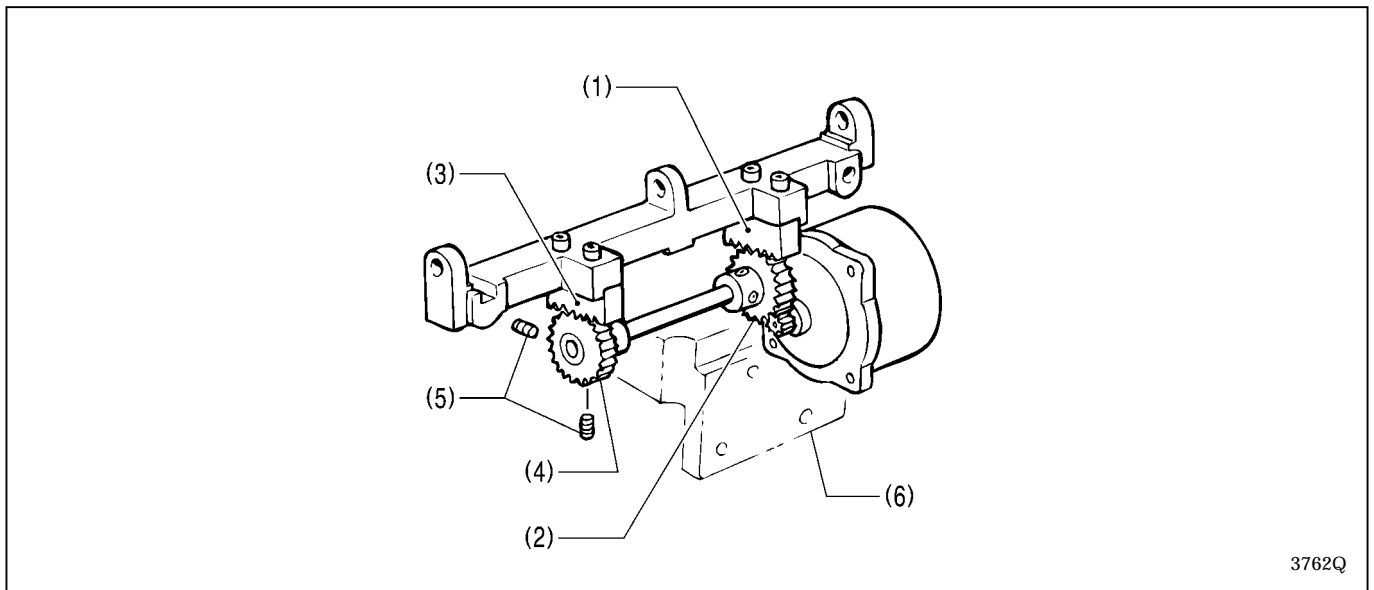


1. Loosen the two set screws (5) of the idle gear (2) to adjust the engagement between the X rack (3) and the idle gear (4) based on the engagement between the X rack (1) and the idle gear (2).
2. Engage the idle gears (2) and (4) with the X racks (1) and (3), respectively, and attach the motor support (6) while pressing it.
3. Tighten the two set screws (5) so that there is no end play of the idle gear (4).

3. ASSEMBLY

3-13-2. Y direction


Adjusting the tension of the Y-timing belt

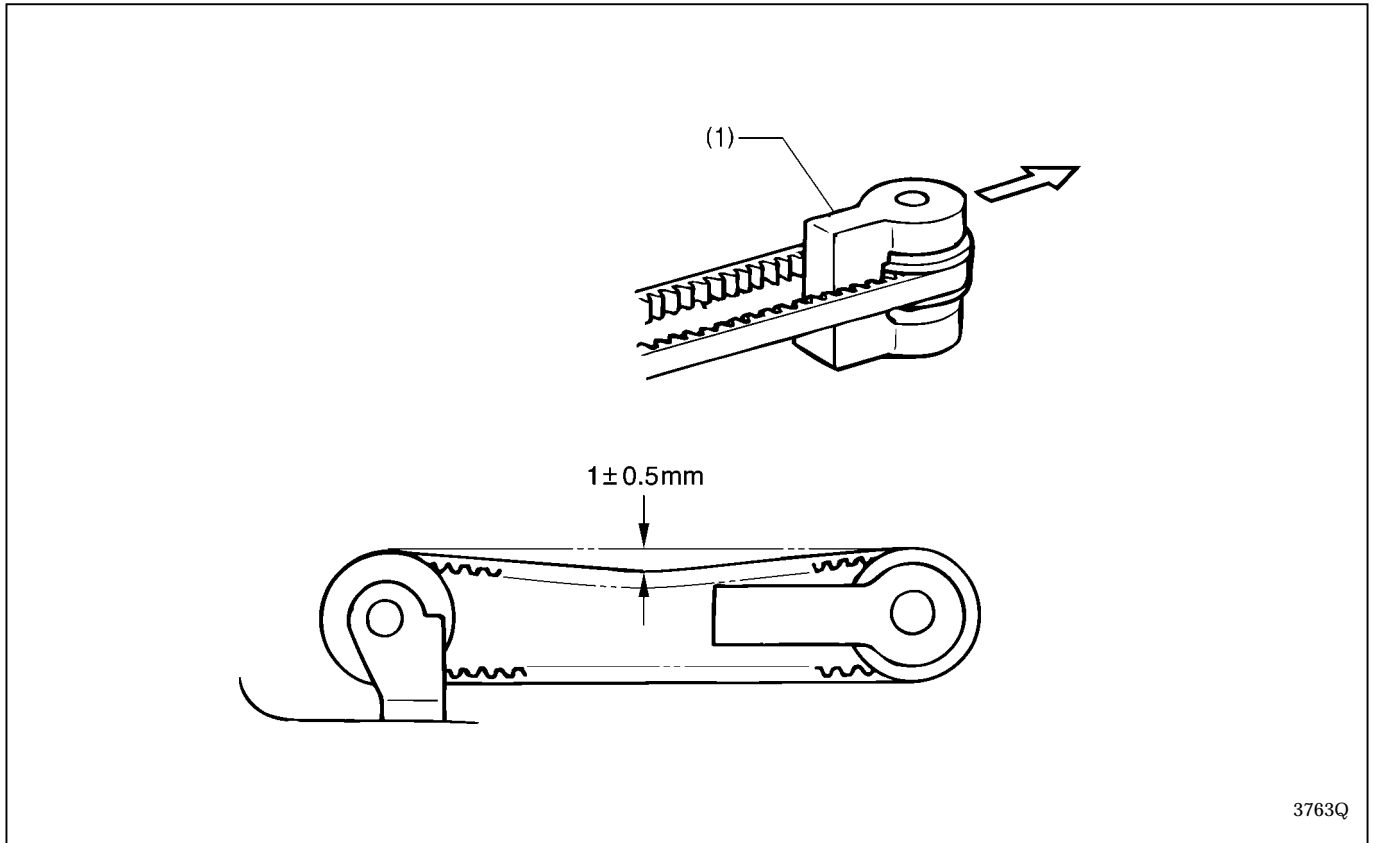

Secure Y-pulley support L (1) while pulling it with a force of 117.6 N.


When the belt deflection is used instead to determine Y-pulley support L (1) position, the deflection will be 1 ± 0.5 mm when the belt is pressed at the center with a force of 4.9 N.

* The belt tension can be adjusted when the Y-feed base is still attached to the bed.

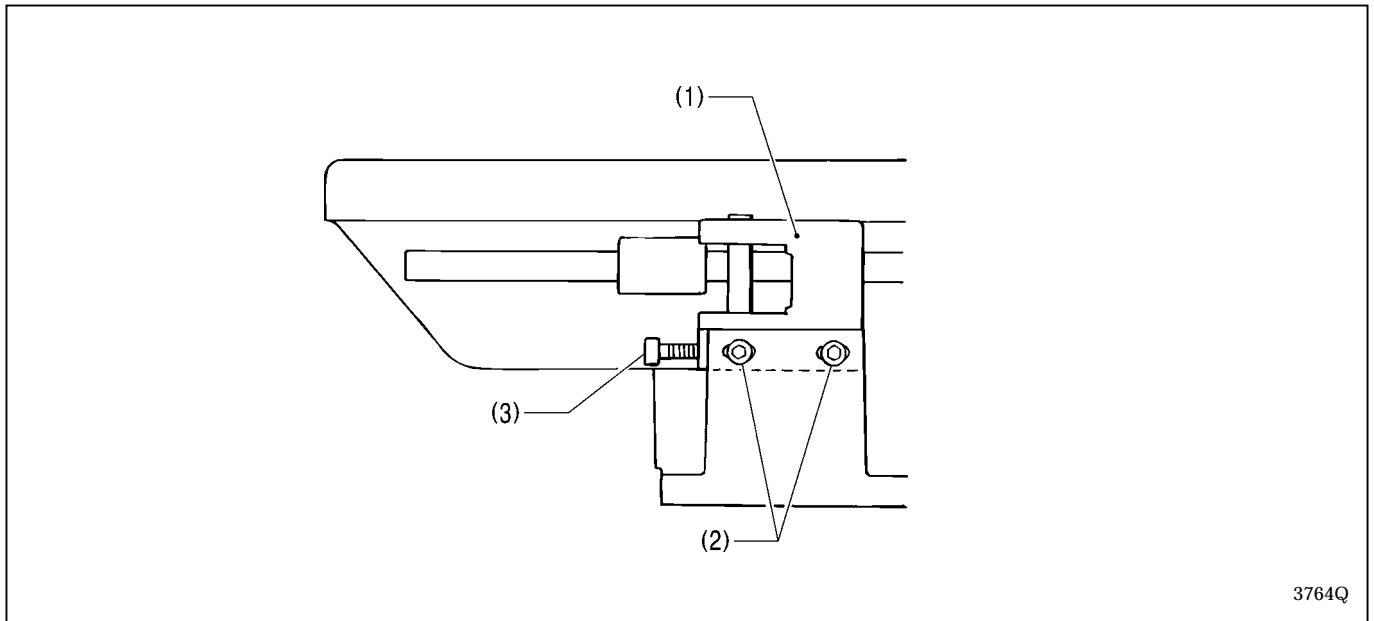

Loosen the two bolts (2) of Y-support L (1), and use the bolt (3) to adjust the belt tension. The tension in this case should be the same value as that above.

Adjusting the position of the Y-driving shaft holder

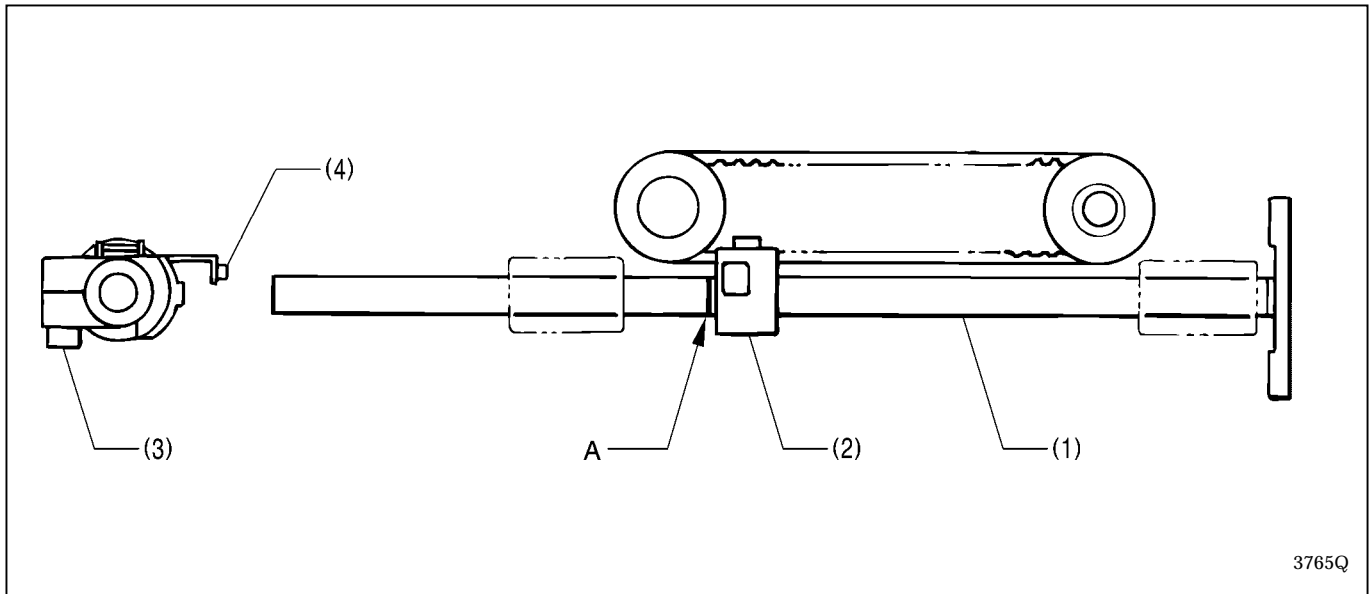


Align the left end of the Y-driving shaft holder (2) with the reference line A of the Y-shaft (1).

* When tightening the bolt (3), the sensor partition plate assembly (4) should face the top.

Adjusting the backlash between the driving gear and the idle gear

Remove the Y-feed base (1). Adjustment should be carried out with the driving gear and the idle gear treated as a unit.

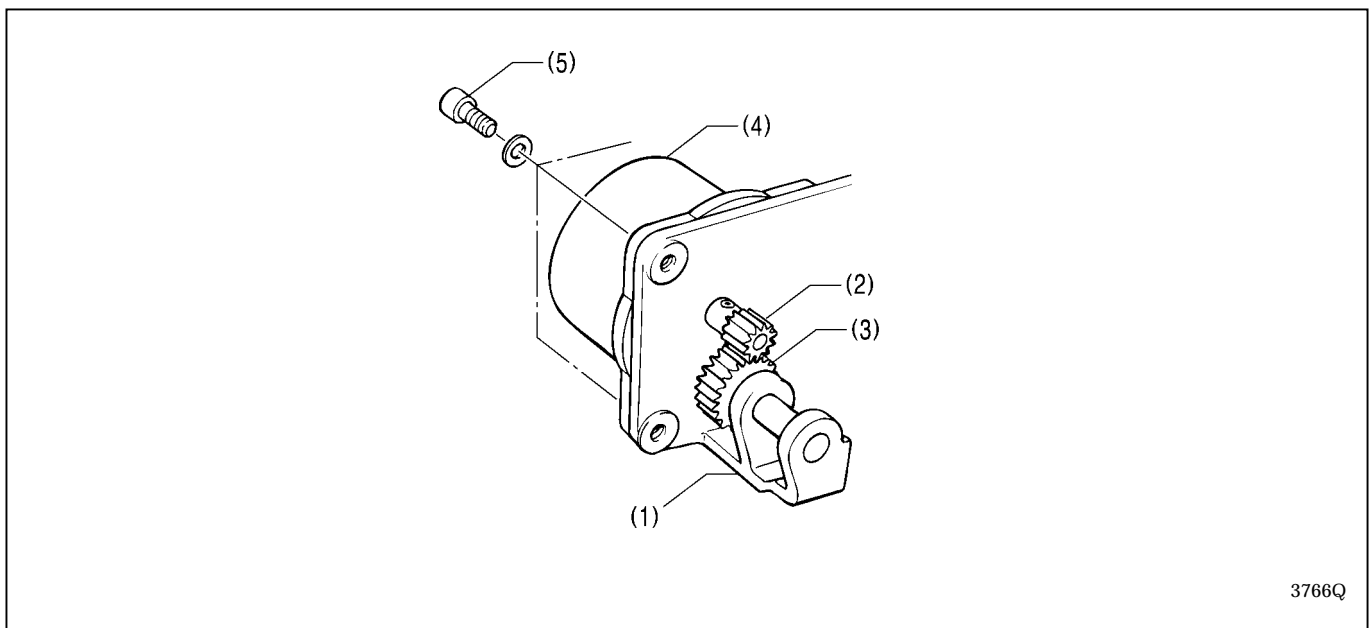


Adjust the backlash between the driving gear (2) and the idle gear (3) when they are engaged under the weight of pulse motor Y (4) (as shown in the figure above).

Tighten the four bolts (5).

3. ASSEMBLY


3-13-3. Attaching the X-feed guide shaft

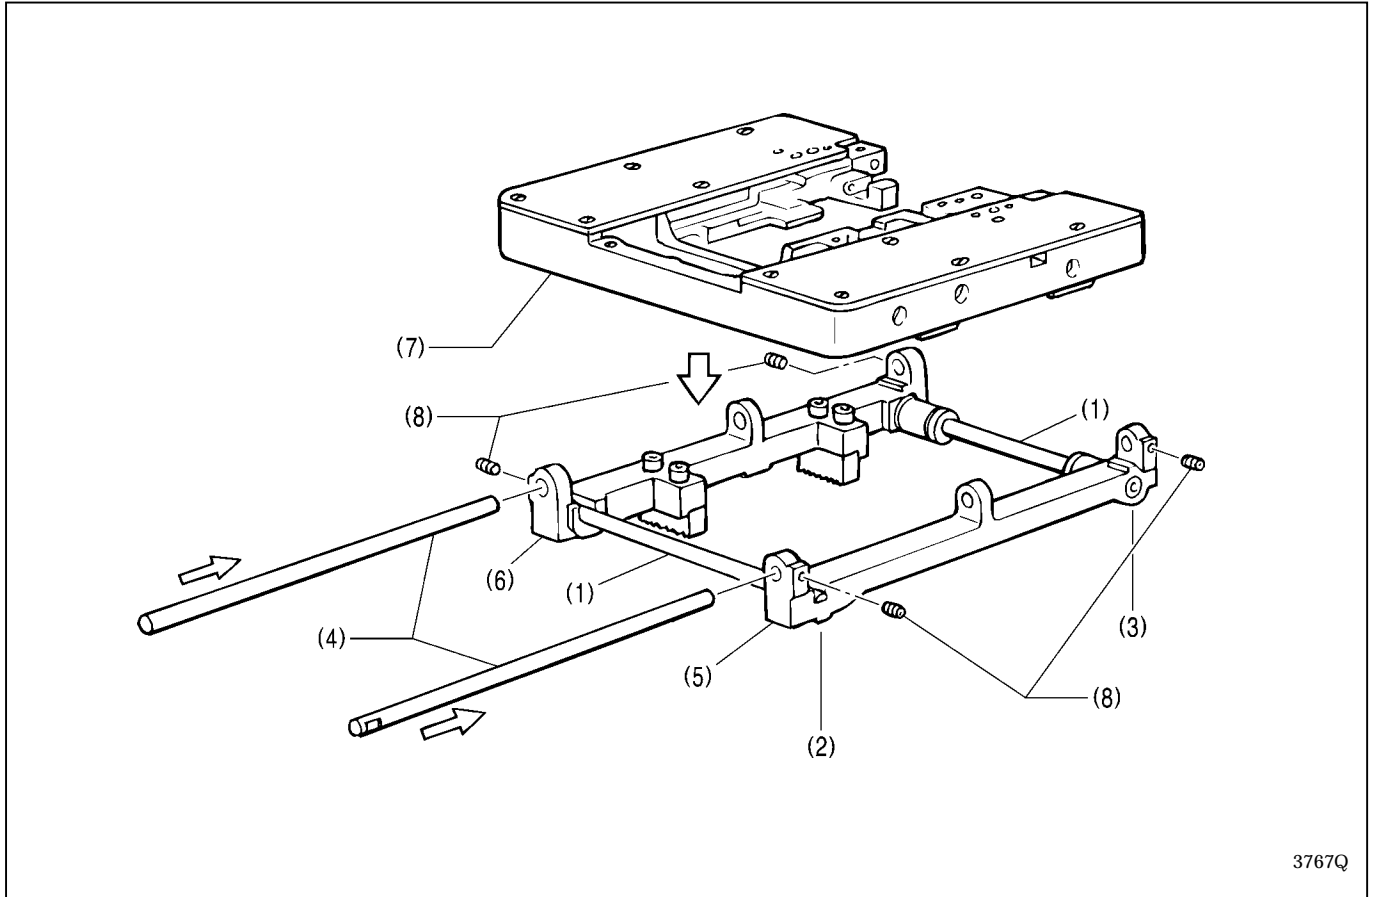

3767Q

1. Loosen the four bolts (2) and the two set screws (3) of the X-feed guide shaft (1) so that the shaft is still temporarily held in place.
2. Insert the Y-feed guide shafts (4) into the X-feed shaft holder R (5) and the X-feed shaft holder L assembly (6) and the feed bracket (7), and tighten the four set screws (8).
3. Move the feed bracket (7) in the X direction a few times.
4. Tighten the four bolts (2) and the two set screws (3).


3-14. Synchronizer

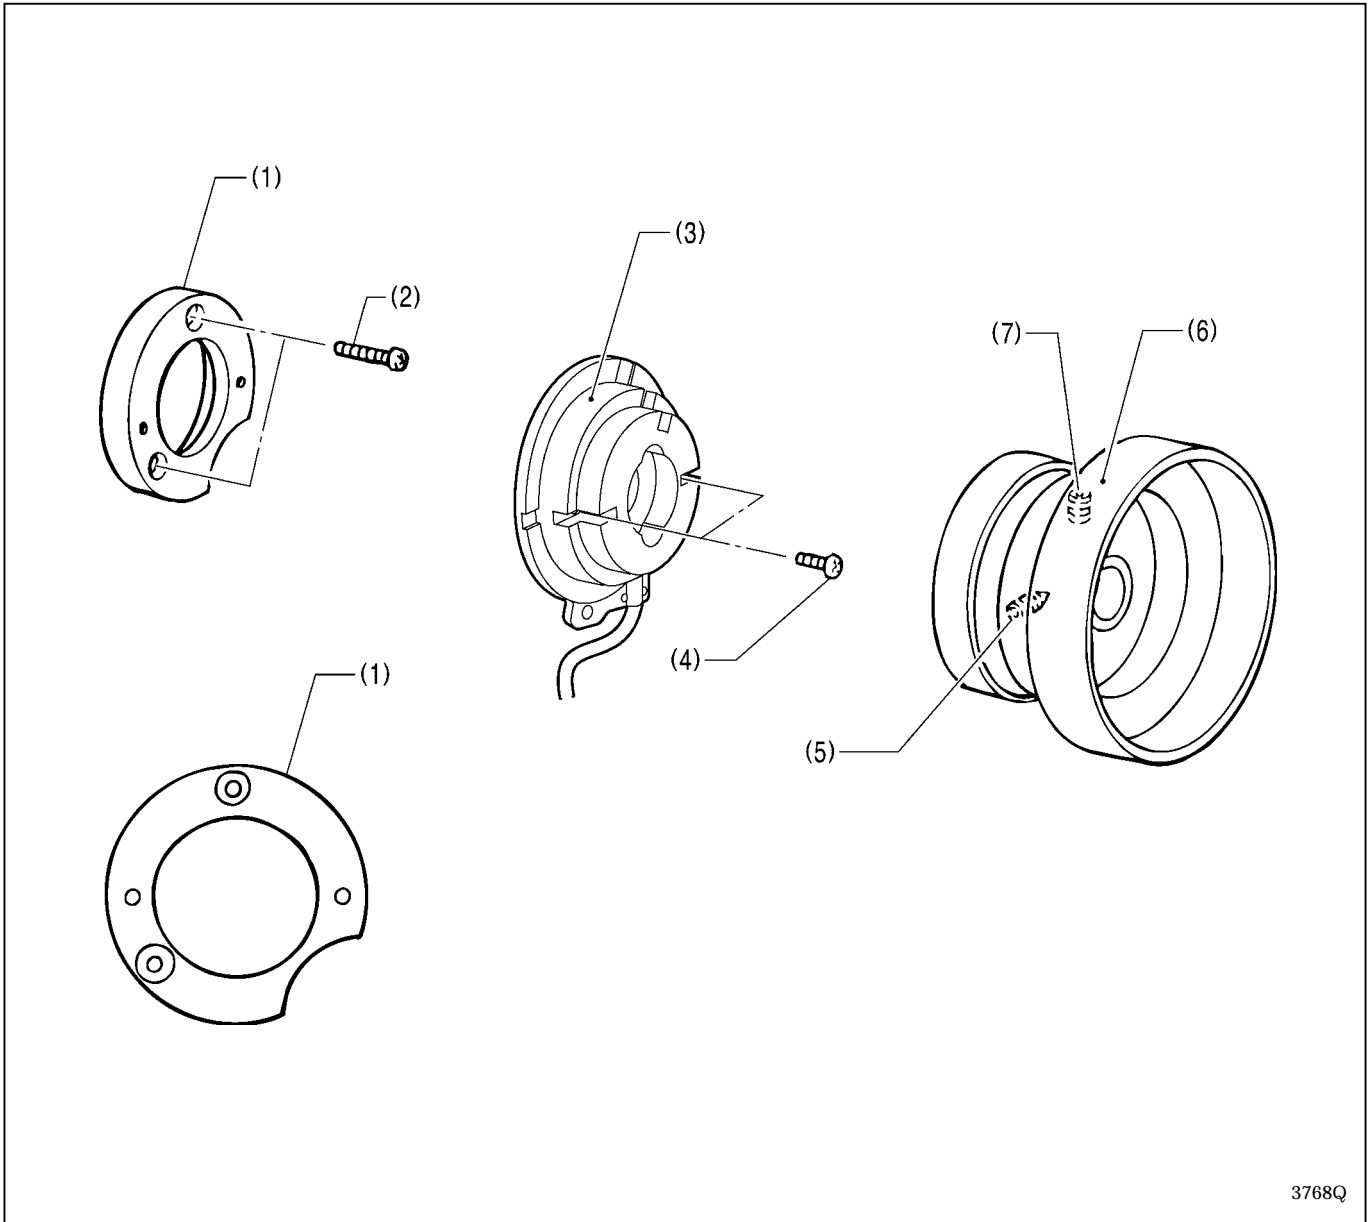

3768Q


1. Attach the NP support bracket B (1) with its notched portion facing the rear, using the two screws (2).
2. Secure the synchronizer assembly B (3) using the two screws (4).
3. Tighten the set screw (5) in the V-groove in the upper shaft, and attach the pulley assembly (6). Then tighten another set screw (7).
 - * The set screw (5) should be tightened in the front hole which comes first when the pulley is rotated in the rotation direction.
4. After attaching the synchronizer, check the machine torque.

3-15. Covers and work clamp mechanism

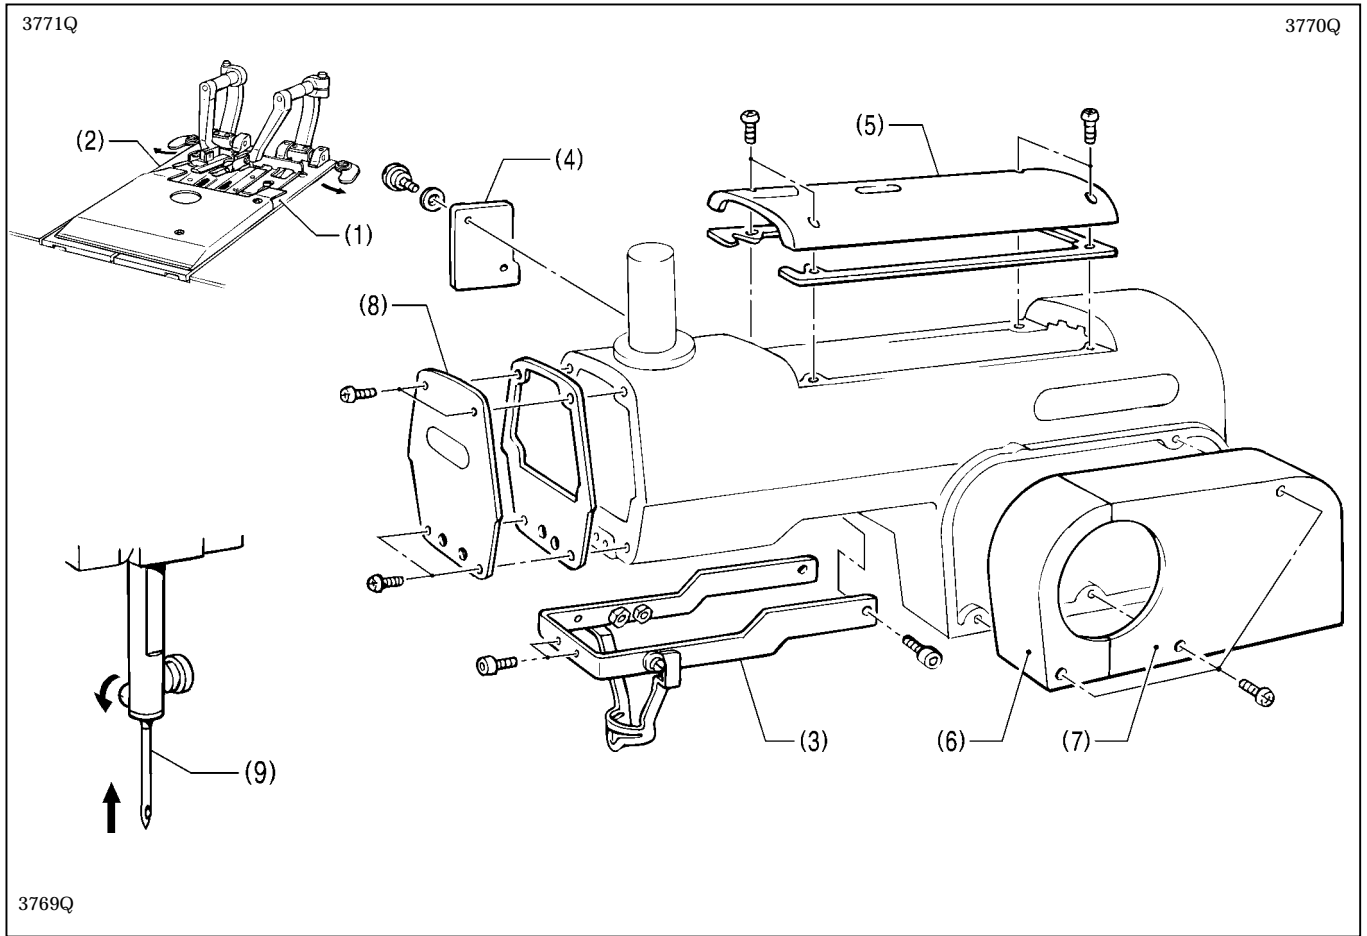

1. Attach the work clamp plates R (1) and L (2).
2. Attach the driving needle guard cover (3), the zigzag window cover (4), the top cover (5), the belt cover F (6), the belt cover R (7), and the face plate (8).
3. Attach the needle (9).

3-16. Safety switch

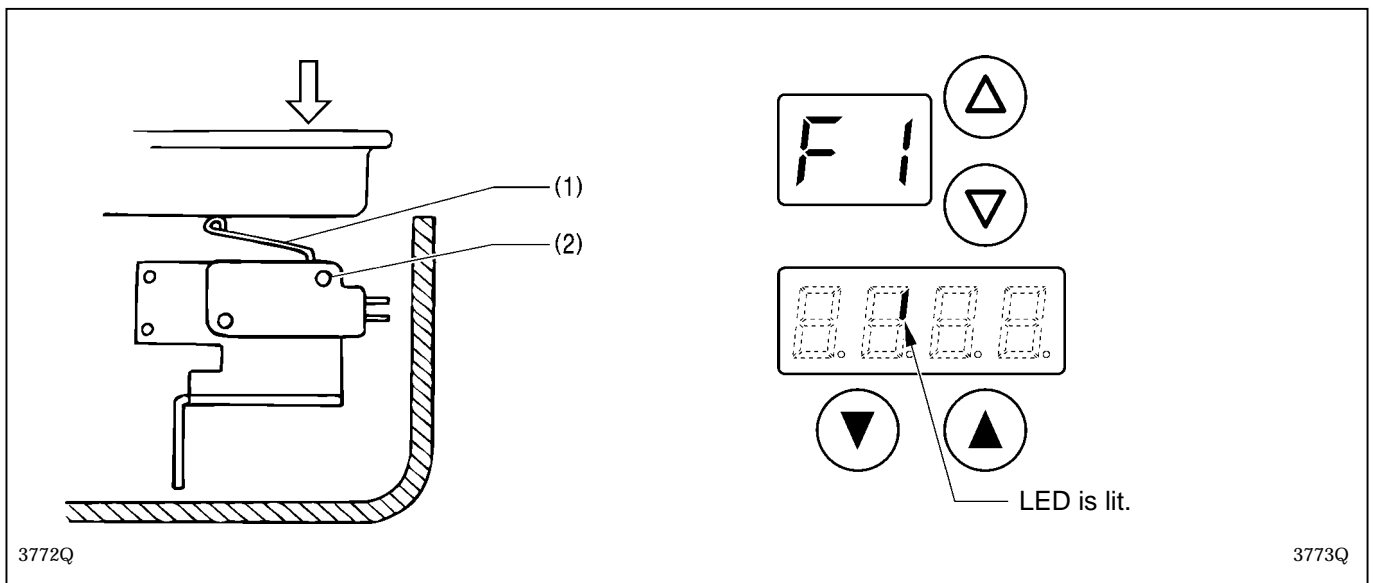

1. Switch to the input check mode.
2. Adjust the height of the safety switch (1) using the two screws (2) so that the LED does not go off even if the machine head is lowered and the bed is shaken up and down.

4. ADJUSTMENT

⚠ CAUTION



Maintenance and inspection of the sewing machine should only be carried out by a qualified technician.



Ask your Brother dealer or a qualified electrician to carry out any maintenance and inspection of the electrical system.



Turn off the power switch and disconnect the power cord from the wall outlet at the following times, otherwise the machine may operate if the start switch is pressed by mistake, which could result in injury.

- When carrying out inspection, adjustment and maintenance
- When replacing consumable parts such as the loopers and knife



Disconnect the air hoses from the air supply and wait for the needle on the pressure gauge to drop to "0" before carrying out inspection, adjustment and repair of any parts which use the pneumatic equipment.



If the power switch and air need to be left on when carrying out some adjustment, be extremely careful to observe all safety precautions.



Use only the proper replacement parts as specified by Brother.



If any safety devices have been removed, be absolutely sure to re-install them to their original positions and check that they operate correctly before using the machine.




Any problems in machine operation which result from unauthorized modifications to the machine will not be covered by the warranty.

4-1. Adjusting the work clamp lift height

The work clamp lift height is adjusted to 16 mm.

(The lift height includes the clearance between clamp lever B (1) and clamp lever L (R).)

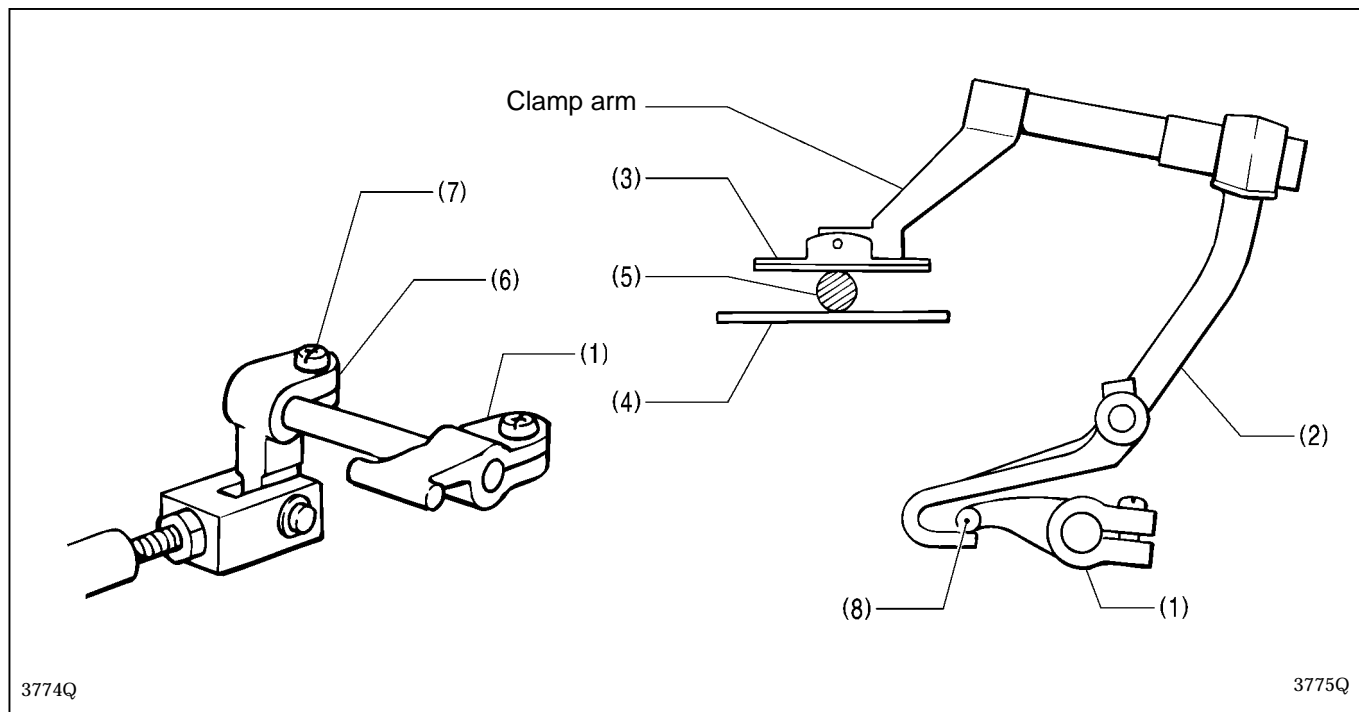

1. Insert the block or the thickness gage (5) between the work clamp L (R) (3) and the needle plate (4).
2. Loosen the screw (7) of the driving lever (6), and put the end (8) of clamp lever B (1) on the end of clamp lever L (R) (2). Then re-tighten the screw (7).


Note: Make sure that work clamp L (R) (3) securely holds the block or the thickness gage (5).
Make sure that work clamp cylinder is fully extended.

4. ADJUSTMENT

4-2. Adjusting the position of the work clamp plate

Before this adjustment, make sure that adjustment in “4-5. Adjusting the X-axis home position” has been completed. Adjust so that the throat plate (1) and the needle plate R (2) do not make contact during sewing.

The standard clearance between the throat plate (1) and the needle plate R (2) is 1.3 mm (when the cutting space is set to 0).

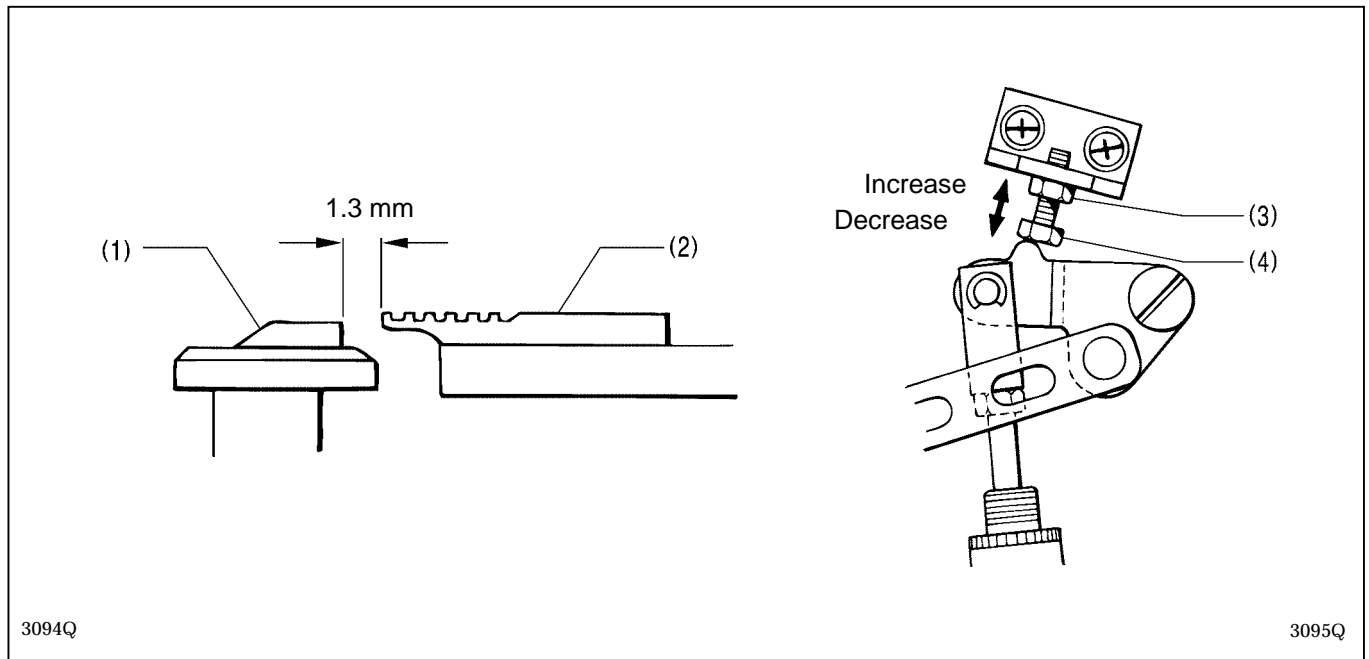


1. Use the parameter settings to set the cutting space to "0".
2. Select the test feed mode, and press the start switch.
3. Keep pressing the start switch, and make sure that the clearance between the throat plate (1) and the needle plate R (2) is 1.3 mm.
4. If the clearance is not 1.3 mm, loosen the nut (3), and turn the bolt (4) to adjust the clearance.

Note: Adjust the clearance between the throat plate (1) and the needle plate L in the same manner.

- * If the maximum stitch width correction amount is set to 2.0 mm, adjust the distance between the throat plate and the needle plate to more than 2.0 mm.

4-3. Adjusting the cloth opening amount

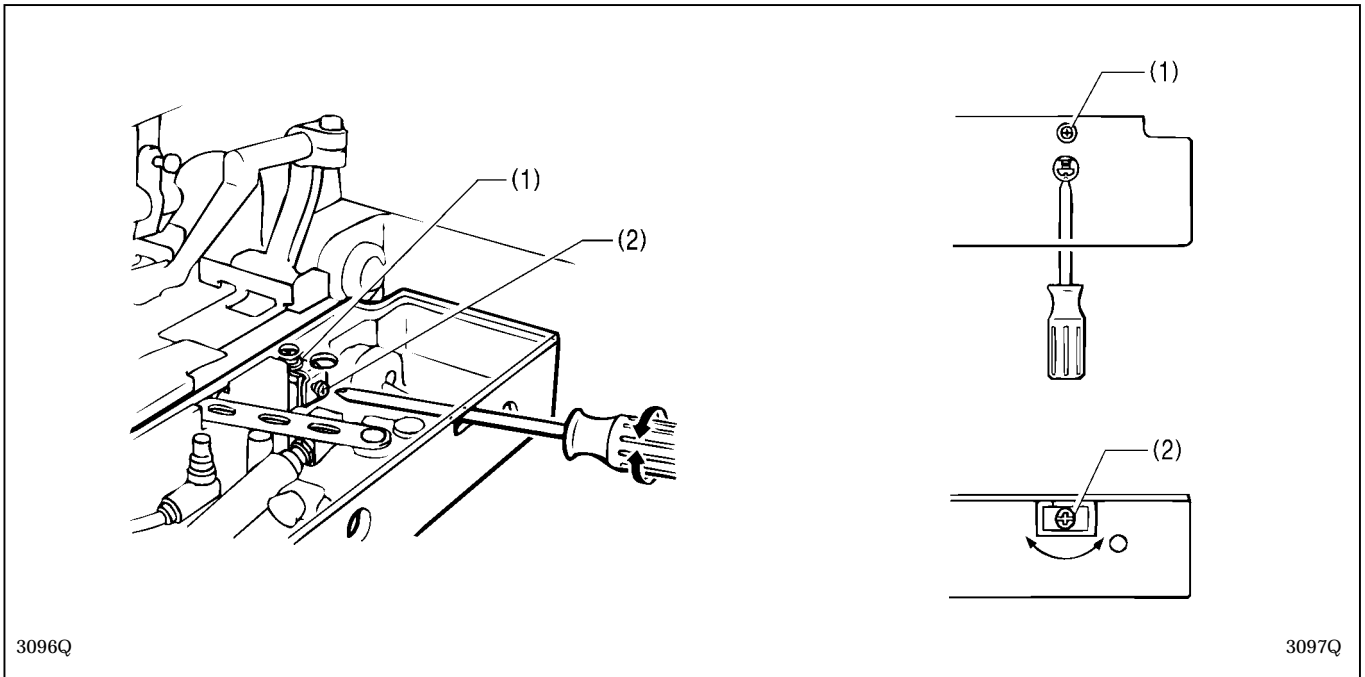


1. Loosen the screw (1), and then insert a screwdriver into the notch in the side of the feed bracket and turn the adjusting screw (2) to adjust the opening amount.
2. After tightening the screw (1), measure the opening amount.

Note: Adjust so that the opening amounts for the left and right work clamp plates are equal.

* It is usually sufficient for one work clamp plate to open by 0.8 mm.

Measuring the opening amount

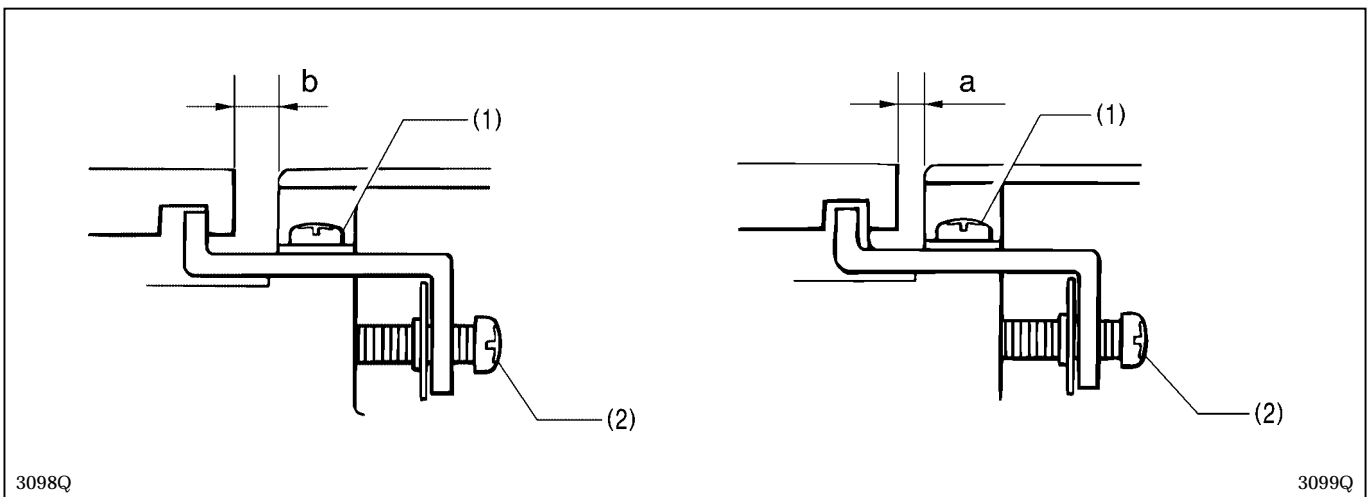


1. Switch the mode to test feed mode.
2. Lower the work clamp and then use calipers to measure the distance a.
3. Press the start switch. The feed bracket will move and then the left and right work clamp plates will open.
4. Use calipers to measure the distance b.
5. The difference between a and b is the opening amount. (Opening amount = a - b)

4. ADJUSTMENT

4-4. Adjusting the position of the work clamp

The back and forth and sideways movement of the work clamp can be respectively adjusted.
The work clamp should be centrally positioned as to the needle movement.

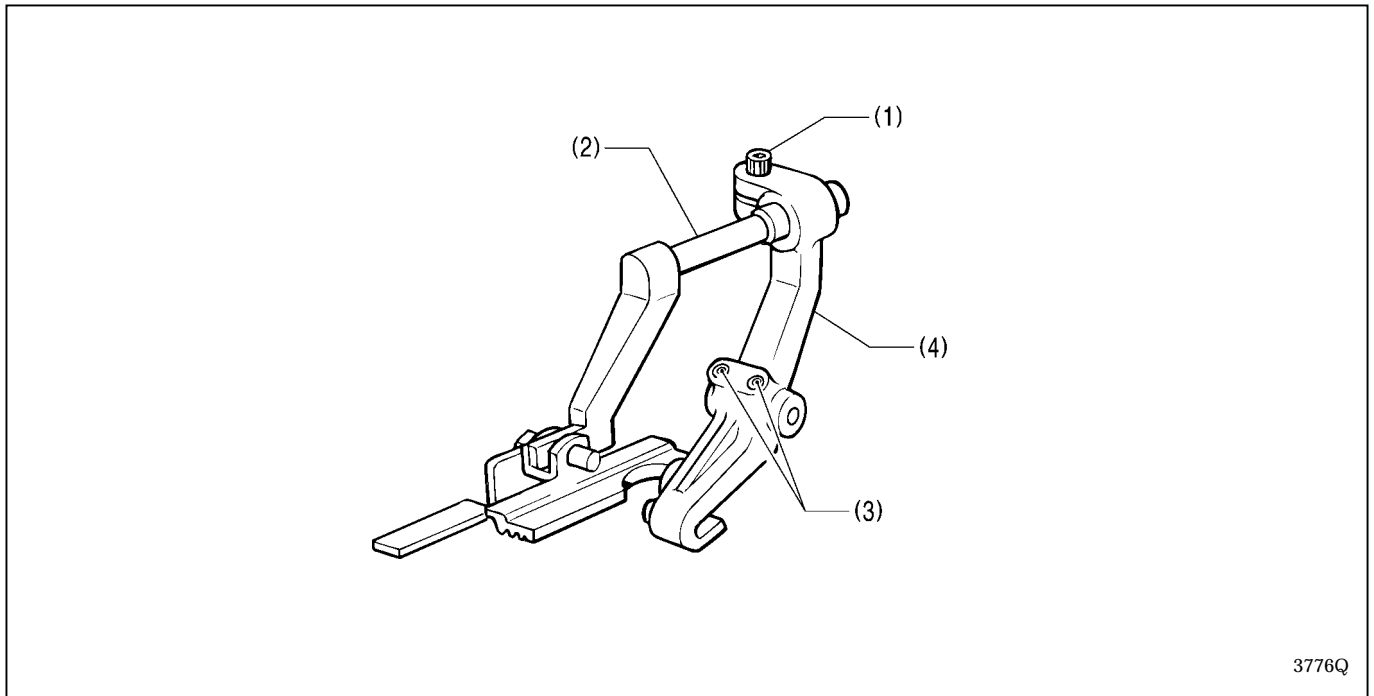

[Back and forth movement]


Loosen the bolt (1), and adjust the position of the clamp arm (2).

[Sideways movement]

Loosen the two screws (3), and adjust the position of the clamp lever (4).

4-5. Adjusting the X-axis home position


Dimension a (when the looper base is at 0°) and dimension b (when the looper base is at 180°) from the stepped portion of the throat plate to both edges of the feed bracket must be equal.

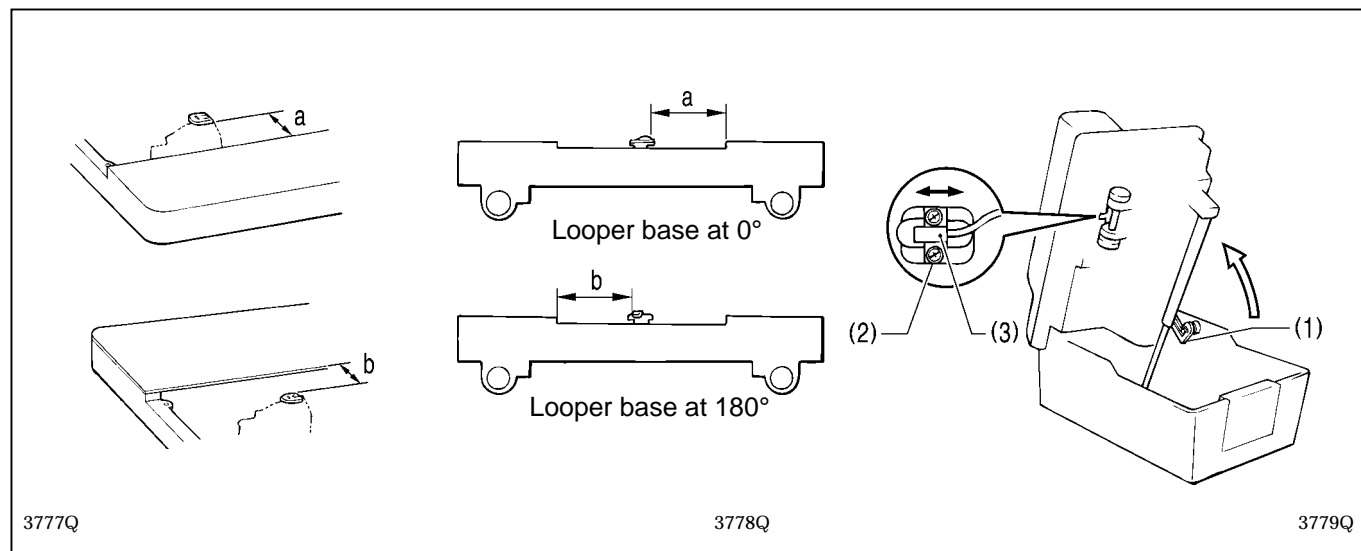

1. Set the tacking length to 0 by the parameter settings, and switch to the test feed mode.
 2. Remove the work clamp plate, and press the start switch.
 3. Move the feed bracket, and measure dimensions a and b.
 4. If dimensions a and b are not equal, turn off the power.
 5. Raise the machine head, secure it using the head support lever (1), loosen the two screws (2), and adjust the position of the X-sensor setting plate (3) in the direction of the arrow.
 6. Return the machine head to its original position. Repeat the above steps from 1.
- * The X-axis home position can be adjusted in increments of 0.05 mm.

4-6. Adjusting the Y-axis home position

The clearance from the rear end surface of the feed bracket to the bed should be $2 \text{ mm} \pm 0.2 \text{ mm}$.

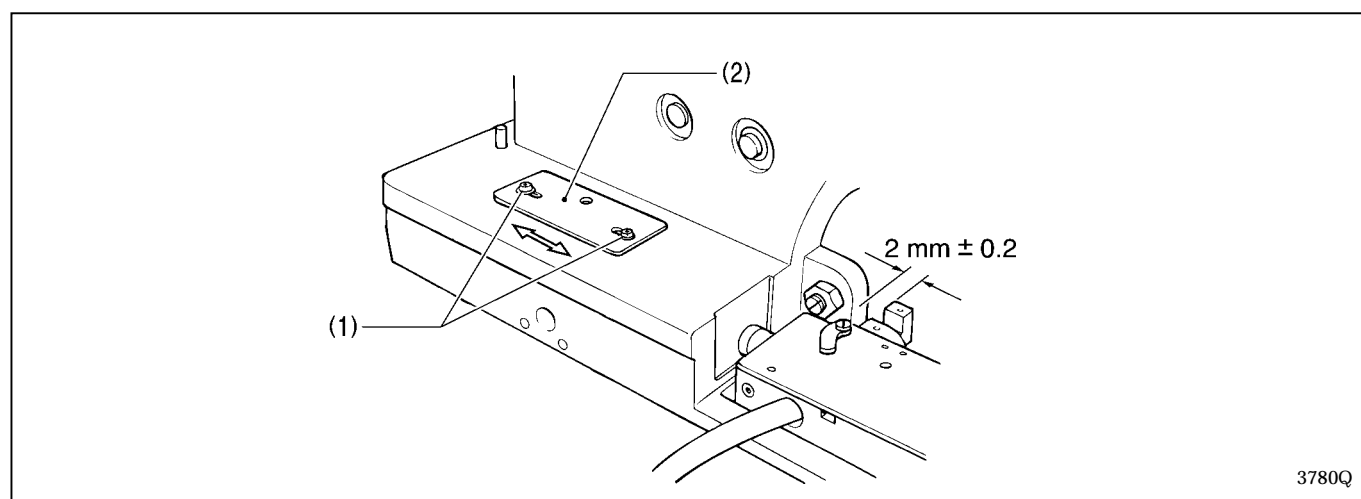

1. After detecting the home position, measure the clearance from the rear end surface of the feed bracket to the bed.
 2. If it is not $2 \text{ mm} \pm 0.2 \text{ mm}$, turn off the power.
 3. Loosen the two screws (1), and move the Y-sensor setting plate (2) in the direction of the arrow.
 4. Repeat the above steps from 1.
- * The Y-axis home position can be adjusted in increments of 0.05 mm.


Note: If the clearance is too great, the movable knife and the throat plate may hit each other.

4. ADJUSTMENT

4-7. Adjusting 0 position (reference line) of the needle

The 0 position (reference line) of the needle is at the inside needle penetration points.


If the needle gage is changed, the 0 position (reference line) of the needle is not changed, only the outer needle cloth penetrations are changed.

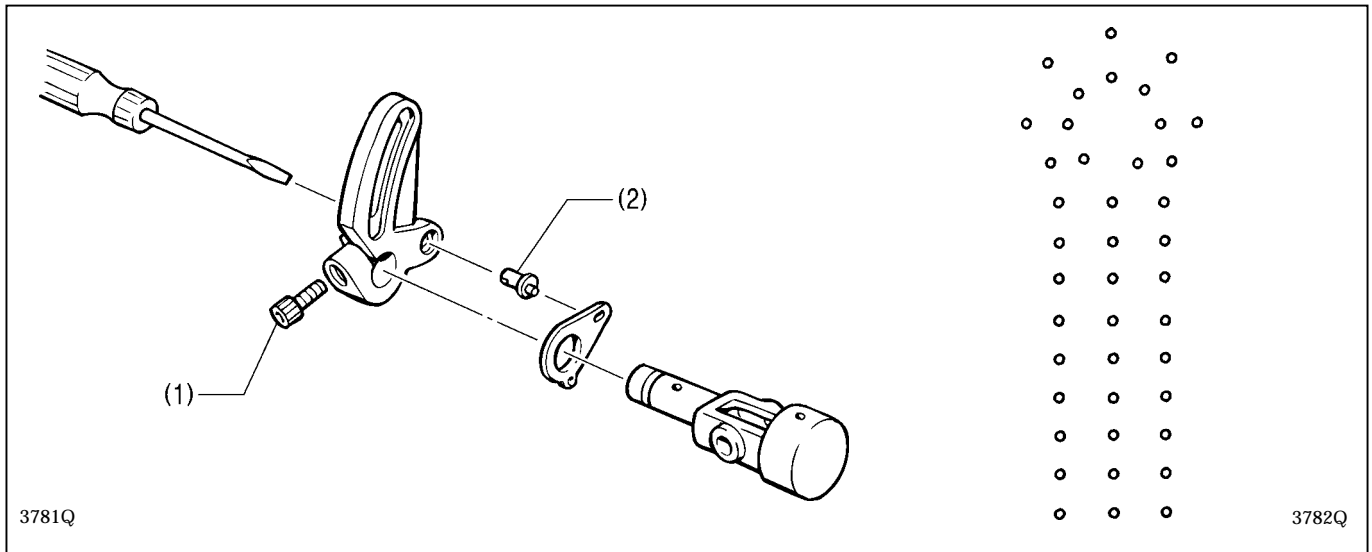

1. Insert a short needle (for adjustment).
2. Press the OFF key on the operation panel to set no cutting.
3. Place a sheet of paper under the work clamp, and turn the pulley to trace where the needle will penetrate for an eyelet button hole on the paper.
At this time, adjust the height of the short needle so that it can penetrate the paper with as small holes as possible.
4. When the inside needle forward cloth penetration points are not identical with that of the returning ones for the straight portion, remove the face plate, and loosen the bolt (1).
5. Insert a screwdriver into the arm from the left, and turn the zigzag eccentric pin (2) to adjust.

4-8. Adjusting the home position of the looper base

The match mark in the looper base must be aligned with that on the bed.

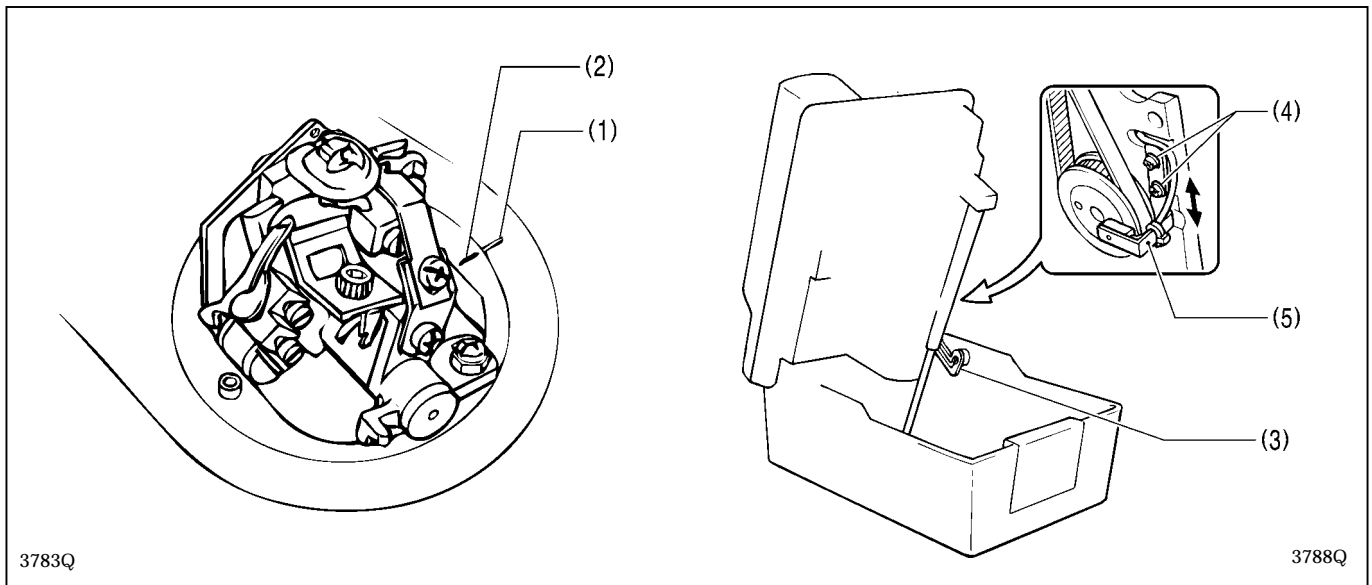

1. After detecting the home position, make sure that the match mark (1) in the looper base is aligned with the match mark (2) in the bed.
 2. If it is not, turn off the power.
 3. Raise the machine head, secure it using the head support lever (3), loosen the two screws (4), and move the R-sensor setting plate (5) in the direction of the arrow.
 4. Return the machine head to its original position. Repeat above steps from 1.
- * The home position of the looper base can be adjusted in increments of 0.45°


4-9. Fine adjustment of knife position

Before this adjustment, make sure that adjustment in “4-7. Adjusting 0 position (reference line) of the needle” has been completed.

The knife position should be adjusted so that it can correctly cut the eyelet button hole which is formed by the portion where the needle will penetrate at the inside position and round the eyelet.

The back and forth and sideways movement, and inclination of the knife position can be independently adjusted.


1. Use a short needle (for adjustment).
2. Set the air pressure of the regulator under the table to 0.2 – 0.3 MPa.
 - * This is to protect the hammer from being damaged by the knife after the knife position is adjusted.
3. Press the AFTER key on the operation panel to set cutting after sewing.
4. Place a sheet of paper under the work clamp, and turn the pulley to trace where the needle will penetrate for an eyelet button hole on the paper.
5. Make sure that the portion where the needle penetrates for the eyelet button hole uniformly overlaps the knife cutting positions.
 - * For easier checking, change the value for cutting space by the parameter settings.
6. If it is not, turn off the power, and adjust the position of the knife.

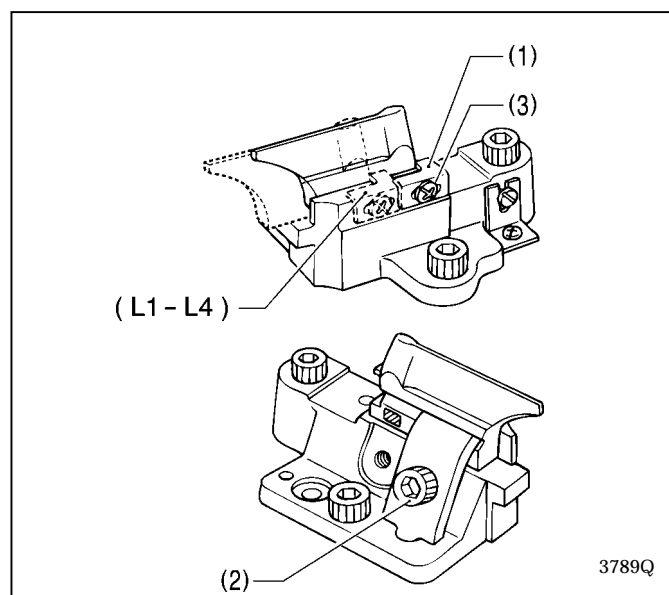

[Back and forth movement adjustment]

Loosen the bolt (2), and adjust the position of the knife by following the block stopper plate (1) as a guide.

After adjustment, loosen the screw (3), and press the block stopper plate (1) against the knife.

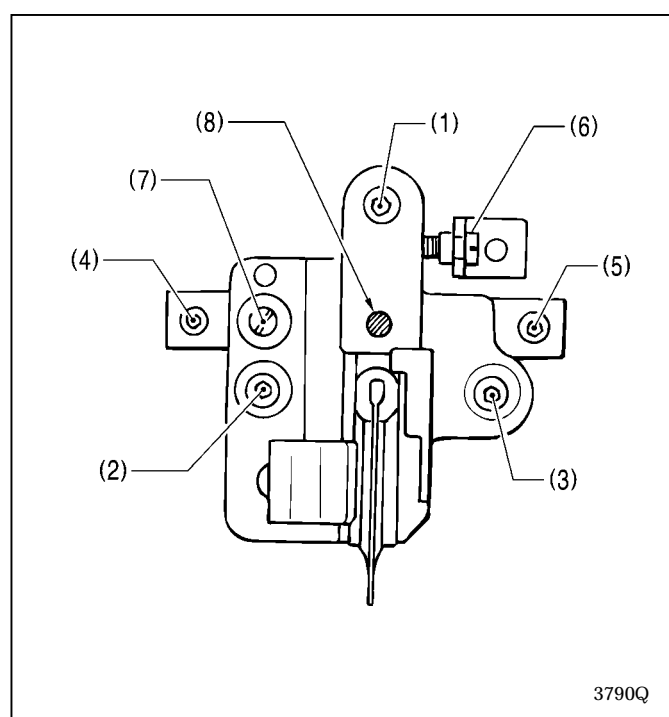

[Sideways movement adjustment]

1. Loosen the bolts (1), (2), and (3), of the knife bracket.
2. Loosen the bolts (4) and (5) of the knife bracket guide.
3. Turn the adjusting screw (6). Fine adjustment for sideways movement of the knife can be performed without removing the knife bracket and the knife bracket guide.


[Inclination adjustment]

1. Loosen the bolts (1), (2), and (3), of the knife bracket.
2. Loosen the bolt (7), which secures the knife bracket and the knife bracket guide.
3. Turn the adjusting screw (6). Inclination of the knife can be adjusted by rotating the knife bracket and the knife bracket guide, regarding the pivot (8) as the center.

4. ADJUSTMENT

4-10. Adjusting the sideways movement of the cutter lever

The cutter lever should be positioned so that the knife can make contact with the center of the hammer.

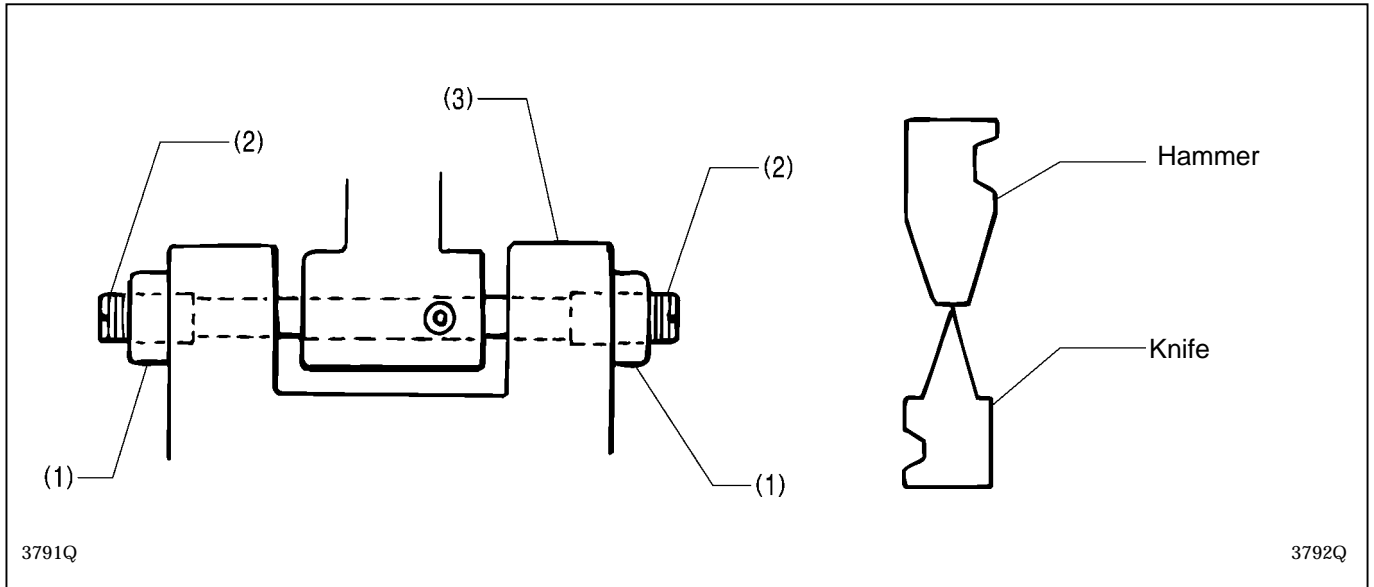


1. Loosen the two nuts (1).
2. Turn the two support screws (2) to adjust the sideways position of the cutter lever (3).
3. Tighten the two nuts (1).

Note: Adjust the two support screws (2) so that the cutter lever (3) has no end play, and it can operate easily. Too much end play may damage the knife.

4-11. Adjusting the height of the throat plate

To prevent material from being pressed down by the needle which penetrates the material, the top surface of the throat plate (1) should be flush with the top surface of the needle plate (2).

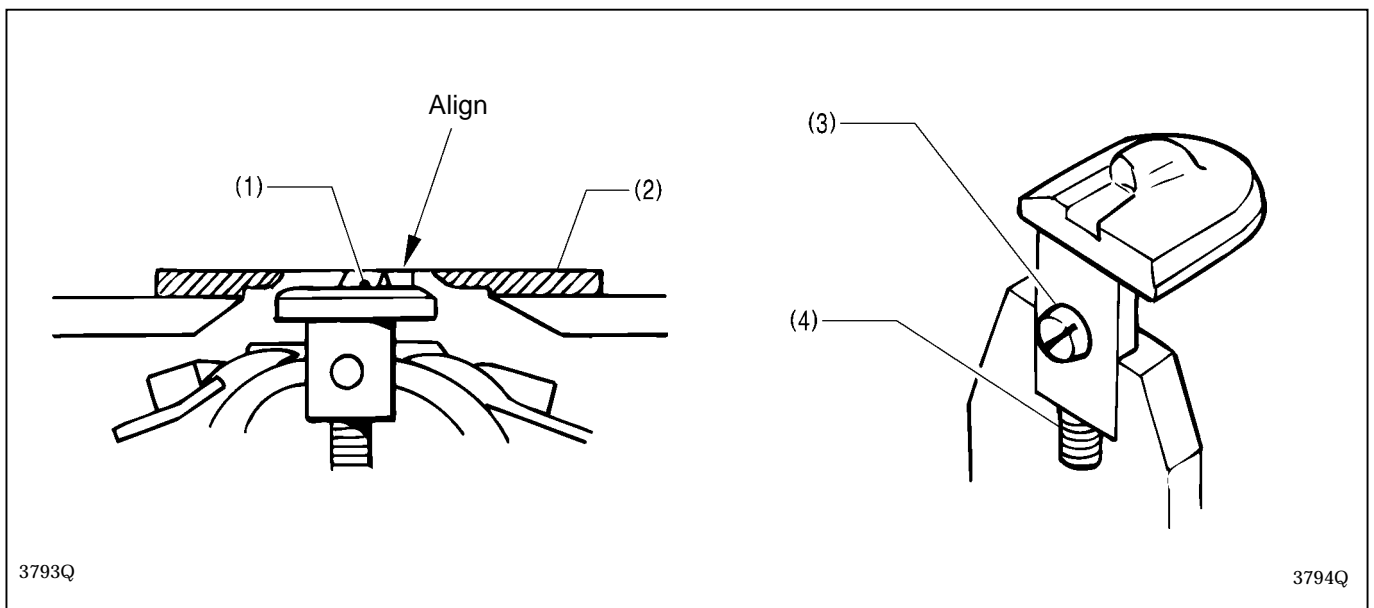


Loosen the screw (3), turn the set screw (4), and adjust the height of the throat plate (1).

Note: The set screw (4) is adjusted to maintain the height of the throat plate when it is removed and re-installed.

4-12. Adjusting the height of the spreader and looper


Spreader height

The clearance between the left spreader (forked spreader) and the eye looper must be set to match the thickness of the lower thread. The clearance between the right spreader and the right looper should be as small as possible while still letting the parts slide.

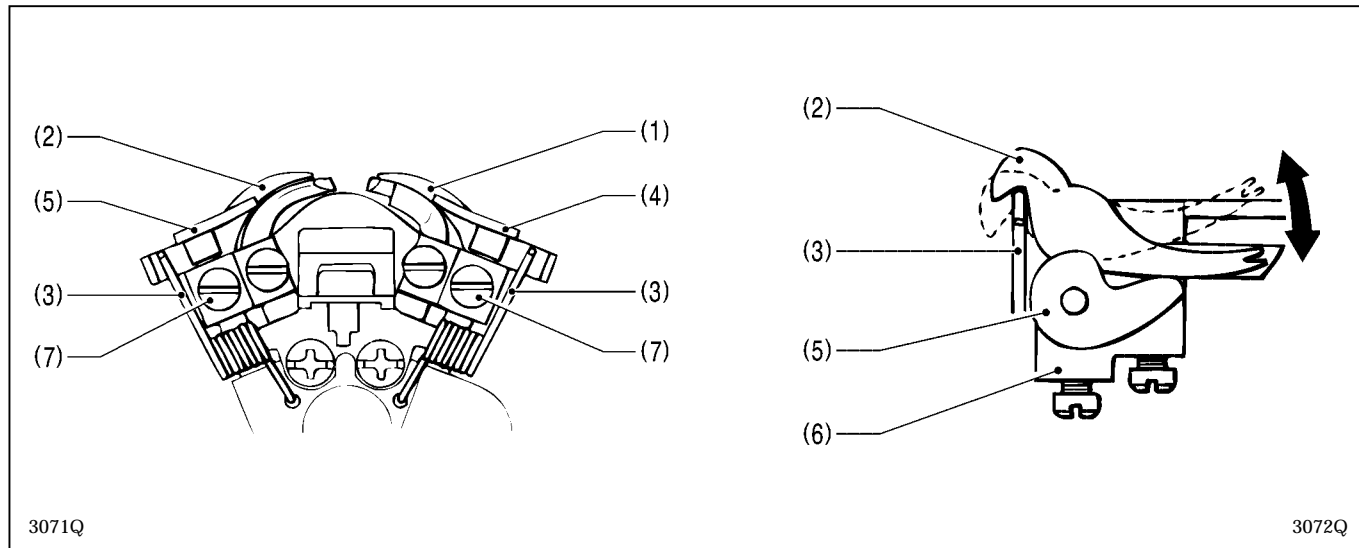

1. The right spreader (1) and left spreader (2) move by means of springs (3). Adjust so that the spreaders move smoothly between the right spreader stopper (4), the left spreader stopper (5) and the LS-holder bracket (6), with no looseness.
2. If adjustment is necessary, loosen the screw (7) and then move the right spreader stopper (4) or left spreader stopper (5) up or down.

Looper height

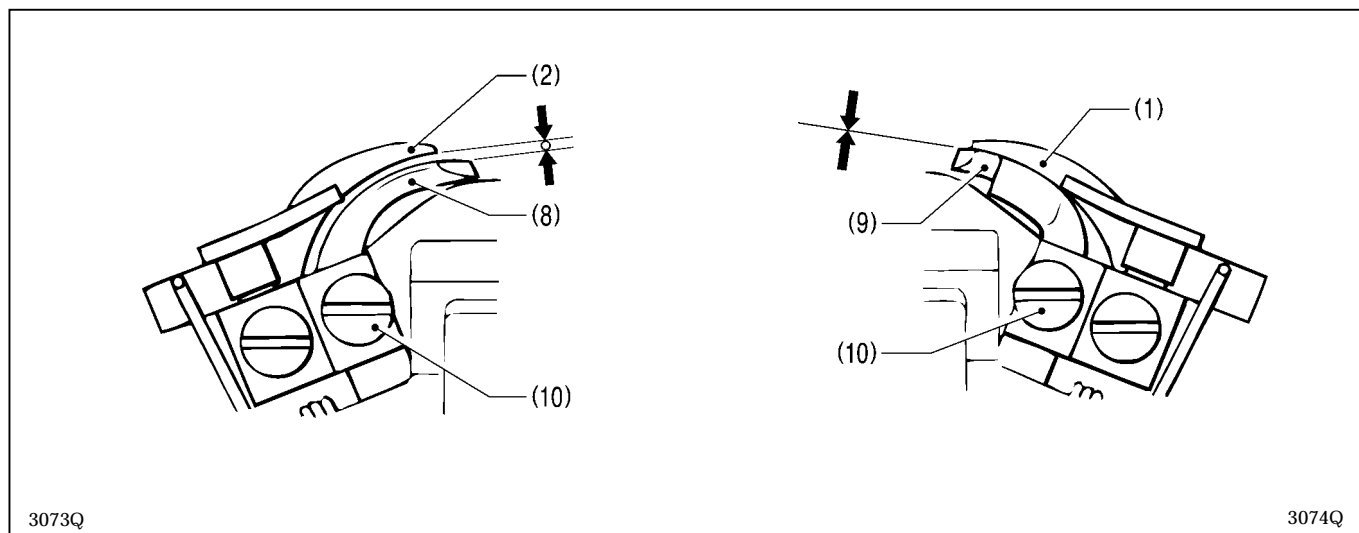


1. Set the clearance between the eye looper (8) and the left spreader (2) to the same distance as the thickness of the lower (looper) thread.
2. The clearance between the right looper (9) and the right spreader (1) should be as small as possible.
3. If adjustment is necessary, loosen the screw (10) and then move the eye looper (8) and right looper (9) up or down.

4. ADJUSTMENT


4-13. Adjusting the needle and looper timing

The distance by which the needle bar rises from its lowest position to the position where the tip of the eye looper and the center of the needle are aligned should be the same as the distance from its lowest position to the position where the tip of the right looper and the center of the needle are aligned.

Before adjusting the looper timing, first adjust the stitch width (needle racking width). (The standard width is 3 mm.)

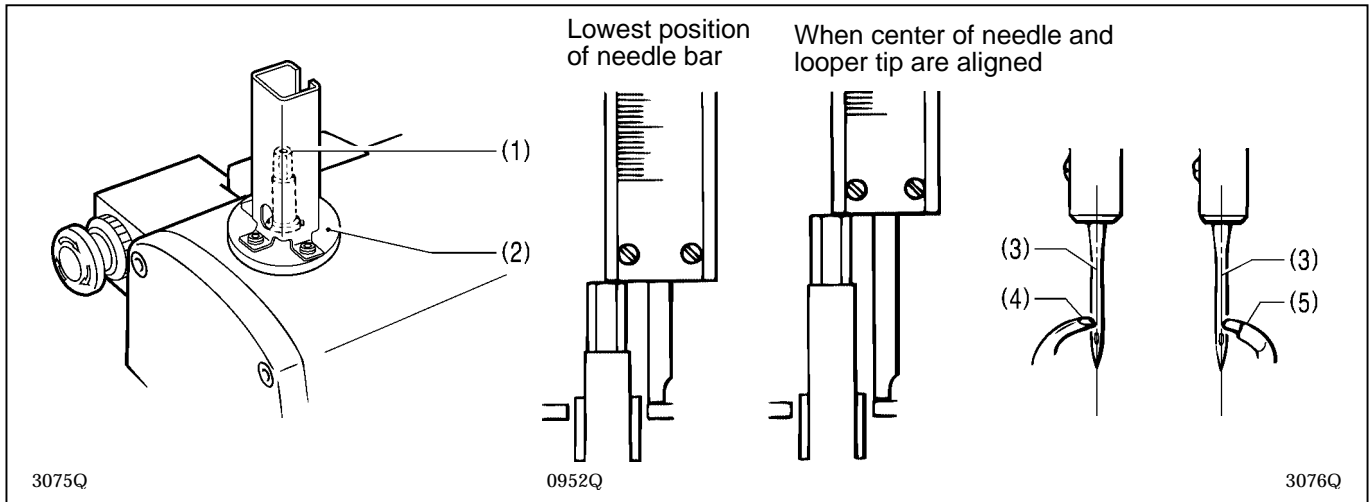

1. Move the needle bar to its lowest position.
 2. Use calipers to measure the distance between the end of the needle bar (1) and the top of the holder base (2) when the needle bar is at its lowest position.
 3. Turn the upper shaft pulley until the tip of the eye looper (4) and the center of the needle (3) are aligned when the needle (3) is at the inside sewing position, and then use the calipers to take the same measurement as taken in step 2. Find the difference between the measurements taken in this step and in step 2.
 4. Follow the same procedure as in step 3. above to find the difference between the two measurements when the needle (3) is at the outside sewing position.
- * When the needle (3) is at the inside sewing position, the tip of the eye looper (4) should be aligned with the center of the needle (3), and when the needle (3) is at the outside sewing position, the tip of the right looper (5) should be aligned with the center of the needle (3).
 - * The distance from the end of the needle bar (1) and the top of the holder base (2) should be the same when the needle (3) is at both the inside sewing position and the outside sewing position.

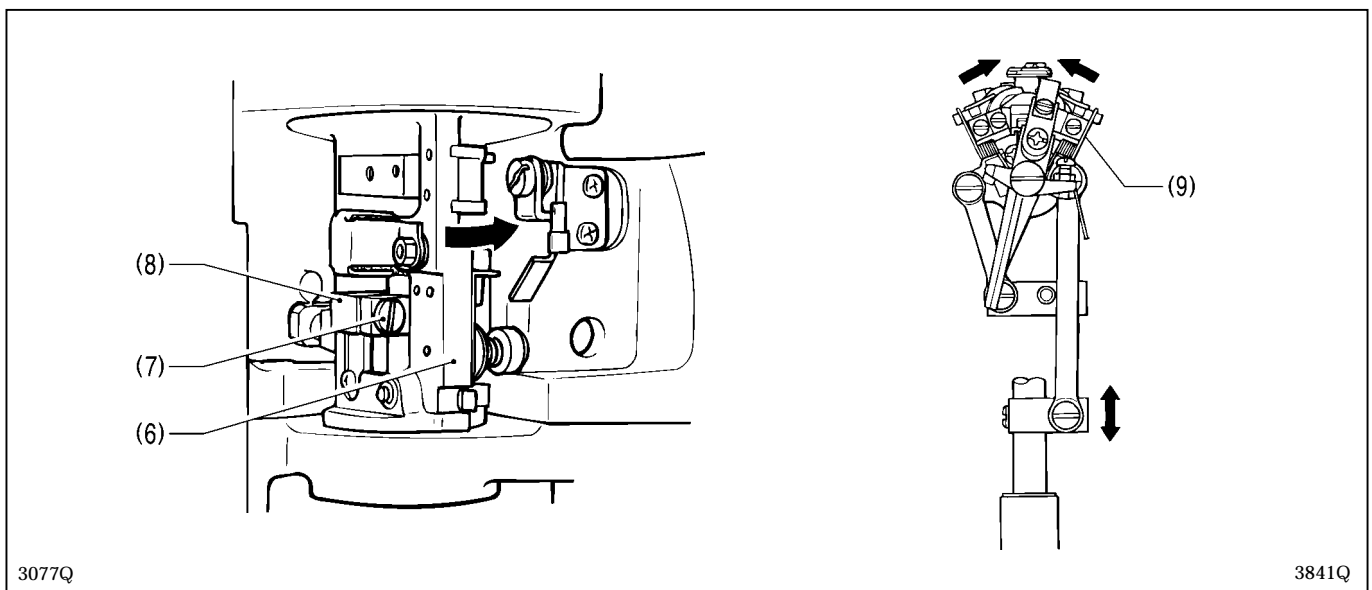


5. If adjustment is necessary, turn the looper base (6) in the direction indicated by the arrow in the illustration, loosen the screw (7), and then move the looper link clamp (8) up or down to tilt the LS-holder bracket (9) to the left or right (in the direction of the arrow).


4-14. Adjusting the loop stroke

The loop stroke is the distance the needle bar rises from its lowest position to the position where the tips of the eye looper and right looper are aligned with the center of the needle. The standard loop stroke is 2.7 mm. (The loop stroke may need changing depending on the material and thread being used.)

* Carry out the adjustment in "4-13. Adjusting the needle and looper timing" before making this adjustment.

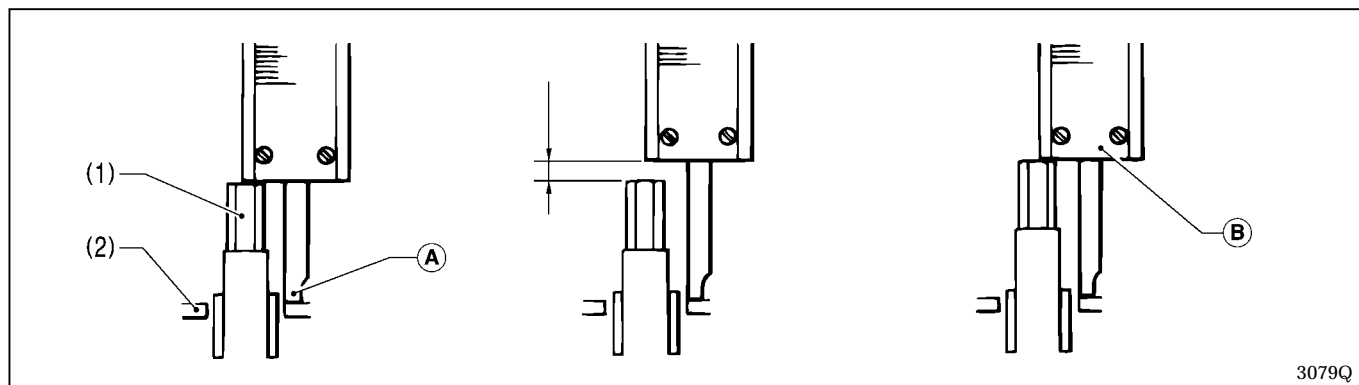

1. In the same way as in "4-13. Adjusting the needle and looper timing", move the needle bar to its lowest position with the needle at the inside sewing position, and then use calipers to measure the distance between the end of the needle bar (1) and the top of the holder base (2).
2. Add 2.7 mm to the value obtained in step 1. above.
3. Touch the end of the calipers (A) against the top of holder base (2), and then turn the upper shaft pulley until the end of the needle bar (1) touches the edge of the calipers (B). Check that the tip of the eye looper is aligned with the center of the needle at this time.
4. In the same way, check that the tip of the right looper is aligned with the center of the needle when the needle is at the outside sewing position.

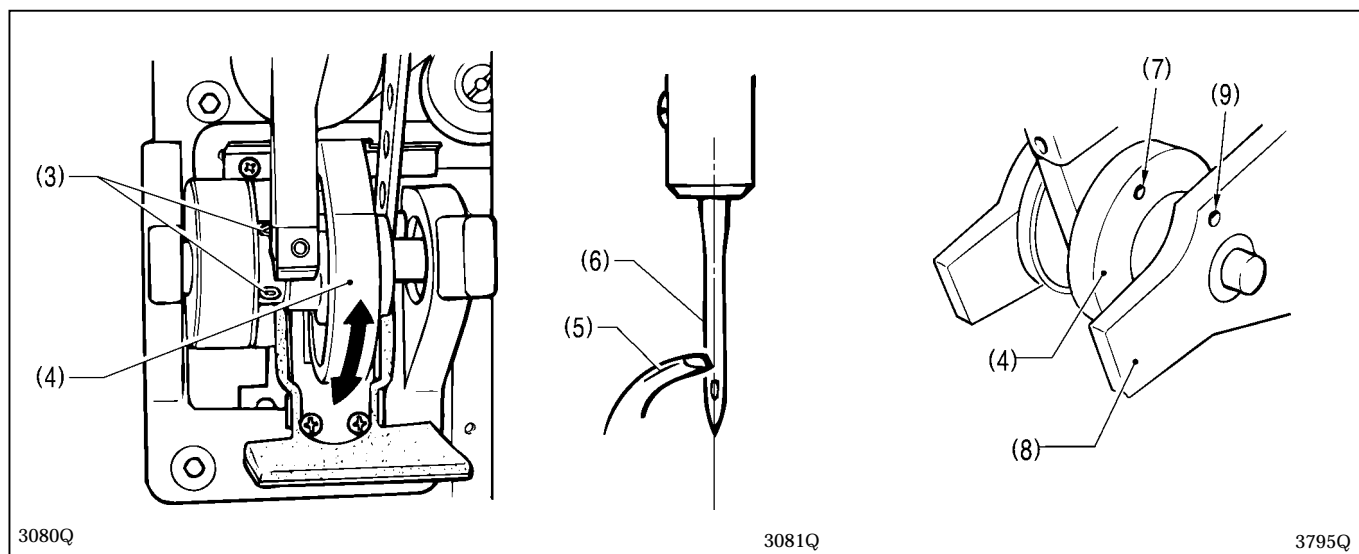


5. If the tips of the loopers are not aligned with the center of the needle, carry out the adjustment below.
 - Raise the machine head.
 - Loosen the two screws (3) of the lower shaft timing pulley, hold the upper shaft pulley so that it doesn't move, and then turn the lower shaft cam (4) in the direction indicated by the arrow until the tip of the eye looper (5) is aligned with the center of the needle (6). Once they are aligned, tighten the two screws (3).
 - After adjusting, check that the screws have been adequately tightened.
 - Once this adjustment has been carried out, repeat the procedure given in "4-13. Adjusting the needle and looper timing".

* Basically, the machine is assembled so that the hole (7) of the lower shaft cam (4) is aligned with the hole (9) of the lower shaft base (8) when the needle bar is at its lowest position and at the inside sewing position.

4. ADJUSTMENT

4-15. Adjusting the height of the needle bar

The standard height for the needle bar is 2.5 mm. (The needle bar height may need changing depending on the material and thread being used.)

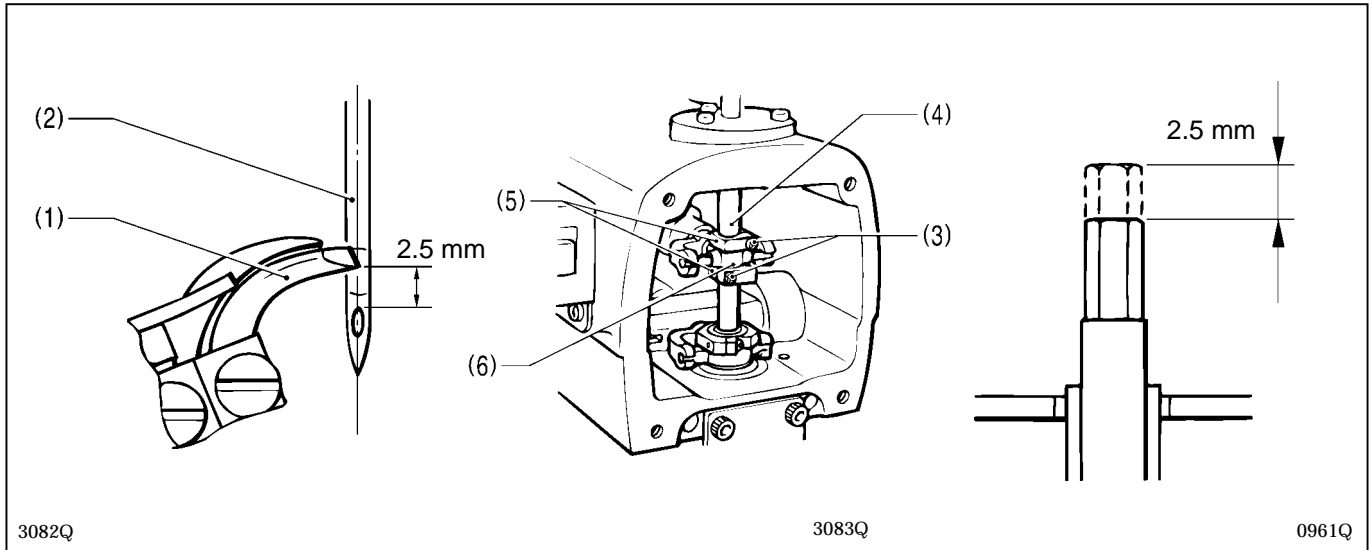


1. Align the tip of the eye looper (1) with the center of the needle (2) when the needle (2) is at the inside sewing position.
2. Remove the face plate.
3. Loosen the screw (3) of the needle bar clamp (5) and adjust the height of the needle bar (4).
 - * After aligning the tip of the eye looper (1) with the top edge of the needle hole, lower the needle bar (4) 2.5 mm.
4. Adjust so that there is as little play as possible, and so that the needle bar clamp (5) and the needle bar level feed link (6) can maintain their oil films. This will help to ensure that the needle bar turns smoothly.

4-16. Adjusting the clearance between the looper and needle

Be sure to carry out this adjustment after changing the size of the needle.

The clearance between the tip of the looper and the needle should be 0.05 - 0.2 mm.

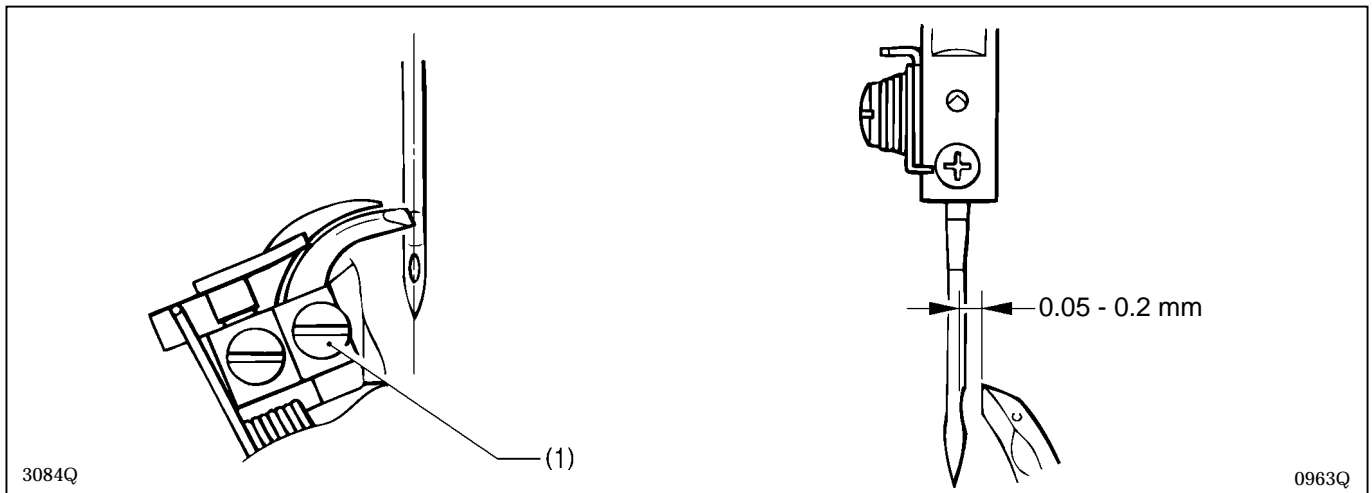


Loosen the looper screw (1) and then adjust the clearance.

- * This clearance must be uniform while the looper base is rotating (through 360°).
If the clearance is not uniform, adjust the turning center for the needle bar. (This adjustment is made at the time of shipment from the factory.)
- * After making the adjustment in step 1. above, carry out the adjustment procedure given in "4-18. Adjusting the spreader mounting positions".

4-17. Adjusting the needle guard

Be sure to carry out this adjustment after changing the size of the needle.


The needle must remain stationary with respect to the needle guard until the tip of the looper reaches the needle.

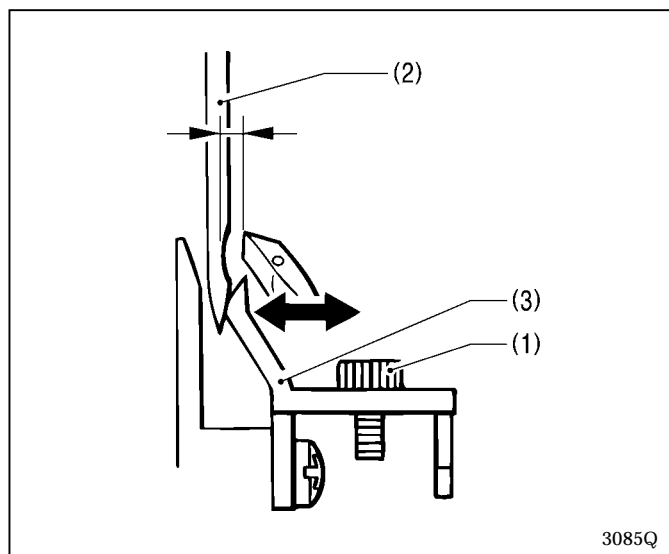

Loosen the screw (1) and then move the needle guard (3) in the directions indicated by the arrows by an appropriate amount in accordance with the thickness of the needle (2).

Note: Adjust so that the looper clasps the upper thread securely.

4-18. Adjusting the spreader mounting positions

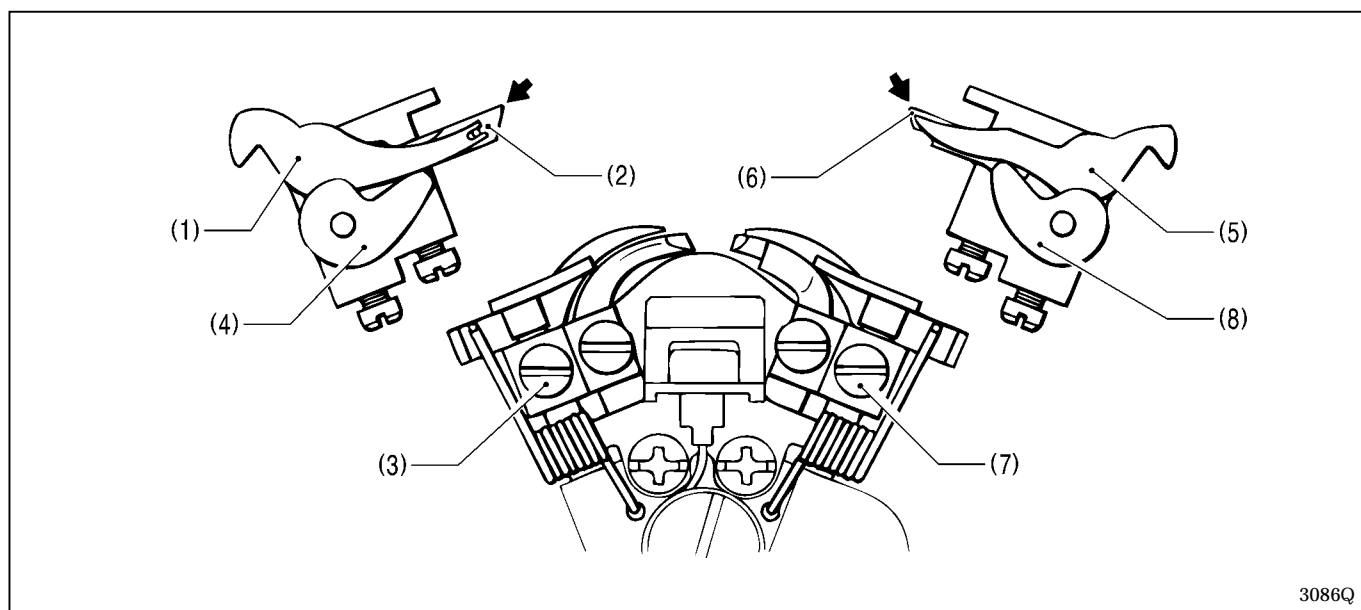

1. Loosen the screw (3) and adjust the position of the left spreader stopper (4) so that the fork of the left spreader (1) is aligned with the lower thread guide hole of the eye looper (2).

2. Loosen the screw (7) and adjust the position of the right spreader stopper (8) so that the tip of the right spreader (5) is aligned with the tip of the right looper (6).


Note: Both the left spreader (1) and right spreader (5) should be installed so that they do not project past the tips of the eye looper (2) and right looper (6) respectively.

4. ADJUSTMENT

4-19. Adjusting the spreader timing

When the needle is at the inside sewing position, the left spreader should touch the left spreader stopper and stop immediately before the needle bar reaches its lowest position.

When the needle is at the outside sewing position, the right stopper should touch the right spreader stopper and stop immediately before the needle bar reaches its lowest position.

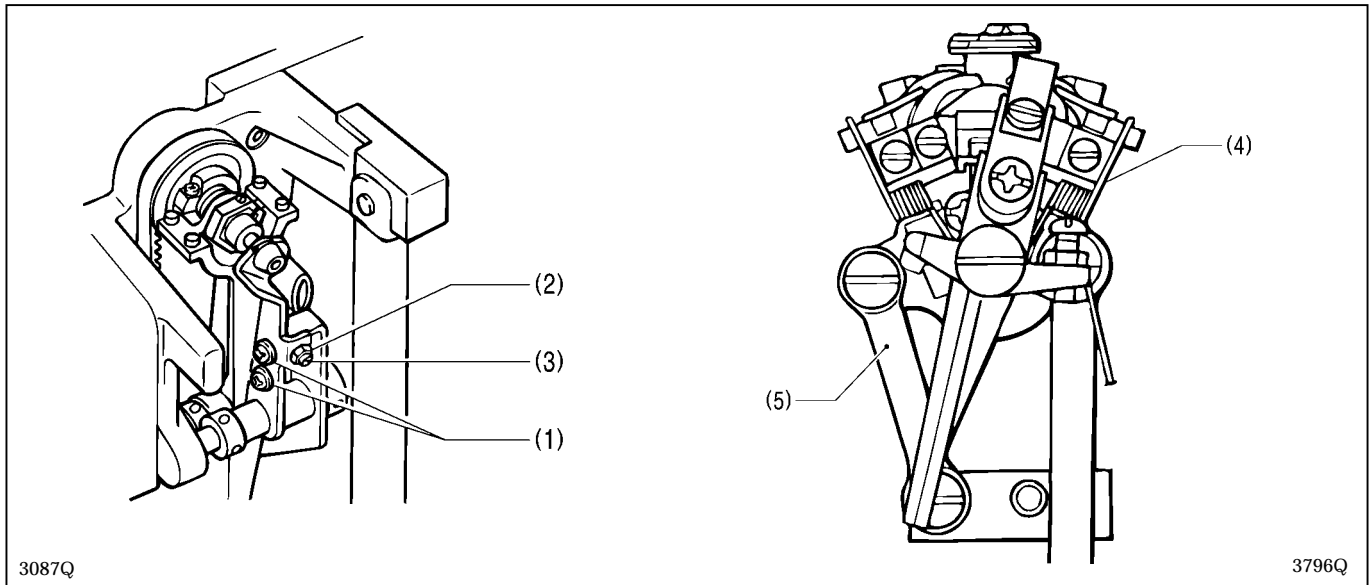


1. Raise the machine head.
2. Loosen the screw (1) and the nut (2), and then turn the adjusting screw (3) to adjust the spreader timing.
3. After adjusting, tighten the nut (2) and the screw (1).

Note: Make sure that the LS-holder bracket (4) does not touch the spreader cam link (5). If it does, return to “4-13. Adjusting the needle and looper timing”.

4-20. Adjusting the amount to pull the upper thread and tension release

The amount to pull the upper thread should be sufficiently maintained to form the correct stitches at the start of sewing.

The upper thread take-up lever operates as soon as sewing is completed, and is released when the start switch is pressed to move the feed bracket with the needle stopped.

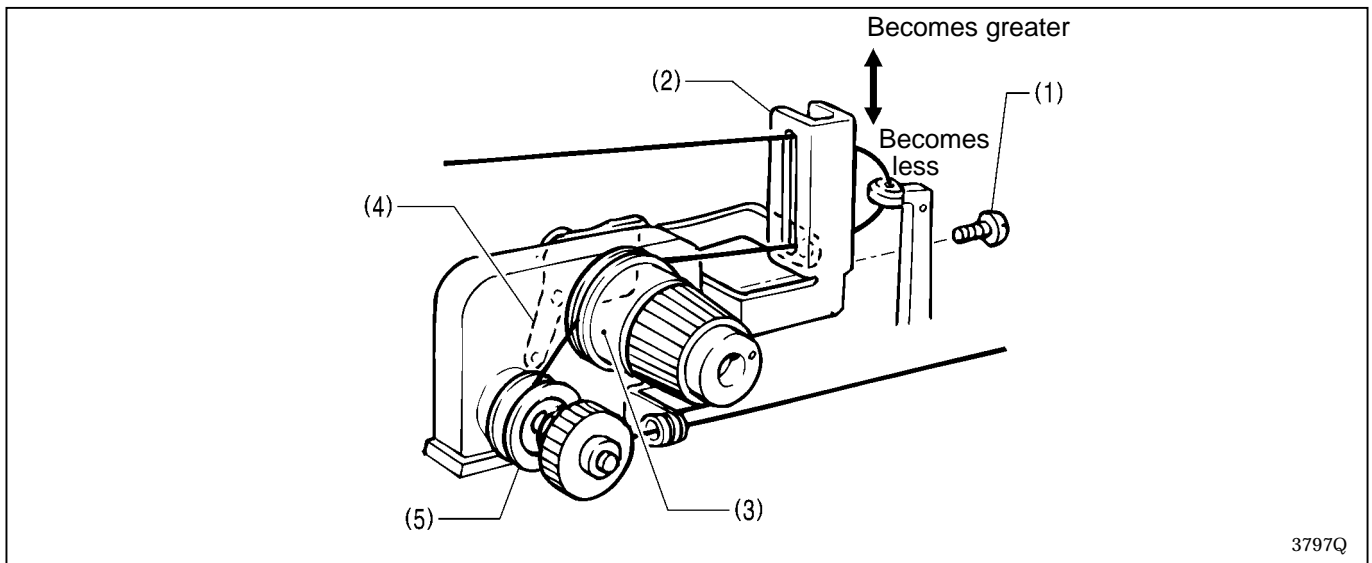

Loosen the screw (1), and move the upper thread take-up lever guide (2) up and down to adjust the amount to pull the upper thread.

- The upper thread tension mechanism has double tension mechanisms. The main tension disc (3) is open after sewing is completed, and closed when the start switch is pressed to move the feed bracket with the needle stopped.
- The upper thread tension plate (4) and the upper thread take-up lever are interlocked.
- The sub tension disc (5) is always kept closed to give the upper thread tension. The tension will change the thread end length at the start of sewing.


4-21. Adjusting upper thread trimming

Upper thread trimming will be performed on the correct time after sewing is completed.

4-21-1. Adjusting the upper movable knife mounting position

[-00, -01]


The upper movable knife (1) must cut the upper loop which is caught by looper R (2), in one place (front). If the upper loop is cut at 2 places (front and rear), the thread end length from the needle will be shorter, causing skipped stitches at the start of sewing.

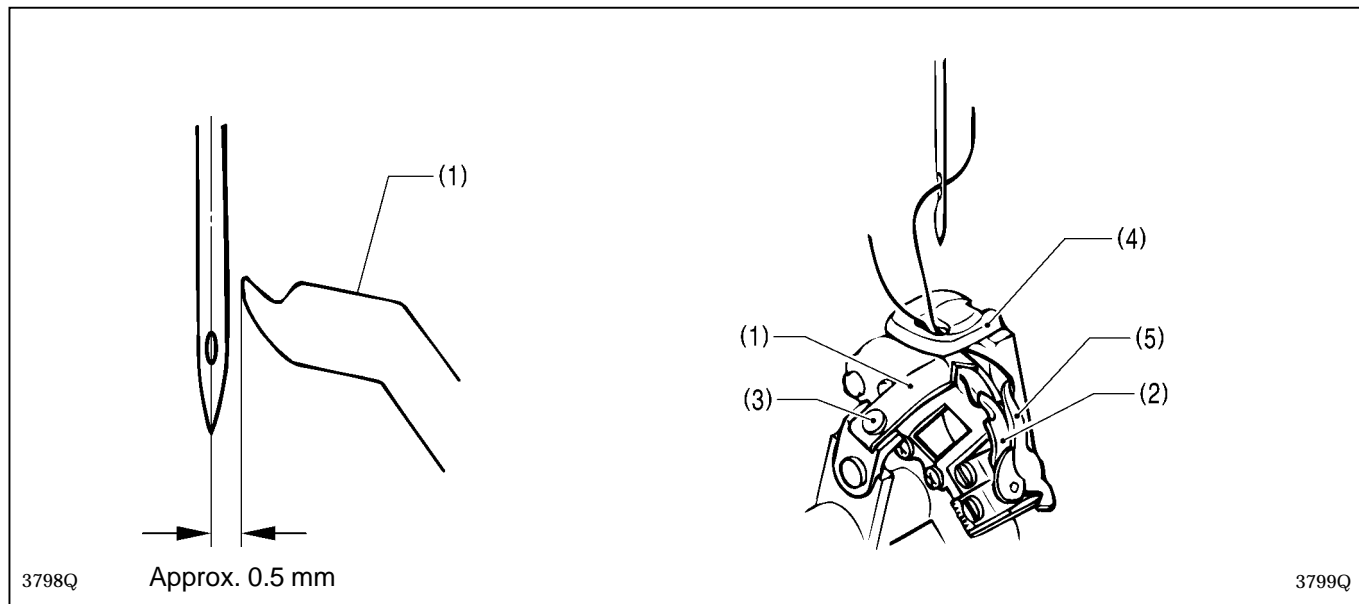

1. Loosen the screw (3), and adjust the clearance between the needle and the point of the upper movable knife (1), to approx. 0.5 mm.
2. The height of the upper movable knife (1) should be between the bottom of the throat plate (4) and spreader R (5).

[-02, -52]

The mounting position of upper movable knife (1) is determined by the position of the lower thread presser (2).

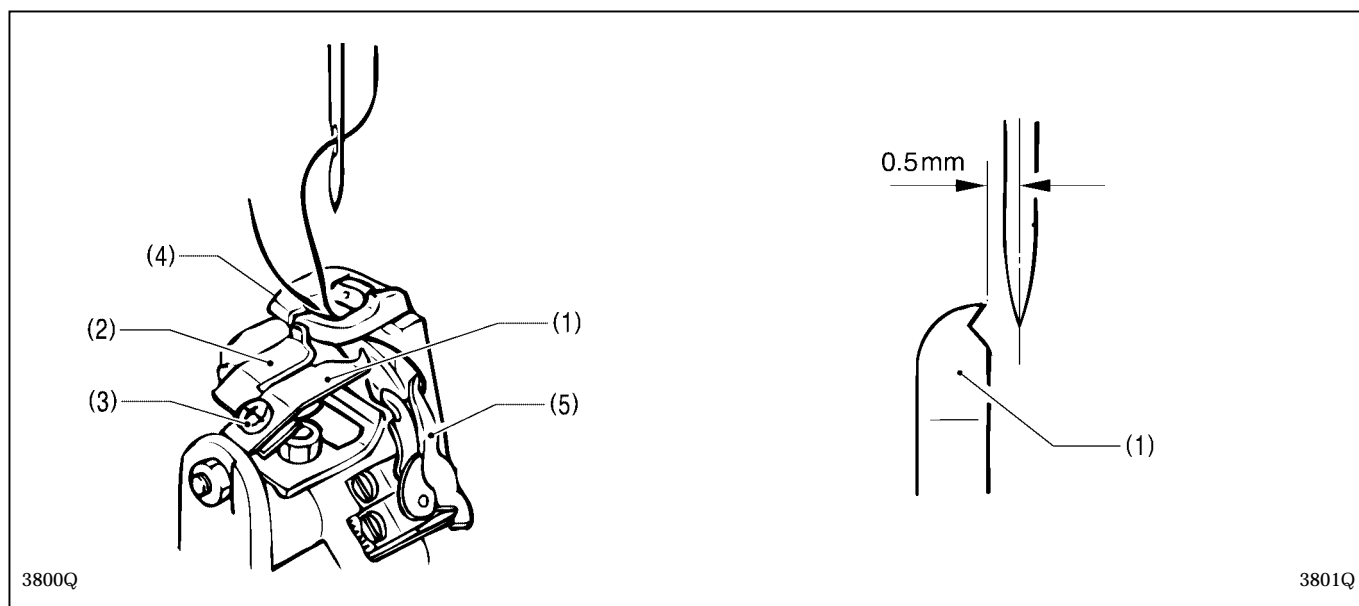


1. Loosen the screw (3), and position upper movable knife (1) between the projection of the throat plate (4) and spreader R (5).
2. Adjust the clearance between the needle and the point of upper movable knife (1) to 0.5 – 1.0 mm.
 - * If adjustment can not be performed, reconfirm “4-11. Adjusting the height of the throat plate” and “4-23. Adjusting the position of the lower thread presser”.

4. ADJUSTMENT

4-21-2. Adjusting the position of the thread trimmer lever bracket

When the needle is swinging to the right with the maximum stitch width, the needle should be able to pass the upper movable knife sufficiently.

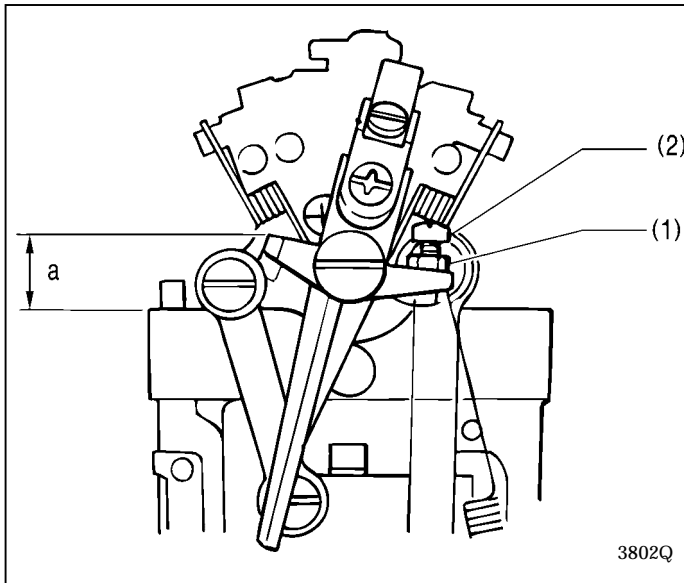

Loosen the nut (1), and turn the screw (2) to adjust the position of the thread trimmer lever bracket. At this time, dimension a to the shoulder of the thread trimmer lever bracket should be 10 mm.

Note: Turn the looper base, and make sure that the thread trimmer lever bracket can smoothly go in under the thread trimmer lever hammer. The height of the thread trimmer lever hammer is adjusted to 11 mm.

4-22. Adjusting the lower thread trimmer (-01 specification)


[Adjusting the thread trimmer which can cut the lower thread and gimp, leaving them longer]

The thread trimmer is operated by means of an air cylinder when the feed bracket is returned to the home position.

4-22-1. Adjusting the knife pressure

Adjust the knife pressure so that the thread can be cut neatly.

Note: Do not subject the knife to excessive pressure. It may cause the knife to wear quickly or damage it.

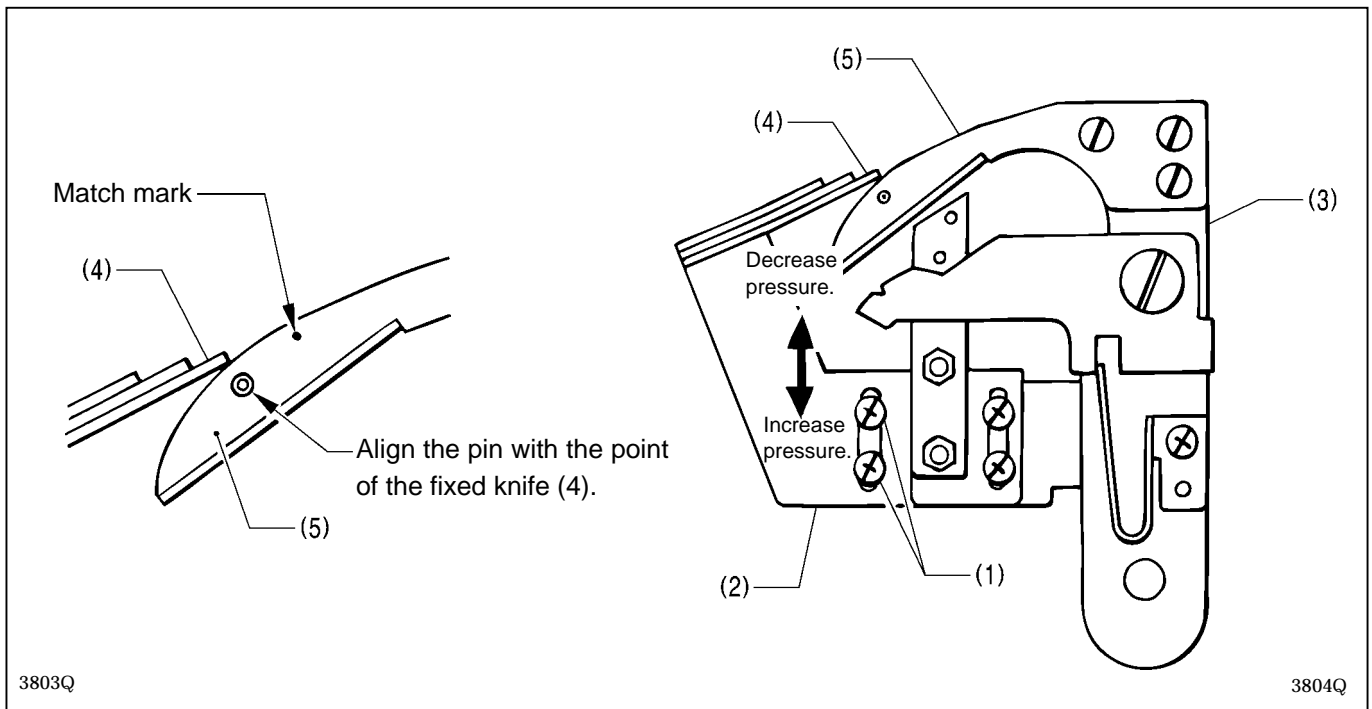


Loosen the two screws (1), and move the fixed knife setting bracket (2) along the slot which the screws (1) are in, in the direction of the arrow.

* The standard adjustment is done as shown in the above enlarged view, which indicates the first point to make contact with the point of the fixed knife (4) and the pin of the movable knife (5) when the thread trimmer arm (3) operates.

4-22-2. Adjusting the position of the thread trimmer arm

The rocking stroke of the thread trimmer arm is fixed to the drive cylinders.

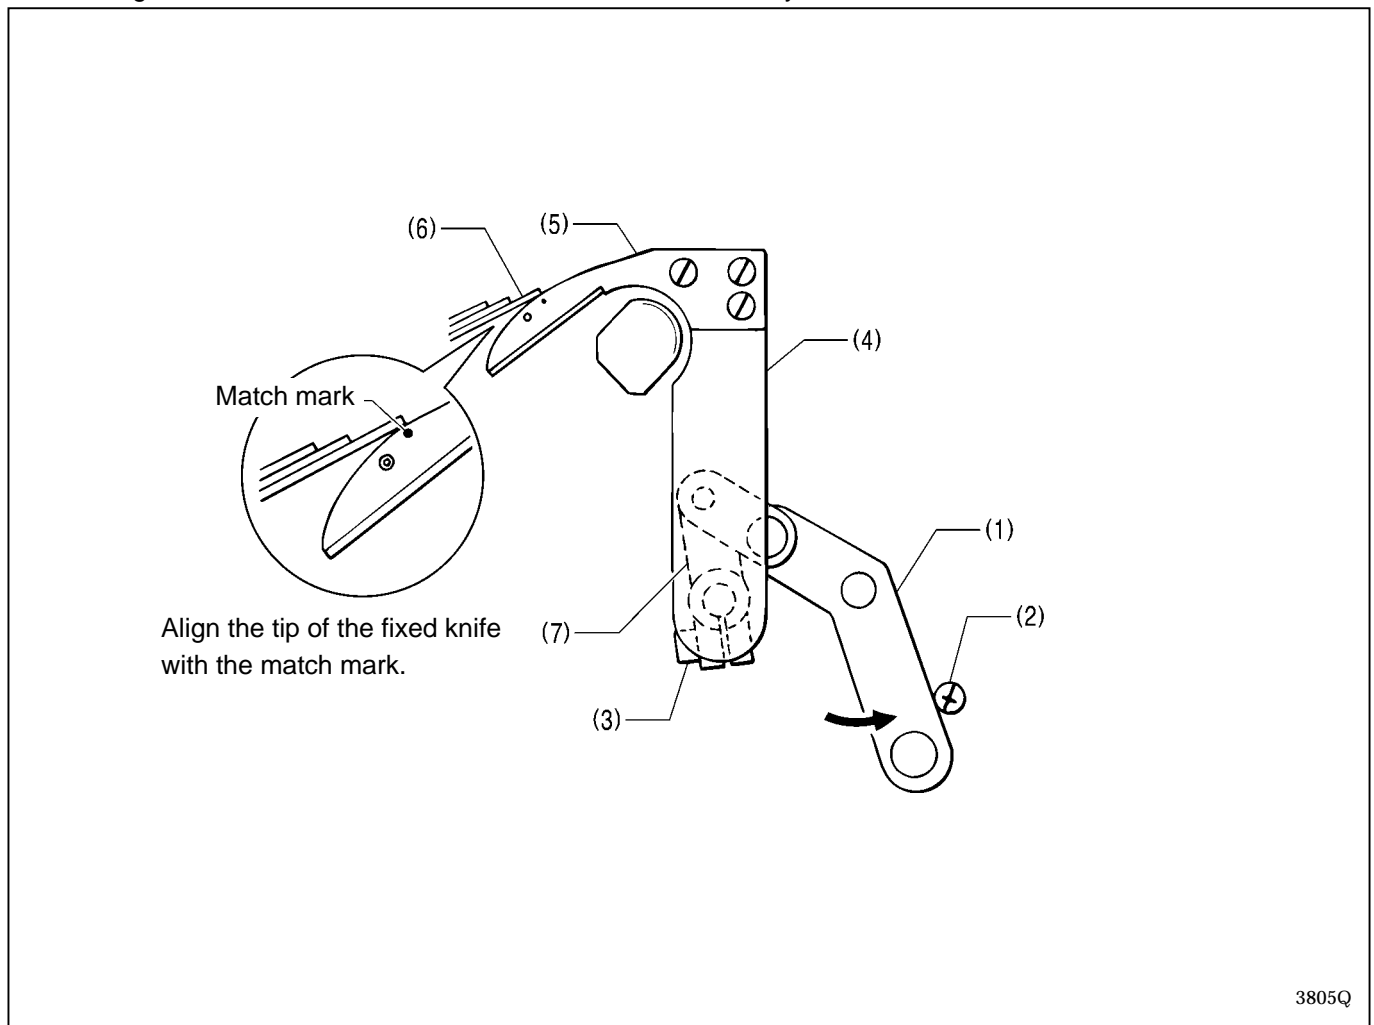

1. Turn the thread trimmer link lever (1) in the direction of the arrow until it touches the stopper screw (2).
2. Loosen the bolt (3), adjust the position of the thread trimmer arm (4), and determine the engagement between the movable knife (5) and the fixed knife (6). The above figure shows standard adjustment.


Note: When tightening the bolt (3), make sure that the thread trimmer lever arm (7) and the thread trimmer arm (4) can move smoothly without any end play.

Too little engagement may cause the lower thread not to be hooked, leading to thread cast-off at the start of sewing.

4. ADJUSTMENT

4-22-3. Adjusting the thread clamp assembly and thread clamp opener

The lower thread should go under thread clamp D (1); the gimp should go under thread clamp U (2). Install the thread clamp assembly correctly, and make sure that the thread clamp opener operates correctly.

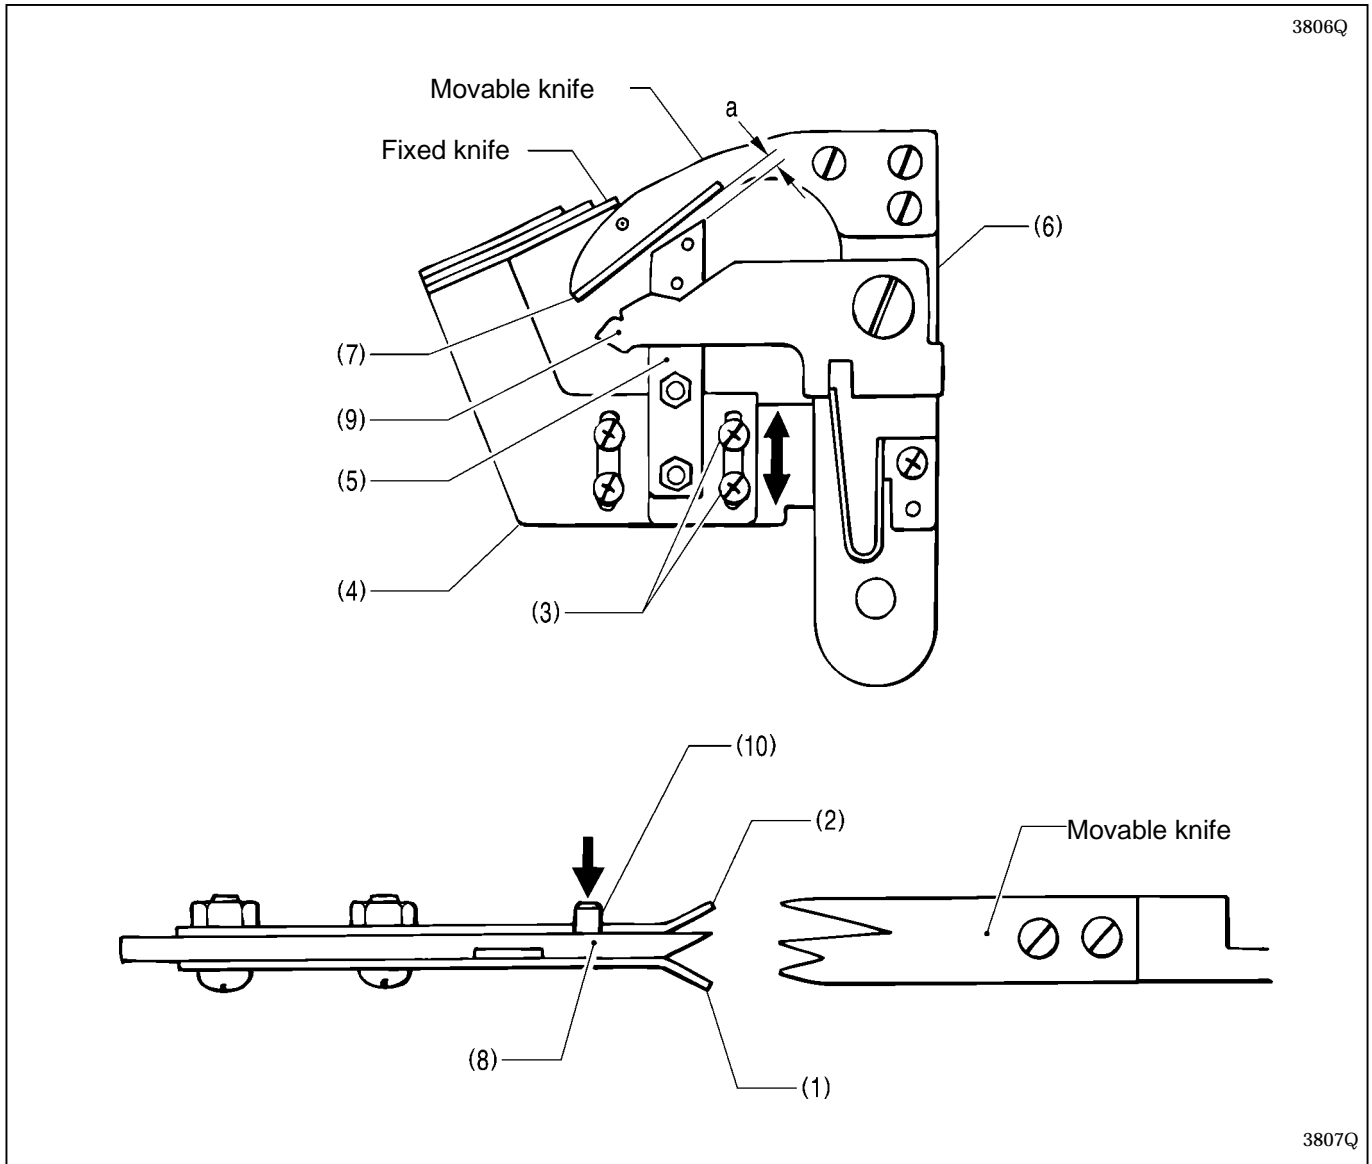

Loosen the two screws (3), and move the thread clamp assembly (5) along the fixed knife setting bracket (4) in the direction of the arrow. Decrease clearance a to as narrow as possible so that the thread clamp assembly (5) and the thread handler (7) do not make contact with each other when the thread trimmer arm (6) rotates.

Note : If clearance a is too great, the lower thread may not be hooked correctly, leading to thread cast-off at the start of sewing.

If the thread clamp assembly (5) is installed on an angle, thread clamp D (1) may not open because it makes contact with the throat plate, and fail to hook the lower thread, leading to thread cast-off at the start of sewing.

The lower thread must pass over the projection of thread clamp M (8), and be securely held by thread clamp D (1).


1. Make sure that thread clamp D (1) is opened at least 0.3 mm when the thread nipper opener (9) presses the opener pin (10) down.
2. Make sure that thread clamp D (1) is closed just before the thread is trimmed.
3. When the thread trimmer arm (6) returns to its original position after thread trimming, the thread nipper opener (9) should travel around the opener pin (10). Make sure that thread clamp D (1) should not be open.

Note: When the start switch is pressed and the feed bracket moves to the sewing start point, the lower thread should be securely hooked by thread clamp D (1).

On the contrary, the gimp should be just released from thread clamp U (2) to prevent double cutting it.

4-22-4. Adjusting the thread handler


- The thread handler (1) separates the lower thread and the gimp, and guides them to their respective threading routes. The lower thread is guided into thread handler D; the gimp is guided into thread handler U.
- When the thread trimmer arm operates, the throat plate (2) turns 45°. Then, the gimp moves onto the projection on the throat plate (2), and this creates the height difference between the lower thread and the gimp. A triangle is formed by the lower thread and the gimp at the last stitch, into which the thread handler (1) moves to separate the lower thread and the gimp.

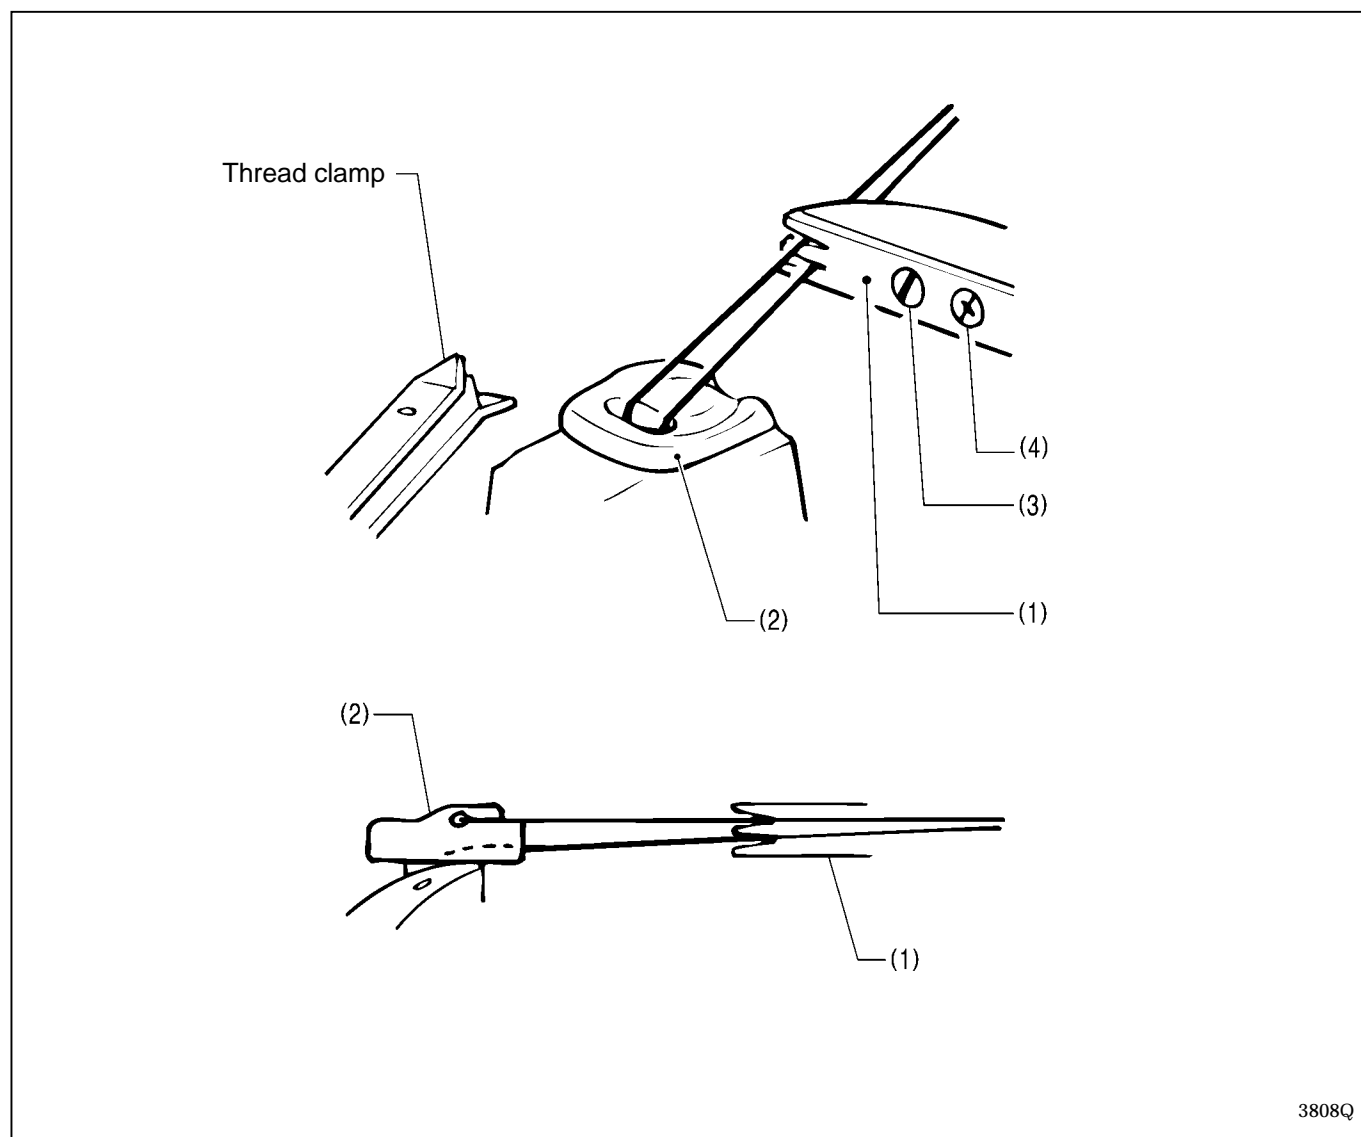

1. Set the stitch pitch to 2.0 mm by the parameter settings to decrease the total number of stitches.
 2. Press the start switch in the MANUAL mode, and turn the pulley manually until the last stitch.
 3. When the pulley is stopped with its match mark aligned with that in the arm after a series of operations is completed, press the start switch again and again to check each thread trimming operation.
 4. Loosen the screws (3) and (4). Adjust the thread handler (1) by turning it while pivoting on the screw (3).
- Note:** When changing the height of the throat plate (2), be sure to adjust the thread handler (1) because the triangle formed by the lower thread and the gimp will change.

4. ADJUSTMENT

4-22-5. Adjusting the thread guide plate

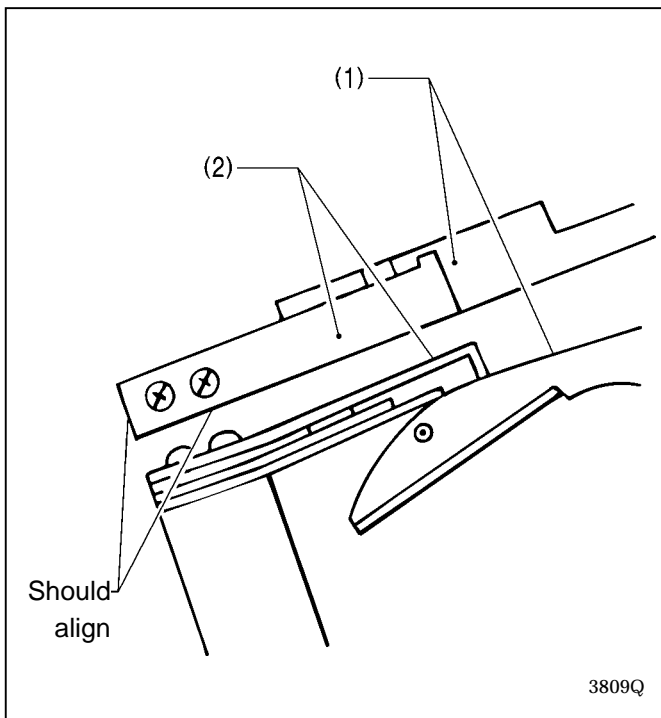


When the movable knife (1) moves, the lower thread and the gimp should be guided to the notches in the movable knife (1). Adjust the position of the thread guide plate (2) so that the end of the movable knife (1) aligns with the end of the thread guide plate (2).

4-22-6. Adjusting the amount to pull the lower thread required for thread trimming

When the thread handler catches the lower thread to guide it to the fixed knife, the lower thread should be pulled sufficiently to prevent the thread snapping and deviation from stitching path.

To cut the lower thread when the feed bracket is at the home position, the thread trimmer lever bracket will continue to operate just before the looper turns 45°, and the lower thread will be pulled.

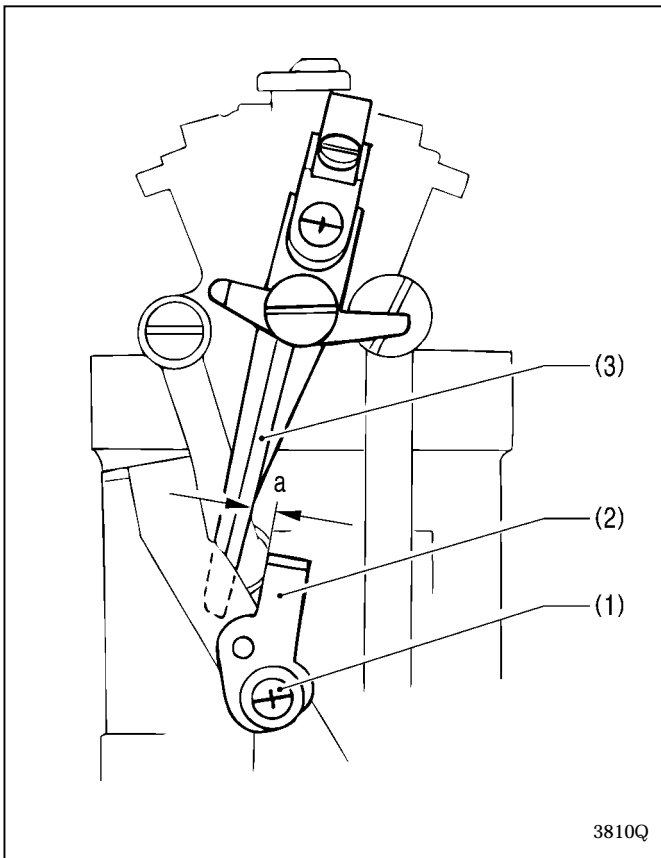

Loosen the screw (1), turn the tension release plate (2) to adjust clearance a between the tension release plate (2) and thread trimmer lever bracket (3).

Note: If the lower thread has snapped, reconfirm "6-1-1. Adjusting the solenoid valve speed controllers".


4-22-7. Adjusting the amount to pull the lower thread for safety stitching

To secure the first stitch, while looper L is catching the first upper loop, the lower thread should be taut between looper L and the throat plate, and not be pulled off thread clamp D.

1. After automatic sewing is completed, switch to the MANUAL mode, and press the start switch.
2. Turn the pulley manually to check the condition of the lower thread.

To prevent the lower thread from being pulled off thread clamp D while the feed bracket is moving to the sewing start position, the pressure of thread clamp D should be sufficiently strong enough, and the tension release lever (1) should be oscillated by the tension release claw (2) to pull the lower thread appropriately while the looper base returns to the home position after thread trimming is completed.


When the stitch length is greatly changed, it is necessary to adjust the amount of lower thread to be pulled.

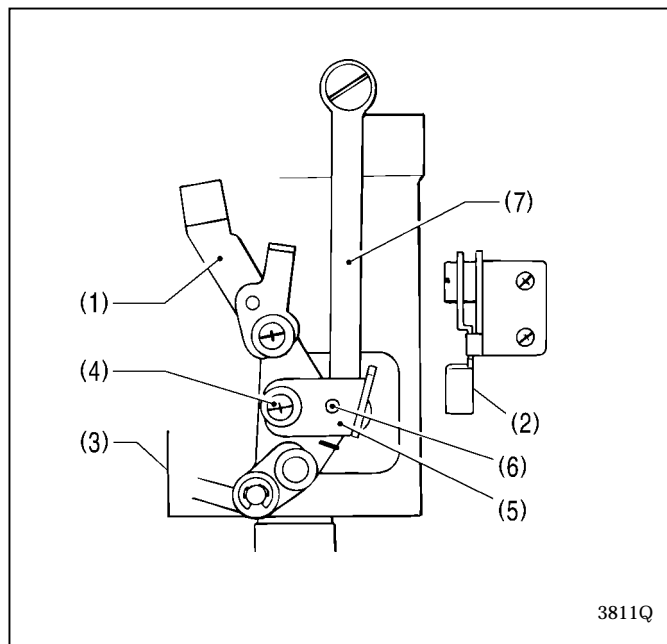

1. Turn off the power.
2. Turn the looper base (3) manually to check the angle of the tension release lever (1).
3. Loosen the screw (4), turn the tension release claw (5) regarding the pivot (6) as the center to adjust the angle of the tension release lever (1).

Note: When the tension release lever (1) oscillates with its maximum stroke, make sure that it does not make contact with the looper link (7).

4-22-8. Adjusting the amount to pull the gimp

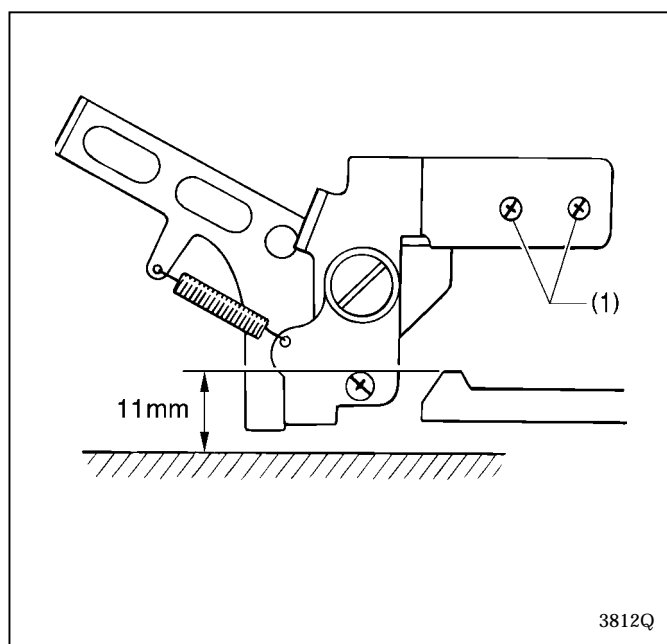

The amount of the gimp required for thread trimming is pulled by the thread trimmer that cuts the lower thread and the gimp, leaving them longer.

If adjustment is not correct, the gimp sewn in stitches may be pulled, and stitch formation around the button eyelet may be distorted.

Loosen the two screws (1), and set the distance from the bed to the upper end of the roller to 11 mm.

4. ADJUSTMENT


4-23. Adjusting the lower thread trimmer (-02, -52 specifications)

[Adjusting the thread trimmer which can cut the lower thread and gimp, leaving them shorter]

The thread trimmer operates by means of an air cylinder when the feed bracket is at the home position.

4-23-1. Adjusting the knife engagement

Movable knives L (1) and R (2) should overlap each other by approx. 1 mm.

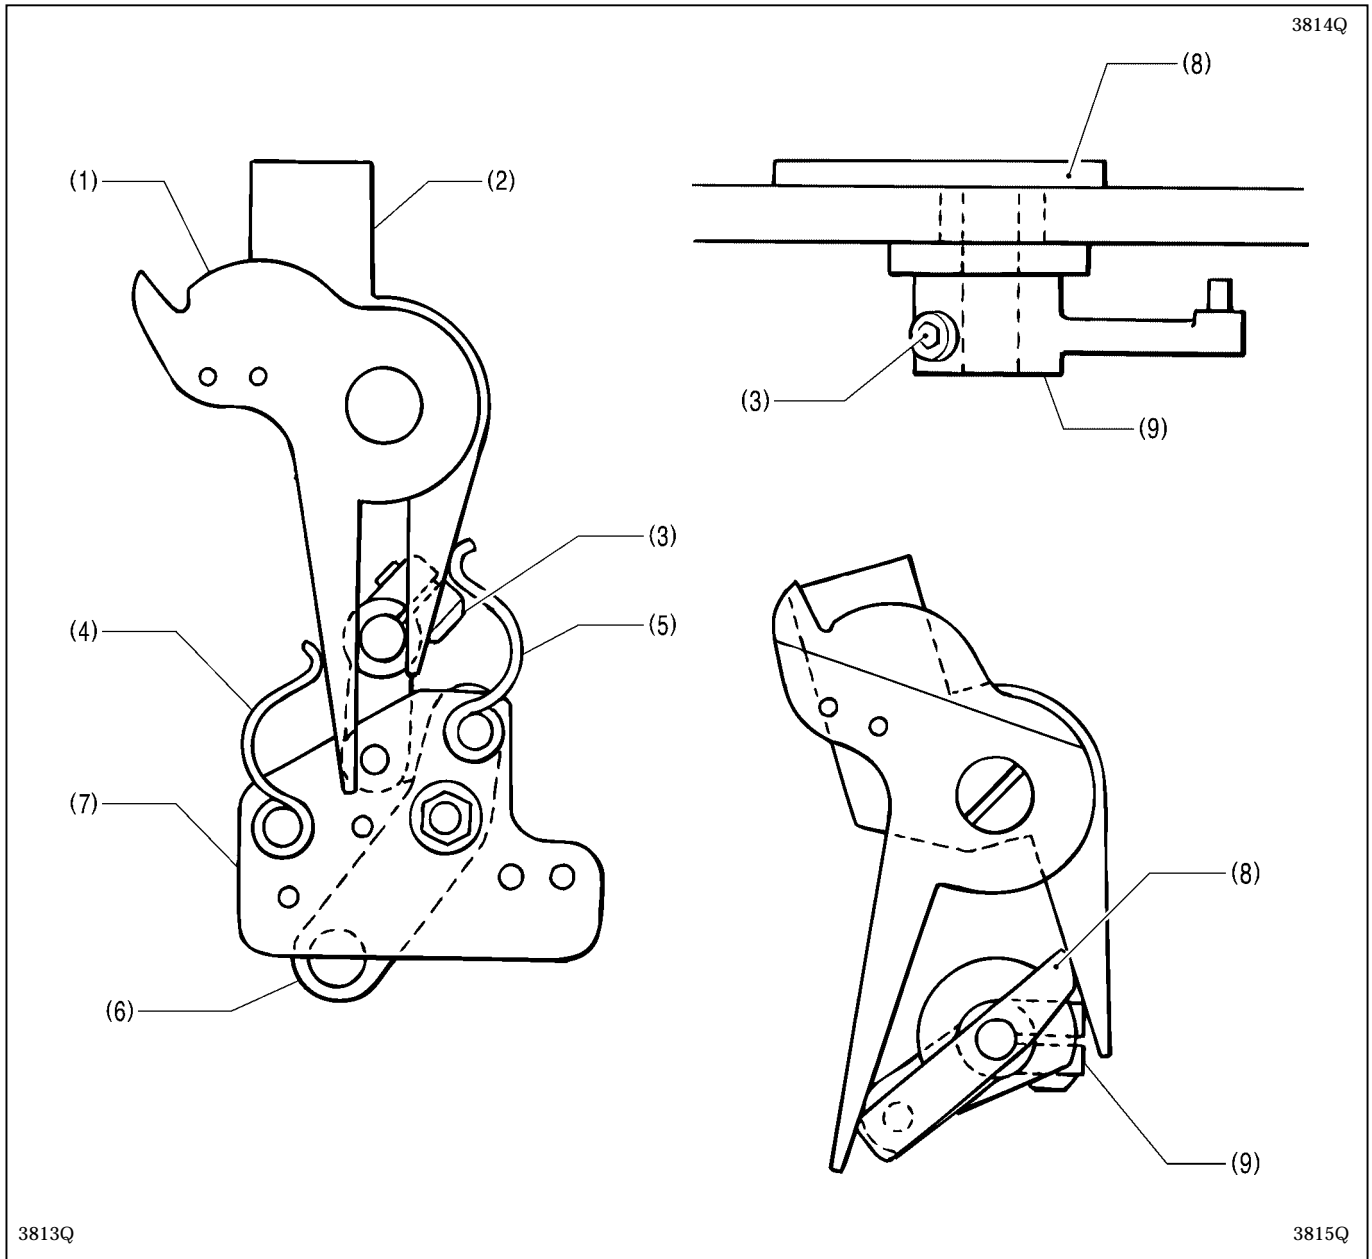

1. Loosen the screw (3).

2. With springs L (4) and R (5) attached to movable knives L (1) and R (2), align the end of thread trimmer link lever J assembly (6) with the match mark on the rear of the link fulcrum plate assembly (7), and tighten the screw (3).


Note: Make sure that the movable knife driving cam (8) and thread trimmer lever arm B (9) rotate smoothly without any gap.

3. Move thread trimmer link lever J assembly (6) to check engagement between movable knives L (1) and R (2).

4. If the engagement is insufficient, return to step 2 to perform fine adjustment so that the end of thread trimmer link lever J assembly (6) overlaps with the match mark on the rear of the link fulcrum plate assembly (7).

4-23-2. Adjusting the knife pressure

Adjust the knife pressure to the lowest where the knife can still cut the material.

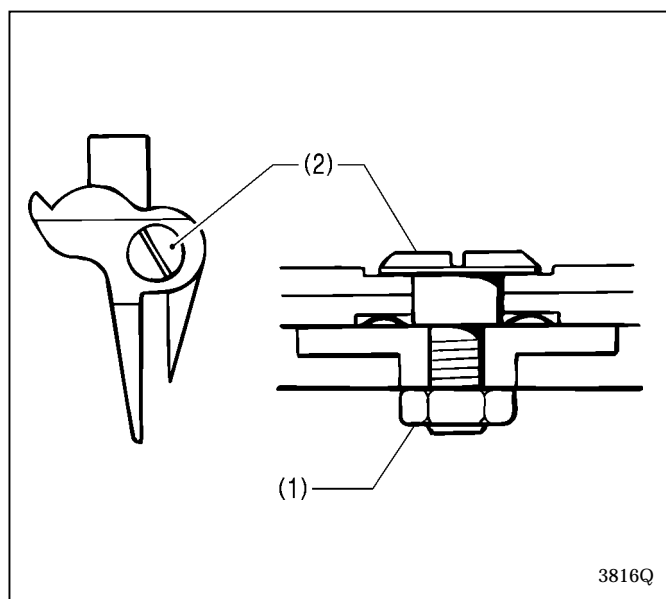


1. Loosen the nut (1).
2. Turn the shoulder screw (2) to adjust the knife pressure.

Note: When the shoulder screw (2) is fully tightened, the movable knife will not operate. Tighten the shoulder screw (2) slowly while checking that the movable knife can operate smoothly.

4-23-3. Adjusting the gimp pull force

- The gimp should be completely sewn in a few stitches at the start of sewing, and the gimp end length from the stitches should be as small as possible.
- The gimp is pulled by utilizing the difference in distance between gimp thread guide J (1) and gimp thread guide C-J (2) when the looper base returns to 0° from 180° after the gimp is trimmed.
- The gimp is trimmed when the feed bracket is at the home position. When the stitch length is changed, dimensions B and A will change. It is necessary to adjust the force to pull the gimp. Also, dimension A differs according to the gimp type and the gimp tension, so it is necessary to adjust the force to pull the gimp.

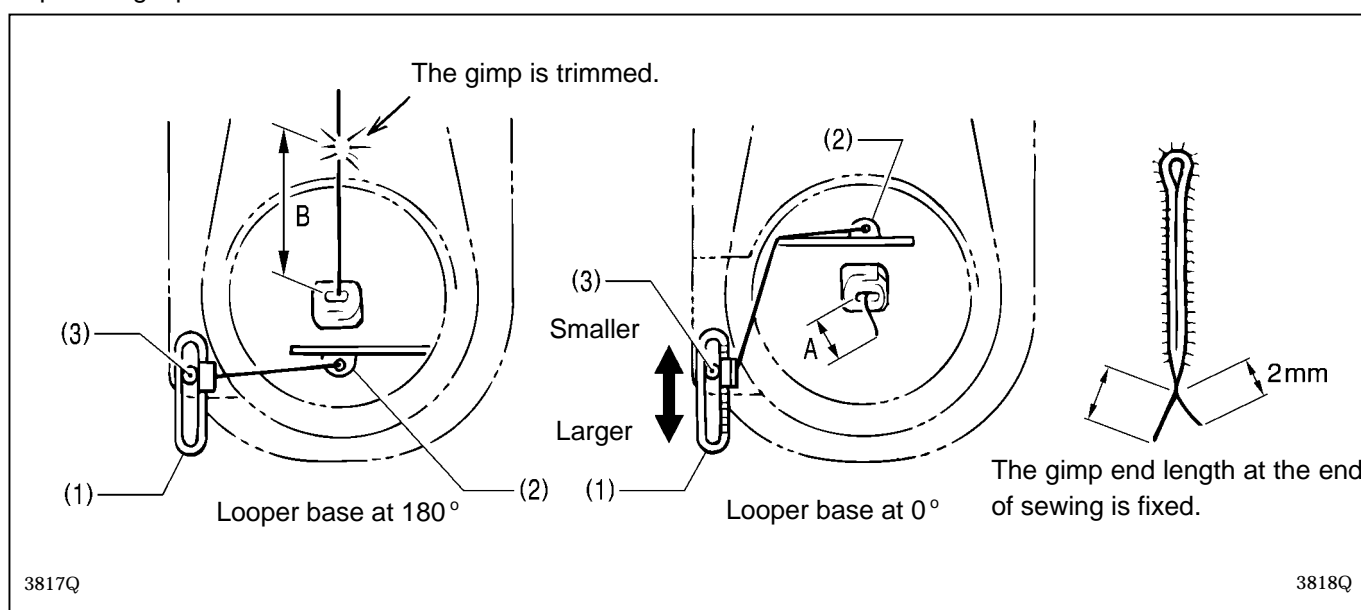

Loosen the screw (3), and adjust so that the gimp appears about 2 mm from the first covering stitch at the start of sewing.


Note: The tip of the gimp is pressed down on the material by a few stitches at the start of sewing, and pulled by the movement of the feed bracket. If the gimp is excessively taut when the feed bracket is at the sewing start position, or dimension A is too small, the gimp may come out from under the stitches.

4. ADJUSTMENT

4-23-4. Adjusting the gimp tension


When the looper base rotates and the gimp (1) is pulled, the gimp tension at the side of the spool stand should be stronger than that close to throat plate, regarding gimp thread guide J (2) as the center.

During sewing, on the contrary, the tension should be weak so that the gimp can be sewn under the stitches.

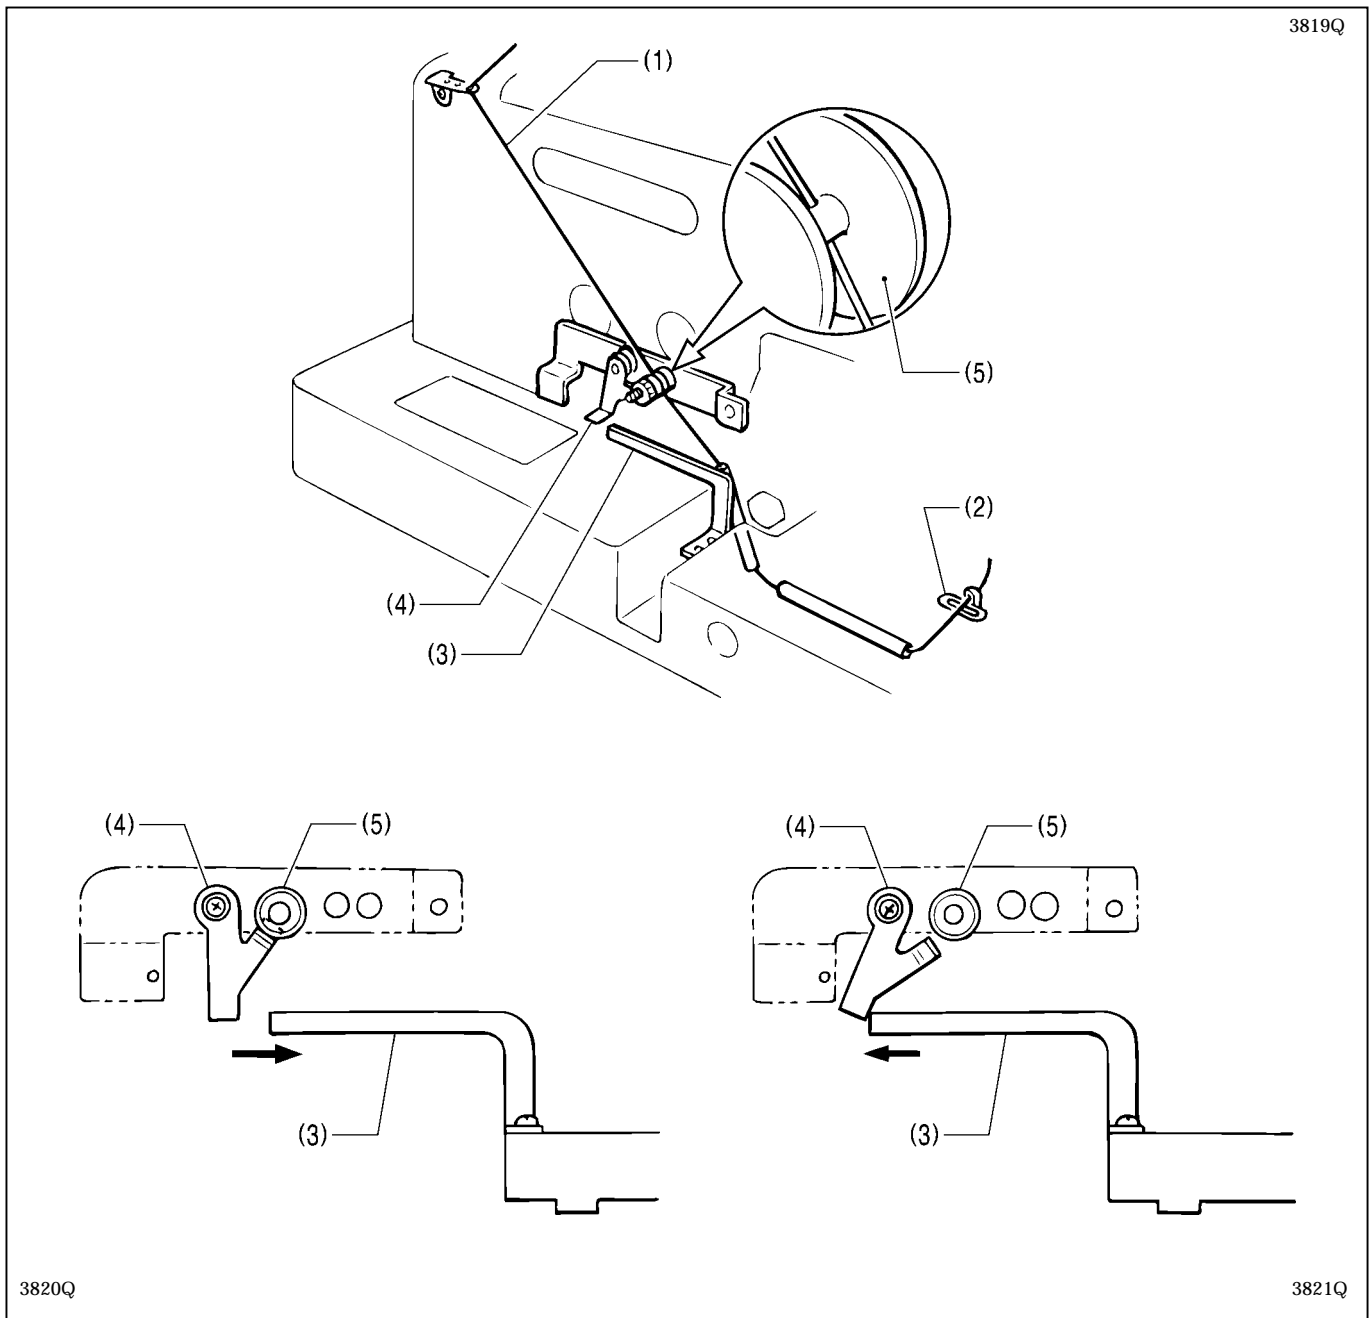

1. During sewing, gimp thread take-up guide J (3) moves toward the front in accordance with the movement of the feed bracket, and the gimp thread release plate (4) releases the thread tension disc (5).
2. After sewing is completed, the feed bracket moves to the home position to trim the gimp (1), gimp thread take-up guide J (3) pushes the gimp thread release plate (4), and the thread tension disc (5) is closed.

4-23-5. Using gimp thread work clamp

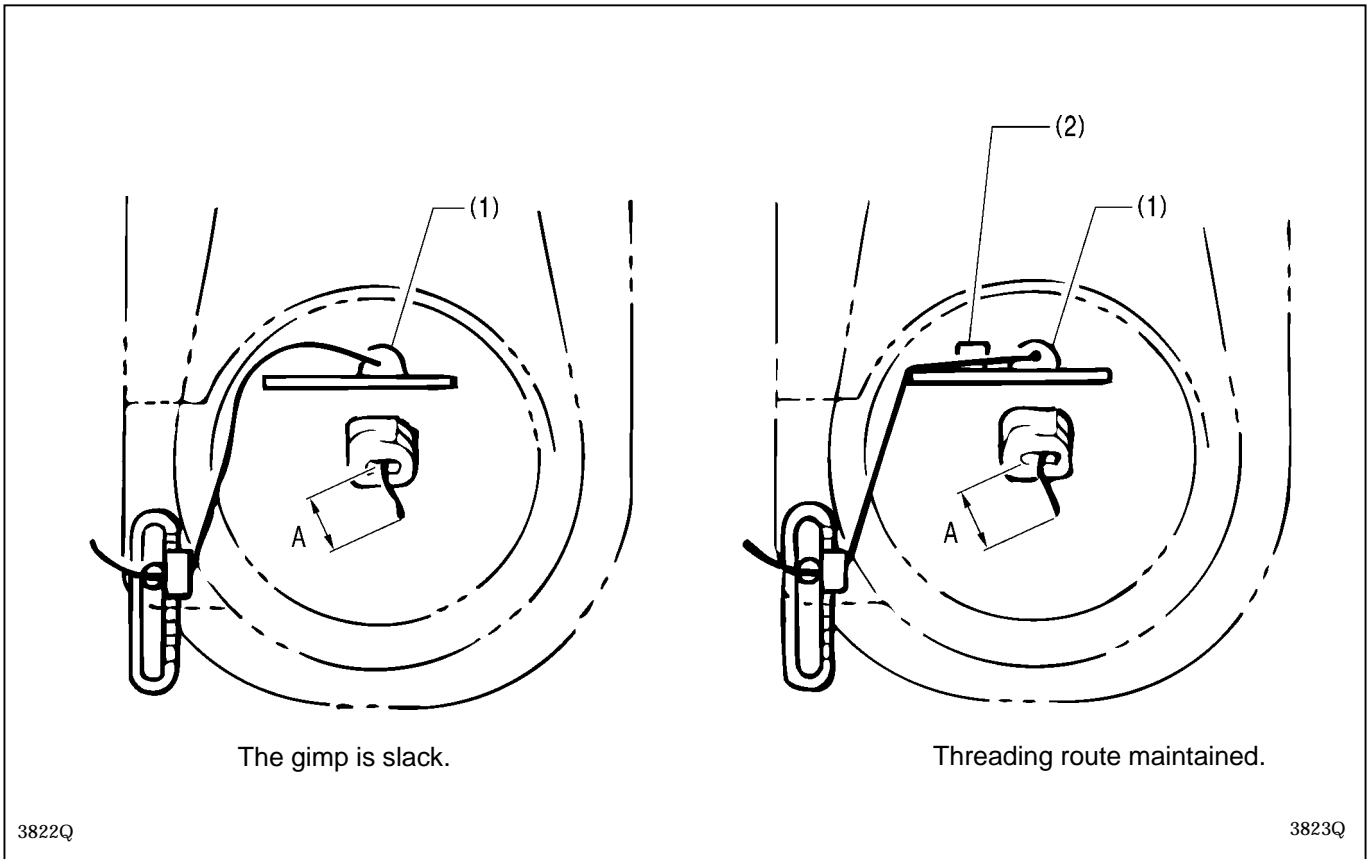

When the gimp is stiff, dimension A (gimp length from the throat plate) may vary.

In this case, pass the gimp through gimp thread work clamp (2) attached to gimp guide C-J (1).


Note: When thick and soft gimp is passed through gimp thread work clamp (2), the gimp tension may be too great during sewing.

4. ADJUSTMENT

4-23-6. Adjusting the auxiliary clamp arm

The auxiliary clamp arm holds the material until the lower thread and the gimp are trimmed after the work clamp rises.

The auxiliary clamp arm should be adjusted so that it can operate when the feed bracket is at the home position, and will be stationary on the needle plate without subjecting it to any pressure.

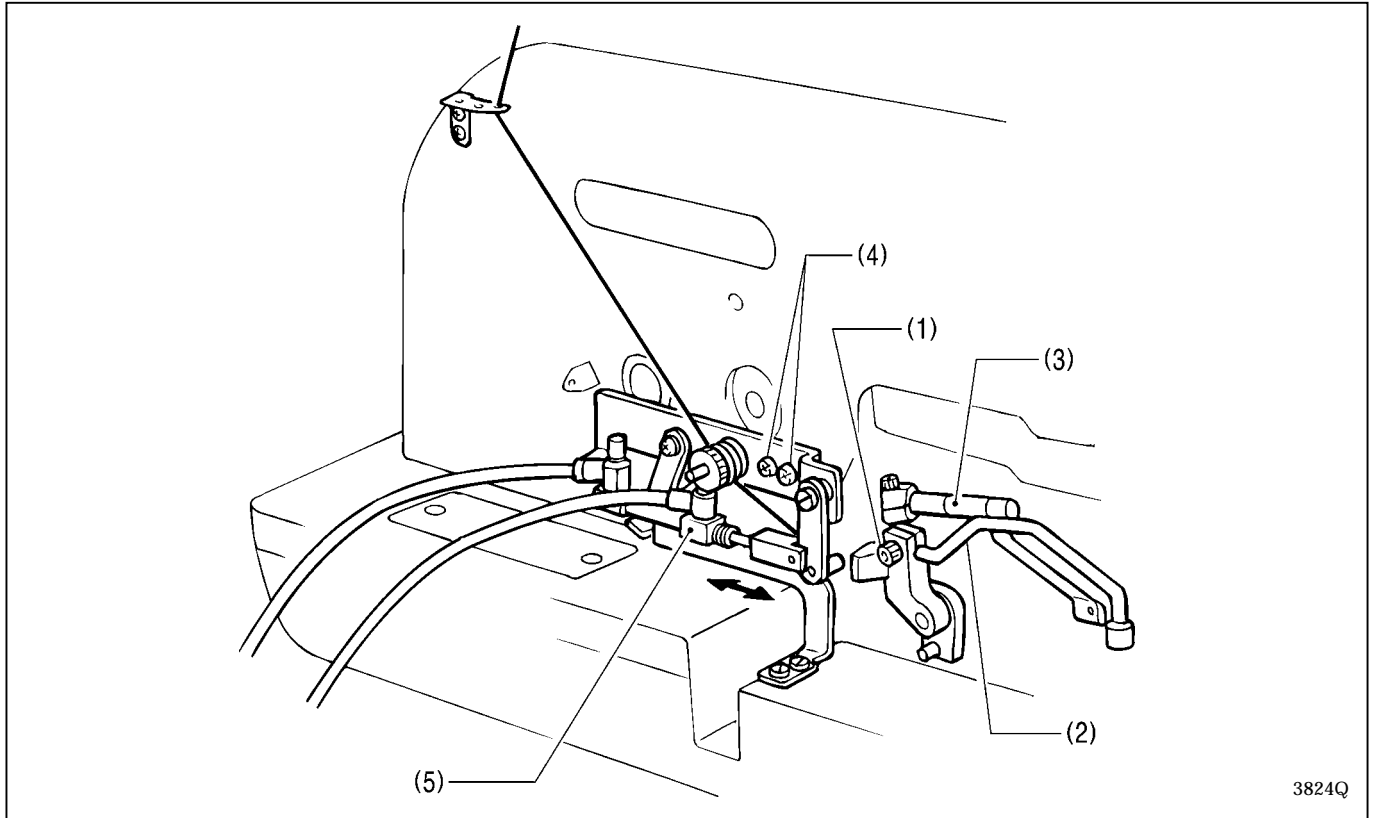


1. Loosen the bolt (1), and position the auxiliary clamp arm (2) on the needle plate so that the auxiliary clamp arm (2) can hold the material next to work clamp.

Note: Be sure that the auxiliary clamp arm (2) does not make contact with clamp arm L-J (3).

2. Turn on the power to set the home position.
3. Turn off the air, and loosen the two screws (4).
4. With the rod of the auxiliary clamp arm cylinder (5) fully extended, adjust so that the auxiliary clamp arm (2) can be stationary to the needle plate without subjecting it to any pressure.

Note: If excessive pressure is applied to the auxiliary clamp arm when the feed bracket is at the home position, the feed bracket may be in an inappropriate position in the Y direction.

The lift height of the auxiliary clamp arm is set to 16 mm.

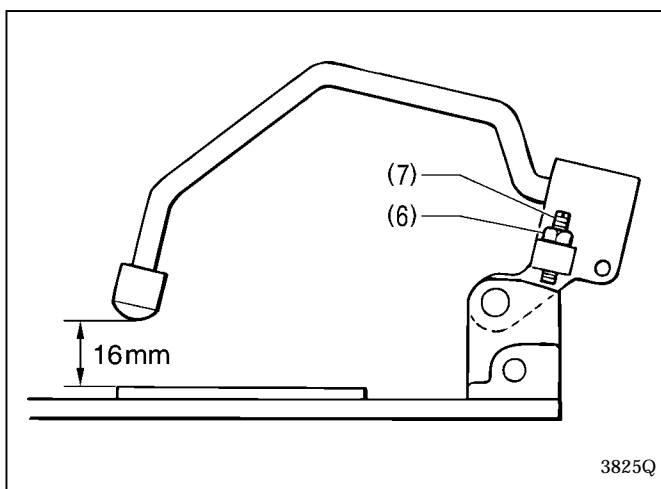


Loosen the nut (6), and turn the screw (7) to adjust the height.

4-23-7. Adjusting the length of the lower thread to be pulled for a safe sewing start

To secure the first stitch, while looper L is holding the first upper loop, the lower thread should be taut between looper L and the throat plate, and not be pulled off the lower thread presser.

Thread trimmer lever bracket B is operating just before the lower thread is trimmed when the feed bracket is at the home position, and that causes the lower thread to be pulled.

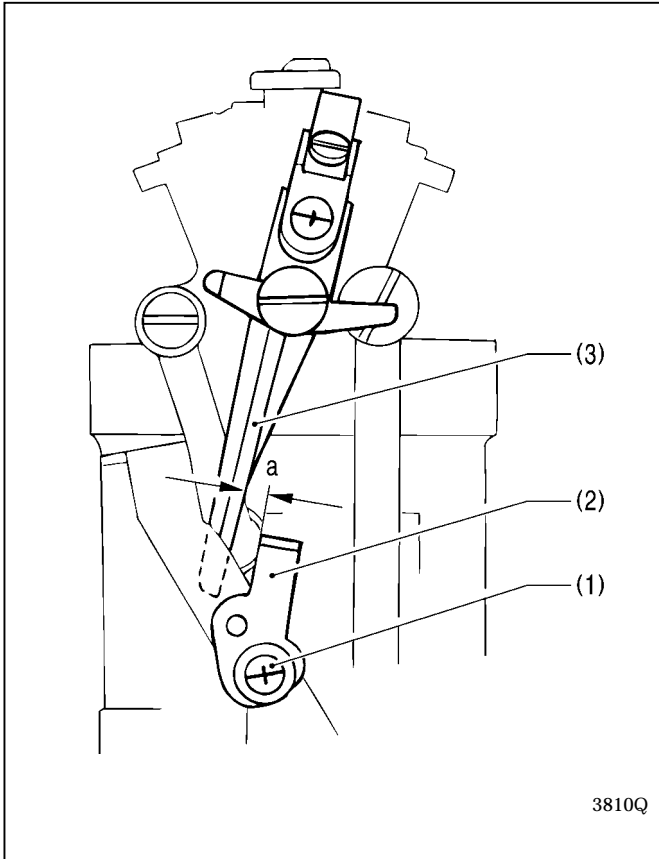


1. After automatic sewing is completed, switch to the MANUAL mode, and press the start switch.
2. Turn the pulley manually to check the condition of the lower thread.
3. If adjustment is necessary, loosen the screw (1), and turn the tension release plate (2) to adjust distance a between the tension release plate (2) and thread trimmer lever bracket B (3).

4. ADJUSTMENT

4-24. Adjusting the position of the lower thread presser (-02, -52 specifications)

The lower thread presser (1) should be adjusted so that it can securely clamp the lower thread.

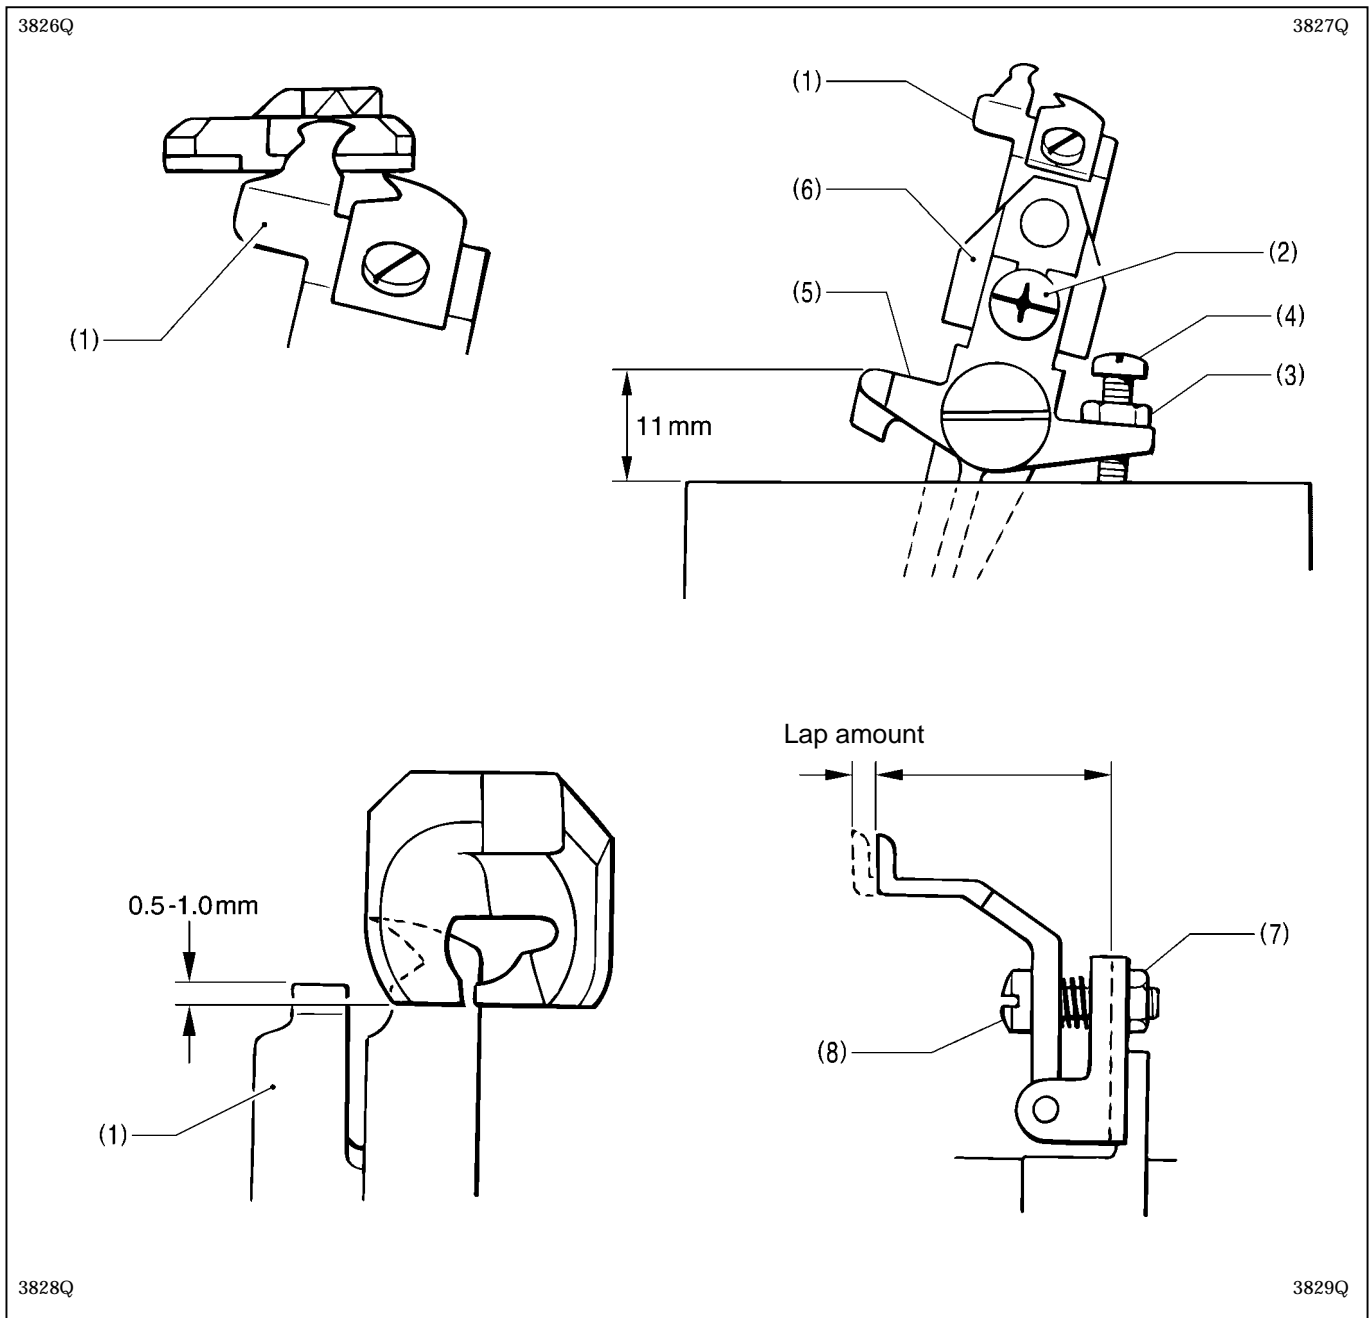


1. Loosen the screw (2), and move the lower thread presser (1) up and down so that its top surface is flush with the groove in the throat plate.
2. Make sure that the lower thread presser (1) does not fill the front groove of the throat plate.
If it does, loosen the nut (3), and adjust the screw (4).
Note: Set the height from the stopper portion of thread trimmer lever bracket B (5) to the top of the looper base, to 11 mm at maximum.
3. Make sure that the front of the throat plate overlaps with the lower thread presser (1) by 0.5 – 1.0 mm when thread trimmer lever bracket B (5) operates.
4. If adjustment is necessary, remove the lower thread presser bracket (6), loosen the nut (7), and adjust the screw (8).

4-25. Adjusting the rotating centers of the needle bar and the looper base

The rotating centers of the needle bar and the looper base are adjusted before shipment from the factory.

When disassembling the machine or exchanging parts such as the needle bar gear assembly, the needle bar, and looper base, adjust the clearance between the needle and the point of the looper so that it does not change through 360°.

Before adjusting the position of needle bar bush U, be sure to check there is no gap between the needle bar gear (1) and needle bar gear support A (2).

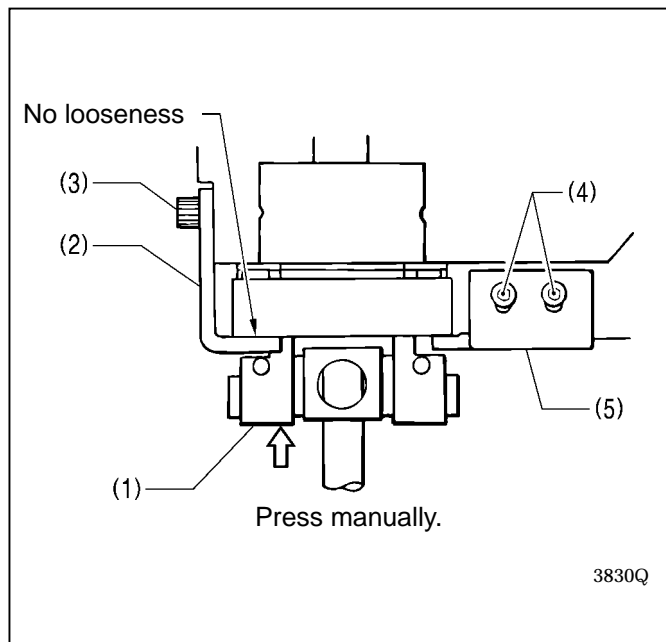


1. Raise the needle bar gear (1) using your fingers to check the looseness.

Note: If the looseness is great, the center of rotation can not be adjusted.

2. Loosen the two bolts (3), and adjust needle bar gear support A (2) so that the needle bar gear assembly can rotate smoothly without gap.
3. Loosen the two bolts (4), and adjust needle bar gear support B (5) in the same manner as above.

Note: When needle bar gear support A (2) or needle bar gear support B (5) is raised excessively, the looper base may be in an inappropriate position.

When the looper base is at 360° where the needle bar can move lightly up and down, adjust the position of needle bar bush U (7).

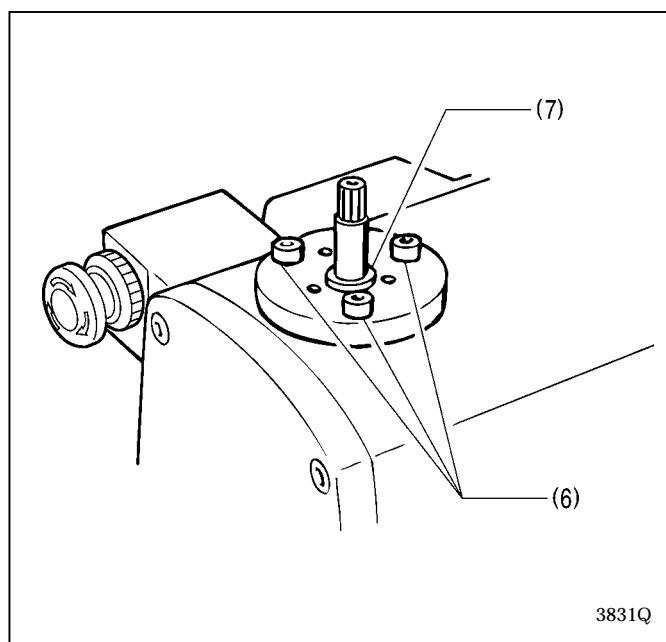

Loosen the three bolts (6) a little, and tap on the needle bar to adjust the position of needle bar bush U (7).

- * Adjust the back and forth movement of needle bar bush U (7) so that the clearance between the needle and the point of the looper is not changed when the looper base is at 0° and 180°.


Adjust the sideways movement of needle bar bush U (7) so that the clearance between the needle and the point of the looper is not changed when the looper base is at 90° and 270°.

Note: If the needle penetration movement is adjusted to one point, the clearance between the needle and the point of the looper will not be fixed.

4. ADJUSTMENT

4-26. Adjusting the needle bar stop position

The needle bar should stop when it rises from the lowest point at the outside sewing position.

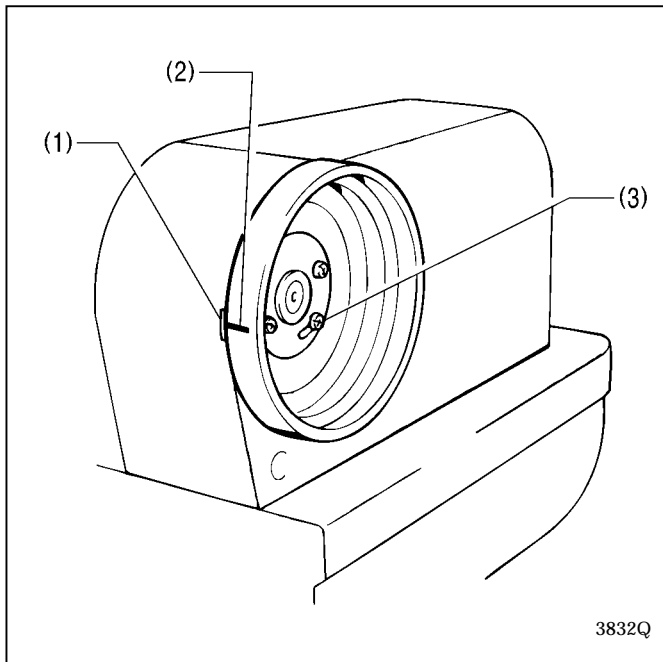

Loosen the screw (3), and align the notch (1) of belt cover F with the timing mark (2) on the pulley.

Note: When the stop position is changed, the operation range of spreader R will change. Reconfirm the mounting position of the upper movable knife.

5. POWER SUPPLY EQUIPMENT

DANGER



Wait at least 5 minutes after turning off the power switch and disconnecting the power cord from the wall outlet before opening the face plate of the control box. Touching areas where high voltages are present can result in severe injury.

Be sure to turn off the power and disconnect the plug before replacing and adjusting the parts associated with the power supply equipment.

5-1. Components inside the control box

The following are brief explanations of components inside the control box. See control circuit block diagram at the end of this manual for the details of the connections.

Control circuit board

The control circuit board is fixed to the rear panel of the control box.

This PCB serves to control machine operation.

Power supply circuit board

The power supply circuit board is fixed at the bottom of the control box.

Four fuses are mounted on this PCB. (Refer to "5-2. Fuse explanation".)

PMD PCB for θ -axis shaft

The PMD PCB for θ -axis shaft is fixed to the board on the top of the control box.

This is used to run the θ -axis pulse motor.

DC fan motor (large)

Cools the heat sink on the PCB.

DC fan motor (small)


Discharges air in the control box. Clean the inlet filter monthly.

Conversion transformer (depending on power supply voltage specification)

Adjust the power voltage so that it is that required for the PCB.



* There are two types of transformers: a high voltage transformer is equipped with 240V, 380V, 400V, and 415V specifications; a low voltage transformer is equipped with 100V and 110V specifications.

Transformer connections

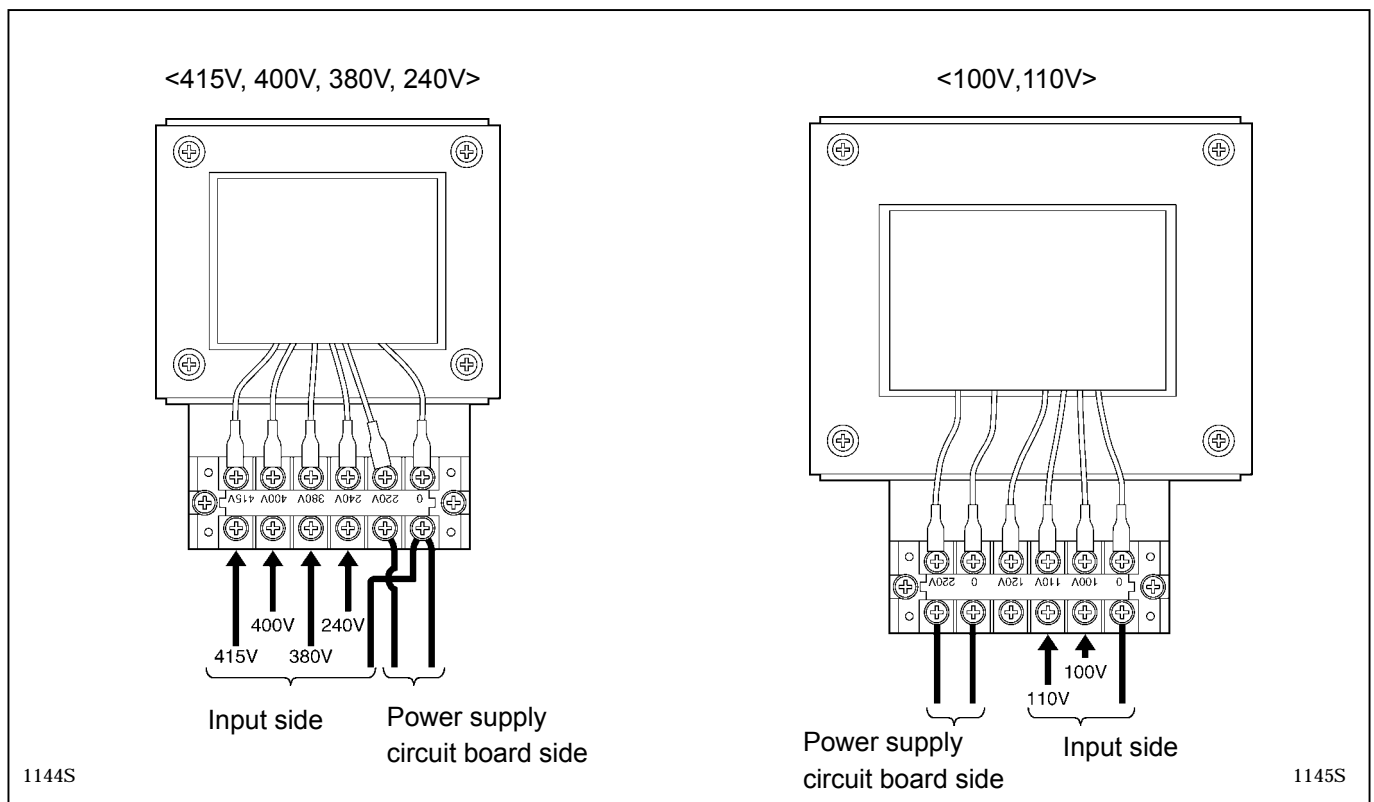

5. POWER SUPPLY EQUIPMENT

3518Q

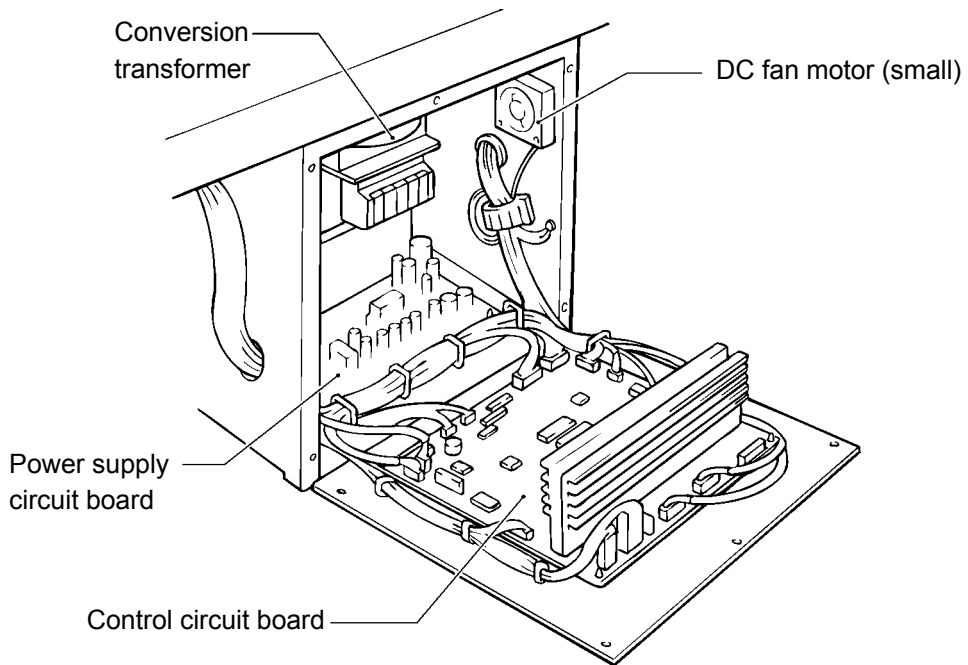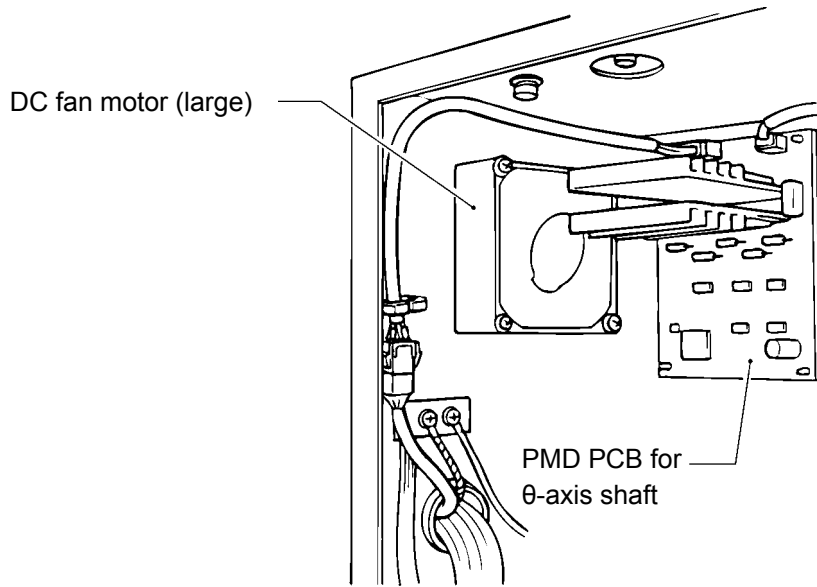

<Rear of the control box>

3519Q


5-2. Fuse explanation

Before replacing a fuse, be sure to read “5-2-1. Before replacing a fuse”.

If a component on a PCB is damaged, a fuse may blow again immediately even when it has been replaced.

When replacing a fuse, be sure to use the specified ones listed below.

No.	Part name	Part code	Manufacturer	When a fuse has blown
1	G fuse (5AFB) (quick melting type, 5A-250V)	S08030-000	Toyo Fuse Company TOYO5A	The feed mechanism does not operate.
2	G fuse (5AFB) (quick melting type, 5A-250V)	S08030-000	Toyo Fuse Company TOYO5A	The machine motor does not turn.
3	Fuse 6A (glass tube fuse, 6A-250V)	153242-000	Fuji Tanshi Company FGB0	The power indicator is not lit, and nothing operates.
4	Fuse 6A (glass tube fuse, 6A-250V)	153242-000	Fuji Tanshi Company FGB0	The power indicator is not lit, and nothing operates.

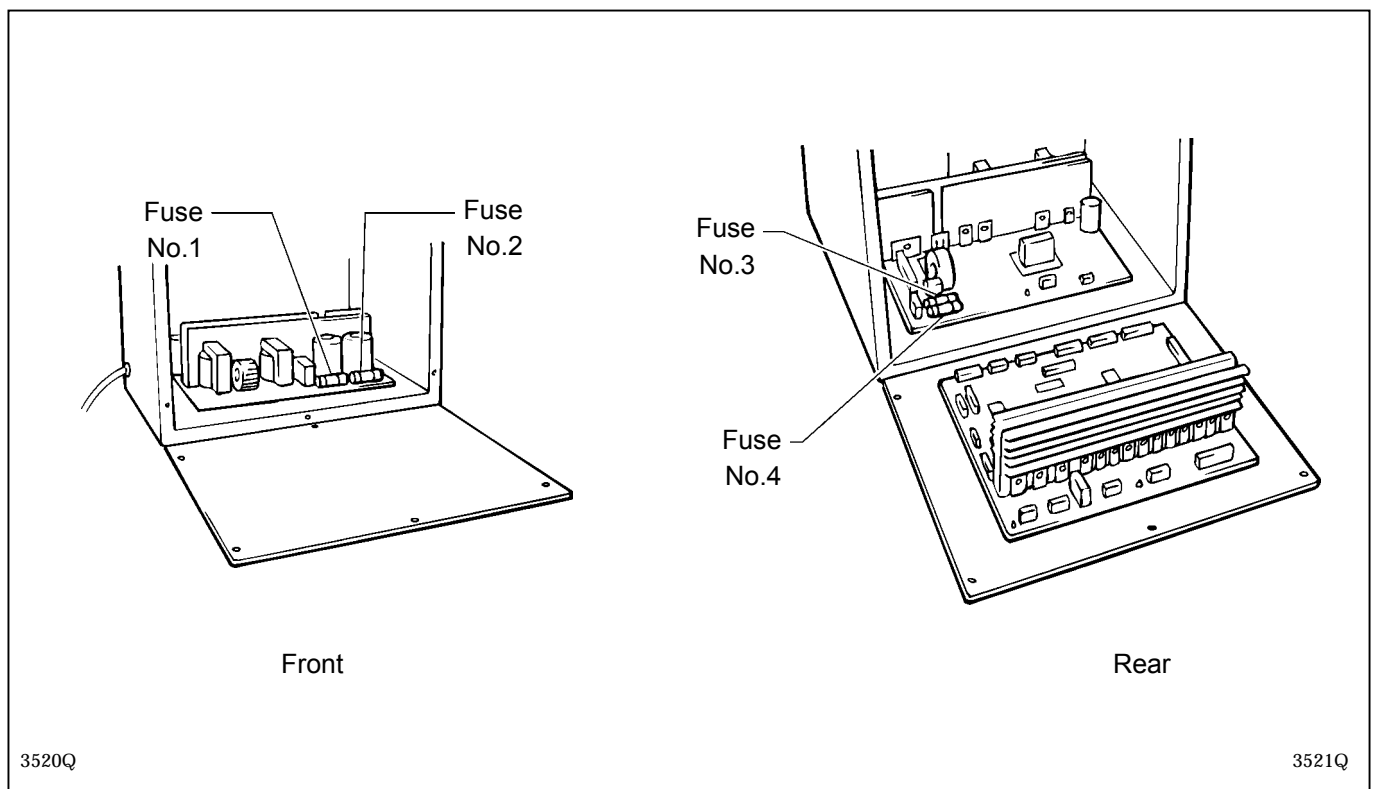


3520Q

3521Q

5. POWER SUPPLY EQUIPMENT

5-2-1. Before replacing a fuse

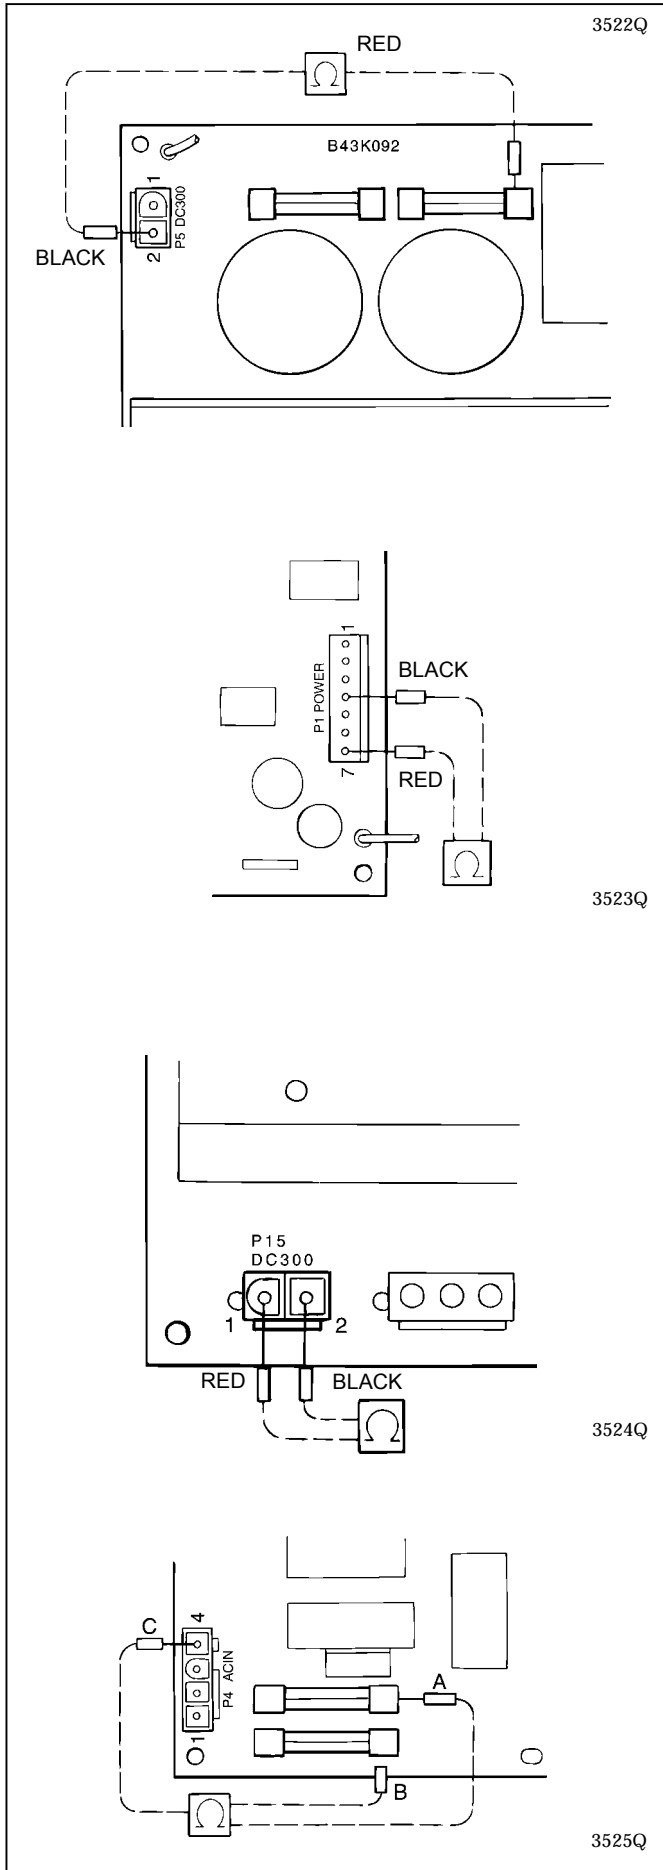

If fuse No.1 is blown

1. Separate connectors P5 (DC300) on the power supply circuit board, and measure the resistance with the polarities as shown in the figure.

If the resistance is 0 ohms (it means a short-circuit), replace the power supply circuit board.

2. Separate connectors P1 (POWER) on the power supply circuit board, and measure the resistance between pins 4 and 7 on the board with the polarities as shown in the figure.

If the resistance is 0 ohms (it means a short-circuit), replace the power supply circuit board.

If fuse No.2 is blown

Separate connectors P15 (DC300) on the control circuit board, and measure the resistance between pins 1 and 2 on the board with the polarities as shown in the figure. If the resistance is 0 ohms (it means a short-circuit), replace the power supply circuit board.

If fuse No.3 or 4 is blown

Separate connectors P1 (ACIN) on the power supply circuit board, and measure the resistance of the three places between A and B, A and C, and B and C on the board with the polarities as shown in the figure.


If the resistance is 0 ohms (it means a short-circuit), or the resistance between A and C or B and C is not infinity, replace the power supply circuit board.

5-3. Connectors

Most of the machine trouble is due to connector problems including improper connection or insufficient contact. Therefore, be sure to check if each connector is correctly inserted and that there is no contact failure between pins and wires before starting troubleshooting procedures.


5-3-1. Connector positions

Head harness relay

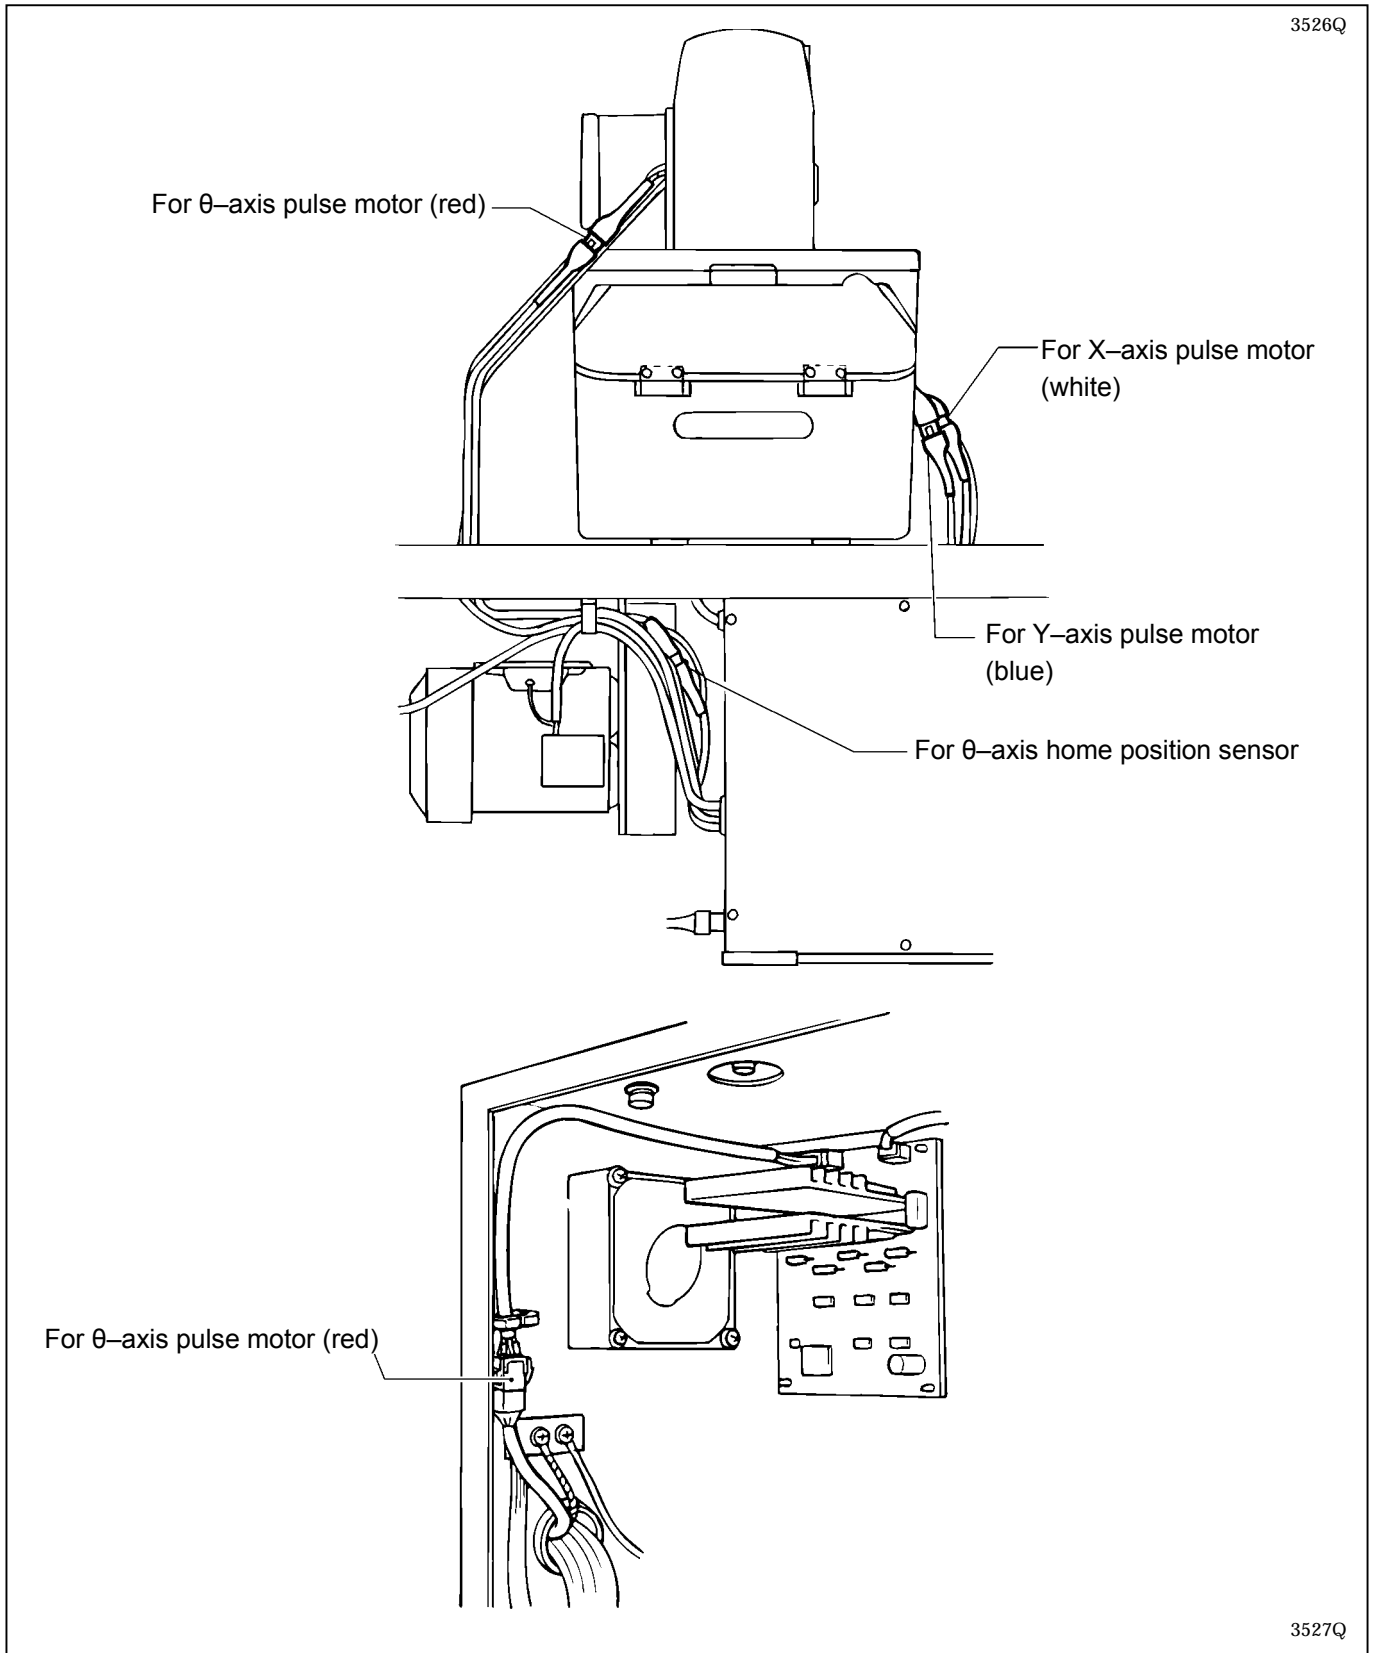


5. POWER SUPPLY EQUIPMENT


Outside of the control box

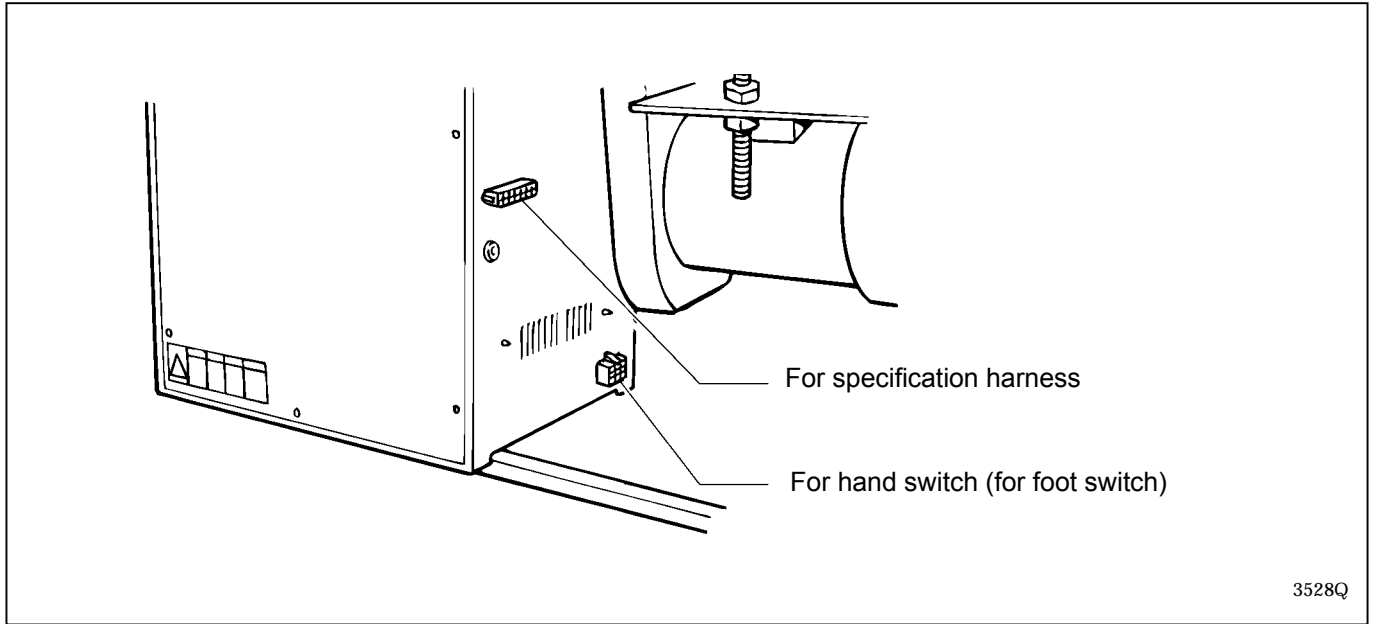


Inside of the control box

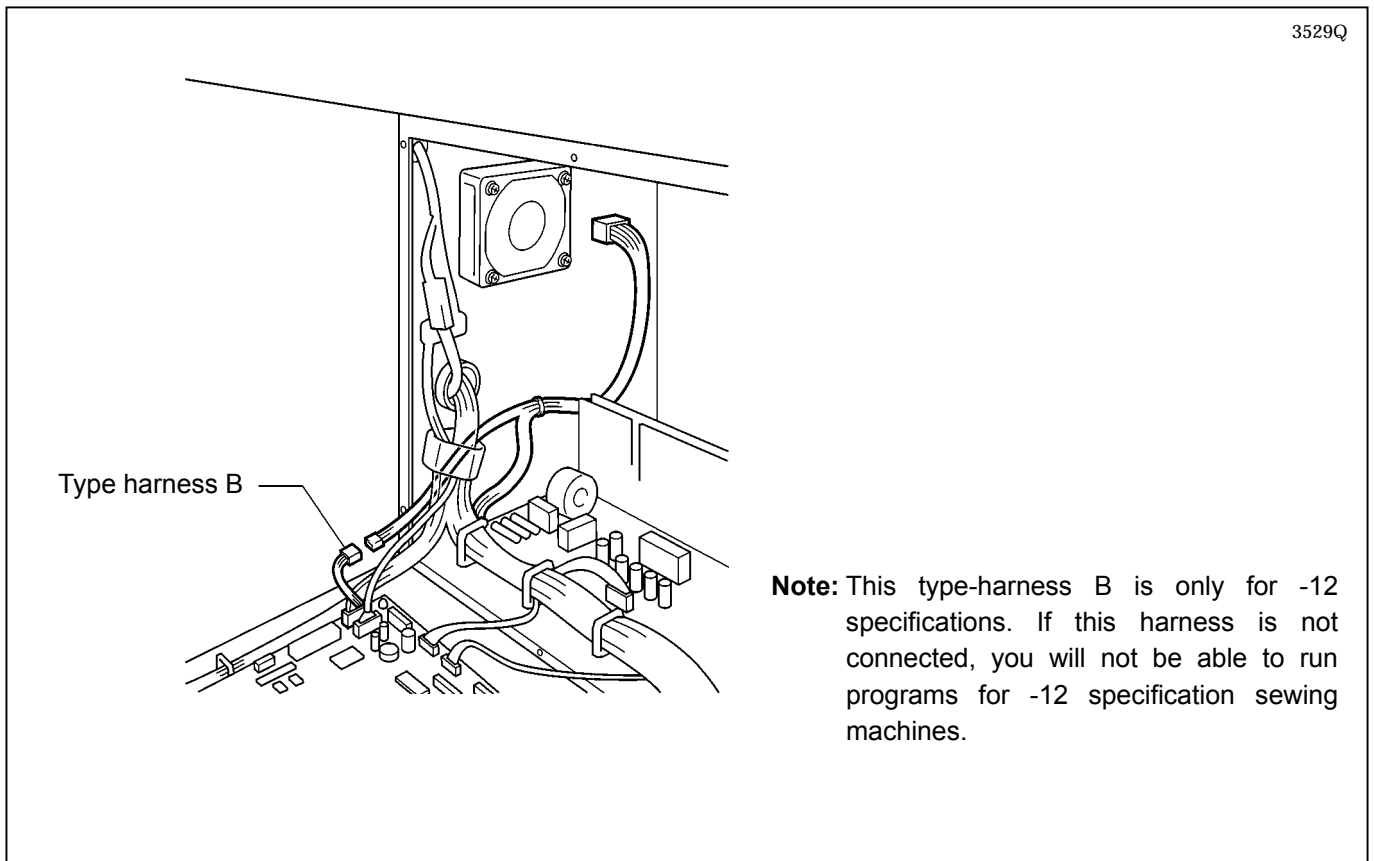

Control circuit board

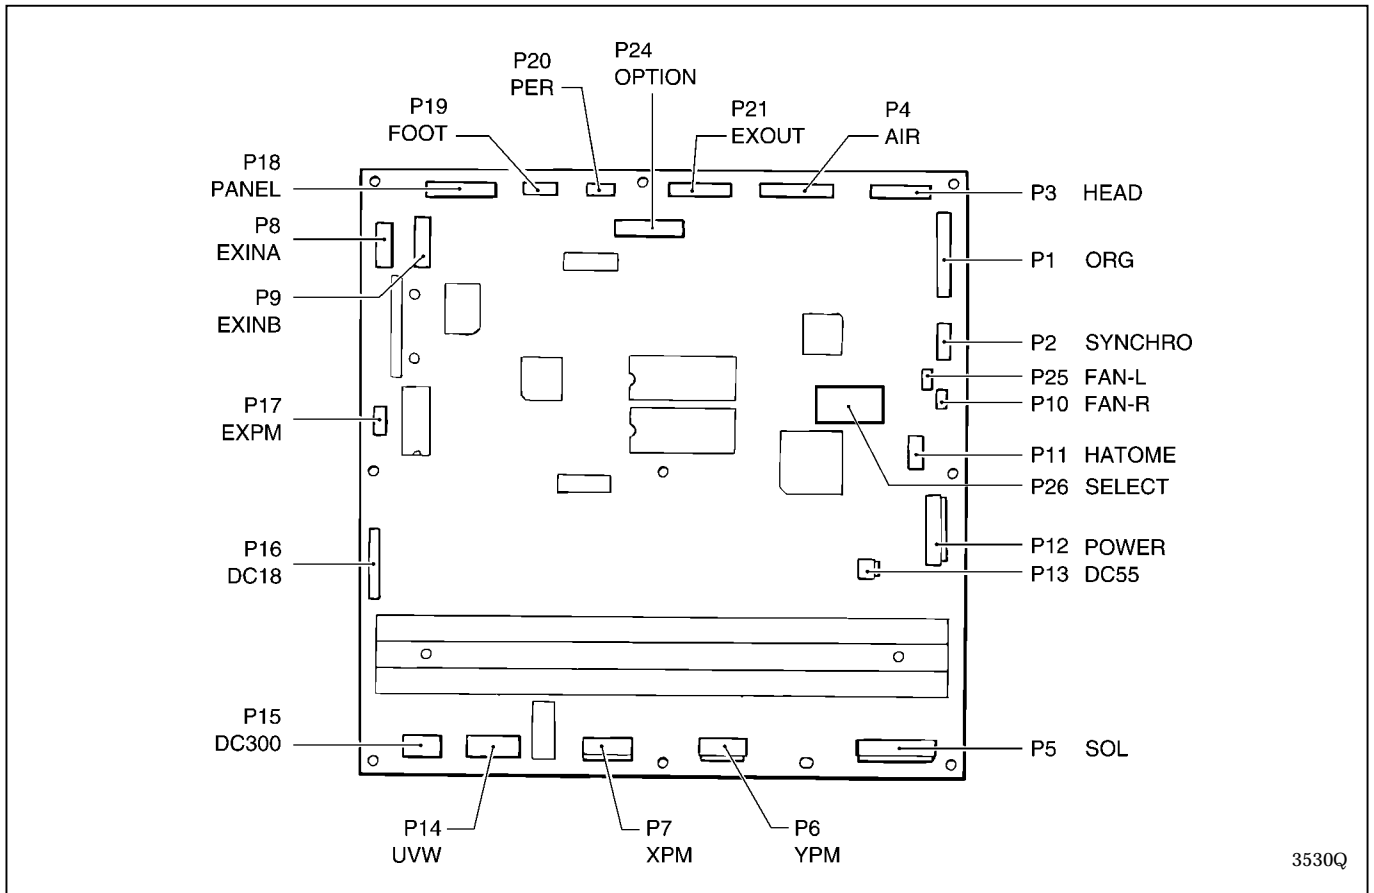


Power supply circuit board

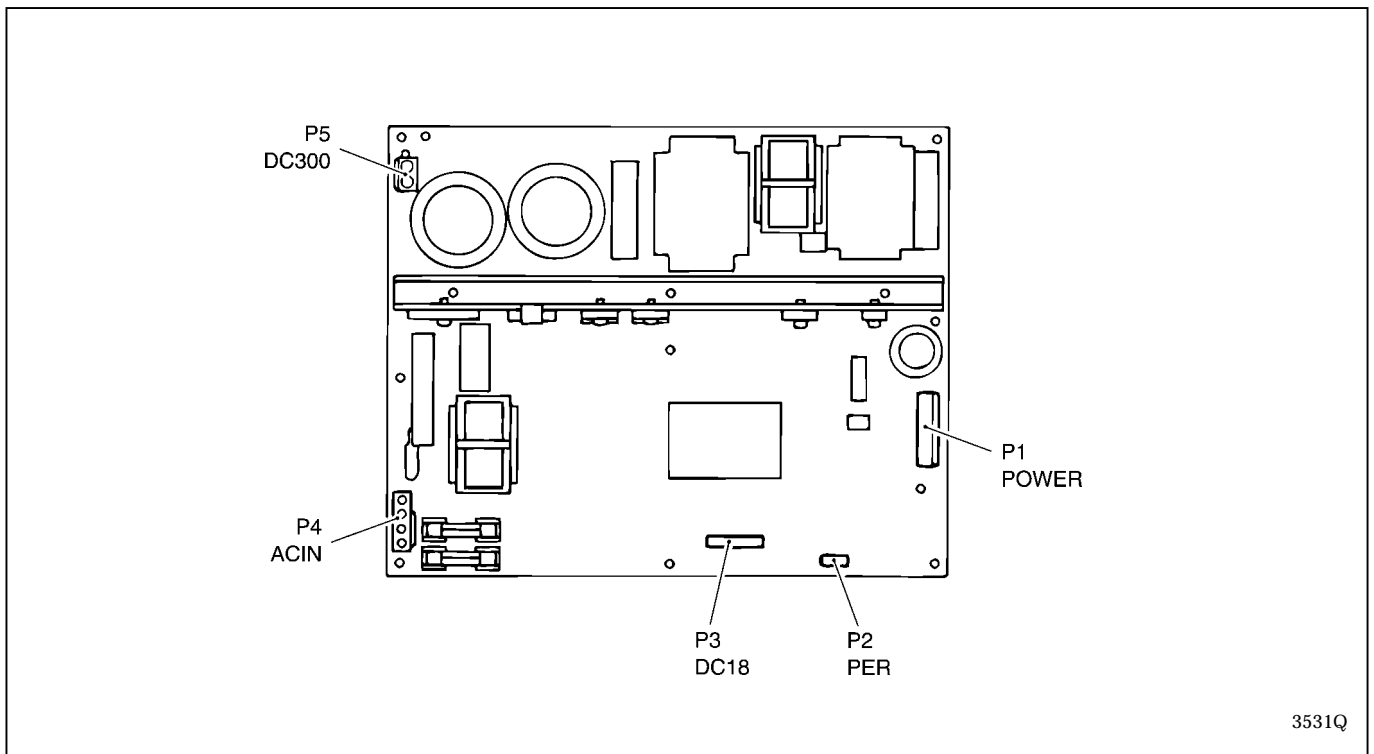


5. POWER SUPPLY EQUIPMENT


Panel circuit board

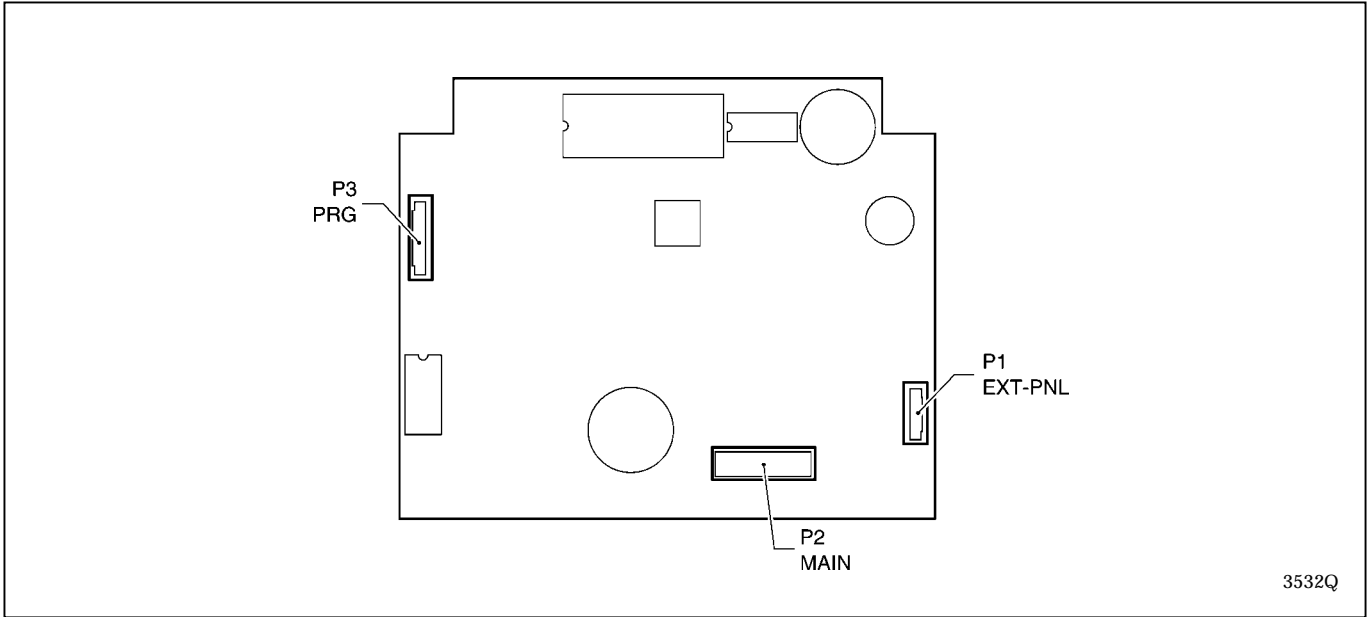

PMD PCB for θ -axis shaft

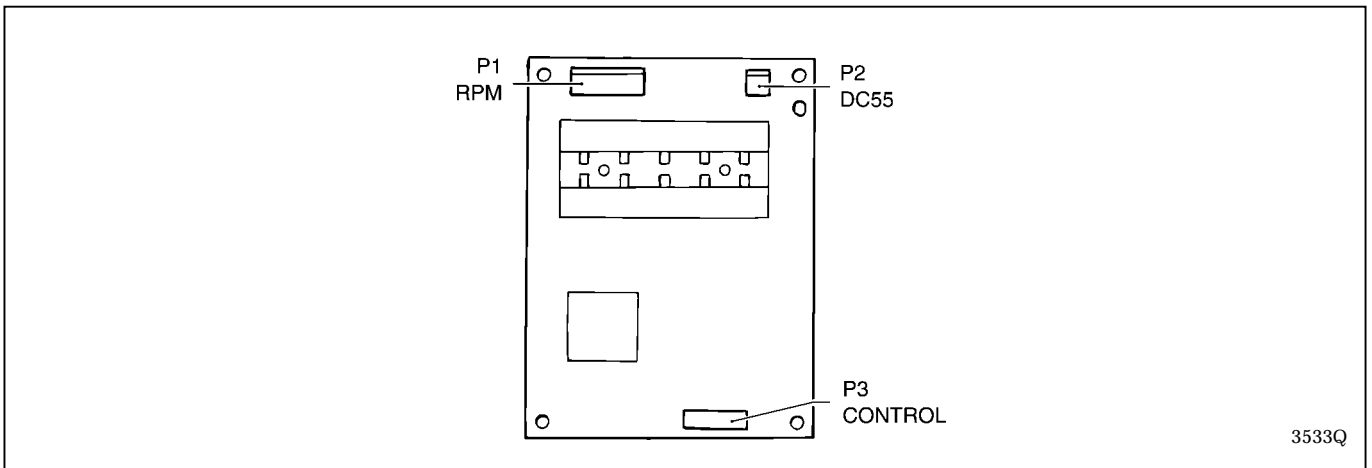

Indexer mechanism (optional)

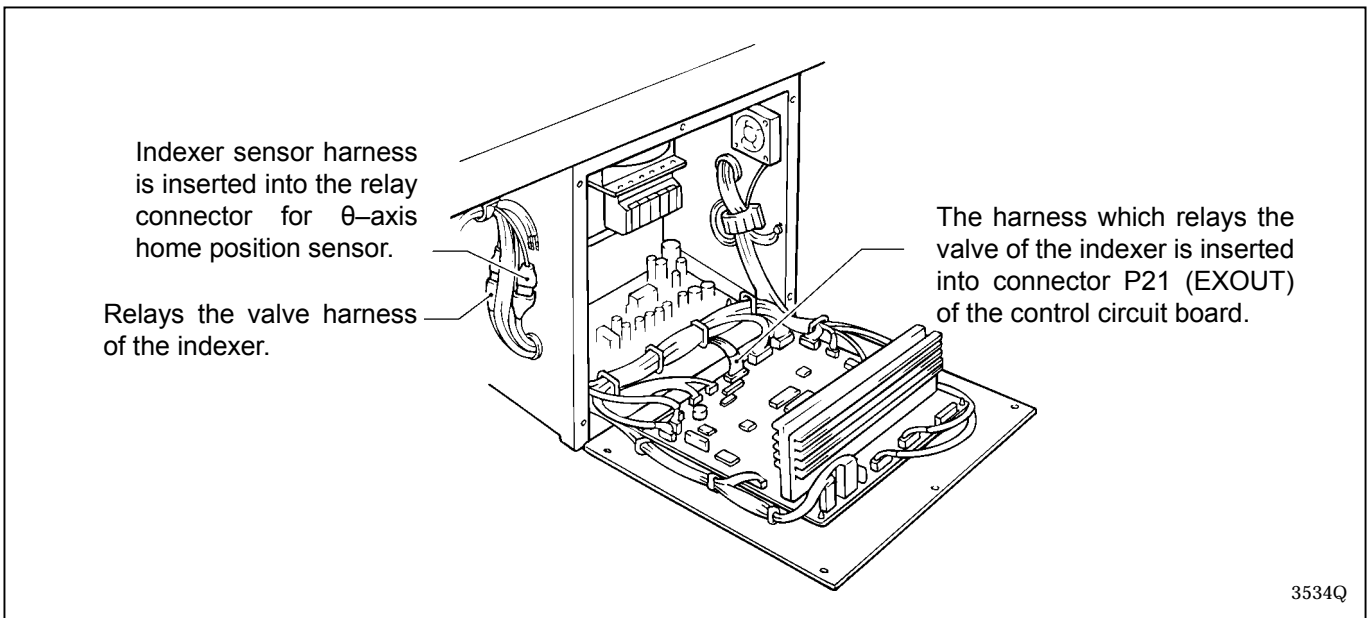

5-3-2. Signal names for connectors and probable symptoms due to poor contact

1. Relay connectors

For X-axis pulse motor (MOLEX 5557-06R, 5559-06P)

Pin no.	Signal name	Probable symptoms due to poor contact
1	X-axis PM driving current (XA)	<ul style="list-style-type: none"> • Left and right movement of feed bracket is not correct. • X-axis home position can not be found. • Error code E80 appears.
2	X-axis PM driving current (XB)	
3	X-axis PM driving current (XC)	
4	X-axis PM driving current (XD)	
5	X-axis PM driving current (XE)	
6	-	

For Y-axis pulse motor (MOLEX 5557-06R, [blue], 5559-06P [blue])

Pin no.	Signal name	Probable symptoms due to poor contact
1	Y-axis PM driving current (YA)	<ul style="list-style-type: none"> • Back and forth movement of feed bracket is not correct. • Y-axis home position can not be found. • Error code E81 appears.
2	Y-axis PM driving current (YB)	
3	Y-axis PM driving current (YC)	
4	Y-axis PM driving current (YD)	
5	Y-axis PM driving current (YE)	
6	-	

For θ -axis pulse motor (MOLEX 5557-06R [red], 5559-06P [red])

Pin no.	Signal name	Probable symptoms due to poor contact
1	θ -axis PM driving current (RA)	<ul style="list-style-type: none"> • Needle bar motion is not correct. • θ-axis home position can not be found. • Error code E82 appears.
2	θ -axis PM driving current (RB)	
3	θ -axis PM driving current (RC)	
4	θ -axis PM driving current (RD)	
5	θ -axis PM driving current (RE)	
6	-	

5. POWER SUPPLY EQUIPMENT

For θ -axis home position sensor (AMP 172163-1, 172171-1)

Pin no.	Signal name	Probable symptoms due to poor contact
1	+5V (for θ -axis home position sensor)	<ul style="list-style-type: none"> • θ-axis home position can not be found. • Error code E52 or E82 appears. • Indexer does not work properly. • Special lapel cutting device does not work properly. • One of error codes E06, E07, E36, E37, E38, E66, E67, E68, E200, E201, E202 and E203 appears.
2	+5V	
3	+24V	
4	+24V (for right cylinder driving sensor) (when indexer is attached)	
5	-	
6	θ -axis home position sensor signal	
7	Feed plate home position sensor signal (when indexer is attached) / Button hole cloth sensor (when special lapel cutting device is attached)	
8	Reserved	
9	Right driving sensor (when indexer is attached) / Button hole position sensor (when special lapel cutting device is attached)	
10	Left driving sensor (when indexer is attached) / Hammer home position sensor (when special lapel cutting device is attached)	
11	0V (for θ -axis home position sensor)	
12	0V (for feed plate home position sensor) (when indexer is attached)	
13	0V	
14	0V (for right driving sensor) (when indexer is attached)	
15	0V (for left driving sensor) (when indexer is attached)	

For specification harness (MOLEX 5557-16R, 5559-16P)

Pin no.	Signal name	Probable symptoms due to poor contact
1	TYPE 1 (COM)	<ul style="list-style-type: none"> • Error code E09 appears.
2	TYPE 2 (COM)	
3	TYPE 3 (COM)	
4	TYPE 4 (COM)	
5	TYPE 5 (COM)	
6	TYPE 6 (COM)	
7	TYPE 7 (COM)	
8	TYPE 8 (COM)	
9	TYPE 1	
10	TYPE 2	
11	TYPE 3	
12	TYPE 4	
13	TYPE 5	
14	TYPE 6	
15	TYPE 7	
16	TYPE 8	

For hand switch (foot switch) (AMP 172161-1, 172169-1)

Pin no.	Signal name	Probable symptoms due to poor contact
1	Work clamp switch signal (common side)	<ul style="list-style-type: none"> • Work clamp does not work when work clamp switch is pressed. • Machine does not start. • Home position detection is not possible immediately after the power is turned on.
2	Work clamp switch signal	
3	Reserved (common side)	
4	Reserved	
5	Ground	
6	-	
7	Start switch signal (common side)	
8	Start switch signal	
9	-	

For indexer valve (MOLEX 5025-15P1, 5025-15R1) (when indexer is attached) /

For upper thread nipper (MOLEX 5025-15P1, 5025-15R1) (when upper thread nipper is attached) /

For special lapel cutting valve (MOLEX 5025-15P1, 5025-15R1) (when special lapel cutting device is attached)

Pin no.	Signal name	Probable symptoms due to poor contact
1	Reserved	<ul style="list-style-type: none"> • Indexer does not work properly. • Upper thread nipper does not work properly. • Special lapel cutting device does not work properly. • One of error codes E07, E37, E38, E66, E67 and E68 appears.
2	Upper thread nipper [1] (upper and lower)	
3	Upper thread nipper [2] (Open and close)	
4	Feed plate fixing valve motion signal	
5	Chuck valve motion signal / Special lapel cutting valve motion signal	
6	+24V	
7	+24V	
8	+24V	
9	+24V (for feed plate fixing valve)	
10	+24V (for chuck valve)	
11	Feed plate driving valve signal	
12	+24V (for feed plate driving valve)	
13	-	
14	-	
15	-	

2. Connectors to be attached to control circuit board

P1 [ORG] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. XHR-12)

Pin no.	Signal name	Probable symptoms due to poor contact
1	-	<ul style="list-style-type: none"> • X-axis or Y-axis home position can not be found. • One of error codes E50, E51, E80 and E81 appears. • Error codes E05 or E35 appears. (when pressure sensor is attached)
2	X-axis home position sensor signal	
3	0V (for X-axis home position sensor)	
4	+5V (for X-axis home position sensor)	
5	-	
6	Y-axis home position sensor signal	
7	0V (for Y-axis home position sensor)	
8	+5V (for Y-axis home position sensor)	
9	-	
10	Pressure sensor signal	
11	0V (for pressure sensor)	
12	-	

5. POWER SUPPLY EQUIPMENT

P2 [SYNCHRO] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. XHR-5)

Pin no.	Signal name	Probable symptoms due to poor contact
1	+5V	<ul style="list-style-type: none"> • Machine motor does not run. • Sewing machine motor is running unevenly. • One of error codes E10, E40, E70, E71, E76, E77, and E91 appears.
2	Encoder timing signal	
3	Needle down signal	
4	Needle up signal	
5	0V	

P3 [HEAD] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. XHR-9)

Pin no.	Signal name	Probable symptoms due to poor contact
1	Emergency stop switch normal close signal	<ul style="list-style-type: none"> • Error code E60 appears and machine stops. • One of error codes E00, E12, E30, E42, and E72 appears.
2	0V (for emergency stop switch)	
3	Emergency stop switch normal open signal	
4	-	
5	-	
6	-	
7	+5V (for knife ON sensor)	
8	Knife ON sensor signal	
9	Knife ON sensor cathode	

P4 [AIR] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. H12P-SHF-AA)

Pin no.	Signal name	Probable symptoms due to poor contact
1	Upper thread adjuster valve signal	<ul style="list-style-type: none"> • Upper thread adjuster does not work. • Upper thread can not be trimmed. • Lower thread can not be trimmed. • Knife does not work. • Cloth opener does not work. • Work clamp does not work. • One of error codes E12, E15, E42, E45, E72, and E75 appears.
2	Upper thread trimmer valve signal	
3	Lower thread trimmer valve signal	
4	Knife driving valve signal	
5	Cloth opener valve signal	
6	-	
7	-	
8	Work clamp valve	
9	-	
10	+24V (for work clamp, cloth opener, and lower thread trimmer)	
11	+24V (for upper thread adjuster, upper thread trimmer, and knife driving)	
12	-	

P5 [SOL] (not connected)

P6 [YPM] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. VHR-5N [blue])

Pin no.	Signal name	Probable symptoms due to poor contact
1	Y-axis PM driving current (YA)	<ul style="list-style-type: none"> • Back and forth motion of feed bracket is not correct. • Y-axis home position can not be found. • Error code E81 appears.
2	Y-axis PM driving current (YB)	
3	Y-axis PM driving current (YC)	
4	Y-axis PM driving current (YD)	
5	Y-axis PM driving current (YE)	

P7 [XPM] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. VHR-5N)

Pin no.	Signal name	Probable symptoms due to poor contact
1	X-axis PM driving current (XA)	<ul style="list-style-type: none"> • Left and right motion of feed bracket is not correct. • X-axis home position can not be found. • Error code E80 appears.
2	X-axis PM driving current (XB)	
3	X-axis PM driving current (XC)	
4	X-axis PM driving current (XD)	
5	X-axis PM driving current (XE)	

5. POWER SUPPLY EQUIPMENT

P8 [EXINA] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. PHDR-16VS)

Pin no.	Signal name	Probable symptoms due to poor contact
1	0V (for head safety switch)	<ul style="list-style-type: none"> • One of error codes E02, E09, E15, E32, E45, E62, and E75 appears.
2	Head safety switch signal	
3	-	
4	0V (for lower thread trimming OFF sensor)	
5	Lower thread trimming OFF sensor signal	
6	+24V (for lower thread trimming OFF sensor)	
7	0 V (for TYPE 5)	
8	TYPE 5	
9	-	
10	0 V (for TYPE 6)	
11	TYPE 6	
12	-	
13	0 V (for TYPE 7)	
14	TYPE 7	
15	-	
16	-	

P9 [EXINB] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. PHDR-18VS)

Pin no.	Signal name	Probable symptoms due to poor contact
1	0V (for left driving sensor) (when indexer is attached)	<ul style="list-style-type: none"> • θ-axis home position can not be found. • Error code E52 or E82 appears. • Indexer does not work properly. • One of error codes E06, E07, E36, E37, E38, E66, E67, and E68 appears.
2	Left driving sensor signal (when indexer is attached)	
3	+24V (for left driving sensor) (when indexer is attached)	
4	0V (for right driving sensor) (when indexer is attached)	
5	Right driving sensor signal (when indexer is attached)	
6	+24V (for right driving sensor) (when indexer is attached)	
7	-	
8	-	
9	-	
10	0V (for feed plate home position sensor) (when indexer is attached)	
11	Feed plate home position sensor signal (when indexer is attached)	
12	+24V (for feed plate home position sensor) (when indexer is attached)	
13	0V (for θ -axis home position sensor)	
14	θ -axis home position sensor signal	
15	-24V	
16	+5V	
17	+5V	
18	+5V (for θ -axis home position sensor)	

5. POWER SUPPLY EQUIPMENT

P10 [FAN-R] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. PHR-3)

Pin no.	Signal name	Probable symptoms due to poor contact
1	+24V	• Error code E93 appears.
2	Fan lock error signal	
3	0V	

P11 [HATOME] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. PHDR-12VS)

Pin no.	Signal name	Probable symptoms due to poor contact
1	-	<ul style="list-style-type: none"> • Rotation motion of feed mechanism is not correct. • θ-axis position can not be found. • Error code E52 or E82 appears.
2	-	
3	-	
4	-	
5	θ -axis PM clock signal	
6	θ -axis PM direction signal	
7	θ -axis PM save signal	
8	θ -axis PM excitation signal	
9	+5V	
10	+5V	
11	0V	
12	0V	

P12 [POWER] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. VHR-7N)

Pin no.	Signal name	Probable symptoms due to poor contact
1	+5V	<ul style="list-style-type: none"> • Power does not come on. • Feed bracket does not move. • Machine operation becomes unstable. • Home position can not be found. • Error code E80 appears.
2	+24V	
3	0V	
4	+55V	
5	+55V	
6	0V (P0V)	
7	0V (P0V)	

P13 [DC55] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. VHR-2N)

Pin no.	Signal name	Probable symptoms due to poor contact
1	+55V	<ul style="list-style-type: none"> • Feed bracket does not move. • Home position can not be found. • Error code E80 appears.
2	0V (P0V)	

P14 [UVW] (MOLEX3191-03R1)

Pin no.	Signal name	Probable symptoms due to poor contact
1	Machine motor U phase	<ul style="list-style-type: none"> • Machine motor does not run. • Rotation of machine motor is not correct. • Error code E70 or E91 appears.
2	Machine motor V phase	
3	Machine motor W phase	

P15 [DC300] (MOLEX3191-02R1)

Pin no.	Signal name	Probable symptoms due to poor contact
1	0V (for machine motor)	<ul style="list-style-type: none"> • Machine motor does not run. • Rotation of machine motor is not correct. • Error code E70 or E91 appears.
2	+300V	

5. POWER SUPPLY EQUIPMENT

P16 [DC18] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. PHR-11)

Pin no.	Signal name	Probable symptoms due to poor contact
1	+18V (A18V)	<ul style="list-style-type: none"> • Machine motor does not run. • Rotation of machine motor is not correct. • Error code E70 or E91 appears.
2	0V (A0V)	
3	-	
4	+18V (B18V)	
5	0V (B0V)	
6	-	
7	+18V (C18V)	
8	0V (C0V)	
9	-	
10	+18V (D18V)	
11	0V (D0V)	

P17 [EXPM] (not attached)

P18 [PANEL] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. XHR-10)

Pin no.	Signal name	Probable symptoms due to poor contact
1	0V	<ul style="list-style-type: none"> • No keys on panel are activated.
2	0V	
3	Send (CHO)	
4	DTR (CHO)	
5	Receive (CHO)	
6	DSR (CHO)	
7	+11V	
8	-11V	
9	+5V	
10	+5V	

P19 [FOOT] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. PHR-6)

Pin no.	Signal name	Probable symptoms due to poor contact
1	Start switch signal (common side)	<ul style="list-style-type: none"> • Work clamp does not move when work clamp switch is pressed. • Machine does not start. • Home position detection is not possible immediately after the power is turned on.
2	Start switch signal	
3	Work clamp switch signal (common side)	
4	Work clamp switch signal	
5	Reserved (common side)	
6	Reserved	

P20 [PER] (JAPAN SOLDERLESS TERMINAL MFG.CO., LTD PHR-5)

Pin no.	Signal name	Probable symptoms due to poor contact
1	Relay condition input	<ul style="list-style-type: none"> • One of error codes E26, E92, E98, and E99 appears.
2	Primary voltage detect	
3	Relay OFF output	
4	+55V OFF output	
5	0V	

5. POWER SUPPLY EQUIPMENT

P21 [EXOUT] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. H10P-SHF-AA) (when indexer is attached)

Pin no.	Signal name	Probable symptoms due to poor contact
1	Feed plate driving valve motion signal	<ul style="list-style-type: none"> • Indexer does not work properly. • One of error codes E07, E37, E38, E66, E67 and E68 appears.
2	Chuck valve motion signal	
3	Feed plate fixing valve motion signal	
4	Reserved	
5	Reserved	
6	Reserved	
7	-	
8	-	
9	+24V	
10	+24V	

P24 [OPTION] (not attached)

P25 [FAN-L] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. PHR-3)

Pin no.	Signal name	Probable symptoms due to poor contact
1	+24V	<ul style="list-style-type: none"> • Error code E94 appears.
2	Fan lock error signal	
3	0V	

P26 [SELECT] (MOLEX 5566-10A)

Pin no.	Signal name	Probable symptoms due to poor contact
1	TYPE 1	<ul style="list-style-type: none"> • Error code E09 appears.
2	TYPE 2	
3	TYPE 3	
4	TYPE 4	
5	TYPE 8	
6	0V (for TYPE 1)	
7	0V (for TYPE 2)	
8	0V (for TYPE 3)	
9	0V (for TYPE 4)	
10	0V (for TYPE 8)	

3. Connectors to be attached to power supply circuit board

P1 [POWER] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. VHR-7N)

Pin no.	Signal name	Probable symptoms due to poor contact
1	+5V	<ul style="list-style-type: none"> • Power does not come on. • Feed bracket does not move. • Machine operation becomes unstable. • Home position can not be found. • Error code E80 appears.
2	+24V	
3	0V	
4	+55V	
5	+55V	
6	0V(P0V)	
7	0V(P0V)	

P2 [PER] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. PHR-5)

Pin no.	Signal name	Probable symptoms due to poor contact
1	Relay condition input	<ul style="list-style-type: none"> • One of error codes E26, E92, E98, and E99 appears.
2	Primary voltage detect	
3	Relay OFF output	
4	+55V OFF output	
5	0V	

P3 [DC18] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. PHR-11)

Pin no.	Signal name	Probable symptoms due to poor contact
1	+18V (A18V)	<ul style="list-style-type: none"> • Machine motor does not run. • Rotation of machine motor is not correct. • Error code E70 or E91 appears.
2	0V (A0V)	
3	-	
4	+18V (B18V)	
5	0V (B0V)	
6	-	
7	+18V (C18V)	
8	0V (C0V)	
9	-	
10	+18V (D18V)	
11	0V (D0V)	

P4 [ACIN] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. LP-04-2V)

Pin no.	Signal name	Probable symptoms due to poor contact
1	AC input	<ul style="list-style-type: none"> • Power does not come on. • Machine operation becomes unstable. • Error code E92 appears.
2	AC input	
3	-	
4	Ground	

P5 [DC300] (MOLEX3191-02R1)

Pin no.	Signal name	Probable symptoms due to poor contact
1	0V (for machine motor)	<ul style="list-style-type: none"> • Machine motor does not run. • Rotation of machine motor is not correct. • Error code E70 or E91 appears.
2	+300V	

5. POWER SUPPLY EQUIPMENT

4. Connectors to be attached to panel circuit board

P1 [EXT-PNL] (not attached)

P2 [MAIN] (OMRON XG4M-1630-U)

Pin no.	Signal name	Probable symptoms due to poor contact
1	0V	<ul style="list-style-type: none">• No keys on the operation panel are activated.• Programmer does not work.
2	0V	
3	0V	
4	0V	
5	T x D	
6	DTR	
7	R x D	
8	DSR	
9	EMLED	
10	+12V	
11	+12V	
12	+12V	
13	-12V	
14	+5V	
15	+5V	
16	+5V	

P3 [PRG] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. PHR-10)

Pin no.	Signal name	Probable symptoms due to poor contact
1	0V	<ul style="list-style-type: none">• Programmer does not work.
2	0V	
3	T x D	
4	DTR	
5	R x D	
6	DSR	
7	+12V	
8	-12V	
9	+5V	
10	+5V	

5. Connectors to be attached to PMD PCB for θ axis

P1 [RPM] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. VHR-6N)

Pin no.	Signal name	Probable symptoms due to poor contact
1	θ -axis PM driving current (RA)	<ul style="list-style-type: none"> • Needle bar motion is not correct. • θ-axis home position can not be found. • Error code E52 or E82 appears.
2	θ -axis PM driving current (RB)	
3	θ -axis PM driving current (RC)	
4	θ -axis PM driving current (RD)	
5	θ -axis PM driving current (RE)	
6	-	

P2 [DC55] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. VHR-2N)

Pin no.	Signal name	Probable symptoms due to poor contact
1	+55V	<ul style="list-style-type: none"> • Feed bracket does not move. • Home position can not be found. • Error code E80 appears.
2	0V (P0V)	

P3 [CONTROL] (JAPAN SOLDERLESS TERMINAL MFG. CO., LTD. H8P-SHF-AA)

Pin no.	Signal name	Probable symptoms due to poor contact
1	θ -axis PM clock signal	<ul style="list-style-type: none"> • Needle bar motion is not correct. • θ-axis home position can not be found. • Error code E52 or E82 appears.
2	θ -axis PM direction signal	
3	θ -axis PM save signal	
4	θ -axis PM excitation signal	
5	+5V	
6	+5V	
7	0V	
8	0V	

5-4. Specification harness connections

-02, -12, -52 specifications			
<L1>	<L2>	<L3>	<L4>
-02, -12, -52 specifications			-00, -01 specifications
<L5>	<L6>	<L7>	<L7>

3535Q

* The dotted lines indicate -12 specifications and the broken lines indicate -52 specifications only.


5-5. Summary of DIP switches

Always turn off the power supply before changing any of the DIP switch settings.

5-5-1. Panel DIP switches

The ON/OFF positions of the DIP switches inside the operation panel are checked only once when the power is turned on.

Any changes to the DIP switch positions will not be effective until the power is switched off and back on again.

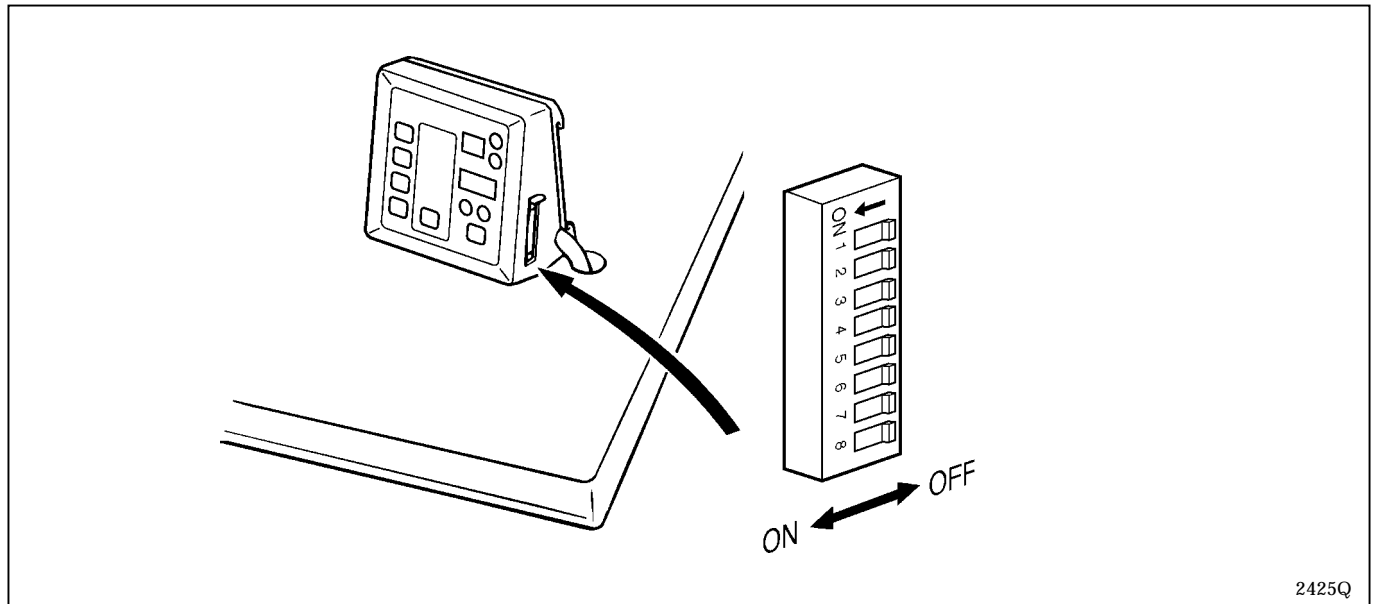

2425Q

No.	ON/OFF	Setting items	Default
1*	ON	Program mode disabled	OFF
	OFF	Program mode enabled	
2	ON	Switches between taper bar \leftrightarrow straight bar tacking	OFF
	OFF	Normal	
3	ON	Set the feed bracket to the front position	OFF
	OFF	Set the feed bracket to the back position	
4	ON	-	OFF
	OFF	-	
5	ON	Single-pedal operation	OFF
	OFF	Dual-pedal operation	
6	ON	-	OFF
	OFF	-	
7	ON	-	OFF
	OFF	-	
8**	ON	Maximum stitch width correction amount = 2.0 mm	OFF
	OFF	Maximum stitch width correction amount = 1.0 mm	

* If program mode is disabled, operation becomes as follows.

- Program numbers, knife operations and the production counter cannot be changed.
- The modes change in the order Automatic \rightarrow Test feed \rightarrow Manual \rightarrow Automatic.

** If the maximum stitch width correction amount is set to 2.0 mm, carry out the adjustment in "9-14. Adjusting the position of the work clamp plate". If this adjustment is not carried out, the throat plate and needle plate may interfere with each other.

If the stitch width correction amount is set to more than 1.0 mm, the sewing speed will be limited in accordance with the value set.

5. POWER SUPPLY EQUIPMENT

5-5-2. Circuit board DIP switches


⚠ DANGER

⚠ Wait at least 5 minutes after turning off the power switch and disconnecting the power cord from the wall outlet before opening the face plate of the control box. Touching areas where high voltages are present can result in severe injury.

The ON/OFF positions of the DIP switches inside the control box are checked only once when the power is turned on.

Any changes to the DIP switch positions will not be effective until the power is switched off and back on again.


Circuit board DIP switch C

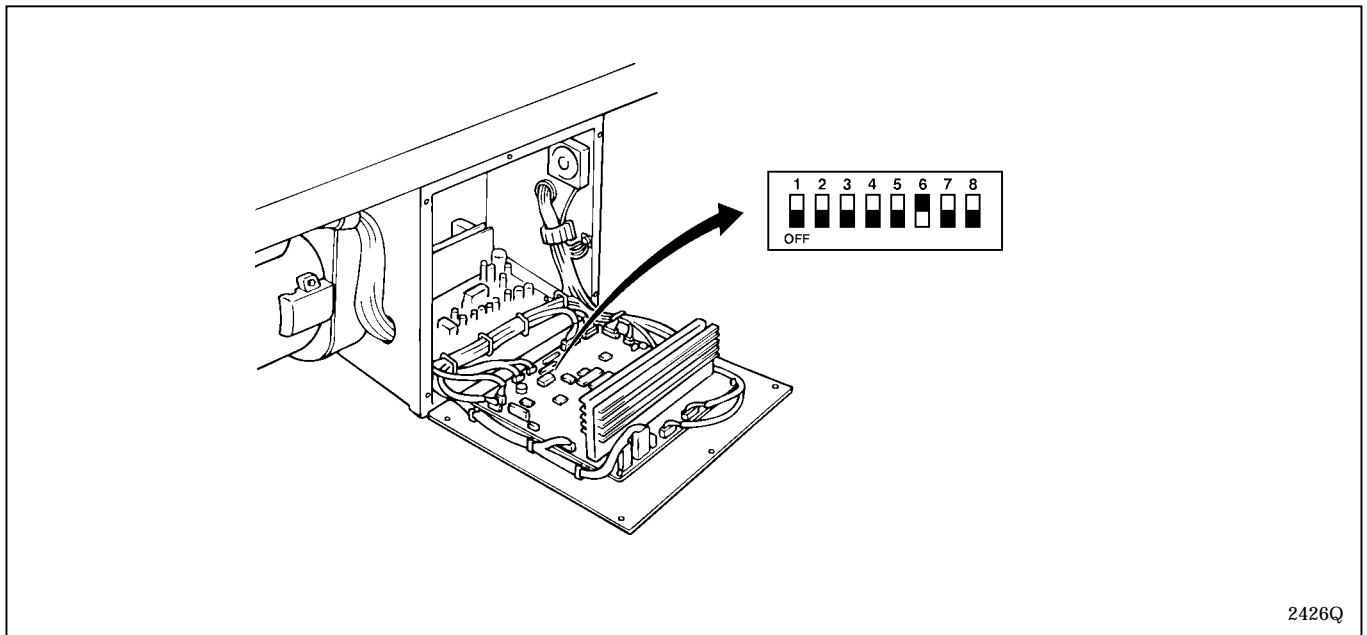

No.	ON/OFF	Setting items	Default
1	ON	Special lapel cutting device enabled	OFF
	OFF	Special lapel cutting device disabled	
2	ON	Button hole sensor of special lapel cutting device enabled	OFF
	OFF	Button hole sensor of special lapel cutting device disabled	
3	ON	With pressure sensor	OFF
	OFF	Without pressure sensor	
4	ON	-	OFF
	OFF	-	
5	ON	Upper thread nipper enabled	OFF
	OFF	Upper thread nipper disabled	
6	ON	Lower thread trimming enabled	ON
	OFF	Lower thread trimming disabled	
7	ON	-	OFF
	OFF	-	
8*	ON	Maximum straight bar tacking length = 9.0 mm	OFF
	OFF	Maximum straight bar tacking length = 6.0 mm	

* If the maximum straight bar tacking length is set to 9.0 mm, it will be necessary to process the work clamp plate. Consult with your local Brother sales office for further details. If the work clamp plate is not processed, the throat plate may interfere with the needle plate and work clamp plate.

Circuit board DIP switch D

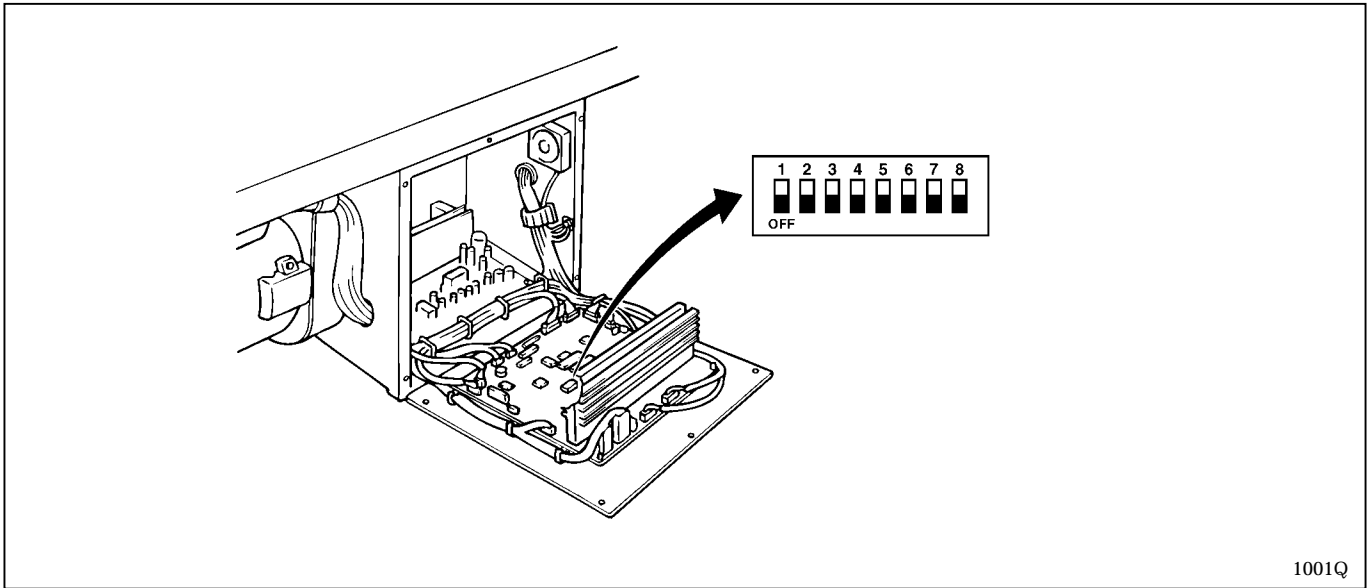


1001Q

No.	ON/OFF	Setting items	Default
1	ON	-	OFF
	OFF	-	
2	ON	-	OFF
	OFF	-	
3	ON	-	OFF
	OFF	-	
4	ON	-	OFF
	OFF	-	
5	ON	-	OFF
	OFF	-	
6	ON	-	OFF
	OFF	-	
7	ON	-	OFF
	OFF	-	
8	ON	-	OFF
	OFF	-	

5-6. CHANGING FUNCTIONS USING THE MEMORY SWITCHES

The memory switches are valid for all programs.

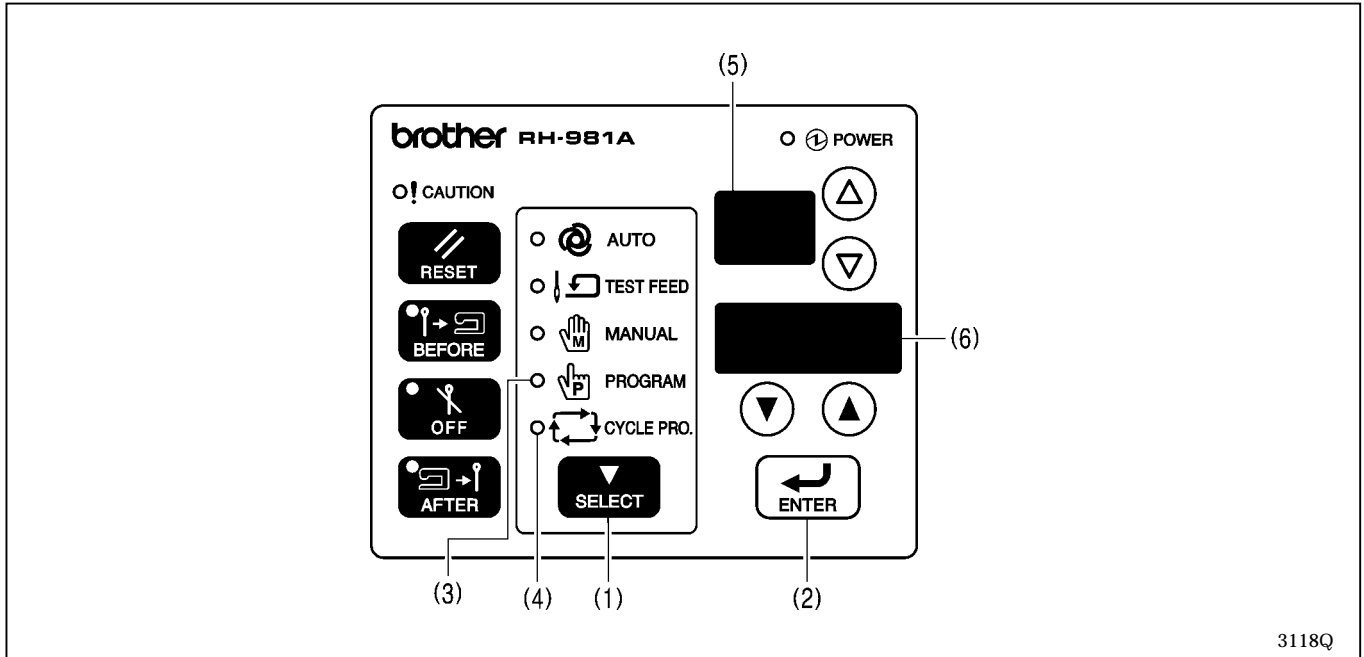

1. Press the SELECT key (1) to change the mode to program or cycle program mode.
2. While pressing the ENTER key (2), press the Δ key.
 - * The program mode indicator (3) and the cycle program mode indicator (4) will illuminate.
 - * The memory switch number "00" will appear in the program number display (5), and the memory switch setting will appear in the detail display (6).
3. Press the Δ / ∇ keys to select the number for the memory switch to be changed.
4. Press the \blacktriangle / \blacktriangledown keys to change the memory switch setting.
 - * The memory switch setting will flash while it is being changed.
5. Press the ENTER key (2) to accept the new setting.
 - * The memory switch setting will stop flashing.
6. Repeat steps 3 to 5 to change other memory switch settings.
7. Press the SELECT key (1) to change the mode to automatic mode.
 - * The memory switch settings will be memorized.

5-6-1. Memory switch table

The memory switch settings are applied immediately to all programs once the settings have been changed. However, memory switches marked with * are only applied after the power is turned on.



No.	Setting items	Setting range	Unit	Default
00.	Work clamp down operation when feed bracket is forward	OFF, ON	-	OFF
01.	Work clamp stays down after sewing	OFF, ON	-	OFF
02.	Number of home position start cycles (Note 1)	OFF, 1 - 9	1	1
03.	Cutting block ON time	25 - 200 ms	25 ms	25 ms
04.	Timer for checking raising of hammer (Timer for determining if the cutting block has been raised to a position where it will not touch the next feed bracket to operate)	OFF (Determined from number of slit signals), 200 - 500 ms	50 ms	OFF
05.	Feed operation timing correction after hammer is raised (After checking that the hammer is raised, the timer interval is added so that the hammer and feed bracket do not touch.)	0 - 150 ms	25 ms	0
06.	Test feeding deceleration speed	OFF, 1 - 4	1	OFF
07.	Increased amount of upper thread remaining	OFF, 1 - 3	1	OFF
08.	Stitch length display in automatic mode	OFF, ON	-	OFF
09.*	Max. stitch length of L7	40 mm, 42 mm	2 mm	40 mm
10.	Feed timing correction	-10 - 10	1	0
11.*	Number of eyelet buttonholes when fly indexer is used	OFF (Fly indexer is not used), 1 - 9	1	1
12.*	Cloth setting position when fly indexer is used	1: Left setting position 2: Horizontal setting position	1	1
13.	Program number selected when buttonhole sensor is ON when using the special lapel cutting device	OFF, 1 - 9	1	OFF
14.	Program number for operating the straight buttonhole hammer regardless of eyelet shape setting (parameter No. 01) and whether the buttonhole sensor is ON or OFF (Note 2)	OFF, 1 - 9	1	OFF

(Note 1) If home position starting is not carried out for each piece of material, there is the danger that the feed bracket may become overloaded for some reason and come off, which will affect the next piece to be sewn. Accordingly it is recommended that you set home position starting to be carried out each time (setting "1").

(Note 2) If a program number has been set for memory switch No. 13, it will be ignored if a program number has been set for memory switch No. 14.


5-7. Sensors positions and functions

3536Q

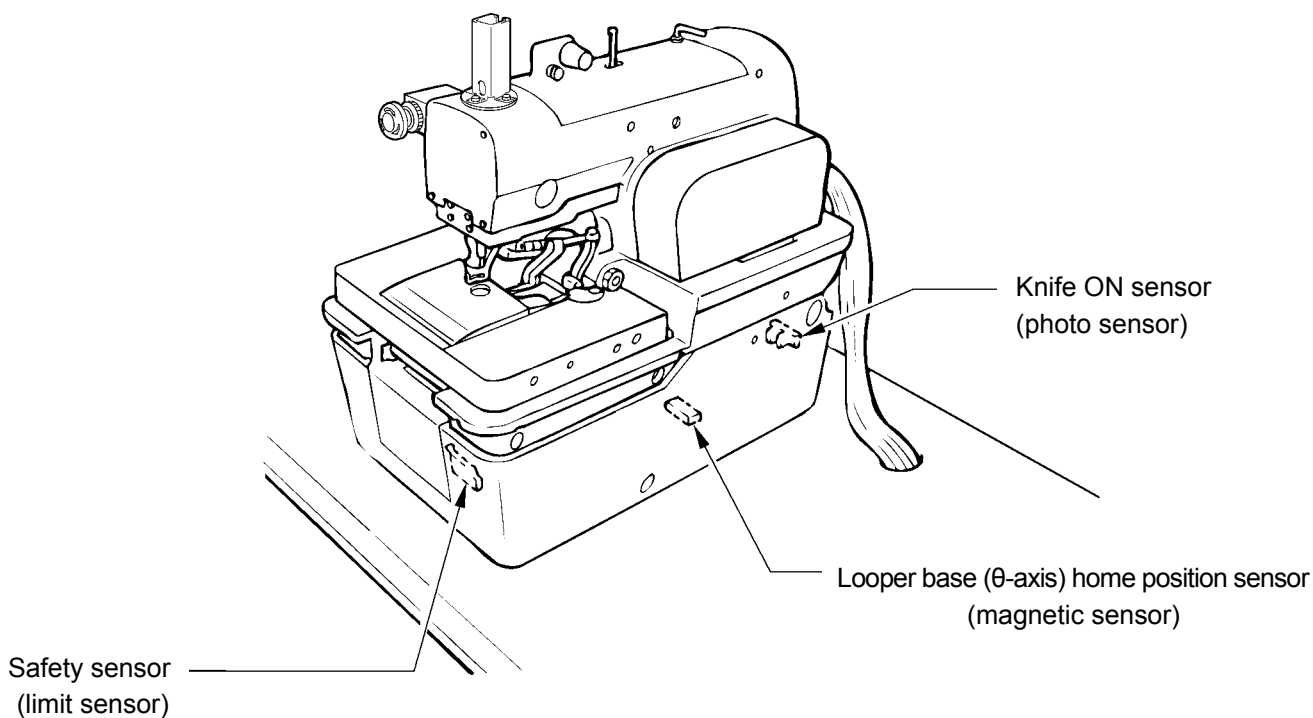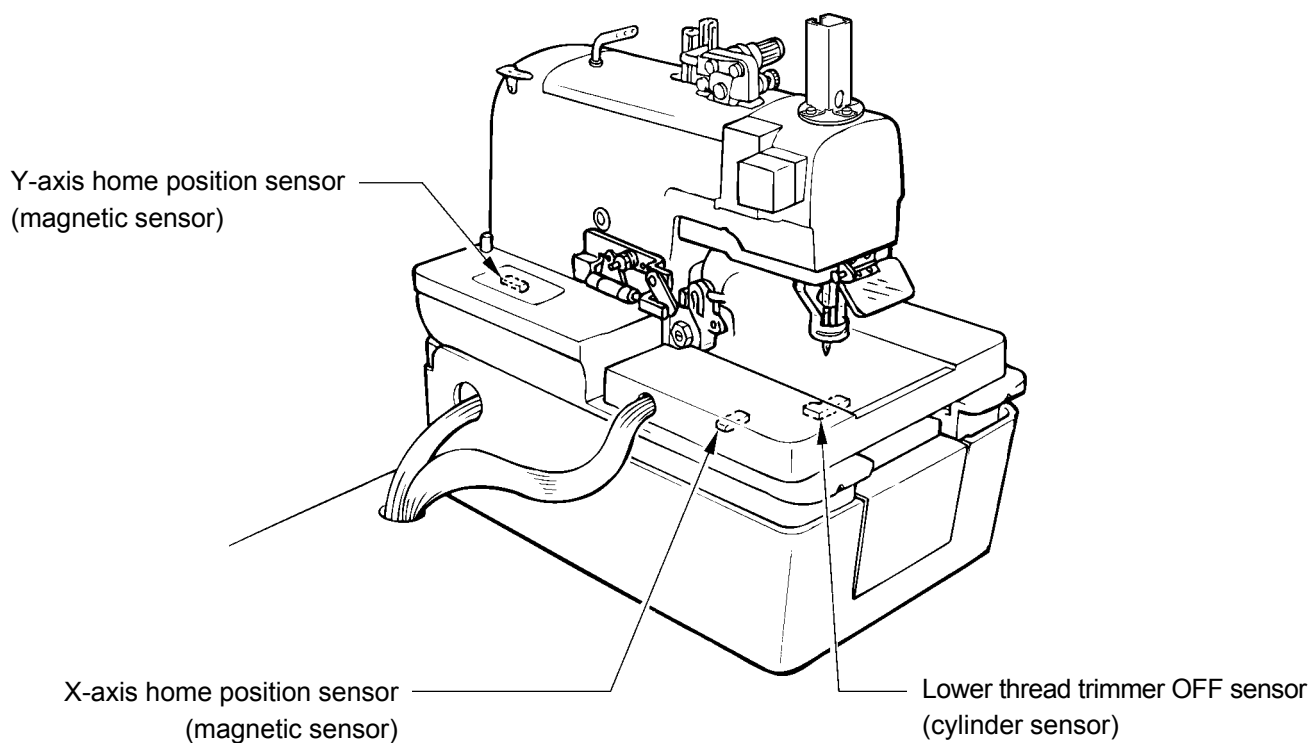


3537Q

X-axis home position sensor

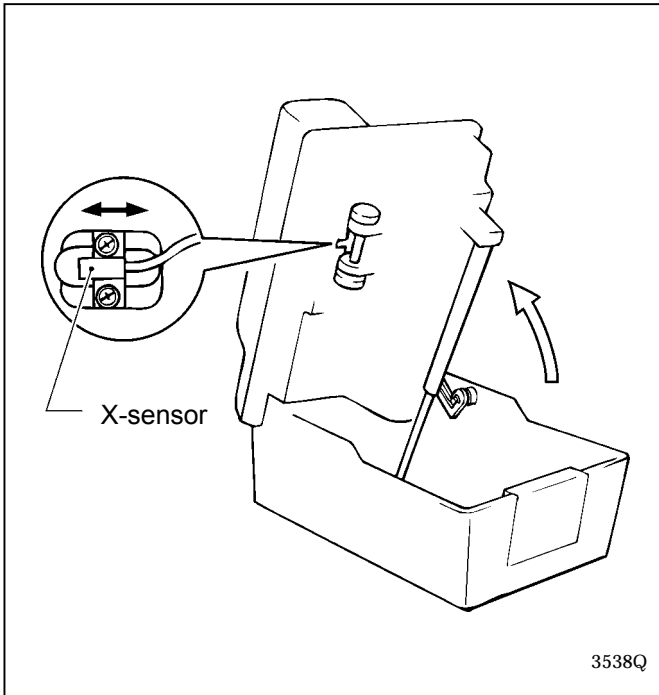

- The X-axis home position sensor determines the home position of the feed bracket in the X direction.
- When the feed bracket is on the left of the head, the X-axis home position sensor is set to off, and when right, set to on.
- When the home position is detected, the X-axis home position sensor is turned on.
- If the X-axis home position sensor is out of order, its connectors are not attached correctly, or the cord does not flow electricity, error code E-50 or E-80 will appear.


Y-axis home position sensor

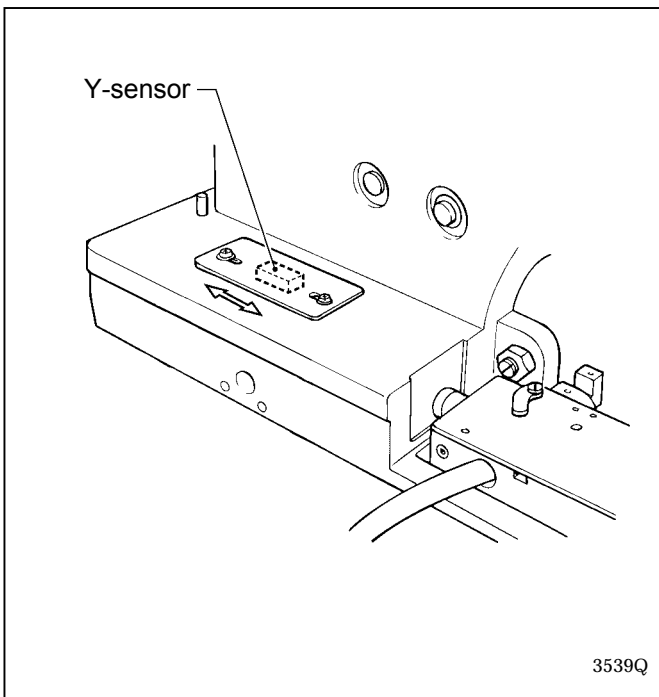

- The Y-axis home position sensor determines the home position of the feed bracket in the Y direction.
- The Y-axis home position sensor is set to on only when the feed bracket is at the home position.
- If the Y-axis home position sensor is out of order, its connectors are not attached correctly, or the cord does not supply electricity, error code E-51 or E-81 will appear.


5. POWER SUPPLY EQUIPMENT

Looper base home position sensor (θ -axis home position sensor)

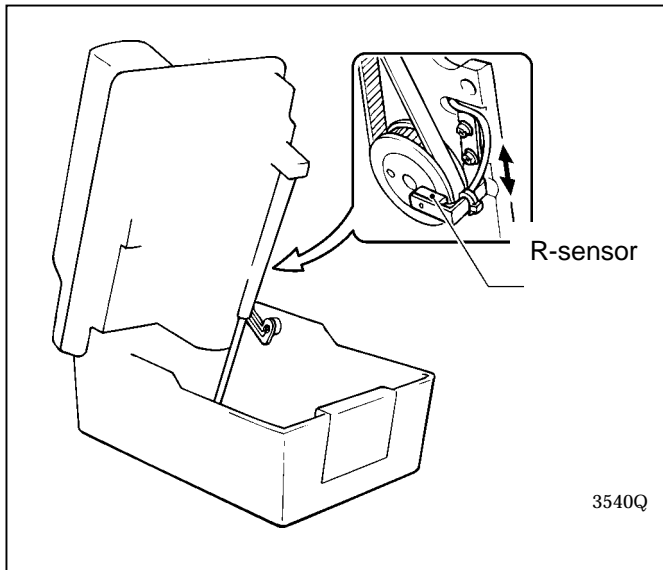


- The looper base home position sensor determines the home position of the looper base (when it is at 0°)
- The looper base home position sensor is set to on only when the looper base is at the home position.
- If the looper base home position sensor is out of order, its connectors are not attached correctly, or the cord does not supply electricity, error code E-52 or E-82 will appear.

Knife ON sensor

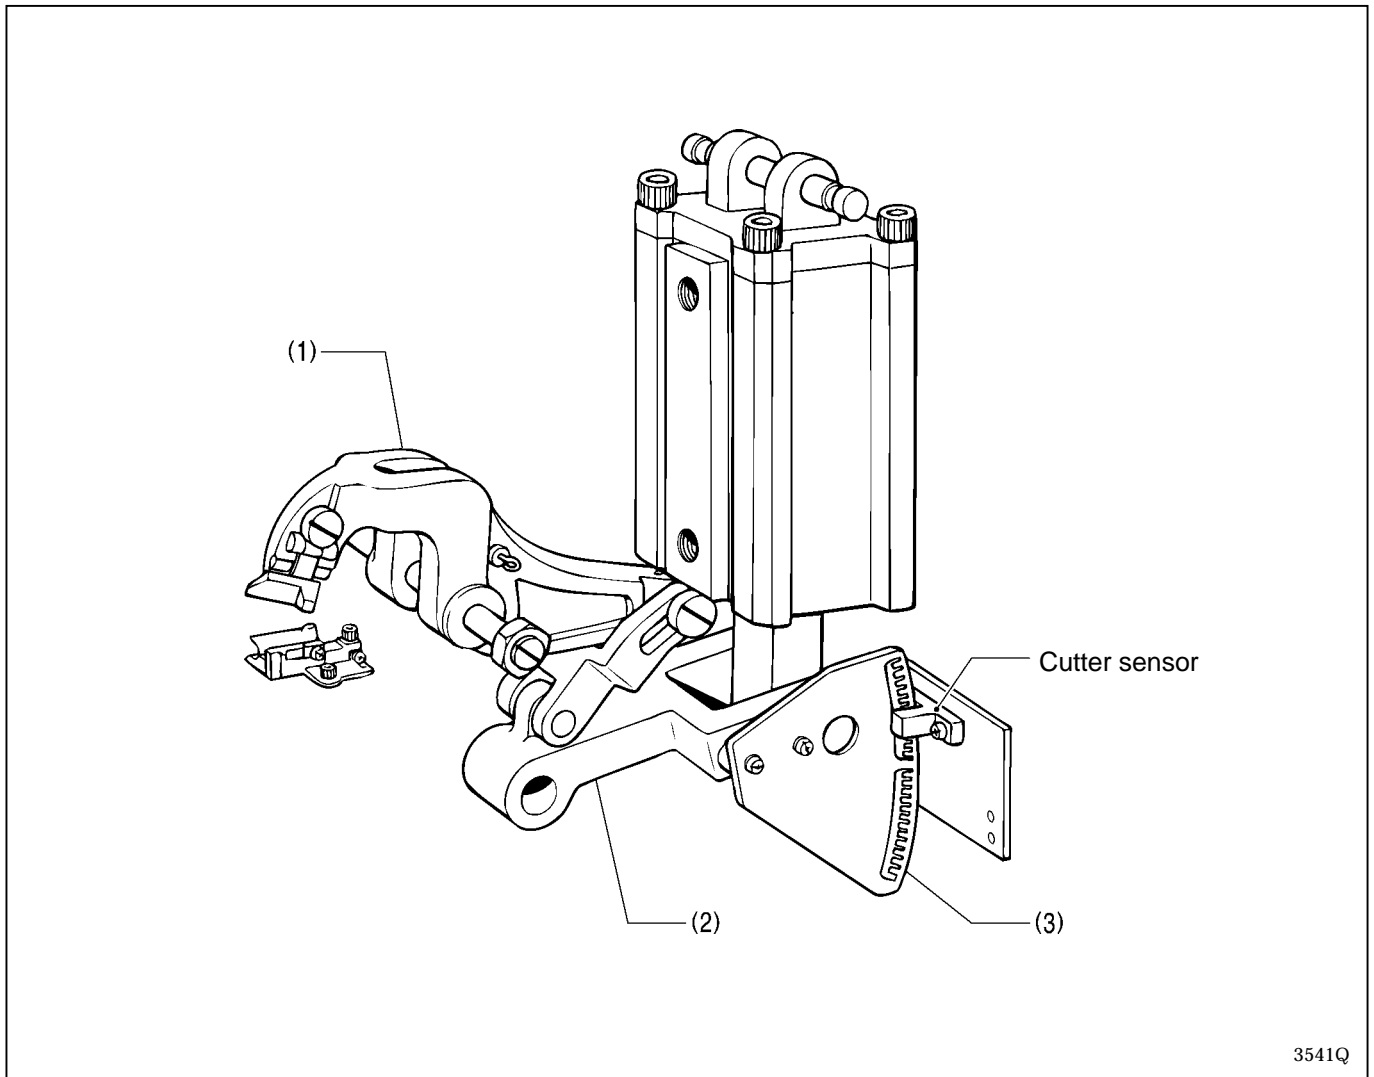


- The knife ON sensor is intended to sense that the operation of the cutter lever (1) has been completed, and to know the cutter lever (1) lift stroke.
- The cutter sensor partition plate (slit) (3) is attached to link C (2) which moves the cutter lever (1). The signal is sent from the cutter sensor (4) mounted on the bed.

Lower thread trimmer OFF sensor

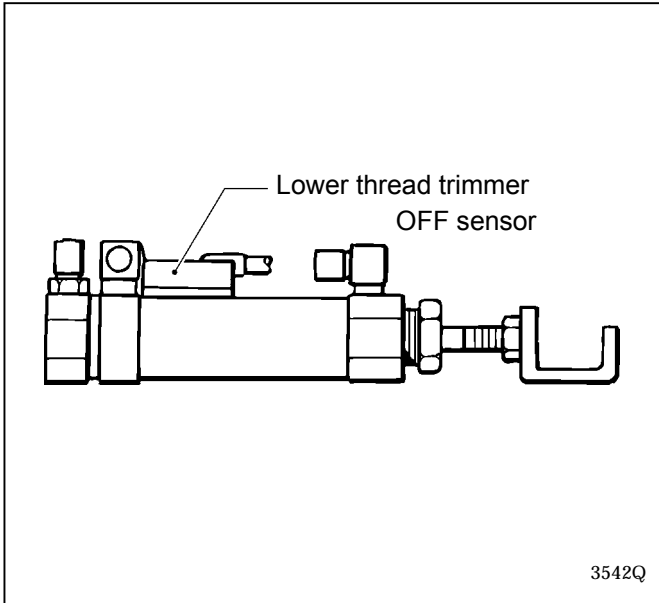

- The lower thread trimmer OFF sensor is attached to the cylinder which drives the lower thread trimmer.
- The lower thread trimmer OFF sensor is intended to make the lower thread trimmer securely set to off.
- If the lower thread trimmer OFF sensor is out of control or attached incorrectly, its connectors are not attached correctly, or the cord does not supply electricity, error code E-15, E-45, or E-75 will appear.

Safety sensor

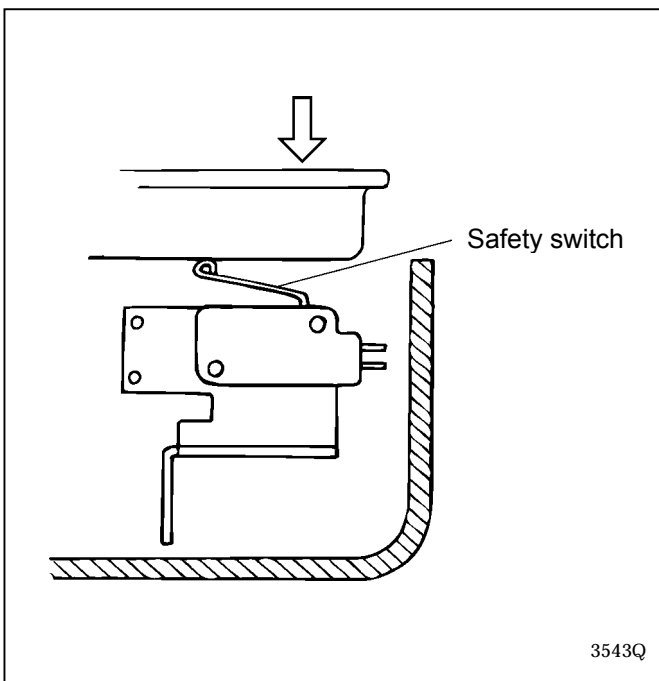

- The limit switch is attached to the front of the bed.
- The safety sensor is intended to check that the machine head is positioned correctly for safe operation.
- The safety sensor will be activated to stop all motions when the machine head is raised during sewing.
- If the machine head is kept raised, the safety sensor is out of control, its connectors are not attached securely, or the cord does not flow electricity, error code E-02, E-32, or E-62 will appear.

6. AIR PRESSURE MECHANISM

⚠ CAUTION



Maintenance and inspection of the sewing machine should only be carried out by a qualified technician.



Disconnect the air hoses from the air supply and wait for the needle on the pressure gauge to drop to "0" before disassembly of any parts which use the pneumatic equipment.



Turn off the power switch before disassembly, otherwise the machine may operate if the start switch is pressed by mistake, which could result in injury.




If the power switch and air need to be left on when carrying out some adjustment, be extremely careful to observe all safety precautions.

6-1. Solenoid valves and air tubes

6-1-1. Adjusting the solenoid valve speed controllers

There are 3 speed controllers: No.3 (for lower thread trimming), No.5 (for upper thread trimming), and one for the knife.

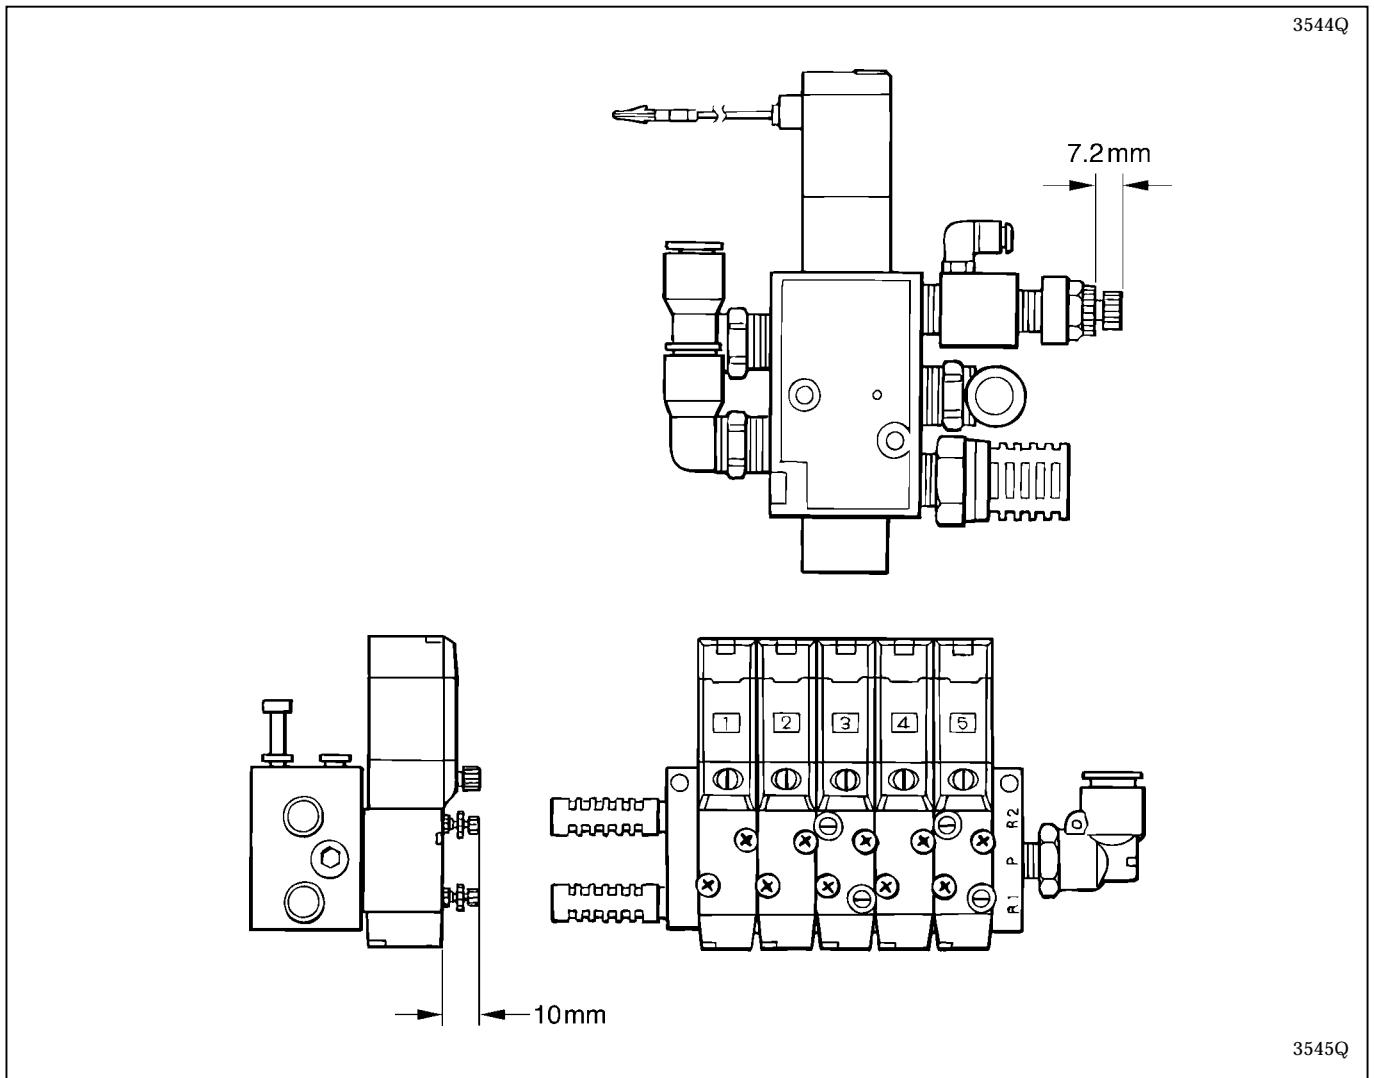


- As for the No.3 and No.5 speed controllers, adjust their heights to 10 mm.
Note: If the speed controllers are excessively throttled, error codes including E-75 (lower thread and operations are incorrect) and E-76 (upper thread operation is incorrect), may appears.
- The exhaust throttle valve is only attached to the OFF side of the knife valve. Adjust the protrusion of the speed controller to 7.2 mm.
Note: If the speed controllers are excessively throttled, error codes including E-72 (cutting block operation is incorrect), may appear. If excessively opened, abnormal noise may be emitted when the knife cylinder returns.

6-1-2. Air tubes

3546Q

3547Q

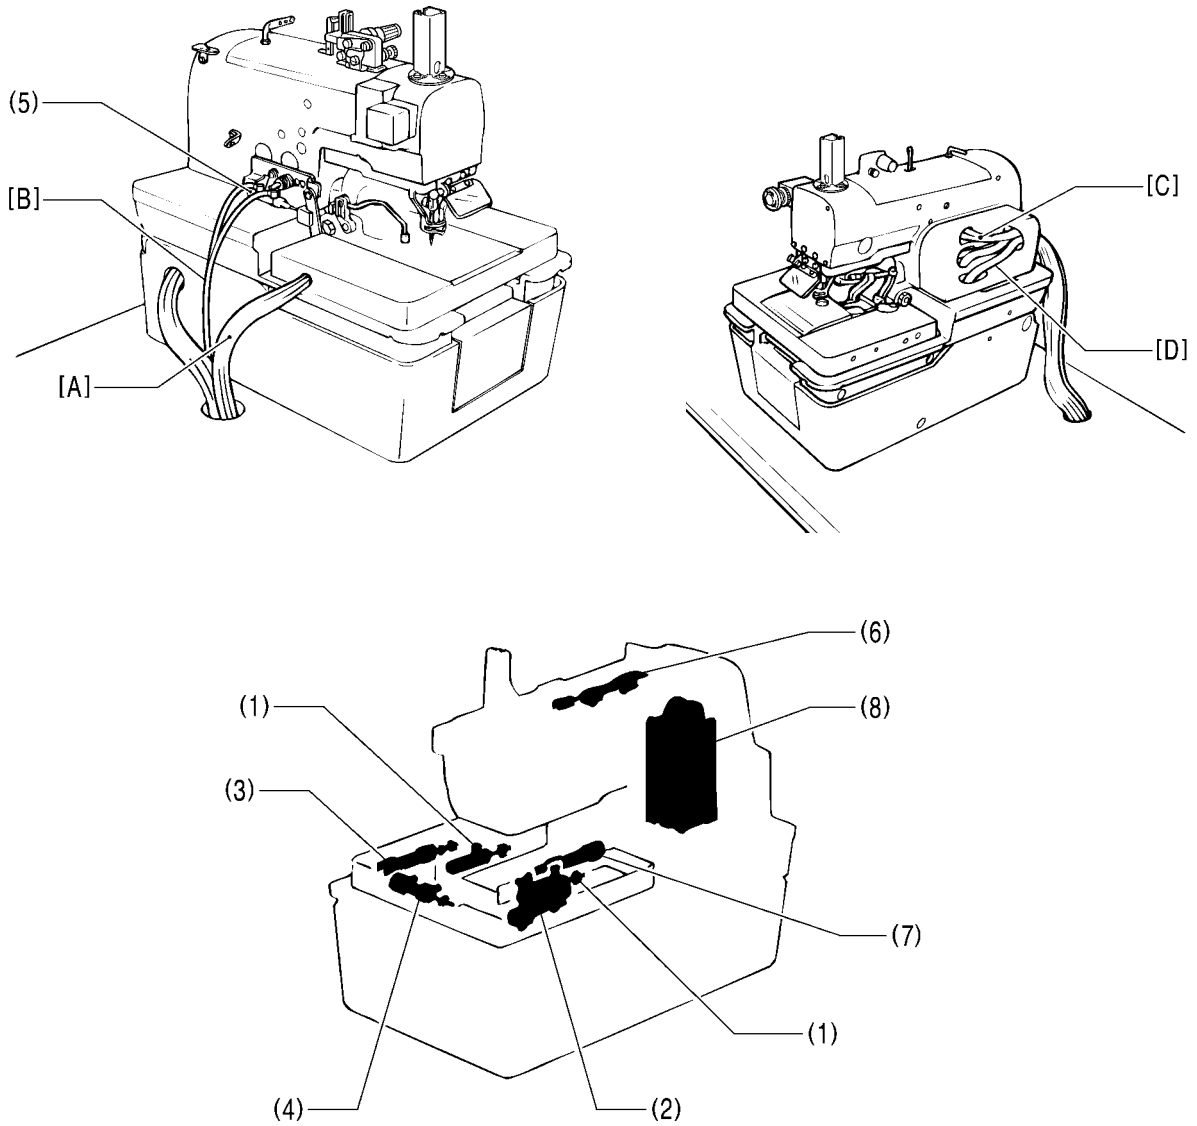


Air tubes		Cylinders	
[A]	Work clamp	(1)	Cylinder, 16X10
	Cloth opener	(2)	Cylinder assembly, A 16X15
		(3)	Cylinder assembly, B 16X15
	Lower thread trimming	(4)	Cylinder assembly, B 16X30
[B]*	Auxiliary clamp	(5)*	Cylinder assembly, 10X15J
[C]	Upper thread tightening	(6)	Cylinder assembly, 10X15
	Upper thread trimming	(7)	Cylinder assembly, 10X15
[D]	Knife	(8)	Cylinder assembly, 63X100

* -02, -12, -52 specifications only


3548Q

6-2. Air tube layout

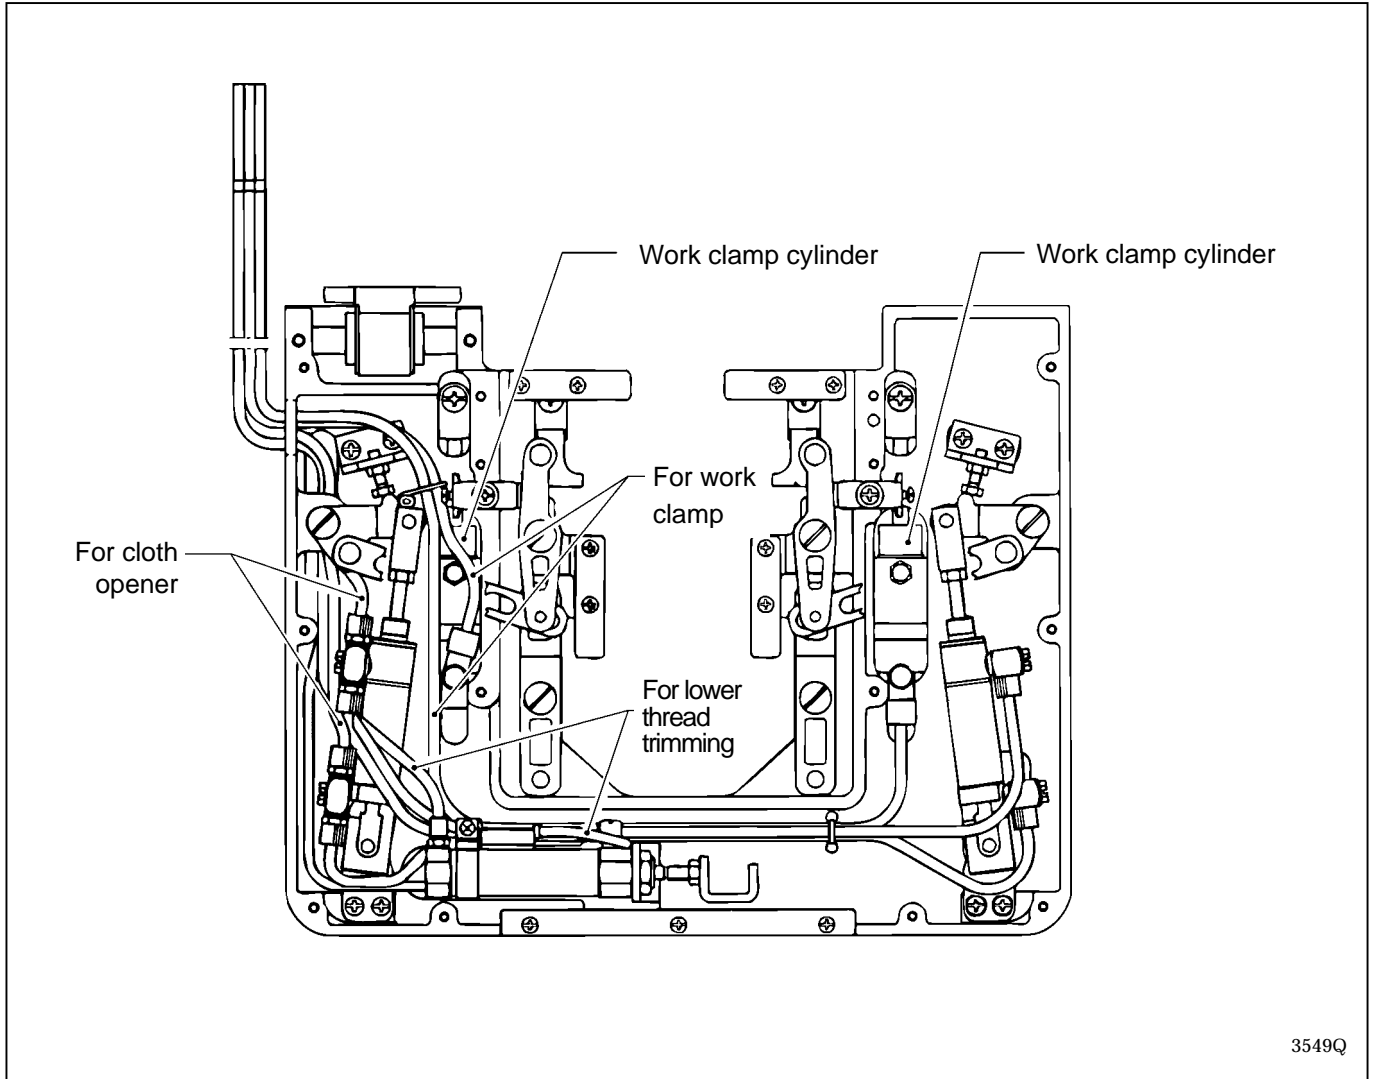


[Reference] Dimensions for cylinder rod assembly


1. Upper thread release cylinder and sub presser cylinder

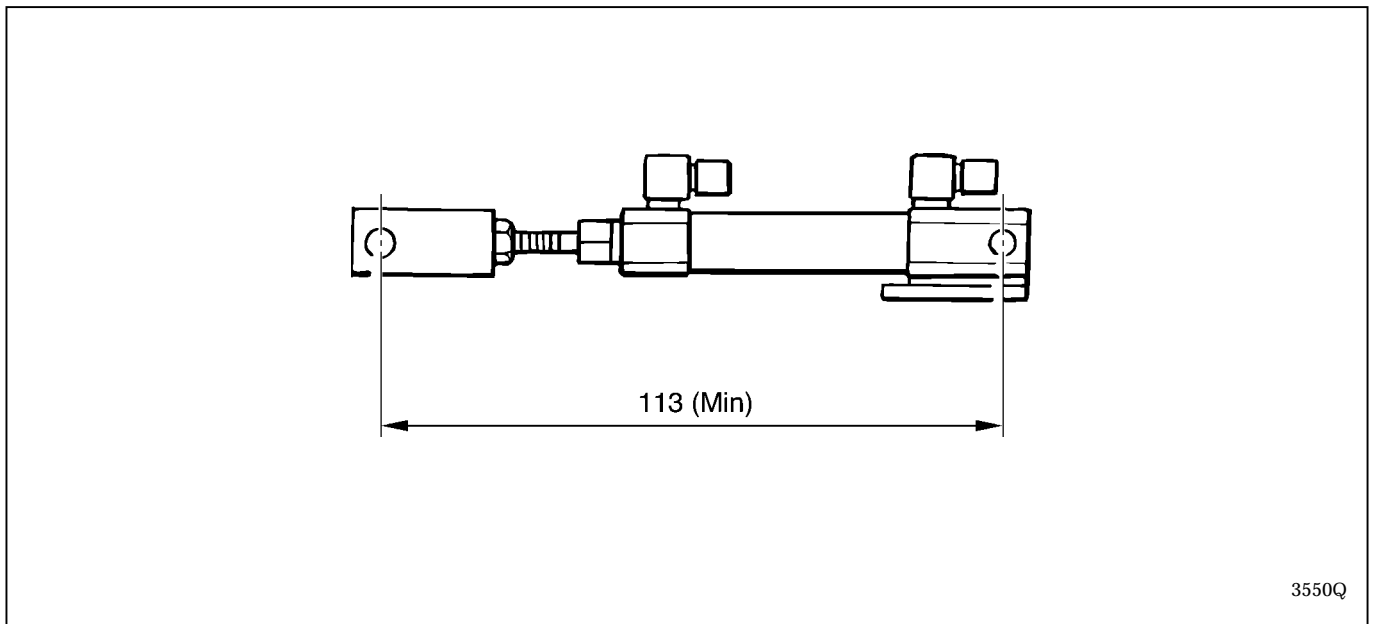


2. Upper thread trimming cylinder

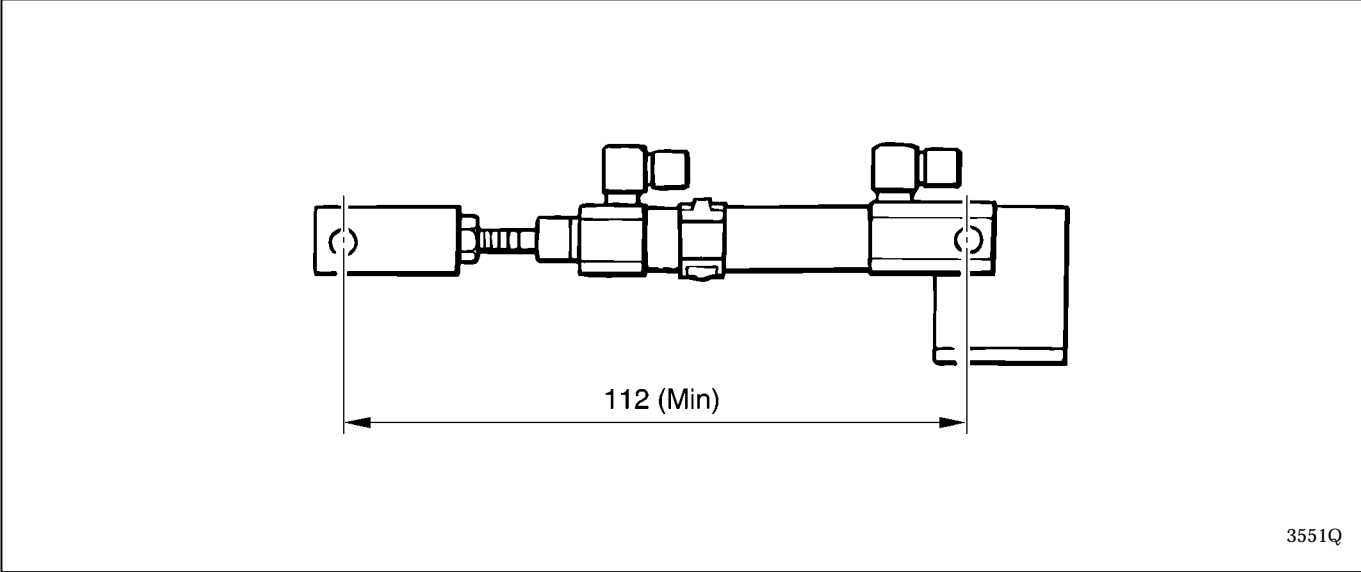

3. Cutter cylinder

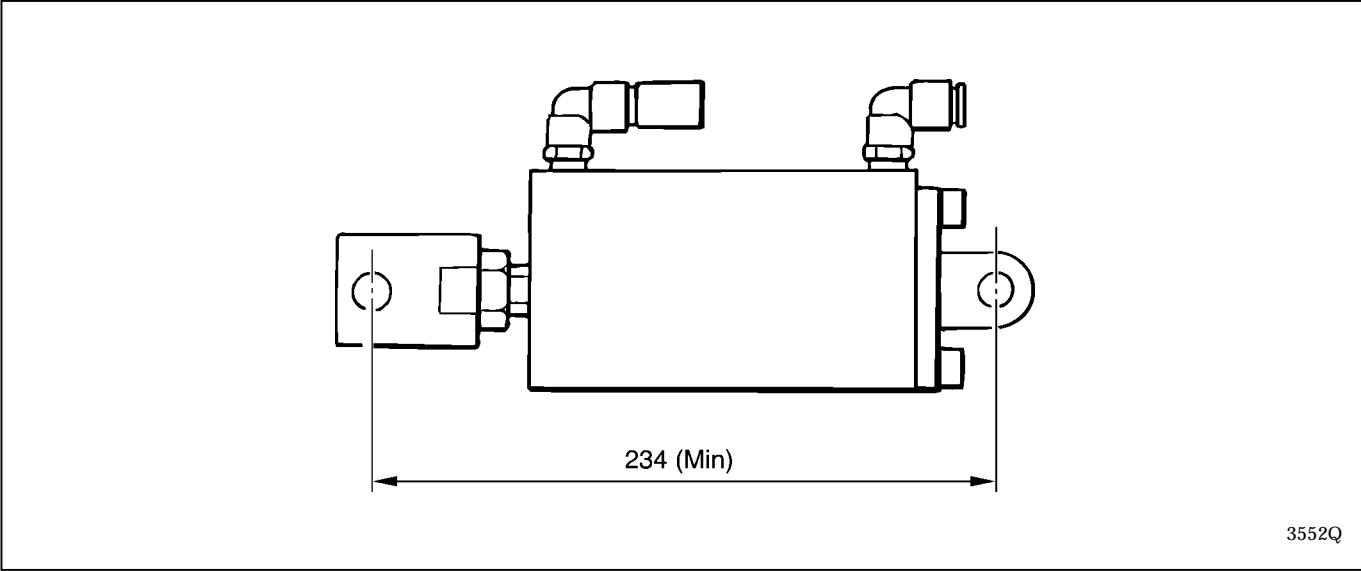


4. Work clamp cylinder

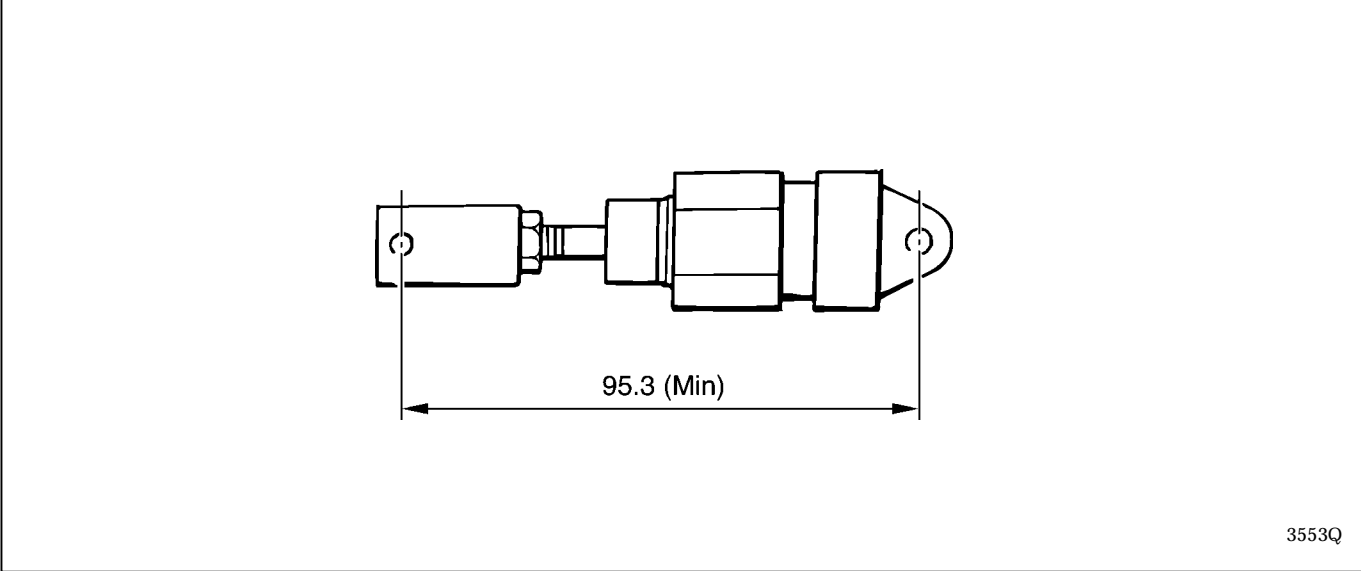


6. AIR PRESSURE MECHANISM

5. Cloth opener cylinder

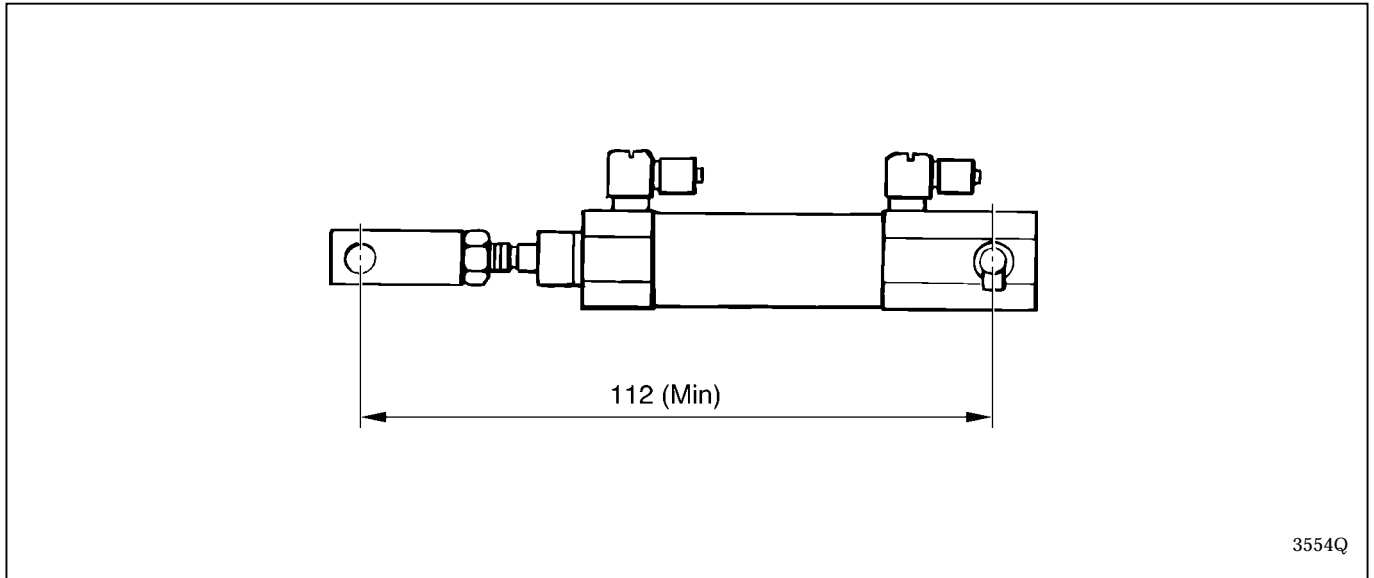


6. Lower thread trimming cylinder

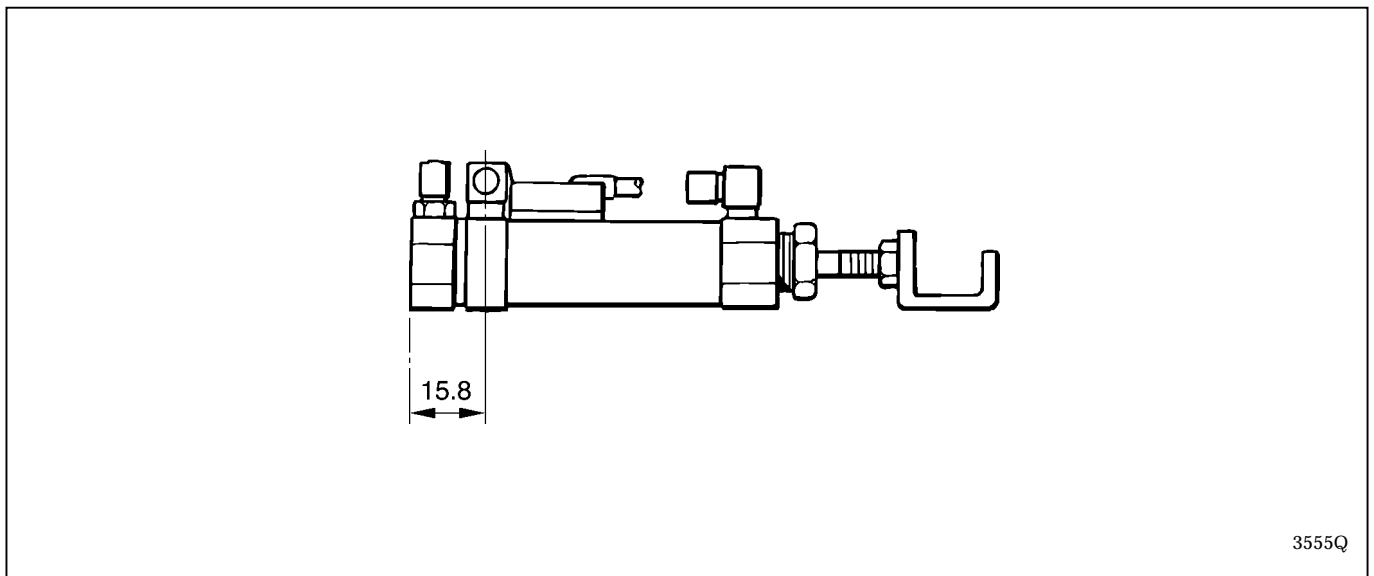

7. SOFTWARE

7-1. Motion flowchart

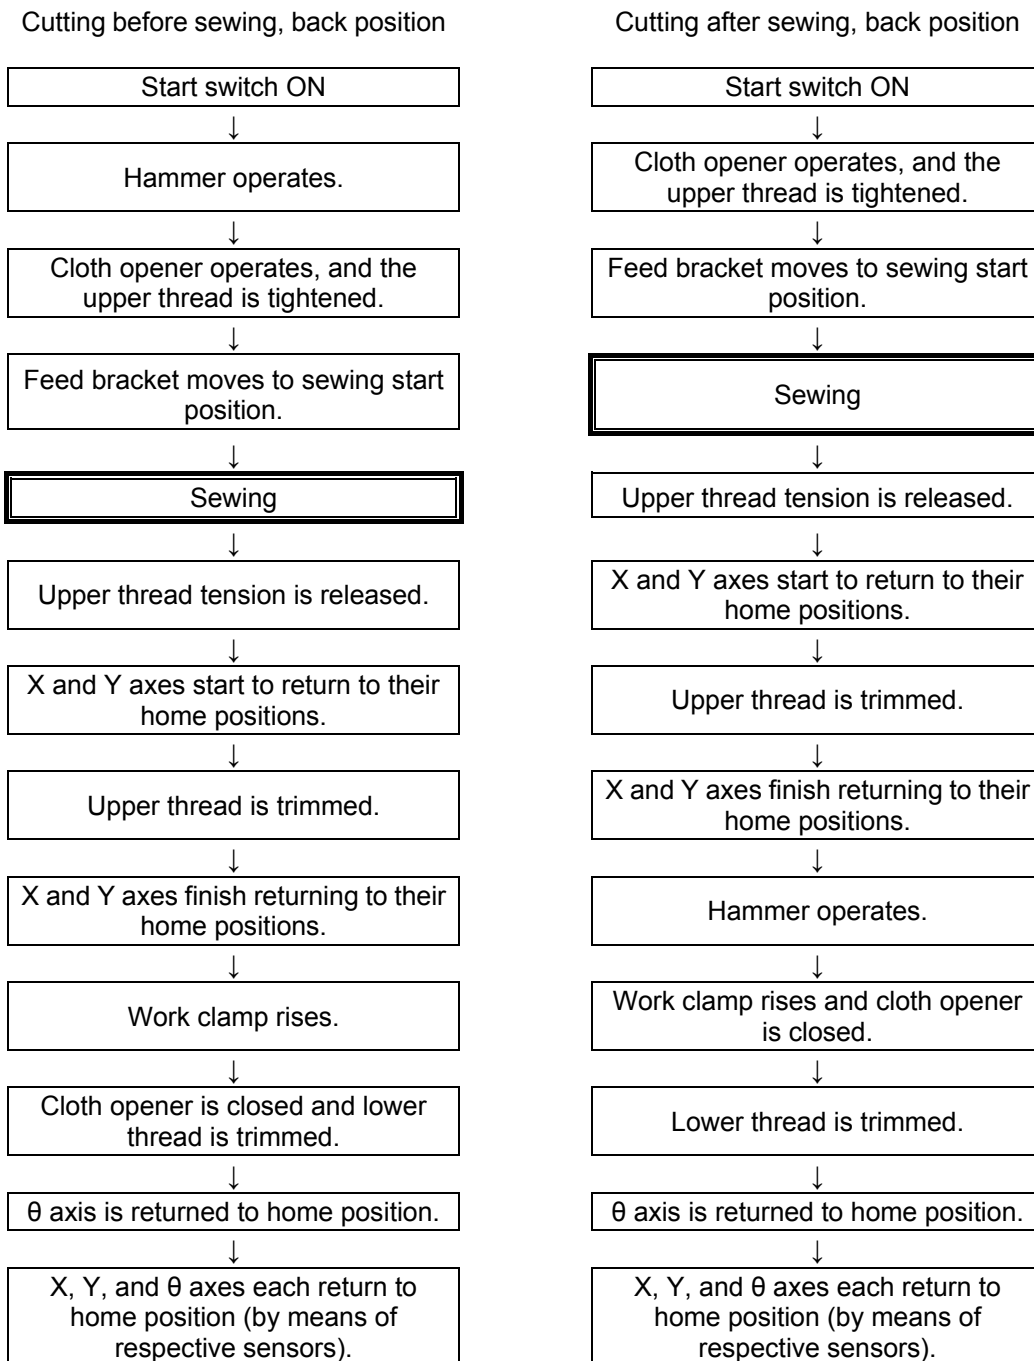

7-2. Input check list

Use the following procedure when checking for switch and sensor breakdown, cord breakage, and adjusting the sensor positions.


The CPU can be checked as to whether it has correctly interpreted signals from switches and sensors.

3556Q
3557Q

3556Q
3558Q

1. Turn off the power.
2. Turn on the power while pressing the \triangle key.
 - * The check mode will appear in the program number display (1), and the check result will appear in the detail display (2).
3. Press the \triangle and ∇ keys to select a desired check mode (F1 or F2).
4. When the switch or sensor is turned on, the corresponding segment on the detail display (2) or indicators on the operation panel will react.
 - * Turn the switch on and off to check it, and move the object by hand to check the sensor.
5. When returning to normal operation, turn power off and then on again.

<Example> When checking the cloth presser switch

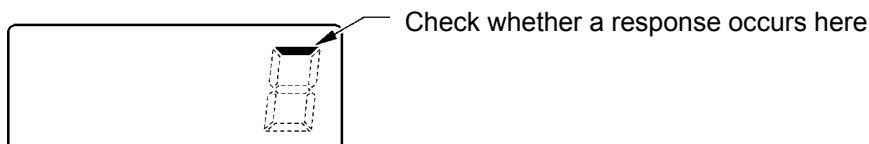

3559Q


No.	Check mode	Check items	Indicator / Segment
1	F1	Detail UP key (▲ key)	Automatic mode indicator
2		Detail DOWN key (▼key)	Test feed mode indicator
3		ENTER key	Manual mode indicator
4		SELECT key	Program mode indicator
5		RESET key	Cycle program mode indicator
6		BEFORE key	BEFORE indicator
7		OFF key	OFF indicator
8		AFTER key	AFTER indicator
9		Cloth presser switch	Segment 4-A
10		Start switch	Segment 4-D
11		Needle up signal	Segment 4-E
12		Needle down signal	Segment 4-F
13		Speed detecting sensor	Segment 4-G
14		X-axis home position sensor	Segment 3-A
15		Y-axis home position sensor	Segment 3-B
16		θ-axis home position sensor	Segment 3-C
17		EMERGENCY STOP switch	Warning indicator
18		Emergency stop connecting signal	Segment 2-A
19		Head sensor	Segment 2-B
20		Knife ON sensor	Segment 2-C
21		Lower thread trimming OFF sensor	Segment 2-D
22		Feed plate home position sensor (Button hole cloth sensor)	Segment 1-A
23		Left driving sensor (Hammer home position sensor)	Segment 1-B
24		Right driving sensor (Button hole position sensor)	Segment 1-C
25		Pressure sensor	Segment 1-D
26	F2	Specification harness No.1	Segment 4-D.P
27		Specification harness No.2	Segment 4-G
28		Specification harness No.3	Segment 4-F
29		Specification harness No.4	Segment 4-E
30		Specification harness No.5	Segment 4-D
31		Specification harness No.6	Segment 4-C
32		Specification harness No.7	Segment 4-B
33		Specification harness No.8	Segment 4-A
34		Panel DIP switch No.1	Segment 3-D.P
35		Panel DIP switch No.2	Segment 3-G
36		Panel DIP switch No.3	Segment 3-F
37		Panel DIP switch No.4	Segment 3-E
38		Panel DIP switch No.5	Segment 3-D

7. SOFTWARE

No.	Check mode	Check items	Indicator / Segment
39	F2	Panel DIP switch No.6	Segment 3-C
40		Panel DIP switch No.7	Segment 3-B
41		Panel DIP switch No.8	Segment 3-A
42		Circuit board DIP switch C No.1	Segment 2-D.P
43		Circuit board DIP switch C No.2	Segment 2-G
44		Circuit board DIP switch C No.3	Segment 2-F
45		Circuit board DIP switch C No.4	Segment 2-E
46		Circuit board DIP switch C No.5	Segment 2-D
47		Circuit board DIP switch C No.6	Segment 2-C
48		Circuit board DIP switch C No.7	Segment 2-B
49		Circuit board DIP switch C No.8	Segment 2-A
50		Circuit board DIP switch D No.1	Segment 1-D.P
51		Circuit board DIP switch D No.2	Segment 1-G
52		Circuit board DIP switch D No.3	Segment 1-F
53		Circuit board DIP switch D No.4	Segment 1-E
54		Circuit board DIP switch D No.5	Segment 1-D
55		Circuit board DIP switch D No.6	Segment 1-C
56		Circuit board DIP switch D No.7	Segment 1-B
57		Circuit board DIP switch D No.8	Segment 1-A

7-3. Output check list

Use the following procedure when checking for PCB-related failures, mechanism breakdown, and cord breakage. It can be checked as to whether signals that the CPU correctly output have been received.

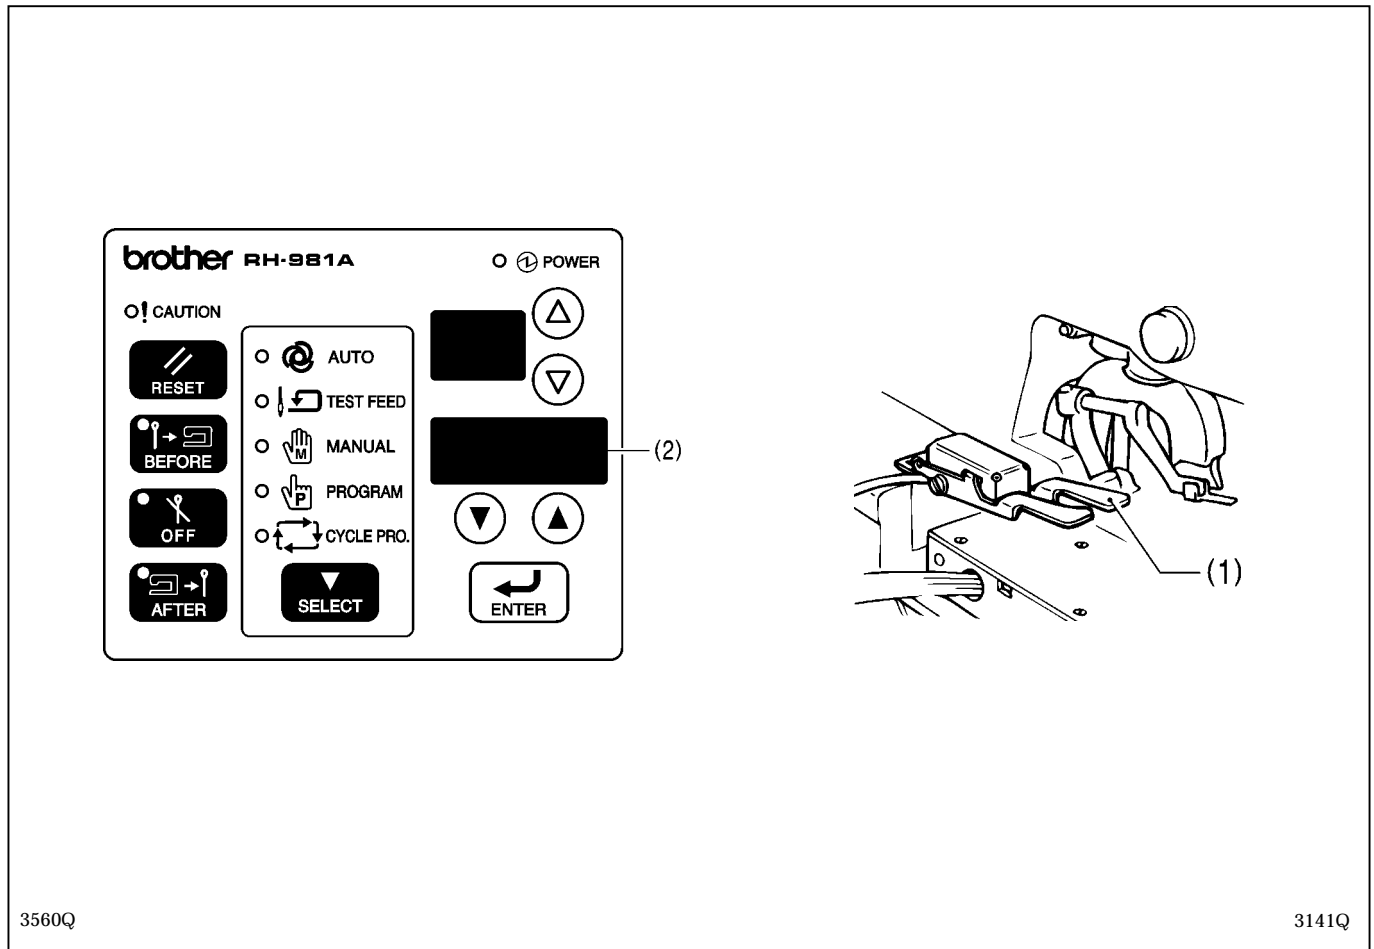

1. Turn off the power.
2. Turn on the power while pressing the ∇ key.
3. Press the start switch (1).
 - * The machine will start to detect the home position.
 - * The check code will appear in the detail display (2).
4. Press the \blacktriangle and \blacktriangledown keys to select the desired check code.
5. Press the start switch (1).
 - * While the start switch is kept pressed, the machine will work as it is specified by each check code.
6. When returning to normal operation, turn power off and then on again.

7. SOFTWARE

Check code	Function
C-01	After activating the buzzer for a second, X-, Y-, and θ -home positions are detected when the machine stops with the needle at its upper limit. (Head sensor will not conduct any error check.)
C-02	The machine will hold the material.
C-03	The machine will open the material.
C-04	After activating the buzzer for a second, the machine opens the material, turns 180° (θ), and activates lower thread and lower gimp trimmers.
C-05	After activating the buzzer for a second, turns 180° (θ), and the upper thread trimmer will be activated.
C-06	After activating the buzzer for a second, the machine will hold the material and activate the hammer.
C-07	After activating the buzzer for a second, the machine will hold the material, and operate the machine motor at 700rpm. Turn off the start switch to stop the machine.
C-10	Upper thread will be tightened.
C-11	After activating the buzzer for a second, the X feed mechanism will reciprocate in the range of -6 mm to + 6 mm. Note: Be sure to remove the work clamp and check the motion of the X feed mechanism.
C-12	After activating the buzzer for a second, the Y feed mechanism will reciprocate in the range of -1 mm to + 65 mm. Note: Be sure to remove the work clamp and check the motion of the Y feed mechanism.
C-13	After activating the buzzer for a second, the θ feed mechanism will reciprocate in the range of -2.7° + 362.7°. Note: Be sure to remove the work clamp and check the motion of the θ -axis feed mechanism.
C-16 *1	Feed plate is temporarily fixed. (Fixing cylinder on)
C-17 *1	Feed plate is fixed. (Chuck cylinder on)
C-18 *1	Feed plate is moved to the right. (Cloth feed driving cylinder on)
C-19 *2	After the feed bracket moves forward, the hammer plate of the hammer selector assembly drops. Note: Be sure to remove the work clamp and check the motion of the hammer plate.
C-20 *3	Upper thread nipper [1] (up/down) turns on.
C-21 *3	Upper thread nipper [2] (open/close) turns on.
C-31	The buzzer sounds.
C-32	All indicators on the operation panel will be lit.

*1 Available only when indexer is attached.

*2 Available only when special lapel cutting device (optional) is attached.

*3 Available only when upper thread nipper (optional) is attached.

7-4. List of error codes

When an error occurs, the warning indicator and the error code display flash and the buzzer sounds.

1. Errors after power is turned on

Code	Explanation	Resetting method	[I] Input check No. [O] Output check code
E-00	EMERGENCY STOP switch was pressed.	Release the EMERGENCY STOP switch, and then press the RESET key.	[I] 17,18
E-02	Machine head is tilted back.	Turn off the power.	[I] 19
E-03	Cloth presser switch was pressed.	Release the cloth presser switch, and press the RESET key.	[I] 9
E-04	Start switch was pressed.	Release the start switch, and press the RESET key.	[I] 10
E-05	Air pressure is insufficient.	Turn off the power.	-
E-06	Feed plate home position sensor is OFF.	Set it to ON.	[I] 22
E-07	Feed plate left range sensor is OFF.	Turn off the power.	[I] 23 [O] C-18
E-09	Specification that machine does not support is set.	Turn off the power.	[I] 26 - 33
E-10	Needle bar is not at the highest position.	Turn the pulley by hand to raise the needle bar to its highest position.	[I] 11
E-12	Cutter sensor is ON.	Turn off the power.	[I] 20 [O] C-06
E-15	Lower thread trimming OFF sensor is OFF.	Turn off the power.	[I] 21 [O] C-04
E-26	PER terminal connection error	Turn off the power.	-
E-27	External RAM error	Turn off the power.	-
E-28	Panel communication start error	Turn off the power.	-
E-29	Machine motor communication start error	Turn off the power.	-

2. Errors before operation

Code	Explanation	Resetting method	[I] Input check No. [O] Output check code
E-30	EMERGENCY STOP switch was pressed.	Release the EMERGENCY STOP switch, and then press the RESET key.	[I] 17,18
E-32	Machine head is tilted back.	Turn off the power.	[I] 19
E-35	Air pressure is insufficient.	Turn off the power.	-
E-36	Feed plate home position sensor is OFF when it should be ON.	Turn off the power.	[I] 22
E-37	Feed plate left range sensor is OFF when it should be ON.	Turn off the power.	[I] 23 [O] C-18
E-38	Feed plate right range sensor is OFF when it should be ON.	Turn off the power.	[I] 24 [O] C-18
E-40	Needle up sensor is OFF when it should be ON.	Turn the pulley by hand to raise the needle bar to its highest position, and then press the RESET key.	[I] 11
E-42	Cutter sensor is ON.	Turn off the power.	[I] 20 [O] C-06

7. SOFTWARE

Code	Explanation	Resetting method	[I] Input check No. [O] Output check code
E-45	Lower thread trimming OFF sensor is OFF.	Turn off the power.	[I] 21 [O] C-04
E-50	X home position sensor is OFF when it should be ON.	Turn off the power.	[I] 14
E-51	Y home position sensor is OFF when it should be ON.	Turn off the power.	[I] 15
E-52	θ home position sensor is OFF when it should be ON.	Turn off the power.	[I] 16
E-59	Sewing data error	Turn off the power.	-

3. Errors during operation

Code	Explanation	Resetting method	[I] Input check No. [O] Output check code
E-60	EMERGENCY STOP switch was pressed.	Release the EMERGENCY STOP switch, and then press the RESET key.	-
E-62	Machine head is tilted back. (Head sensor is OFF.)	Turn off the power.	[I] 19
E-66	Feed plate home position sensor is not activated within a specified time.	Turn off the power.	[I] 22
E-67	Feed plate left range sensor is not activated within a specified time.	Turn off the power.	[I] 23 [O] C-18
E-68	Feed plate right range sensor is not activated within a specified time.	Turn off the power.	[I] 24 [O] C-18
E-70	Needle up sensor is not activated within a specified time.	Turn off the power.	[I] 11 [O] C-07
E-71	Needle down sensor is not activated within a specified time.	Turn off the power.	[I] 12 [O] C-07
E-72	Cutter sensor is not activated within a specified time.	Turn off the power.	[I] 20 [O] C-06
E-75	Lower thread trimming OFF sensor is not activated within a specified time.	Turn off the power.	[I] 21 [O] C-04
E-76	Needle up sensor is OFF during test feeding.	Turn off the power.	[I] 11
E-77	Synch signal is not activated within a specified time.	Turn off the power.	[I] 13
E-80	X home position sensor is not set to ON within a specified time of searching home position.	Turn off the power.	[I] 14
E-81	Y home position sensor is not set to ON within a specified time of searching home position.	Turn off the power.	[I] 15
E-82	θ home position sensor is not set to ON within a specified time of searching home position.	Turn off the power.	[I] 16
E-89	Machine motor reverse operation error	Turn off the power.	[O] C-07

4. Hardware errors

Code	Explanation	Resetting method	[I] Input check No. [O] Output check code
E-90	Communication error (against machine motor CPU)	Turn off the power.	-
E-91	Machine motor running error	Turn off the power.	[I] 11 - 13 [O] C-07
E-92	Abnormal voltage error	Turn off the power.	-
E-93	Fan (large) lock error	Turn off the power.	-
E-94	Fan (small) lock error	Turn off the power.	-
E-95	X motor overcurrent error	Turn off the power.	-
E-96	Y motor overcurrent error	Turn off the power.	-
E-97	Control circuit board temperature rise error	Turn off the power.	-
E-98	Power supply relay error	Turn off the power.	-
E-99	Power supply circuit board overcurrent error	Turn off the power.	-

5. Errors when the special lapel cutting device is attached

Code	Explanation	Resetting method	[I] Input check No. [O] Output check code
E200	Hammer position sensor does not turn ON when changing to the straight buttonhole hammer.	Turn off the power.	[I] 24 [I] C-19
E201	Hammer home position sensor does not turn ON when changing to the eyelet buttonhole hammer.	Turn off the power.	[I] 23 [O] C-19
E202	Buttonhole sensor does not turn ON when using a straight buttonhole program.	Press the RESET key.	[I] 22
E203	Buttonhole sensor does not turn OFF when using an eyelet buttonhole program.	Press the RESET key.	[I] 22

7-5. Troubleshooting

Code	Countermeasure
E-00 E-30	<ol style="list-style-type: none"> 1. Release the EMERGENCY STOP switch. 2. Check if connector P3 (HEAD) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 3. With the power turned off, separate connectors P3 (HEAD), and check if continuity between the following pairs of pins 1 to 3 in the connector on the harness is as follows: <ul style="list-style-type: none"> • When the EMERGENCY STOP switch is activated, between pins 1 and 2 is opened, and between pins 2 and 3 is short-circuited. • When the EMERGENCY STOP switch is not activated, between pins 1 and 2 is short-circuited, and between pins 2 and 3 is opened. * If the result of continuity test is not acceptable in either case, replace the EMERGENCY STOP switch and its harness. * Even if the result of continuity test is acceptable, harness may be broken or short-circuited. It may appear when oscillation occurs. 4. If there is still an error even after replacing the EMERGENCY STOP switch, replace the control circuit board.
E-02 E-32 E-62	<ol style="list-style-type: none"> 1. Return machine head to original position. 2. Adjust safety switch so that it is turned on when machine head is returned to its original position. 3. Check if connector P8 (EXINA) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 4. With the power turned off, separate connectors P8 (EXINA), and check if continuity between pins 1 and 2 in the connector on the harness is as follows: <ul style="list-style-type: none"> • When machine head is raised, between pins 1 and 2 is opened. • When machine head is in position, between pins 1 and 2 is short-circuited. * If the result of continuity test is not acceptable in either case, replace the head safety switch and its harness. * Even if the result of continuity test is acceptable, harness may be broken or short-circuited. It may appear when oscillation occurs. 5. If there is still an error even after replacing the head safety switch, replace the control circuit board.
E-03	<ol style="list-style-type: none"> 1. Release the cloth presser switch. (Turn it off.) 2. Check if hand switch (foot switch) connector which is outside the control box is securely inserted. 3. Check if connector P19 (FOOT) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 4. With the power turned off, separate connectors P19 (FOOT), and check if continuity between pins 3 and 4 in the connector on the harness is as follows: <ul style="list-style-type: none"> • When the cloth presser switch is activated, between pins 3 and 4 is short-circuited. • When the cloth presser switch is not activated, between pins 3 and 4 is opened. * If the result of continuity test is not acceptable in either case, replace the hand switch (or foot switch) and its harness. * Even if the result of continuity test is acceptable, harness may be broken or short-circuited. It may appear when oscillation occurs. 5. If there is still an error even after replacing the hand switch (foot switch) harness (which is connected to control circuit board and control box), replace the control circuit board.
E-04	<ol style="list-style-type: none"> 1. Release the start switch. (Turn it off.) 2. Check if hand switch (foot switch) connector which is outside the control box is securely inserted. 3. Check if connector P19 (FOOT) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 4. With the power turned off, separate connectors P19 (FOOT), and check if continuity between pins 1 and 2 in the connector on the harness is as follows: <ul style="list-style-type: none"> • When the start switch is activated, between pins 1 and 2 is short-circuited. • When the start switch is not activated, between pins 1 and 2 is opened. * If the result of continuity test is not acceptable in either case, replace the hand switch (or foot switch) and its harness. * Even if the result of continuity test is acceptable, harness may be broken or short-circuited. It may appear when oscillation occurs. 5. If there is still an error even after replacing the hand switch (foot switch) harness (which is connected to control circuit board and control box), replace the control circuit board.

Code	Countermeasure
E-05 E-35	<ol style="list-style-type: none"> 1. Check whether the air pressure is insufficient. 2. Check if the circuit board DIP switch No.3 is set to ON. * If you are not using the pressure sensor, an error will occur if this DIP switch is set to ON. 3. Check if pins 10 and 11 of the connector P1 (ORG) on the control circuit board is securely inserted.
E-06 E-36 E-66	<ol style="list-style-type: none"> 1. Turn on the feed plate home position sensor (limit switch R) of the indexer. (Place the cloth feed bar at the left position.) 2. Check and adjust the position of the feed plate home position sensor of the indexer. (Refer to the instruction manual.) 3. Of connectors relayed to head harness, check if the harness for the feed plate home position sensor is correctly attached to the connector for the θ-axis home position sensor. (The white harness should be attached to pin 7, and the black one to pin 12. Refer to the instruction manual.) * Check if there is a harness in the control box that is broken or short-circuited. 4. Check if connector P9 (EXINB) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 5. With the power turned off, separate connectors P9 (EXINB), and check if continuity between pins 10 and 11 in the connector on the harnesses is as follows: <ul style="list-style-type: none"> • When feed plate home position sensor is activated, between pins 10 and 11 is short-circuited. • When feed plate home position sensor is not activated, between pins 10 and 11 is opened. * If the result of continuity test is not acceptable in either case, replace the feed plate home position sensor and its harness. * Even if the result of continuity test is acceptable, harness may be broken or short-circuited. It may appear when oscillation occurs. 6. If there is still an error even after replacing the feed plate home position sensor and the sensor relay cord (attached to the control circuit board and the relay connector), replace the control circuit board.
E-07 E-37 E-67	<ol style="list-style-type: none"> 1. Make sure that the valve unit of the indexer is supplied with air or wiring is correct. 2. Check and adjust the position of the left driving sensor (limit switch L) of the indexer. (Refer to the instruction manual.) 3. Of connectors relayed to head harness, check if the harness for the feed plate home position sensor is correctly attached to the connector for the θ-axis home position sensor. (The white harness should be attached to pin 10, and the black one to pin 15. Refer to the instruction manual.) * Check if there is a harness in the control box that is broken or short-circuited. 4. Check if connector P9 (EXINB) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 5. With the power turned off, separate connectors P9 (EXINB), and check if continuity between pins 1 and 2 in the connector on the harnesses is as follows: <ul style="list-style-type: none"> • When left driving sensor is activated, between pins 1 and 2 is short-circuited. • When left driving sensor is not activated, between pins 1 and 2 is opened. * If the result of continuity test is not acceptable in either case, replace the left driving sensor and its harness. * Even if the result of continuity test is acceptable, harness may be broken or short-circuited. It may appear when oscillation occurs. 6. If there is still an error even after replacing the left driving sensor and the sensor relay cord (attached to the control circuit board and the relay connector), replace the control circuit board.
E-09	<ol style="list-style-type: none"> 1. Connect the specification harness that conforms to machine's specification. 2. Check if all pins are inserted into the connector of the specification harness. 3. Check if the connector for the specification harness which is outside the control box is securely inserted. 4. Check if connector P4 (TYPE) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 5. Replace the type cord (harness connected to control circuit board and the control box). 6. Replace the control circuit board with a new one.

7. SOFTWARE

Code	Countermeasure
E-10 E-40 E-76	<ol style="list-style-type: none"> 1. Turn the pulley manually to set the needle to its highest position. ("UP" will appear on the display.) 2. Check if connector P2 (SYNCHRO) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 3. With connector P2(SYNCHRO) inserted into the PCB in the input check mode, check the voltage across pins 4 and 5 from the harness as follows: <ul style="list-style-type: none"> • Considering pin 5 as 0V (standard), measure the voltage of pin 4 while turning the pulley manually. It is normal if the voltage is 0V with the needle at its highest position, and 4 – 5V everywhere but that position. * If the result is not acceptable, check how the magnet of the pulley is attached, and if it is correct, replace the synchronizer. * Even if the result is acceptable, the harness may be broken or short-circuited. It may appear when oscillation occurs. 4. When there is no problem with the above, replace the control circuit board.
E-12 E-42	<ol style="list-style-type: none"> 1. Position knife correctly. 2. Make sure that knife driving valve is supplied with air and wiring is correct. 3. Make sure that knife ON sensor and neighboring parts are attached correctly. 4. Check if connector P3 (HEAD) of the control circuit board is inserted and if any harness is broken or short-circuited. 5. Replace knife ON sensor and its harness. 6. Replace the control circuit board with a new one.
E-15 E-45 E-75	<ol style="list-style-type: none"> 1. Check if cylinder is in place. (Check if air is supplied normally, position is correct, nothing caught on the cylinder, and so on.) 2. Check if connector P8 (EXINA) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 3. Replace lower thread trimming OFF sensor and its harness. 4. Replace the control circuit board with a new one.
E-26	<ol style="list-style-type: none"> 1. Check if connector P20 (PER) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 2. Check if connector P2 (PER) on the power supply circuit board is securely inserted and if any harness is broken or short-circuited. 3. Replace the power supply circuit board with a new one. 4. Replace the control circuit board with a new one.
E-27	<ol style="list-style-type: none"> 1. Check if ROM chips of the control circuit board or panel circuit board are correctly inserted. (Check position, orientation, lead clinching, etc.) 2. Replace the panel circuit board with a new one. 3. Replace the control circuit board with a new one.
E-28	<ol style="list-style-type: none"> 1. Check if ROM chips of the control circuit board or panel circuit board are correctly inserted. (Check position, orientation, lead clinching, etc.) 2. Check if connector P2 (MAIN) on the panel circuit board is securely inserted and if any harness is broken or short-circuited. 3. Check if connector P18 (PANEL) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 4. Replace the panel circuit board with a new one. 5. Replace the control circuit board with a new one.
E-29	<ol style="list-style-type: none"> 1. Make sure that ROM chips of the control circuit board are correctly inserted. (Check position, orientation, lead clinching, etc.) 2. Replace the control circuit board with a new one.
E-38 E-68	<ol style="list-style-type: none"> 1. Check if air is supplied to valve unit of the indexer or wiring is correct. 2. If the cloth feed bar of the indexer works correctly, skip to step 5 below. (This is because the place to be checked is different if the failure is with the sensor or driving system.) 3. Check if the valve harness of the indexer is connected to the indexer relay cord and connector P21 (EXOUT) on the control circuit board. <ul style="list-style-type: none"> * Check if there is no pin that is out of place in either of indexer relay connector and P21. 4. Check if feed plate works in output check. 5. Of connectors relayed to head harness, check if the harness for the right driving sensor (cylinder sensor) is correctly attached to the connector for the θ-axis home position sensor. (The brown harness should be attached to pin 4, the black one to pin 9, and the blue one to pin 14. Refer to the instruction manual.) <ul style="list-style-type: none"> * Check if there is no harness in the control box that is broken or short-circuited. 6. Check if connector P9 (EXINB) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 7. Replace the right driving sensor and its harness. 8. Replace the control circuit board with a new one.

Code	Countermeasure
E-50	<ol style="list-style-type: none"> 1. Turn power off and then on again. Press start switch to search home position again. 2. Make sure that X-axis home position sensor and X-axis home position sensor magnet are correctly attached. 3. Check if connector P1 (ORG) on the control circuit board is correctly inserted and if any harness is broken or short-circuited. 4. Replace X-axis home position sensor and its harness. 5. Replace the control circuit board with a new one.
E-51	<ol style="list-style-type: none"> 1. Turn power off and then on again. Press start switch to search home position again. 2. Make sure that Y-axis home position sensor and Y-axis home position sensor magnet are correctly attached. 3. Check if connector P1 (ORG) on the control circuit board is correctly inserted and if any harness is broken or short-circuited. 4. Replace Y-axis home position sensor and its harness. 5. Replace the control circuit board with a new one.
E-52	<ol style="list-style-type: none"> 1. Turn power off and then on again. Press start switch to search home position again. 2. Make sure that θ-axis home position sensor and θ-axis home position sensor magnet are correctly attached. 3. Check if the θ-axis home position sensor pulley is loosened. 4. Of connectors relayed to head harness, check if the harness for the θ-axis home position sensor is correctly attached to the connector for the θ-axis home position sensor. (The brown harness should be attached to pin 1, the black one to pin 6, and the blue one to pin 11. Refer to the instruction manual.) * Check if there is a harness in the control box that is broken or short-circuited. 5. Check if connector P9 (EXINB) on the control circuit board is correctly inserted and if any harness is broken or short-circuited. 6. Replace the θ-axis home position sensor and its harness with a new one. 7. Replace the control circuit board with a new one.
E-59	<ol style="list-style-type: none"> 1. Turn on the power again. 2. Make sure that ROM chips of the panel circuit board are correctly inserted. (Check position, orientation, lead clinching, etc.) 3. Initialize memory. 4. Replace the panel circuit board with a new one.
E-60	<ol style="list-style-type: none"> 1. This is not an error. This code indicates machine operation is being suspended due to emergency stop. 2. Refer to the instruction manual, "Using the EMERGENCY STOP switch." (Press the RESET switch to return to home position, and the start switch to resume sewing.)
E-70	<ol style="list-style-type: none"> 1. Turn the pulley manually to see if the upper shaft is not locked. 2. In input mode, turning the pulley manually, check the machine detects needle up signal. If not, refer to E10. Even if it does, synchronizer harness may be broken or short-circuited. It may appear when oscillation occurs. 3. With the power turned off, separate connectors P15 (DC300) on the control circuit board, and check if between pins 1 and 2 in the connector on the board is short-circuited. If it is short-circuited, replace the control circuit board. At this time, if fuse No.2 on the power supply circuit board has been blown, replace it.
E-71	Refer to E70. (In input mode, check if the machine detects needle down signal.)
E-72	<ol style="list-style-type: none"> 1. If the knife works correctly, refer to E12. If not, proceed the following steps to check the knife driving system. (This is because the place to be checked is different if the failure is with the sensor or driving system.) 2. Make sure that air is supplied to knife valve unit. 3. Check if there is a broken valve cord around valve unit. 4. Check if connector P4 (AIR) of the control circuit board is correctly inserted and if valve cord is broken or short-circuited. 5. Replace valve cord with a new one. 6. Replace valve unit with a new one. 7. Replace the control circuit board with a new one.

7. SOFTWARE


Code	Countermeasure
E-77	Refer to E70. (In input mode, check if the machine detects synchronizer signal.)
E-80	<ol style="list-style-type: none"> 1. If X-axis pulse motor works, refer to E50. If not, proceed with the following steps to examine the driving system of the X-axis pulse motor. (This is because the place to be checked is different if the failure is with the sensor or driving system.) 2. With the power turned off, check if there is a loose screw in a belt or gear around the X-axis pulse motor and that the feed bracket can move to the left and right. 3. Of the connectors relayed to the head harness, check if the connector for the X-axis pulse motor is securely inserted and if any harness is broken or short-circuited. 4. Check if connector P7 (XPM) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 5. While E80 is displayed, measure the voltage across pins 5 and 7 of connector P12 (POWER) without removing P12, from the harness, as follows: <ul style="list-style-type: none"> • Considering pin 7 as 0V (standard), measure the voltage of pin 5. It is normal if the voltage is + 55V. (Be careful not to touch any other place when measuring voltage.) * If the voltage is + 55V, the cause of the error is the X-axis pulse motor or its harness is broken. * If the voltage is not + 55V, turn off the power, remove connector P12 (POWER), and then turn on the power again, measure the voltage across pins 5 and 7 in the harness with connector P1 (POWER) inserted in the power supply circuit board in the same manner as above. • If the voltage is not + 55V, replace the power supply circuit board. * If the voltage is + 55V, the control circuit board or PMD circuit board for θ-axis may be damaged or X-, Y-, or θ-axis pulse motor or its harness may be short-circuited.
E-81	<ol style="list-style-type: none"> 1. If the Y-axis pulse motor works refer to E51. If not, proceed the following steps to examine the driving system of Y-axis pulse motor. (This is because the place to be checked is different if the failure is with the sensor or driving system.) 2. With the power turned off, check if there is a loose screw in a belt or gear around Y-axis pulse motor and if the feed bracket can move back and forth. 3. Of the connectors relayed to the head harness, check if the connector for the Y-axis pulse motor is securely inserted and if any harness is broken or short-circuited. 4. Check if connector P6 (YPM) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 5. While E81 is displayed, measure the voltage across pins 5 and 7 of connector P12 (POWER) on the control circuit board without removing P12, from the harness, as follows: <ul style="list-style-type: none"> • Considering pin 7 as 0V (standard), measure the voltage of pin 5. It is normal if the voltage is + 55V, (Be careful not to touch any other place when measuring voltage.) * If the voltage is + 55V, the cause of the error is the Y-axis pulse motor or its harness is broken. * If the voltage is not + 55V, turn off the power, remove connector P12 (POWER) from the control circuit board, and then turn on the power again, and measure the voltage across pins 5 and 7 in the harness with connector P1 (POWER) inserted in the power supply circuit board in the same manner as above. • If the voltage is not + 55V, replace the power supply circuit board. * If the result is acceptable, the control circuit board or PMD circuit board for θ-axis may be damaged or X-, Y-, or θ-axis pulse motor or its harness may be short-circuited.
E-82	<ol style="list-style-type: none"> 1. If the θ-axis pulse motor works, refer to E52. If not, proceed the following steps to examine the driving system of θ-axis pulse motor. (This is because the place to be checked is different if the failure is with the sensor or driving system.) 2. With the power turned off, check if there is a loose screw in a belt or gear around θ-axis pulse motor and if the feed bracket can move back and forth. 3. Of the connectors relayed to the head harness, check if the connector for the θ-axis pulse motor is securely inserted and if any harness is broken or short-circuited. 4. Check if connectors P1 (RPM), P2 (DC55), and P3 (CONTROL) on the PMD circuit board for the θ-axis are securely inserted and if any harness is broken or short-circuited. 5. Check if connectors P11 (HATOME) and P13 (DC55) on the control circuit board are securely inserted and if any harness is broken or short-circuited. 6. While E82 is displayed, measure the voltage across pins 5 and 7 of connector P12 (POWER) on the control circuit board without removing P12, from the harness, as follows: <ul style="list-style-type: none"> • Considering pin 7 as 0V (standard), measure the voltage of pin 5. It is normal if the voltage is + 55V. (Be careful not to touch any other place when measuring voltage.) * If the voltage is + 55V, the cause of the error is the θ-axis pulse motor or its harness is broken. * If the voltage is not + 55V, turn off the power, remove connector P12 (POWER), and then turn on the power again, and measure the voltage across pins 5 and 7 in the harness with connector P1 (POWER) inserted in the power supply circuit board in the same manner as above. • If the voltage is not + 55V, replace the power supply circuit board. * If the result is acceptable, the control circuit board or PMD circuit board for θ-axis may be damaged or X-, Y-, or θ-axis pulse motor or its harness may be short-circuited.

Code	Countermeasure
E-89	<ol style="list-style-type: none"> 1. Check if the upper shaft motor wiring (U/V/W) is correct. 2. Check if connector P14 (UVW) on the control circuit board is inserted and that the harness-side wiring is correct.
E-90	<ol style="list-style-type: none"> 1. Check if connector P2 (MAIN) on the panel circuit board is securely inserted and if any connector is broken or short-circuited. 2. Check if connector P18 (PANEL) on the control circuit board is securely inserted and if any connector is broken or short-circuited. 3. Replace the panel circuit board with a new one. 4. Replace the control circuit board with a new one.
E-91	Refer to E70. (In input mode, check if the machine detects synchronizer signal.)
E-92	<ol style="list-style-type: none"> 1. Make sure that power supply voltage is the same as the specification voltage. 2. If the conversion transformer is installed, check if terminals connections are correct. 3. Check if connector P20 (PER) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 4. Check if connector P2 (PER) on the power supply circuit board is securely inserted and if any harness is broken or short-circuited. 5. Replace the power supply circuit board with a new one. 6. Replace the control circuit board with a new one.
E-93	<ol style="list-style-type: none"> 1. Make sure that the large cooling fan is normally running. 2. Clean the large cooling fan. (Remove dust.) 3. Check if connector P10 (FAN-R) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 4. Replace the large cooling fan with a new one. 5. Replace the control circuit board with a new one.
E-94	<ol style="list-style-type: none"> 1. Make sure that the small cooling fan is normally running. 2. Clean the small cooling fan. (Remove dust.) 3. Check if connector P25 (FAN-L) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 4. Replace the small cooling fan. 5. Replace the control circuit board with a new one.
E-95	<ol style="list-style-type: none"> 1. With the power turned off, check if the feed bracket moves to the left and right. 2. Of the connectors relayed to the head harness, check if the connector for the X-axis pulse motor is securely inserted and if any harness is broken or short-circuited. 3. Check if connector P7 (XPM) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 4. Replace the X-axis pulse motor with a new one. 5. Replace the control circuit board with new one.
E-96	<ol style="list-style-type: none"> 1. With the power turned off, check if the feed bracket moves back and forth smoothly. 2. Of the connectors relayed to the head harness, check if the connector for the Y-axis pulse motor is securely inserted and if any harness is broken or short-circuited. 3. Check if connector P6 (YPM) on the control circuit board is securely inserted and if any harness is broken or short-circuited. 4. Replace the Y-axis pulse motor with a new one. 5. Replace the control circuit board with new one.
E-97	<ol style="list-style-type: none"> 1. Make sure that the control box is normally ventilated. 2. Clean the filter of the air intake. (Remove dust.) 3. Clean the small and large cooling fans (Remove dust.) 4. Make sure that cooling fans are attached correctly. <ul style="list-style-type: none"> • Large cooling fan: The wind blows toward the control circuit board and the PMD circuit board for θ-axis. • Small cooling fan: The wind blows in the direction that it can discharge the air in the control box.
E-98	<ol style="list-style-type: none"> 1. Check if connectors P12 (POWER) and P13 (DC55) on the control circuit board are securely inserted and if any harness is broken and short-circuited. 2. Check if connector P1 (POWER) on the power supply circuit board is securely inserted and if any harness is broken or short-circuited. 3. Check if connector P2 (DC55) on the PMD circuit board for θ-axis is securely inserted and if any harness is broken or short-circuited. 4. Replace the power supply circuit board with a new one. 5. Replace the PMD circuit board for θ-axis with a new one. 6. Replace the control circuit board with a new one.
E-99	<ol style="list-style-type: none"> 1. Refer to E95, E96 and E98. 2. Replace the power supply circuit board with a new one.


7. SOFTWARE

Code	Countermeasure
E-200	<ol style="list-style-type: none">1. Check if air is supplied to valve unit of the special lapel cutting device or wiring is correct.2. Of connectors relayed to head harness, check if the harness for the hammer position sensor is correctly attached to the connector for the hammer position sensor. * Check if there is no harness in the control box that is broken or short-circuited.3. Check if connectors P9 (EXINB) and P21 (EXOUT) on the control circuit board are securely inserted and if any harness is broken or short-circuited.
E-201	<ol style="list-style-type: none">1. Check if air is supplied to valve unit of the special lapel cutting device or wiring is correct.2. Of connectors relayed to head harness, check if the harness for the hammer home position sensor is correctly attached to the connector for the hammer home position sensor. * Check if there is no harness in the control box that is broken or short-circuited.3. Check if connectors P9 (EXINB) and P21 (EXOUT) on the control circuit board are securely inserted and if any harness is broken or short-circuited.
E-202 E-203	<ol style="list-style-type: none">1. Press the RESET key.2. Of connectors relayed to head harness, check if the harness for the buttonhole sensor is correctly attached to the connector for the buttonhole sensor. * Check if there is no harness in the control box that is broken or short-circuited.

7-6. Control circuit block diagram (1)

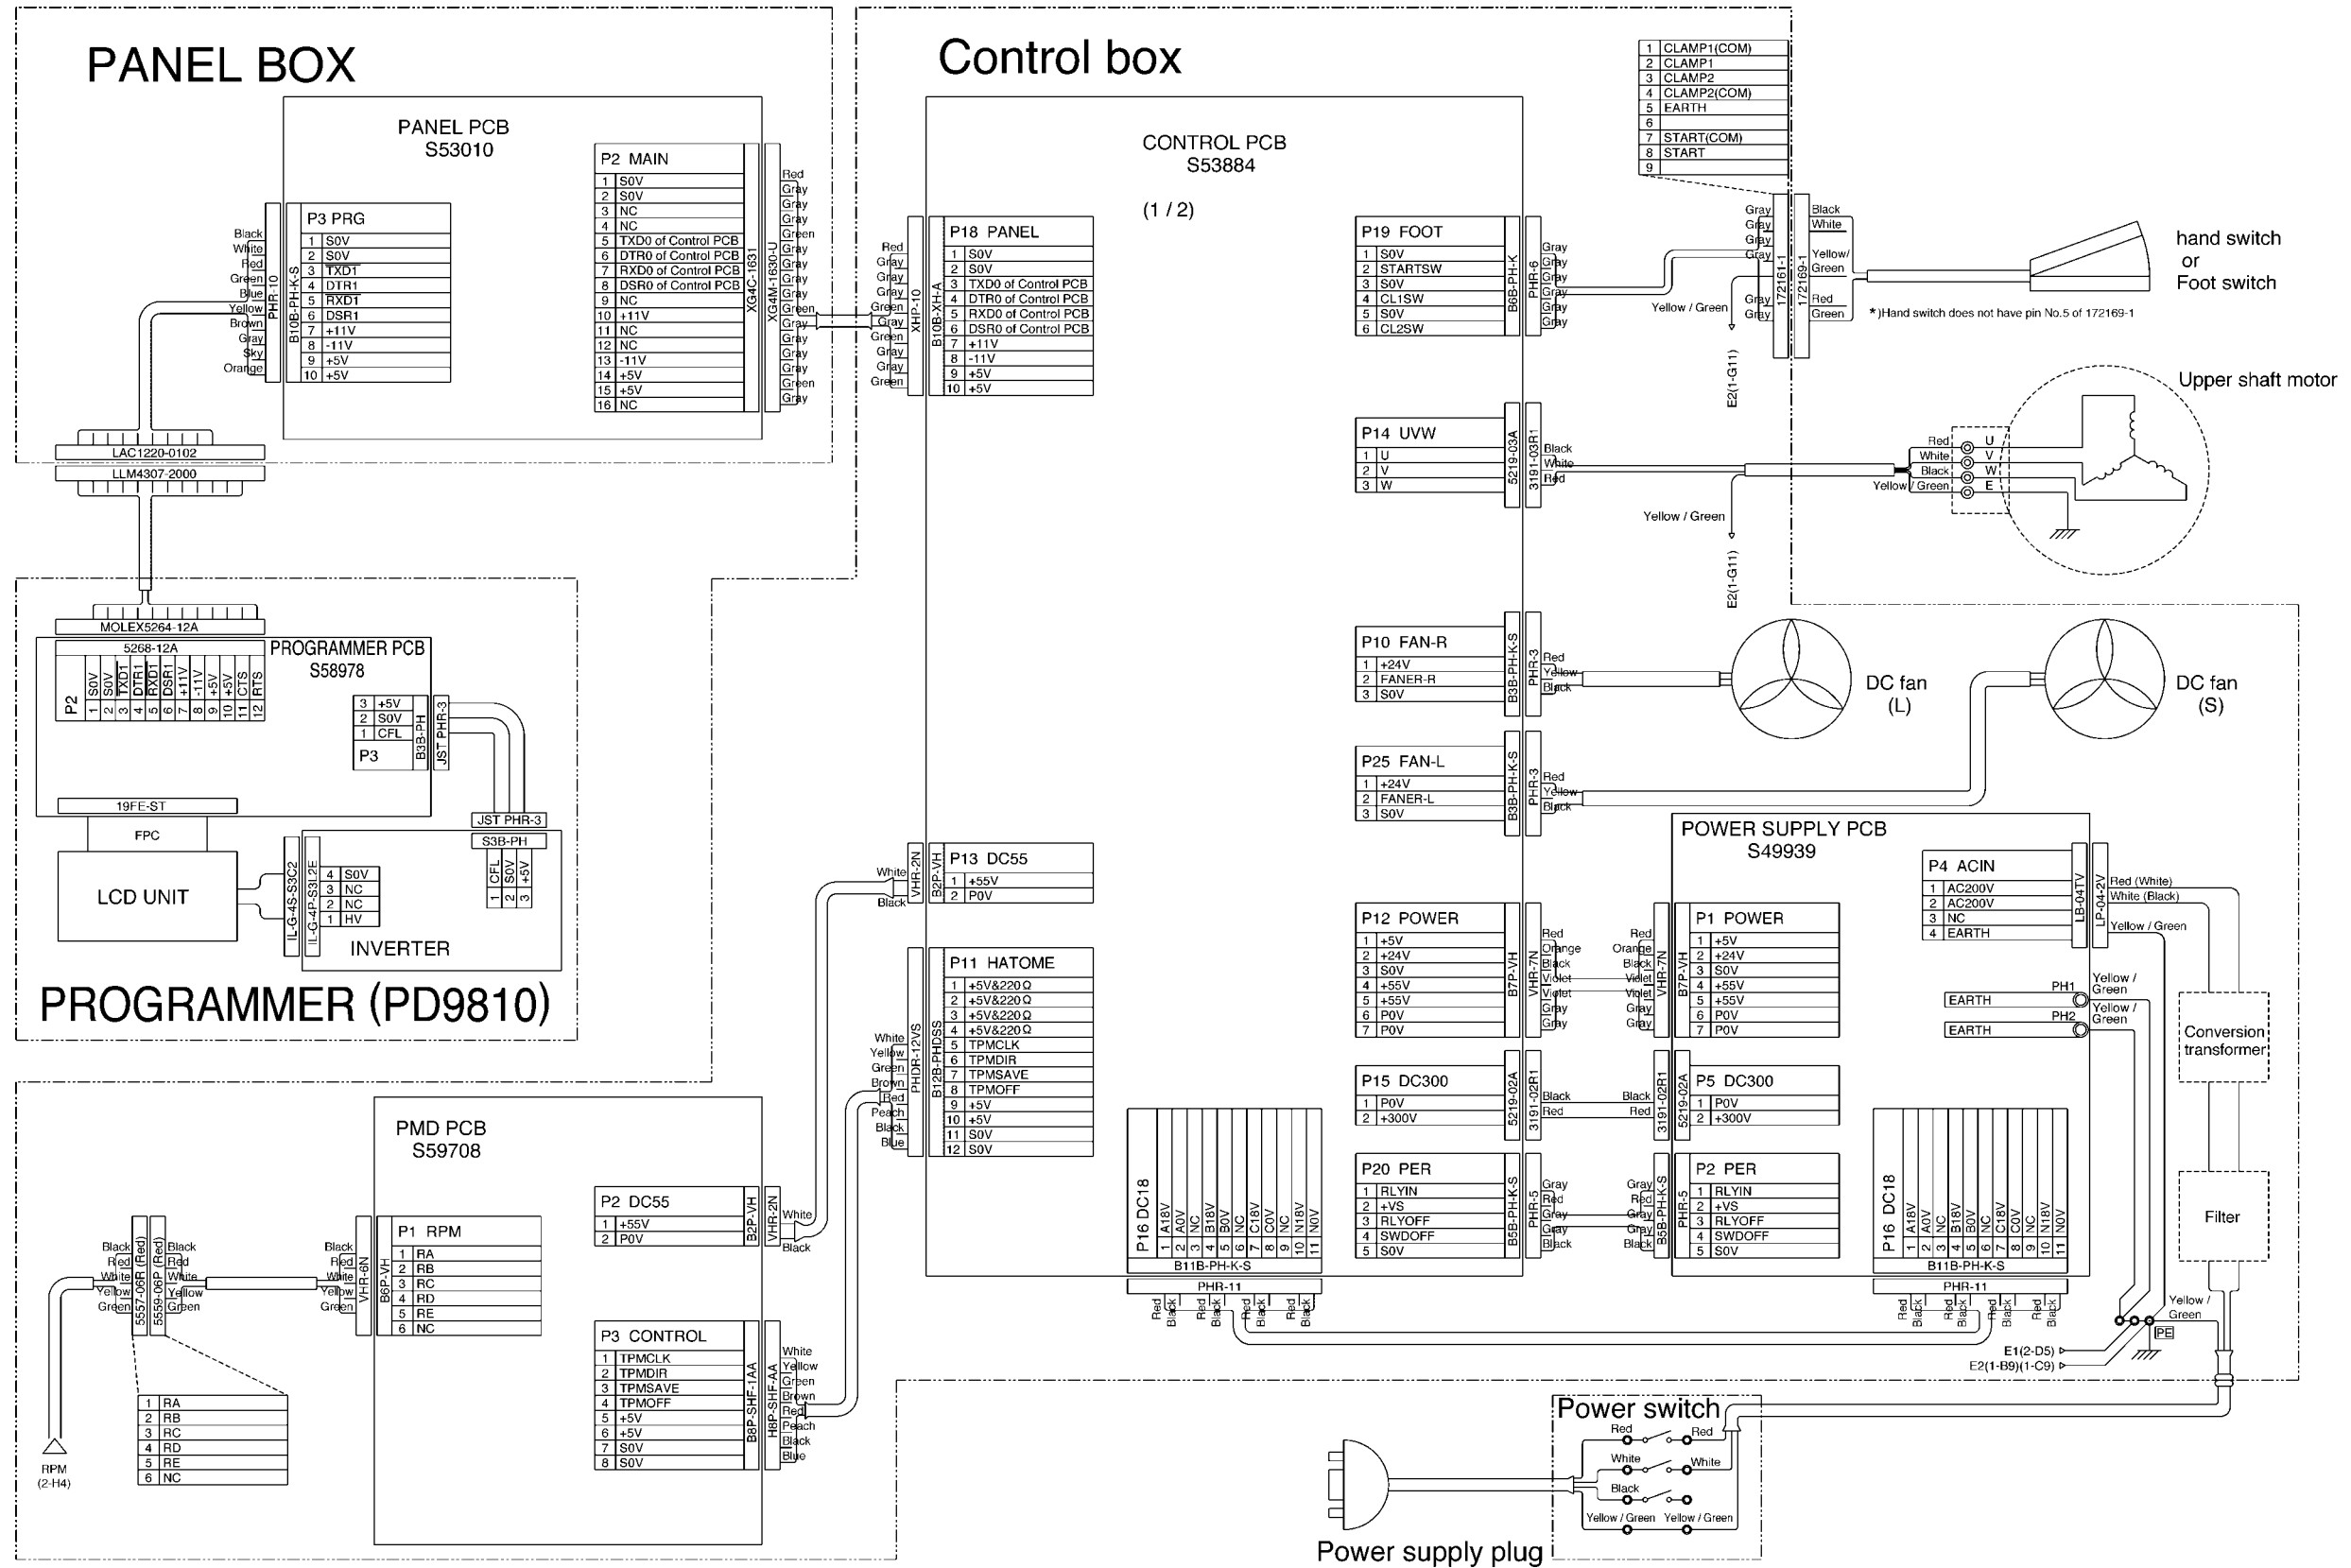

7-7. Control circuit block diagram (2)

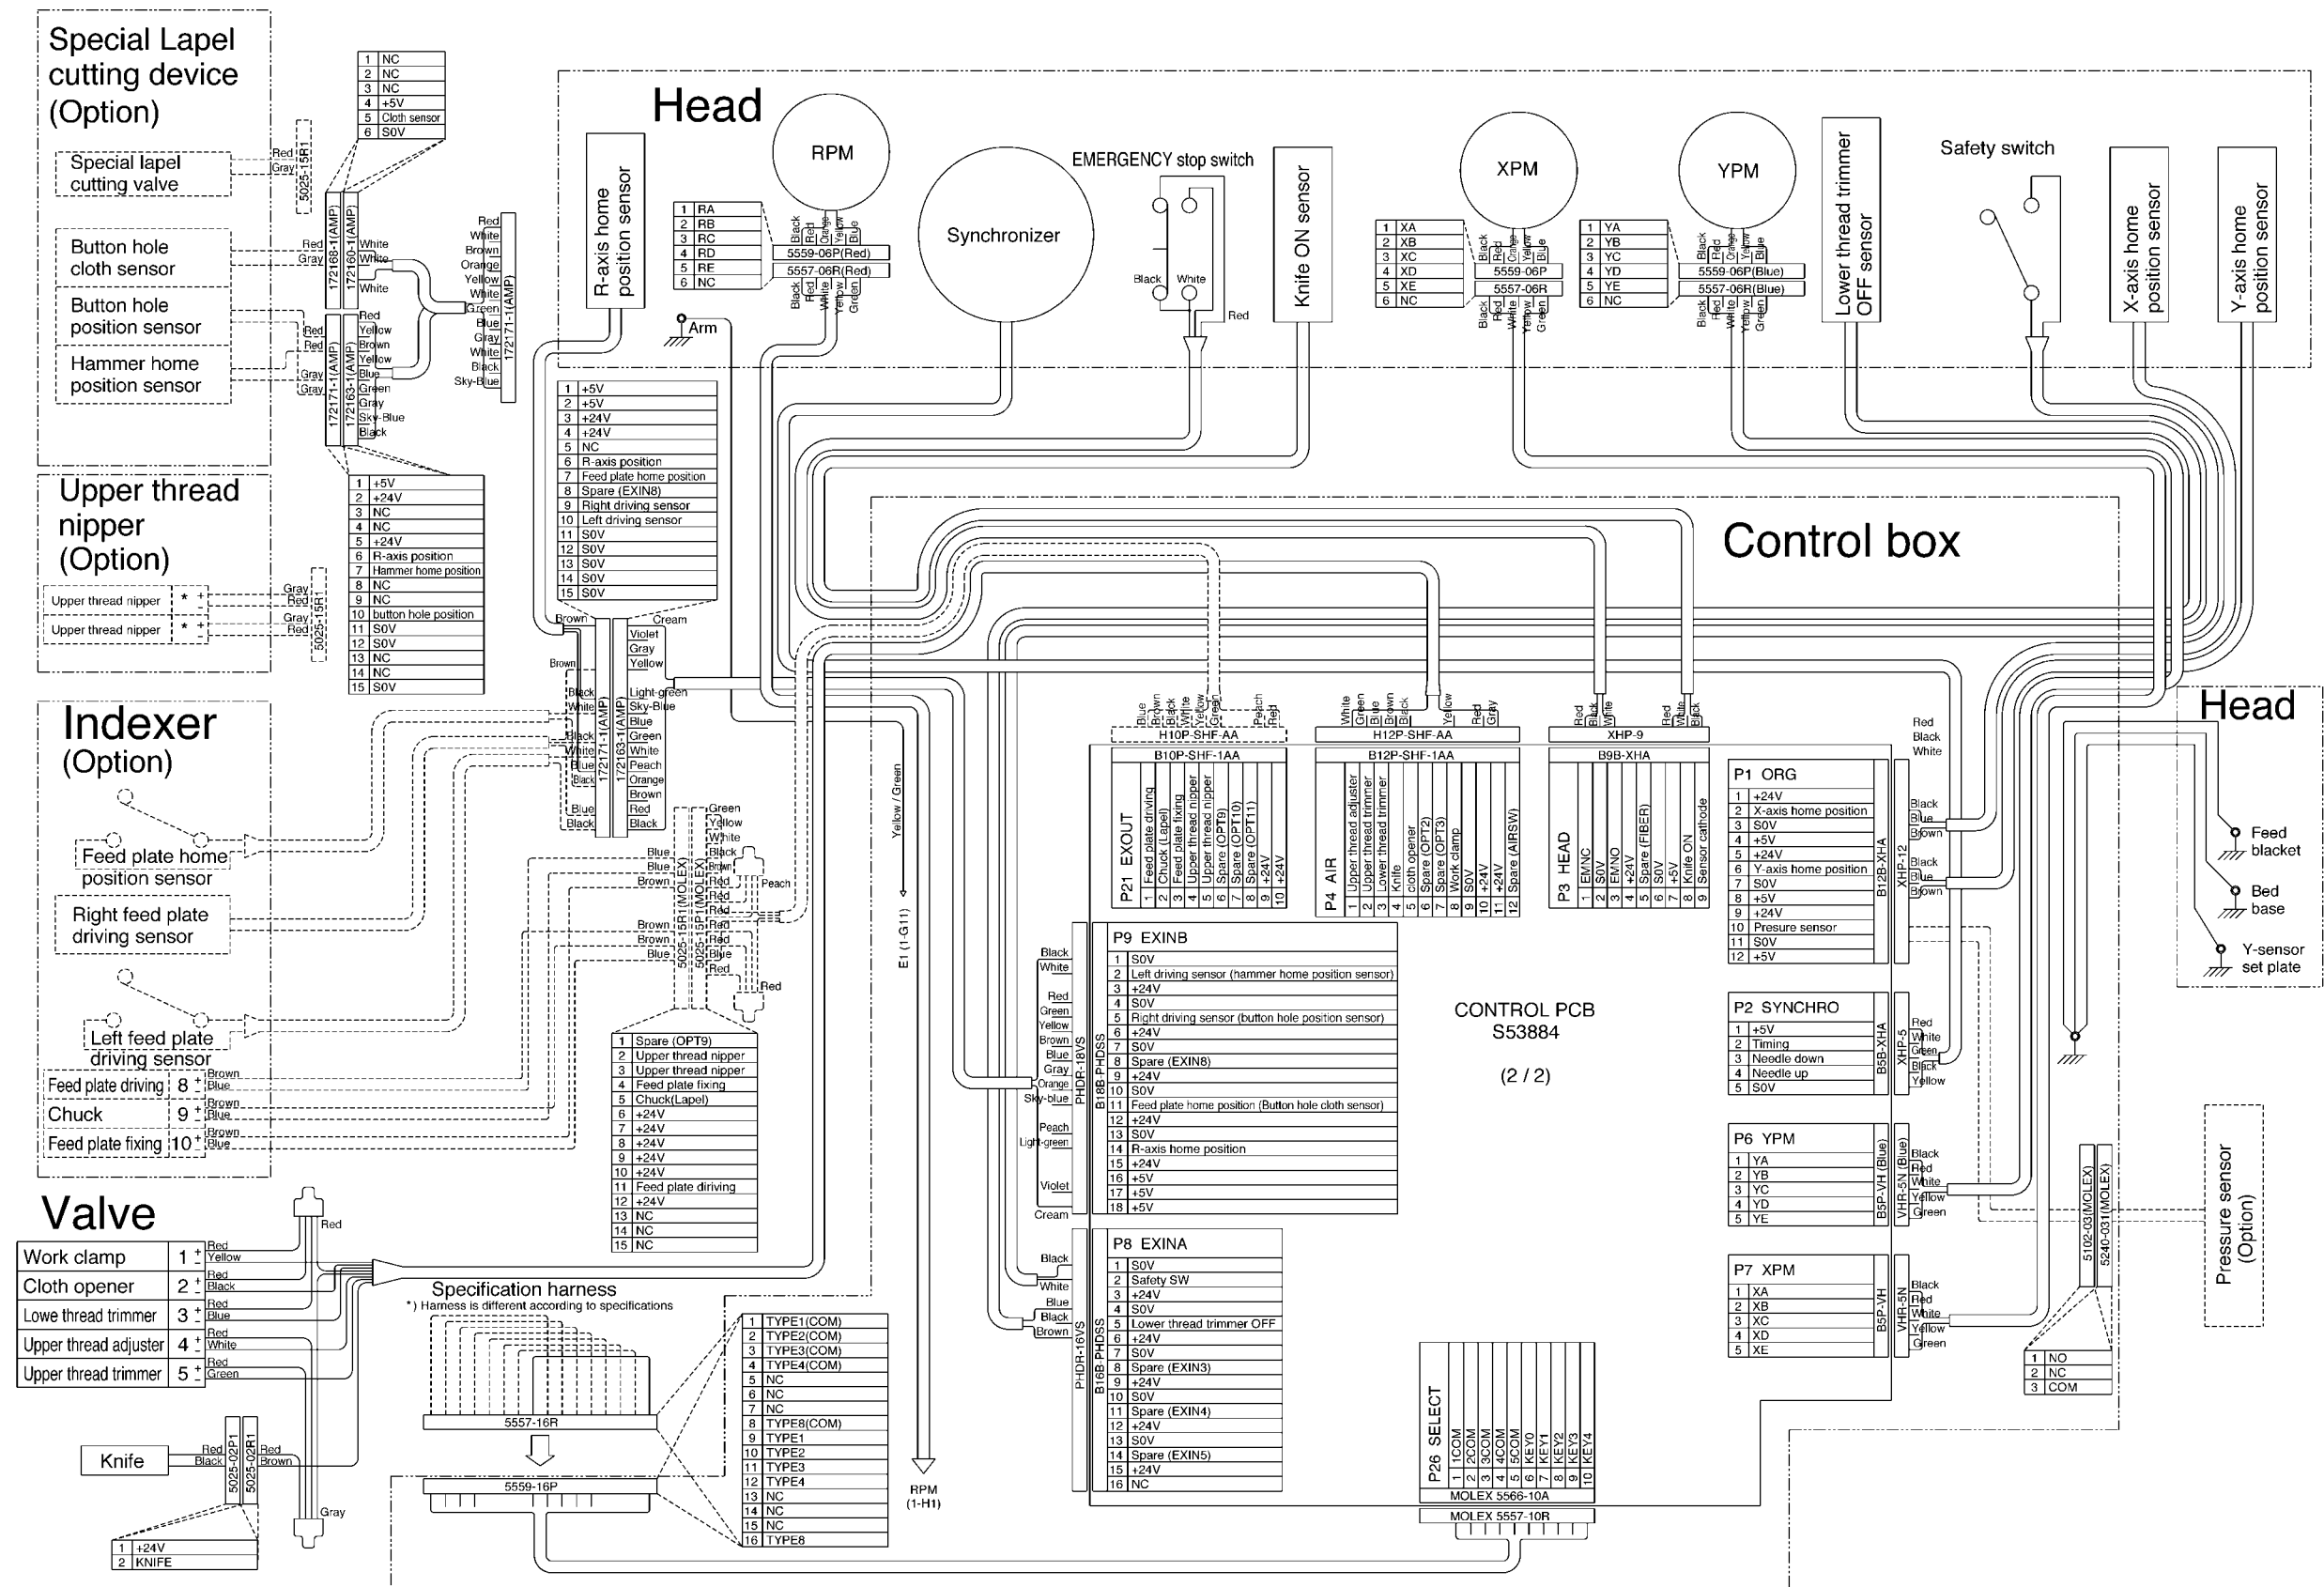

brother[®]



SERVICE MANUAL

BROTHER INDUSTRIES, LTD. <http://www.brother.com/>
15-1, Naeshiro-cho, Mizuho-ku, Nagoya 467-8561, Japan. Phone: 81-52-824-2177

Printed in Japan

RH-981A
I3080846H
2003.10. H (1)