



# Bluetooth Cassette Adapter



We hope you enjoy your Bluetooth Cassette Adapter from RadioShack. Please read this user's guide before using your new cassette adapter.

## Package Contents


- Bluetooth cassette adapter
- Mini-USB charging cable
- User's guide

## Features

- Loads like a standard cassette tape
- Plays music from your Bluetooth-enabled device through your home or vehicle cassette player
- Provides 6-8 hours of playback time

## Charge Your Cassette Adapter

Using the supplied charging cable, connect your cassette adapter's mini USB charging port to your PC or a USB charger (not included) to charge the cassette adapter.

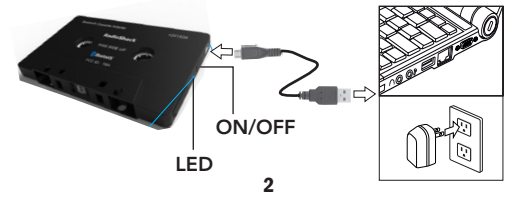

2

- The LED lights red when charging, and turns off when fully charged.
- Bluetooth is automatically deactivated when your cassette adapter is in charging status.
- Charge your cassette adapter when the LED flashes red every 8 seconds.

## Pairing Bluetooth Devices

1. Press and hold the **ON/OFF** button to turn on the cassette adapter. The LED flashes blue three times to indicate the power is on. When the LED flashes blue and red, your cassette adapter is searching for Bluetooth devices.
2. Activate your device's Bluetooth function (refer to your device's user's guide). When your device locates **RS1201526**, select it. When paired, the LED flashes blue every 2 seconds.



3

## Note:

- If you are prompted for a PIN, enter 0000.
- The cassette adapter automatically turns off if no Bluetooth devices are found in 10 minutes.

## Changing Bluetooth Devices

Your cassette adapter automatically remembers the most recently paired device. To change a device, you must first disconnect the first device.


To disconnect the paired device, press and hold the **ON/OFF** button for 2 seconds. The cassette adapter starts searching for another Bluetooth-enabled device.

**Note:** You also may need to disconnect the cassette adapter using your device's Bluetooth controls.

4

## Use Your Cassette Adapter

1. Insert the cassette adapter into your home or vehicle cassette player.

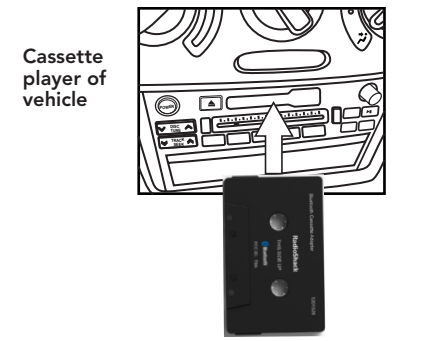

5

lights red for 2 seconds to indicate the power is off.

## Note:

- Cassette player will mute playback when answering calls, and resume playback after call ends.
- If you are using an auto-reverse cassette player, set it to play Side A.
- Keep the cassette adapter's magnetic head and the cassette player's magnetic deck clean.

## Reset

If the cassette adapter fails to operate properly, press and hold the **ON/OFF** button for 5 seconds in charging mode. The LED flashes blue and red three times, your cassette adapter is reset.

## Specifications

Input Voltage.....	DC 5V
Battery Capacity .....	140mA
Charging Current.....	100mA ± 20mA
Battery Charge Time .....	approx. 2 hours
Operation Time .....	6 - 8 hours

6

Working Distance .....	approx. 16 feet (5m)
Bluetooth Protocol .....	V4.0+EDR
Frequency Response .....	20Hz – 20kHz
S/N Ratio .....	47dB
Distortion.....	1.2% (At 50mW output)
Channel Balance.....	3dB
Separation (1kHz).....	L: 36dB, R: 36dB
Length of the Charging Cable.....	2.6 ft. (0.8m)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

## FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

7

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a RadioShack-owned store or an authorized RadioShack franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.**

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

8

Should a problem occur that is covered by this warranty, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store in the U.S. RadioShack will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

**RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD. EXCEPT AS DESCRIBED ABOVE, RADIOSHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK**

9

HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You may contact RadioShack at:

RadioShack Customer Relations  
300 RadioShack Circle  
Fort Worth, TX 76102 04/08

[www.RadioShack.com](http://www.RadioShack.com)

**RoHS**  
Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by RadioShack is under license. Other trademarks and trade names are those of their respective owners.

©2013. RadioShack Corporation. All rights reserved. RadioShack is a registered trademark used by RadioShack Corporation. Printed in China 09A13 1201526

10