 


KW51

This page does NOT print!

Booklet is **12 pages**
(104mm wide x 145mm tall)
including front and back covers
and bound on the left edge.

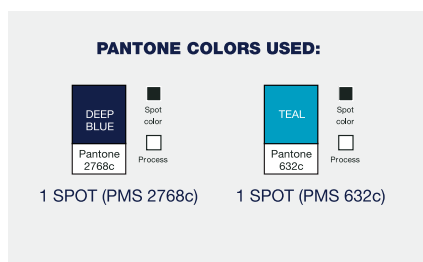

KNIT™
AUDIO

Lounge
Wireless Portable Speaker

KW51

Welcome Your Music Home

We listen to music in motion on headphones and in our cars, but found ourselves listening less often at home. We wanted wireless home speakers that sounded great, were easy to use and designed to blend with décor. So we designed Knit Audio with warm gray woven fabric and rich wood grain finishes and spent time tuning the acoustics to sound great in any room.

We love having music playing when we're rushing around getting ready in the morning, serenading us when we're washing clothes and doing dishes, accompanying us when we're cooking and eating and grooving when we're hanging out with family and friends playing board games, reading a book or simply relaxing. Whatever we're doing, music makes us feel more at home.



Happy to Help

We know there are many speakers you had to choose from. Thank you for choosing Knit Audio. If you have any questions or need help, we're here to help:

support@knitaudio.com

(855) 692-9192

M-F 9AM-8PM EST

IMPORTANT SAFETY NOTIFICATIONS

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISES ET POUSSER JUSQU'AU FOND.

NOTE: This device complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

SURGE PROTECTORS: It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: The mains plug is used as a disconnect device, the disconnect device shall remain readily operable.

IMPORTANT SAFETY INSTRUCTIONS

 
 
1. Read these instructions.
2. Keep these instructions.
3. Heed **all** warnings.
4. Follow **all** instructions.
5. Do not use this apparatus near water.
6. Clean **only** with a dry cloth.
7. Do not **block** any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or ground-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer **all** servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Power Sources - This product should be connected to a power supply **only** of the type described in these operating instructions, or as marked on the unit.
16. Water and Moisture - This product should be kept away from direct contact with liquids. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
17. CAUTION-Danger of explosion if battery is incorrectly replaced. Replace **only** with the same or equivalent type. Batteries (a battery pack or an installed battery) shall not be exposed to excessive heat such as sunshine, fire etc.
18. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
19. Do not install this equipment in a confined or "boxed-in" space such as a bookcase or similar unit, and maintain good ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, tablecloths, curtains, etc.
20. This apparatus is for professional use only.

21. When moving or not using the appliance, secure the power cord (e.g., wrap it with a cable tie). Be careful not to damage the power cord. Before using it again, make sure the power cord has not been damaged. If the power cord has been damaged at all, bring the unit or cord to a qualified service technician for repair or replacement as specified by the manufacturer.
22. **WARNING:** Please refer to any important information (e.g., electrical, safety, etc.) printed on the exterior bottom enclosure or rear panel before installing or operating the product.
23. **WARNING:** Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

ADDITIONAL SAFETY PRECAUTIONS

- a. Please note the information printed underneath the unit.
- b. Batteries should not be exposed to excessive heat such as direct sunshine, fire, etc.
- c. Do not impede the ventilation of this unit by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- d. Keep open flames, such as lighted candles, away from this unit.
- e. Do not place this unit in closed bookcases, racks, or other spaces without proper ventilation.
- f. Use only the same or equivalent type batteries as there is a danger of explosion if the incorrect batteries are used or they are installed incorrectly.
- g. Dispose of batteries properly according to environmental regulations.

TOP of SPEAKER

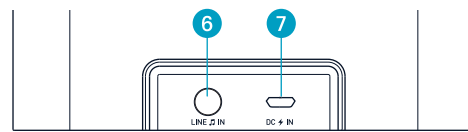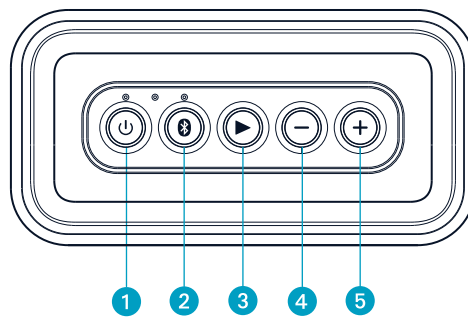

REAR of UNIT

- 1 POWER ON / OFF Button
- 2 BLUETOOTH PAIR Button
- 3 PLAY / PAUSE / SKIP - / SKIP + Button
- 4 VOLUME - Button
- 5 VOLUME + Button
- 6 LINE-IN JACK
- 7 Micro USB DC-IN JACK



Inside the Box

KW51 Lounge Bluetooth® wireless portable speaker, USB power cable and user guide.

Connections and Modes

CHARGING MODE

For a full charge, connect the supplied micro USB power cable into the micro USB port on the KW51 and plug the other end into a computer or powered USB port. Disconnect both ends of the micro USB power cord when not in use.

NOTES: A full charge takes up to 3.5 hours. After the initial charge, it takes up to 2 hours to charge.

- The battery is internal and cannot be replaced.
- Actual battery life varies with use, settings and environmental conditions.
- Rechargeable batteries have a limited number of charge cycles.
- Charge the rechargeable batteries at least twice a year.



BLUETOOTH MODE

Pair and connect your Bluetooth device (See the Pairing section for instructions) to stream audio wirelessly. Make sure no cable is connected to the AUX INPUT. The unit will automatically turn off if there is no audio playback for 10 minutes.

NOTES: For best audio performance and minimal distortion in BLUETOOTH MODE, turn up the volume on your Bluetooth compatible device.

Using Your Speaker

PLAYBACK MODES

Once your Bluetooth device has been paired with KW51, it is simple to reconnect.

- 1 In standby mode, press the Power Button to turn on
- 2 If a 3.5mm cable is connected to the AUX Input, Lounge will default to AUX mode
- 3 If no cable is connected to the AUX Input, Lounge will switch to Bluetooth mode and begin Bluetooth pairing
- 4 To return to AUX mode, simply connect a 3.5mm cable to the AUX Input
- 5 Press the Power Button again to turn off.

BLUETOOTH PAIRING

Pair with Bluetooth® capable devices to stream audio wirelessly from smartphones, tablets or laptops for music, movies, video games and apps.

- 1 In Standby mode, press the Power Button to turn on and begin Bluetooth pairing (make sure no cable is plugged into Line-In). The Bluetooth LED will flash Blue.
- 2 On your Bluetooth device, select "**Knit Lounge**" from the device list to pair. Once Bluetooth has paired successfully, the Bluetooth LED will turn solid Blue.
- 3 To disconnect, press and hold the BLUETOOTH PAIR button for 3 seconds.
- 4 To reconnect, make sure power is on and unit and device are within range. Select "**Knit Lounge**" from the list on your Bluetooth device. The Blue LED will change from flashing to solid Blue when reconnected.

NOTES: For best audio performance, turn the volume on your Bluetooth source device all the way up. If a 3.5 mm cable is plugged into the AUX Input or if KW51 is already paired with a device, the unit will quit Bluetooth mode.



RECONNECTING YOUR BLUETOOTH DEVICES

Once your Bluetooth device has been paired with KW51, it is simple to reconnect.

- 1 Make sure the speakers is powered on and within range.
- 2 Select "**Knit Lounge**" from the list on your Bluetooth device.
- 3 The blue LED will change from flashing to solid, indicating that your Bluetooth device is reconnected.

NOTES: Volume is controlled by both the volume setting on your device and on Lounge. For best audio performance, turn the volume on your Bluetooth source device all the way up.

Lounge can only play audio from one source at a time. If Lounge is connected to Line-In source, the Bluetooth will not function. Simply unplug the 3.5mm Line-In audio cable and press the BLUETOOTH PAIR button to switch to Bluetooth (if necessary, select "**Knit Lounge**" on your Bluetooth device).

Lounge will automatically turn off if there is no music playback or connection after 10 minutes.

MUSIC PLAYBACK

- Pressing the MODE/PLAY button, while in Bluetooth mode will play or pause the audio playback on your Bluetooth device.
- Pressing the MODE/PLAY button quickly **2x** while in Bluetooth mode will skip to the next track on your Bluetooth device.
- Pressing the MODE/PLAY button quickly **3x** while in Bluetooth mode will skip the previous trace (or to the beginning of the current track depending on the paired device).



LED Status Lights

BLUETOOTH LED

When Bluetooth is in pairing mode, the Bluetooth LED will flash blue. Once Bluetooth has paired successfully, the Bluetooth LED will turn solid blue.

POWER / CHARGING LED

The red and white LEDs indicate the following statuses

USB Cable	Built-in Battery	White LED	Blue LED	Red LED	Status
Connected	Full	OFF	OFF	OFF	--
Connected	Not Full	OFF	OFF	ON	Battery Charging
Connected	Full	ON	ON	OFF	--
Connected	Not Full	ON	ON	ON	Battery Charging
Not Connected	Not Full	ON	ON	OFF	Using Battery Power
Not Connected	Low	FLASH	ON	OFF	Battery Low



FAQ's

Q: If I hear distortion, what should I do?

A: Lower the volume on your Lounge speaker, and increase the volume on your audio source. .

Q: What if I hear Intermittent sound?

A: Recharge the internal battery using the included USB power cable.

If using Bluetooth, move the audio source and the speaker closer together, within 30' of each other.



FAQ's *continued*

Q: I cannot play audio via Bluetooth.

A: Confirm your device is A2DP Bluetooth compatible. Ensure that both your Bluetooth device and speaker are not connected to any other devices.

Unpair speaker from your Bluetooth device (check with your device manufacturer for more information about Bluetooth pairing,) then re-pair following the steps in the section **BLUETOOTH PAIRING**

support@knitaudio.com
(855) 692-9192 M-F 9AM-8PM EST

Specifications

GENERAL:

Micro USB DC IN: 5V 1000mA
Dimensions (W x D x H): 5.12" x 2.6" x 4.76" (130 x 66 x 121mm)

BLUETOOTH:

Bluetooth specification: v2.1+ EDR
Supported Profile: EDR and A2DP
Battery: 3.7V, 2000mAh, Rechargeable Li-Ion
Battery Recharging Time: 3.5 hours
Battery Playback Time: Up to 6 hours
(varies by volume level and audio content)
Range: 30 feet (10m) line of sight

 
Specifications are subject to change without notice.

Designed in Los Angeles. Made in China. Distributed by Life Lab International Ltd.

KNIT™ is a registered trademark of Goodhatch LLC.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Life Lab International LTD. is under license. Other trademarks and trade names are those of their respective owners.

KNITAUDIO™

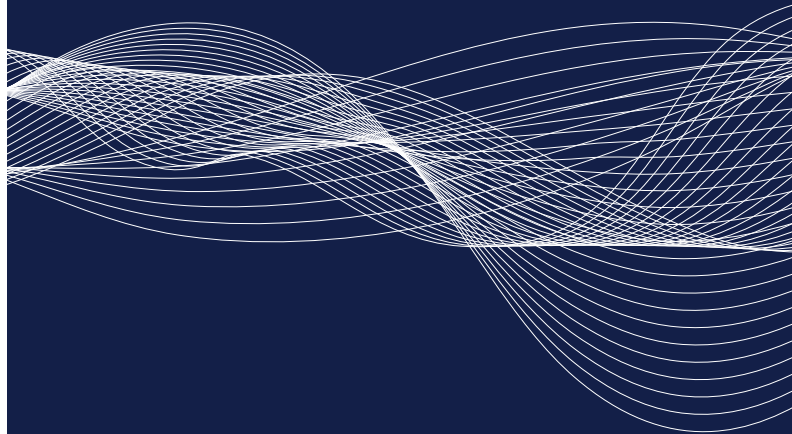

©2017 Life Lab International Ltd.