

**MONSTER®**  
**Rockin Roller PRO**  
**User Manual**



**FOR QUESTIONS OR TECHNICAL SUPPO**  
Please call:

**1.800.976.0677**

Please do not return this product to the store.

 
# TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS .....	3
UNPACKING .....	5
PARTS .....	5
GETTING STARTED BLUETOOTH CONNECTION (Bluetooth Devices) .....	6
NFC PARING .....	7
SELECTING NOAA (National Weather Service) .....	7
CONNECTING A MICROPHONE, GUITAR OR OTHER DEVICE .....	7
CONNECTION USING AUX INPUT .....	8
FM / USB CHARGING .....	8
AUTO STANDBY .....	9
TROUBLESHOOTING .....	9
SPECIFICATIONS .....	10
LIMITED WARRANTY .....	11

## IMPORTANT SAFETY INSTRUCTIONS

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOIST.


TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOIST.

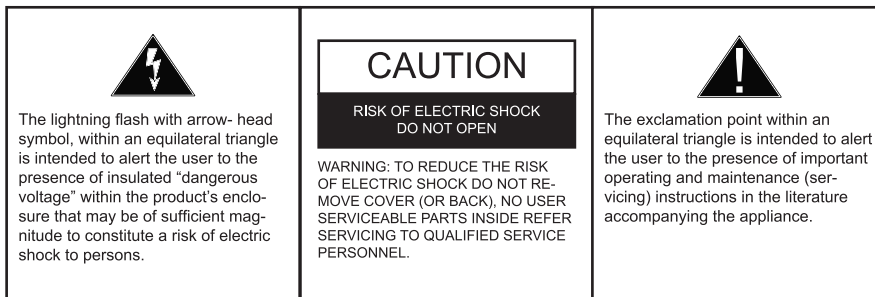

### Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 16) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.



- 17) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 18)  Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.
- 19) Minimum distances 10mm around the apparatus for sufficient ventilation .
- 20) The ventilation should not be impeded by covering the ventilation openings with items, newspapers, table-cloths, curtains, etc.;
- 21) No naked flame sources, such as lighted candles, should be placed on the apparatus;
- 22) If the battery damage , please put in recycle location .
- 23) The use of apparatus in moderate climates .

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

**WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

**CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.

The product is only allowed to battery power supply while is using outdoor, the AC input port and AC outlet port need to be covered

### **FCC Warning Statement**

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### **FCC Radiation Exposure Statement:**

This ROCKIN' ROLLER PRO SPEAKER complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

 
## Unpacking

Check that you have all of the following items.

If any item is missing, please contact the customer service hotline for assistance. The hotline number is printed on the cover page of this user manual.

- Monster Rockin' Roller PRO
- Microphone
- AC Power Cable
- User Manual (with Warranty Statement)
- Quick Start Guide
- Microphone Holder
- Audio Cable 3.5 mm

## The transmitter part (Handheld)

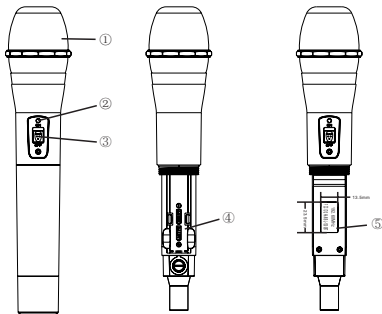


1. Pick up cover.
2. The light of transmitter power.
3. The power switch of transmitter.
4. The battery room of transmitter.
5. Frequency sticker.
6. Lid

## OPERATIONS:

 - 1 working voltage: 3V (1.5V AA\*2)
- 2 modulation: FM
- 3 operating frequency: 192.6MHz( fixed frequency)
- 4 In the ON state, the transmitter is turned on, in the OFF state, the wireless transmitter is turned off,
- 5 When the transmitter shows red light, it means the 3V battery runs out quickly.

## Part Descriptions

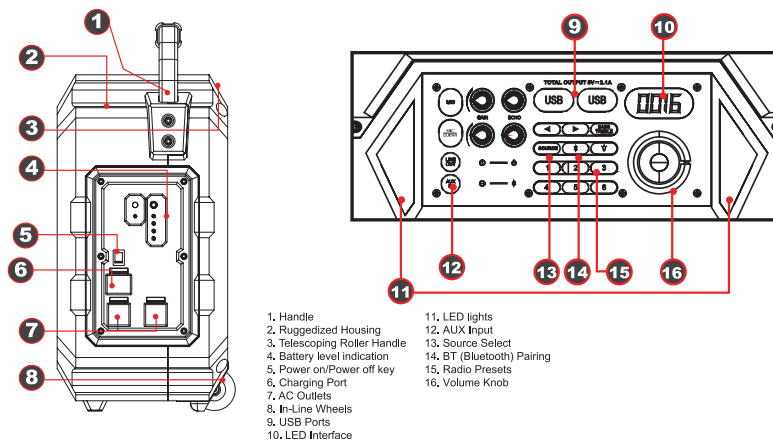


1. Handle
2. Ruggedized Housing
3. Telescoping Roller Handle
4. Battery level indication
5. Power on/Power off key
6. Charging Port
7. AC Outlets
8. In-Line Wheels
9. USB Ports
10. LED Interface
11. LED lights
12. AUX Input
13. Source Select
14. BT (Bluetooth) Pairing
15. Radio Presets
16. Volume Knob

## GETTING STARTED

 
### Power Connection

#### Wall Outlet




#### Power On/Off Switch

 - Power on the mechanical
- The **Power Green LED** will turn On
- The unit will enter into Bluetooth mode, Bluetooth LED will flash blue.

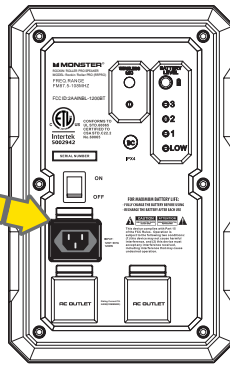

 - Connect the supplied A/C cable to the speaker.
- Plug the A/C cord into the wall outlet.

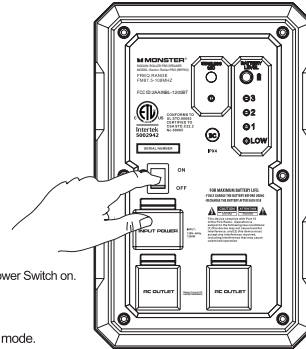


- Turn Power Switch on.

If the 3.5mm Stereo Audio cable is plugged in during this Power On mode, it will automatically enter into AUX mode.

## CHARGING BATTERY

 
- By connecting AC power, battery will start charging.
- If **Red LED** indicator is flashing, this means that battery levels are low and need charging.
- If all **Green LED** indicators is on, this means the battery level is full.
- Wireless microphone in ON mode the blue LED will be light , in OFF mode the blue LED will be turn off .
- Charge battery Usually: fast charging (the unit is OFF): 8 hours; Slow charging(the unit is ON): 16hours. If the end user is the first time to use, suggest to charge the unit 24 hours, the longer the better.

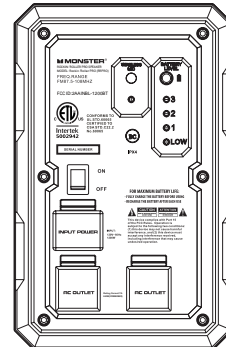


## BLUETOOTH CONNECTION (Bluetooth Device)

### Manual Bluetooth pairing

  - Place Speaker and your Bluetooth device so they are no more than 33 feet apart.
- Press and hold **[BT]** button on Speaker for 2 seconds to enter into Bluetooth pairing mode. BT Blue LED will flash.
- Make sure Bluetooth function of your Bluetooth device is ON.
- Set your Bluetooth device to search for Bluetooth devices. You will recognize the unit by its Bluetooth name "Monster RR-Pro"

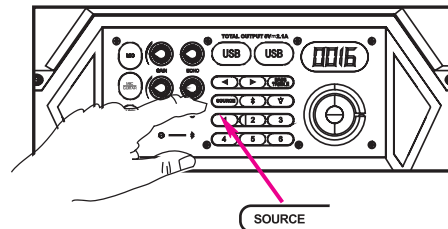

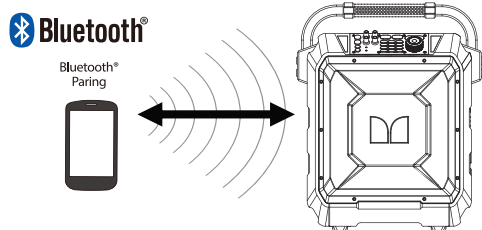
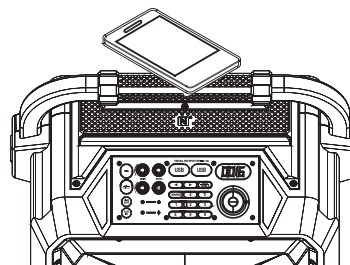 


- Once selected, your Bluetooth device will indicate as "Connected" and you will hear confirmation sound from Speaker.
- Bluetooth LED turns solid upon completion of pairing.
- Bluetooth Blue LED Indicator (Flashing to Steady On)

Bluetooth Blue LED Indicator  
(Flashing to **Steady On**)

### BLUETOOTH, NFC PAIRING

- Turn the speaker on to Bluetooth pairing mode by pressing and holding  to enter into Bluetooth pairing mode.
- Turn the Bluetooth on your NFC Compatible mobile device
- Tap your mobile device onto the NFC logo of the speaker
- Bluetooth Blue LED Indicator turns solid upon pairing



 
### WIRELESS MICROPHONE PAIRING

VHF microphone will be automatically paired. just need to turn the microphone to be ON and the LED indicator of receiver will be ON (the LED is on the right side plate of RRPRO unit)

Wireless microphone in ON status , the blue LED will be light on main set side panel . In OFF status , that the wireless microphone closed , than the blue LED will turned off . When the microphone Red light ON , than indication the 3V alkaline battery will be use up .

### CONNECTING A MICROPHONE, GUITAR OR OTHER DEVICE

- Plug in the 6.3 mm audio jack plug in the MIC input for Microphone, GUITAR input for guitar, the unit will enter into that mode (MIC / GUITAR), make sure the the Microphone, Guitar, or other device is on.
- You can connect any audio device that has 6.3 mm audio output jack, and can playback any audio from this connected device.
- All playback functions (Play, Pause, Next, Previous, Volume Up & Volume Down) can be controlled from the connected Audio device. only in Bluetooth connection, they can work.

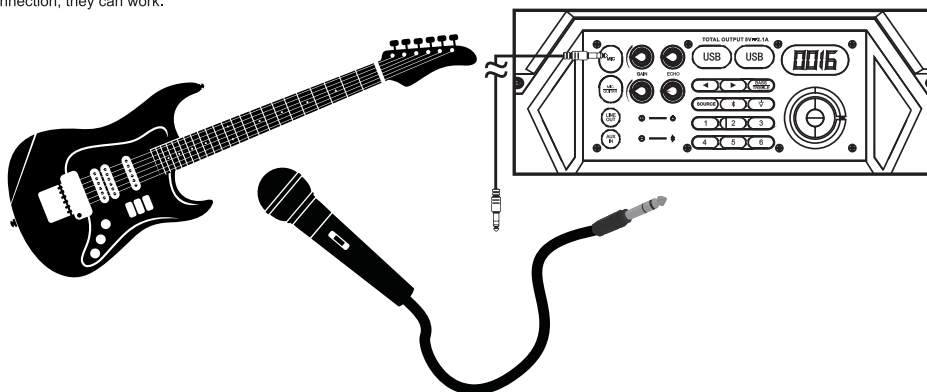


## CONNECTION USING AUX INPUT

- Plug in the 3.5mm Stereo Audio wire into the Aux-In input, and the unit will enter into Aux mode and the BT Blue LED Indicator will turn off.

- You can connect any audio device that has 3.5mm audio output jack, and can playback any audio from this connected device.

 - All playback functions (Play, Pause, Next, Previous, Volume Up & Volume Down) can be controlled from the connected Audio device.  
IN AUX input only volume output can be controlled

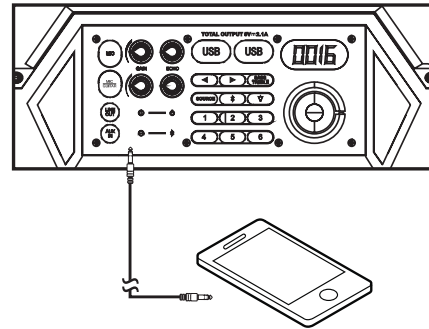

## FM/USB CHARGING

### Listening to FM radio

- Press the "Source" button to select FM source, the radio station frequency will be displayed on the screen.

 
 
- Press and hold (◀ or ▶) to search a station with strongest reception automatically.

### Store your favorite six radio stations manually

- Tune to the desired radio station.
- Press and hold a number key (1-6) to enter programming mode; the corresponding number blinks on the screen; and the station to save on the selected preset.
- Repeat above step 1-2 to store additional stations.

### Select a favorite radio station

- Press the "Source" button to select FM source.
- Press the number 1-6 keys to select one of your favorite radio stations to listen

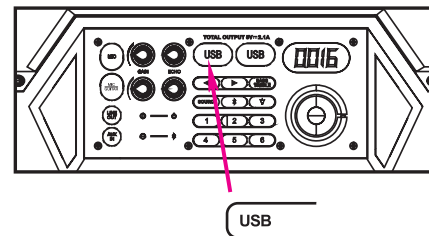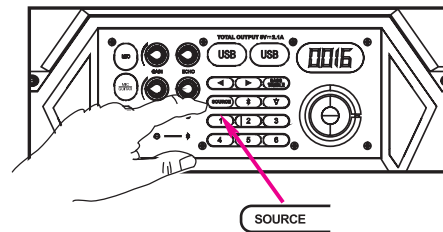

### USB Charging

 
- With the built in USB power bank, connect your USB cable to one of the two USB power ports. You can connect an iPhone, iPad, or any Android device. (USB cable not included)

## EQ Presets



EQ Presets  
When in Bluetooth or AUX mode easily customize your listening experience by pressing the preset button

- 1 FLAT
- 2 JAZZ
- 3 ROCK
- 4 POP
- 5 CLASSICAL
- 6 DEFAULT

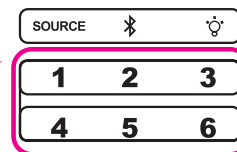



## **AUTO STANDBY/ WAKE UP**

### **Auto Stand by:**

The Power Red LED Signal will turn on and other LED Signals will turn off once the main unit is in Standby mode.

- Bluetooth: When there is no Audio connection, or there is a BT Connection failure, or if the BT has been disconnected for 15 Minutes, the set will go to standby mode and the BT LED Signal will turn off.
- AUX: The main unit will enter standby mode when the main unit is in AUX mode and no AUX cable has been detected.
- Work Mode: When the main unit is in work mode, pressing and holding the volume knob key for 3 seconds will auto enter the unit to Standby Mode.

### **“Wake up” from standby mode:**

If the main unit is in Standby mode, press any key to wake up. The main unit will turn on and return to the latest source mode. The Power Red LED Signal will turn off and the LED Screen will display the latest source once the main unit is in work mode.

## **TROUBLESHOOTING**

### **General**

#### **No power**

- Check that the AC power cord is securely inserted in the unit and the electrical outlet.
- Check the Power On/Off switch is turn to On position.
- If battery is flat. Plug in the AC power cord to charge and operate. Keys no response
- Turn the Power On/Off switch to Off, and then On again to reset the unit.
- Unplug the AC power cord and plug it back again. No sound heard
- Make sure the Aux connected device volume is turn to reasonable level.
- Make sure the Bluetooth connected device output the audio thru BT out.
- Make sure the Bluetooth connected device volume is turn to reasonable level.

### **Bluetooth Operations**

#### **Audio quality is poor**

- Bluetooth reception is poor. Move the Bluetooth device closer to the Speaker.

#### **Cannot pair to Bluetooth device**

- Make sure both Bluetooth device and Speaker is not connected to any other Bluetooth device.
- Make sure the Bluetooth On/Off switch located below Speaker is slide to On position.
- Make sure the Blue LED on the Speaker is fast flashing (Pairing mode).
- Turn Power switch to Off, and then On again. Press and hold BT button for 2 seconds to enter into pairing mode.

## SPECIFICATIONS

### General

Input Source .....	Bluetooth /FM/Aux
Bluetooth Range .....	Bluetooth 10M (33ft)
AUX IN .....	3.5 mm
Control Buttons .....	Power, Source, Bluetooth pairing, Volume knob, Previous/Next, LED lighting on/off key, 6 pcs FM preset key Battery Level indicated LED on/off key, BASS/TREBLE, Mic Gain, Mic Echo

LED Indicator .....	Power/Standby (GreenLED x1); ; Battrey level indicating LED (Red x1,Green LED x3); Bluetooth (Blue LED x1); LED indicator wireless Microphone (Blue x1); LED lighting (White LED x2)
---------------------	---

Battery .....	Yes
Power Input .....	AC IN 120V/60Hz z/AC IN 220V/50Hz
Auto Standby .....	When the unit is not being used for over 15 minutes it will automatically enter Standby mode only in Bluetooth and in AUX mode
Auto Power Off .....	Yes
Speaker output wattage .....	40W X1
Speaker Driver size .....	8" (Woofer) + 3"(Tweeter)
Speaker Grill Finishing .....	Metal speaker grill

Full Range .....	Yes
Max SPL .....	99dB
THD + Noise .....	<10%
S/N .....	>70dB
Cabinet Material .....	Plastic
Dimension (W x H x D) .....	16.69"x20.63"x9.69"
Weight (Kg) .....	23.8lbs (without package)

Operating Temperature	
Operating Temperature Range .....	32F to 104F
Operating Humidity Range .....	40-90% RH
Storage Temperature Range .....	-13F to 158F

### Key

Power On/Off Key .....	Power on: Switch "Power" key to "I" Power off: Switch "Power" key to "O"
------------------------	---

Source Key .....	Press source key to change source between "BT", "Aux In", or "FM"
------------------	---

Volume Knob .....	1. Rotate VOLUME knob to increase/decrease volume; 2. Press and hold the volume knob key for 3s and enter standby status
-------------------	---

Bluetooth Paring .....	1. Press and hold the Pairing key for 2s to enter to pairing mode. 2. Press and hold the pairing key for 8s to clear any previous Bluetooth paring.
------------------------	--

Previous/Next Key .....	Auto search radio stations when in FM mode press and hold "Previous/Next" key in FM Source
-------------------------	---

Preset 1,2,3,4,5,6 .....	Short press - play preset station Long press - store current station to preset
--------------------------	---

### Battery Level Indicated

LED On/Off key .....	Press
----------------------	-------

### Microphone

Working voltage : .....	3V
-------------------------	----

Alkaline battery : .....	AA 1.5V 2PCS
--------------------------	--------------

Modulation mode : .....	FM
-------------------------	----

Working frequency : .....	192.6MHz fixed frequency
---------------------------	--------------------------

Wireless microphone in ON status , the blue LED will be light on main set side panel . In OFF status , that the wireless microphone closed , than the blue LED will turned off . When the microphone Red light ON , than indication the 3V alkaline battery will be use up .

### Connections

3.5mm Aux In .....	Yes
USB Port .....	USB x 2 (5v 2.1A each)

AC in .....	Yes
AC Out .....	Yes x 2 (Passthrough)

## Limited Warranty

Model: Rockin' Roller PRO

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in as is condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days. This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service:

**Telephone: 800-976-0677**



Monster and the M Monster logo are registered trademarks of Monster, Inc. and its subsidiaries in the U.S. and other countries, used under license.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Printed in China      Version: 1.0