 


 **MONSTER**<sup>®</sup>

**Tower** of Music

# User Manual

*Wireless Speaker*

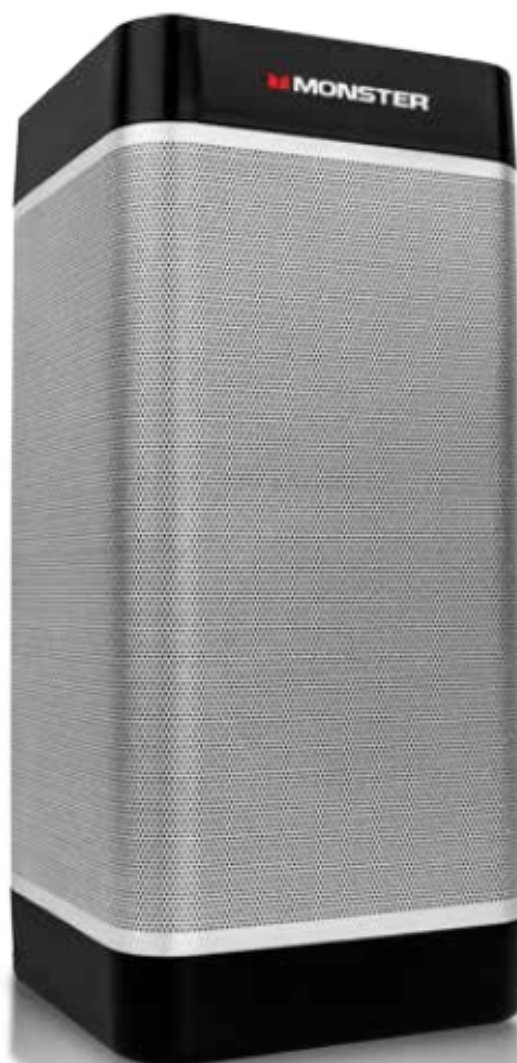

**STOP**

FOR QUESTIONS OR TECHNICAL SUPPORT

Please call:

**1-800-976-0677**

Please do not return this product to the store.

## **TABLE OF CONTENTS**

IMPORTANT SAFETY INSTRUCTIONS	3
UNPACKING	4
WIRELESS SPEAKER DESCRIPTIONS	4
GETTING STARTED	5
BLUETOOTH CONNECTION	6
EZ PLAY WIRELESS CONNECTION	6
CONNECTING MULTIPLE MONSTER TOWER OF MUSIC SPEAKERS	7
CONNECTING A MOBILE DEVICE	8
LED STATUS INDICATORS	8
AUDIO CONFIRMATION	8
USING THE BUILT IN POWER BANK	9
SPECIFICATIONS	9
LIMITED WARRANTY	10

## IMPORTANT SAFETY INSTRUCTIONS

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOIST.

 <p>The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p style="text-align: center;"><b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b></p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	---

1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the product is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instructions should be retained for future reference.
3. **HEED WARNINGS** - All warnings on the product and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS** - All operating and use instructions should be followed.
5. **CLEANING** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
6. **ATTACHMENTS** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **ACCESSORIES** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved care-quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
8. **VENTILATION** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation, such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
9. **POWER SOURCES** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
10. **GROUNDING OR POLARIZATION** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature: If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
11. **POWER-CORD PROTECTION** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point of exit from the product.
12. **NON-USE PERIODS** - The power cord of the product should be unplugged from the outlet when left unused for long periods of time.
13. Do not use this apparatus near water.
14. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
16. Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
17. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

18. Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

### WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

### CAUTION

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

**CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

#### CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

**Précaution :** Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.

### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

### UNPACKING




Check that you have all of the following items.

 
If any item is missing, please contact the customer service hotline for assistance.

The hotline number is printed on the cover page of this user manual.

- Wireless Speaker
- AC Power Cable (x1)
- Audio Cable
- User Manual (with Warranty Statement)
- Quick Start Guide

### WIRELESS SPEAKER DESCRIPTIONS


- 1 Press and hold the  power button for one seconds to turn on the speaker, repeat these steps to place the speaker in standby mode. A confirmation "Green" LED will flash once the speaker has been turned on.
- 2  EZ Play: Press and hold the EZ Play button to shift between master (transmitting) or slave (receiving). Both speakers will have a confirmation LED flash and display solid to confirm an EZ Play connection has been made.
- 3 Bluetooth :  
When the speaker is turned on it will automatically try to pair via Bluetooth to it's last known device.  
To enter pairing mode and establish a new connection press and hold the Bluetooth button for two seconds or until you hear a confirmation voice stating "Pairing".

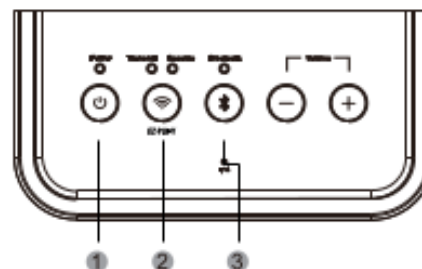





## GETTING STARTED
 
### Power Connection

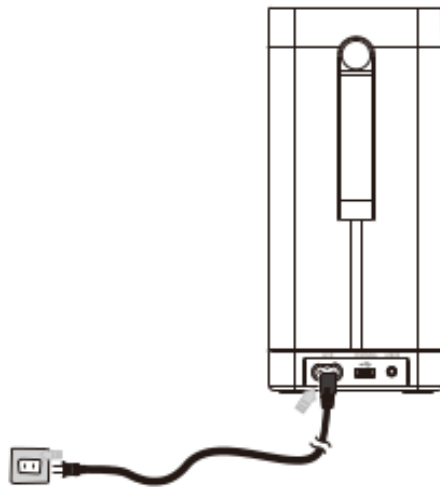

  - Connect the supplied AC cable to Speaker
- Plug the AC cord into wall outlets.

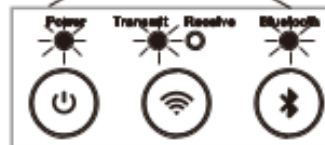
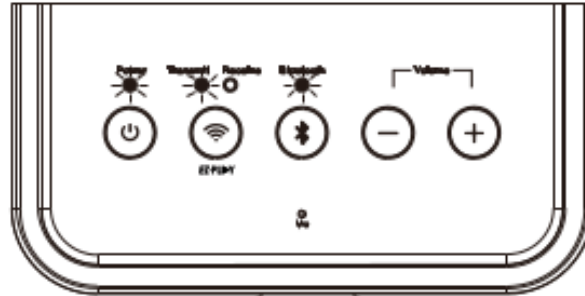


Green Amber Blue

### Power On/Off button

  - Power on the button **Power Switch**.
- The **Power Green LED** will turn On. you will hear Voice confirmation "Power on".
- By default, the unit will enter into BT mode, the **BT Blue LED** will flash.
- If the 3.5mm Stereo Audio cable is plugged in during this Power On mode, it will automatically enter into Aux mode.
- If the unit is left no action for more than 2 minutes, the unit will enter to Standby mode automatically. All LEDs turn Off.

## Charging Battery

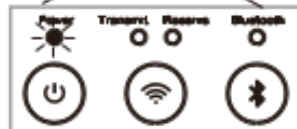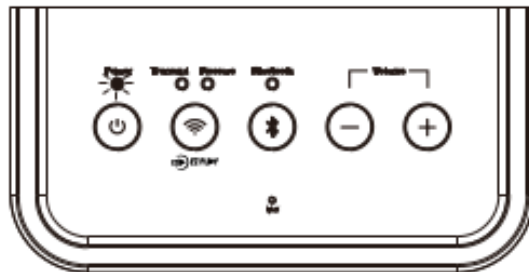

Green

- By connecting AC power, batteries will be charged and **Red LED** will turn on.
- **Red LED** indicator will turn off when unit is fully charged.
- If **Red LED** indicator is flashing, this means that battery levels are low and need charging.
- Charge batteries about 10 hours before you start using the units for the first time.

## BLUETOOTH CONNECTION

### Bluetooth pairing by using NFC

 
- Turn on NFC function on your Bluetooth enabled device.
- Place your Bluetooth device on the silkscreen "NFC" on the top surface of the Monster Tower.
- Confirm Bluetooth connection on your Bluetooth device.  
**Note:** Blue LED indicator Power will be solid.
- Once paired you can play audio from your Bluetooth device and audio can be heard from the unit.

**Note:** If pairing won't complete automatically, your Bluetooth device might not be NFC enabled.



### Manual Bluetooth pairing


- Place the Monster Tower and your Bluetooth device so that they are no more than 3 feet apart.
- Press and hold the Bluetooth button on the Monster Tower for 2 Seconds to enter into Bluetooth pairing mode. Bluetooth LED will flash rapidly.

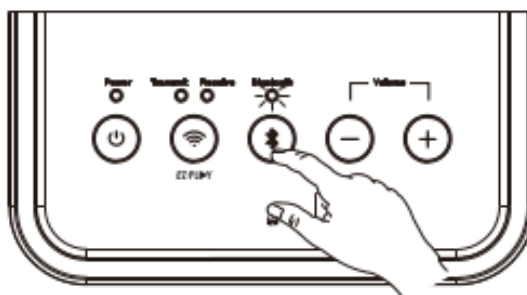

Press and hold  
BT Button  
for 2 seconds


### Manual Bluetooth pairing-continued

 - Set your Bluetooth device to search for Bluetooth devices.  
You will recognize the unit by its Bluetooth name " Monster Tower".
- Bluetooth LED will turn solid Blue upon completion of pairing.

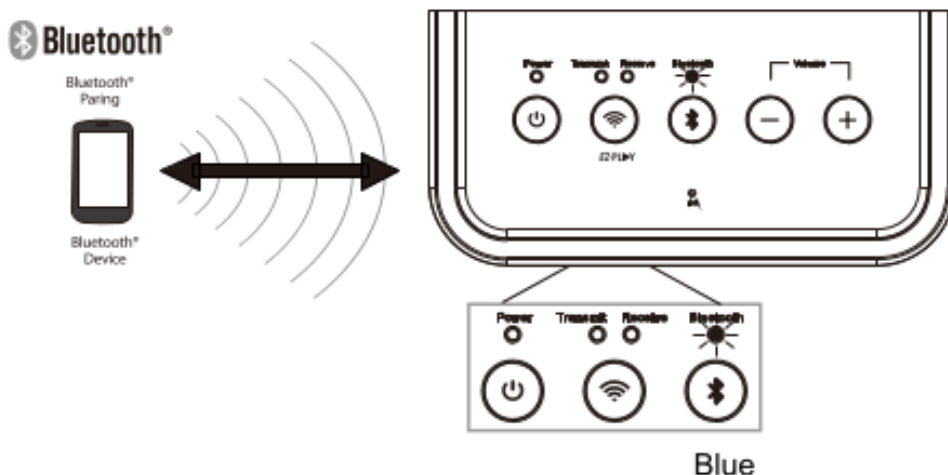

## EZ PLAY WIRELESS CONNECTION

 - Press and hold the "EZ Play" button on the speaker for 2 seconds to send a connection request to a second unit.  
**NOTE:** This function can only be completed with other EZ Play speakers.
- EZ Play Amber LED will pulse on the transmitting speaker.
- Press and hold the "EZ Play" button on the transmitting speaker for 2 seconds to scan for a connection request from the receiving speaker.
- EZ Play Amber LED on the transmitting speaker will flash during scanning feature.
- EZ Play Amber LED on both units will turn solid upon completion of connection.
- Once complete both speakers will play the same audio coming from the transmitting speaker.

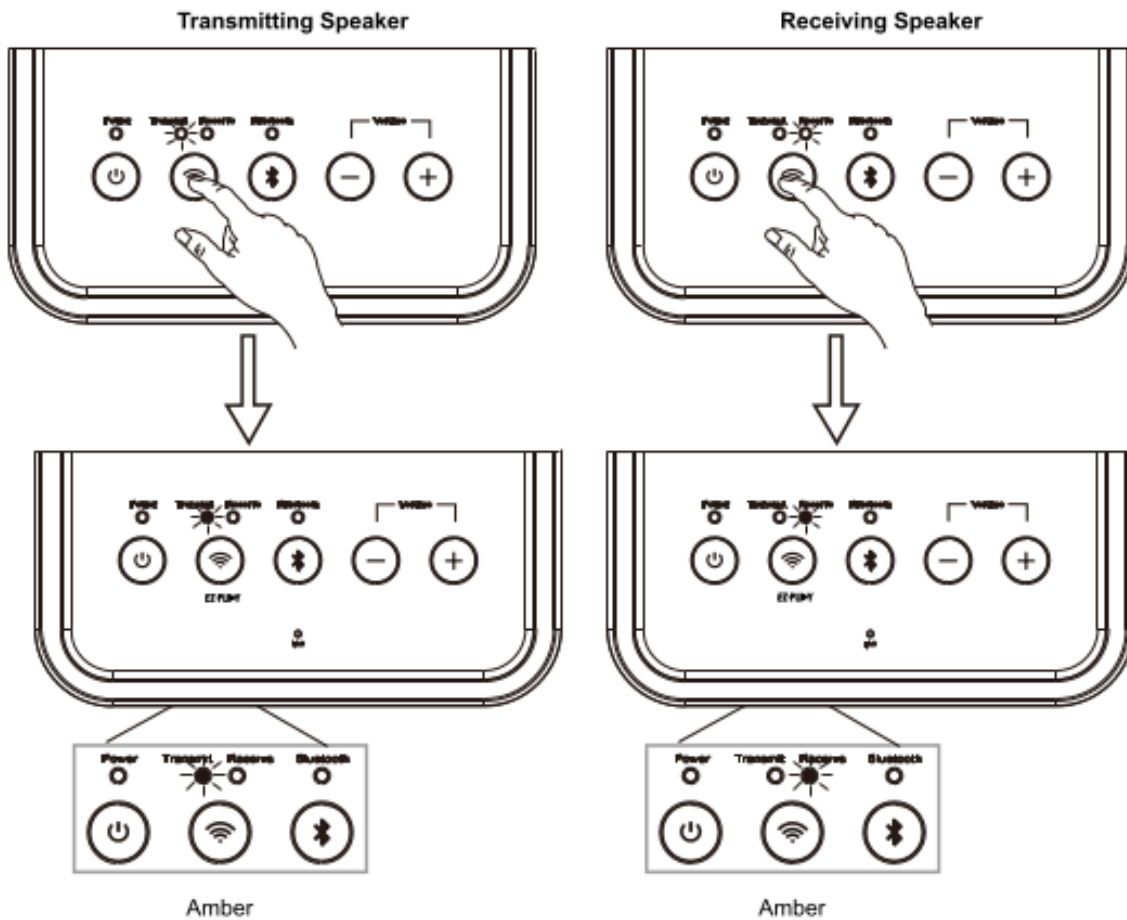

**EZPlay Auto Connect**

 
Once a wireless connection is established the transmitting speaker and the receiving speaker will connect automatically whenever powered on.

**CONNECTING MULTIPLE MONSTER TOWER OF MUSIC SPEAKERS**

- You can wireless connect additional speakers (up to 8) additional Monster Tower of Music speakers sold separately.


**Transmitting speaker to receiver conversion**

- Turn the speaker on.
- Press the EZPlay button the "transmit" LED will switch to "receive" LED.
- Bluetooth function will be disabled and Bluetooth LED will turn off.

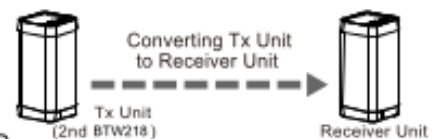

**To connect additional units repeat the steps above on each speaker.**

 **NOTE:** When a speaker is converted to a receiving unit the LINE IN and Bluetooth feature will be disabled.

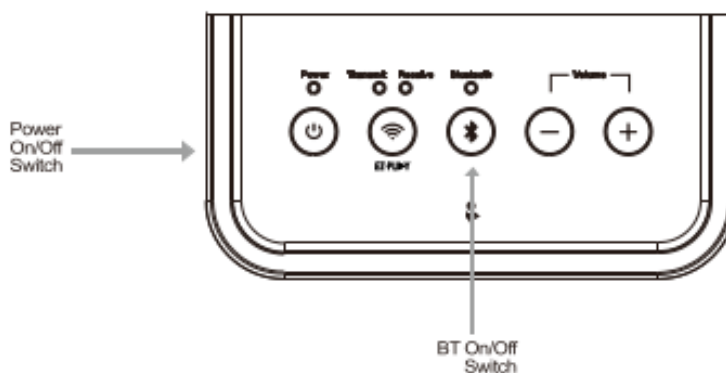


## CONNECTING A MOBILE DEVICE USING THE LINE IN (AUX) INPUT

- Press and hold the "EZ Play" button on the speaker for 2 seconds to send a connection request to a second unit.

**NOTE:** This function can only be completed with other EZ Play speakers.

- You can connect any audio source that has a 3.5mm audio output jack with the Monster Tower Speaker

 **NOTE:** All playback functions (Play, Pause, Next, Previous, Volume UP & Volume Down) can easily be controlled from the connected source (MP3, Mobile Phone, etc..)

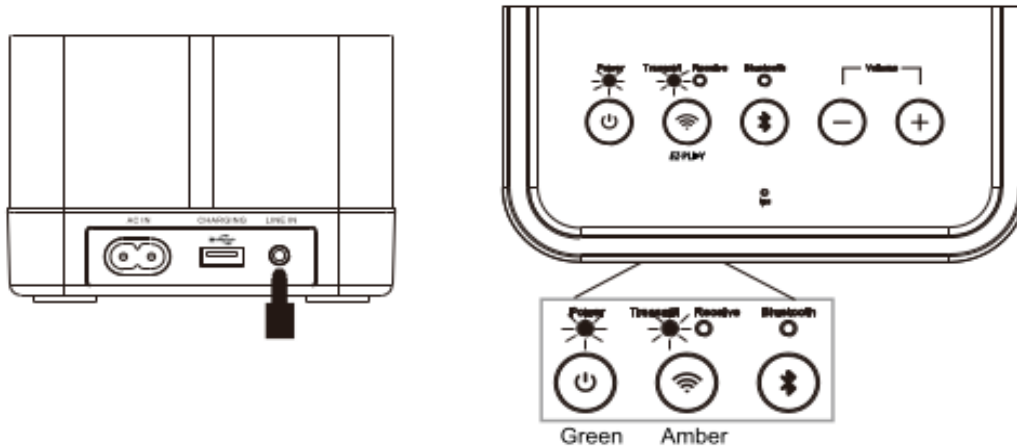

### Making calls with Monster Tower of Music Speaker

Making calls with Monster Tower of Music Speaker		
<b>Redial last number</b>	Music/Standby mode	Double click the BT button
<b>Cancel calling</b>	Calling	Short press BT button
<b>Answer call</b>	Incoming ring	Short press BT button
<b>Reject call</b>	Incoming ring	Press and hold button for about 2 seconds
<b>Microphone mute</b>	During a call	Press and hold button for about 2 seconds
<b>Cancel mute</b>	During a call (microphone mute)	Press and hold button for about 2 seconds
<b>End call</b>	During a call	Short press BT button

### LED STATUS INDICATORS

<b>Green "Power" LED</b>	On	Unit power on mode
	Off	Unit in Standby mode
<b>Red "Charging" LED</b>	Off	Unit in Standby mode/ Fully charged
	Low Flash	Low Battery indication
	On	Charging in progress
<b>Blue "Bluetooth" LED</b>	Steady On	Unit is connected with BT device
	Low Flash	Unit is in BT waiting mode
	Fast Flash	Unit is in BT pairing mode
<b>Amber EZPlay" LED</b>	Steady On	EZ Play Speakers connected
	Low Flash	No connection/ Lost connection
	Fast Flash	Scan transmit unit signal / send signal to Receive unit ( connection request)

### AUDIO CONFIRMATION

Audio (Voice) Confirmation	Situation
<b>Power on</b>	The power is turned on.
<b>Pairing</b>	Bluetooth pairing is in process.
<b>Pairing completed(with Beep)</b>	Bluetooth pairing was completed successfully.
<b>Pairing not completed</b>	Bluetooth pairing has failed.
<b>Disconnected</b>	Bluetooth disconnected manually via BT device.



## USING THE BUILT IN POWER BANK

The Monster Tower of Music Speaker has built-in Power Bank for charging your mobile devices on-the-go. Please check your mobile device requirements as some devices may require more than 500mA to be charged.

Items	Parameters
Capacity of Built-in Battery	11.1 V 2200mAh battery
Power bank output	voltage DC: 5V
Power bank max	output current 500mA

## SPECIFICATIONS

Protocol(s)	Bluetooth and EZ Play
Bluetooth Range	Approximately 30ft
EZ Play	Approximately 100ft
NFC	Yes
Hands Free	Yes
Control Buttons for Audio	Power, EZ Play, Bluetooth, Hands free, (Sleep/Wake-up \hang up\reject call \Pause), Vol-, Vol+
LED Indicator	Power, Transmit, Receive, Bluetooth
Battery	11.1V(3 x3.7V), 2200mAh
Battery Life	Estimated 8 hours of active use
Power Bank Output	USB, 5V/500mA
Power Input	AC 90~240V
Auto Sleep	2 minutes with no signal
Auto Power Off	30 minutes with sleep mode
Speaker output	5W x 2+10W
Driver Layout	2.5" Driver x 2 + 3" Driver x 1+3" Passive Radiator x 2
AUX In	3.5 mm
THD + Noise	< 10%
S/N	> 60dB
Material	Plastic
Tower Dimension (H x W X D)	266*122*122 mm
Tower Weight	4.18lb ( 1.9 kg)
Speaker expansion	Up to 8 units with EZ Play

## Limited Warranty

### Model BTW218

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in "as is" condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

**THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.**

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service:

**Telephone: 800-976-0677**