




Mobile Network Solutions InterReach™ picoBTS

Installation and Commissioning Guide

ADCP-77-061 • Issue A • 08/2008

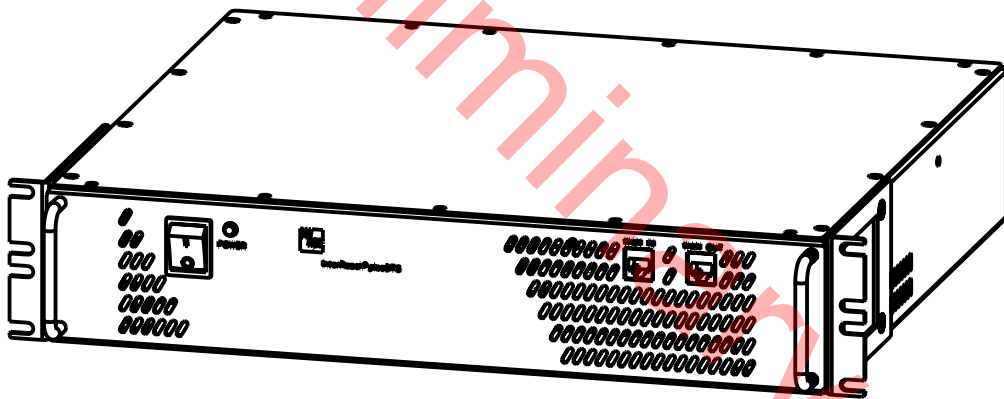

AD235808

Preliminary



Mobile Network Solutions
UltraWAVE picoBTS
Installation and Commissioning Guide

ADCP-77-061 • Issue A • 08/2008

Preliminary

COPYRIGHT

© 2008, ADC Telecommunications, Inc.
 All Rights Reserved

REVISION HISTORY

ISSUE	DATE	REASON FOR CHANGE
A	08/2008	Original

LIST OF CHANGES

The technical changes incorporated into this issue are listed below.

PAGE	IDENTIFIER	DESCRIPTION OF CHANGE
All		New publication

TRADEMARK INFORMATION

ADC is a registered trademark and InterReach, InterReach Unison, InterReach Fusion, WAVEXchange, FlexWave are registered trademarks and trademarks of ADC Telecommunications, Inc. or LGC Wireless, Inc. a wholly owned subsidiary of ADC. All other products, company names, service marks, and trademarks mentioned in this document or website are used for identification purposes only and may be owned by other companies.

DISCLAIMER OF LIABILITY


Contents herein are current as of the date of publication. ADC reserves the right to change the contents without prior notice. **In no event shall ADC be liable for any damages resulting from loss of data, loss of use, or loss of profits and ADC further disclaims any and all liability for indirect, incidental, special, consequential or other similar damages. This disclaimer of liability applies to all products, publications and services during and after the warranty period.**

This publication may be verified at any time by contacting ADC's Technical Assistance Center at 1-800-366-3891, extension 73476 (in U.S.A. or Canada) or 952-917-3476 (outside U.S.A. and Canada), or by e-mail to wireless.tac@adc.com.



ADC Telecommunications, Inc.
 P.O. Box 1101, Minneapolis, Minnesota 55440-1101
 In U.S.A. and Canada: 1-800-366-3891
 Outside U.S.A. and Canada: (952) 938-8080
 Fax: (952) 917-1717

DECLARATIONS OF CONFORMITY

 <p style="text-align: center;">EC Declaration of Conformity Under R&TTE Directive 1999/5/EC</p> <p>Manufacturer Name : ADC Telecommunications, Inc. Address : 2495 Leghorn St. Mountain View, CA 94043, U.S.A.</p> <p>Declares that the product Ultrawave Base Station Controller System</p> <p>Product Description : Base Station Controller</p> <p>Model Number : ASABXXXXXXXXXXXXXXXXXXXXX (x = 0-9, A - Z or blank)</p> <p><i>Complies with appropriate essential requirements of the Article 3 of the R&TTE directive.</i></p> <p><i>Standard to which conformity is declared :</i></p> <p>Protection to Health and Safety: Directive: 73/23/EEC Protection with respect to EMC: Directive: 89/336/EEC</p> <p>EMC: ETSI EN 300 386 V1.2.1 (2000-03)</p> <p>Safety: EN 60950-1:2001+A11</p> <p>Name of authorized person; Position: Mark Schutzer Director, Hardware Engineering</p> <p>Date: 1/6/2008</p> <p style="text-align: right;"> Signature</p> <p style="font-size: small; text-align: center;">Mailing Address: P.O. Box 1101, Minneapolis, Minnesota 55440-1101 World Headquarters: Minneapolis, Minnesota USA +1.952.938.8080 www.adc.com</p>	 <p style="text-align: center;">EC Declaration of Conformity Under R&TTE Directive 1999/5/EC</p> <p>Manufacturer Name : ADC Telecommunications, Inc. Address : 2495 Leghorn St. Mountain View, CA 94043, U.S.A.</p> <p>Declares that the product Ultrawave BTS/BSPlus 850/900/1800MHz System</p> <p>Product Description : GSM Base Transceiver Station</p> <p>Model Number : AVADXXXXXXXXXXXXXXXXXXXXX (x = 0-9, A - Z or blank)</p> <p><i>Complies with appropriate essential requirements of the Article 3 of the R&TTE directive.</i></p> <p><i>Standard to which conformity is declared :</i></p> <p>Protection to Health and Safety: Directive: 73/23/EEC Protection with respect to EMC: Directive: 89/336/EEC</p> <p>EMC: ETSI EN 301 489-1, 8 V1.4.1 (2002-8)</p> <p>Safety: EN 60950-1:2001+A11</p> <p>Radio: ETSI EN 301 502 V8.1.2 (2001-7)</p> <p>Name of authorized person; Position: Mark Schutzer Director, Hardware Engineering</p> <p>Date: 1/6/2008</p> <p style="text-align: right;"> Signature</p> <p style="font-size: small; text-align: center;">Mailing Address: P.O. Box 1101, Minneapolis, Minnesota 55440-1101 World Headquarters: Minneapolis, Minnesota USA +1.952.938.8080 www.adc.com</p>
---	--

<div style="display: flex; justify-content: space-between; align-items: center;">  <div style="text-align: center;"> <p>EC Declaration of Conformity Under R&TTE Directive 1999/5/EC</p> </div> </div> <p style="margin-top: 20px;"> Manufacturer Name : ADC Telecommunications, Inc. Address : 2495 Leghorn St. Mountain View, CA 94043, U.S.A. </p> <p> Declares that the product Ultrawave Micro BTS/BSPlus System Product Description : Wireless Network System Model Number : AyADxxxxxxxxxxxxxxxxxxxxx (y=K, L, x = 0-9, A – Z or blank) </p> <p><i>Complies with appropriate essential requirements of the Article 3 of the R&TTE directive.</i></p> <p><i>Standard to which conformity is declared :</i></p> <table style="width: 100%; border: none;"> <tr> <td style="width: 60%;">Protection to Health and Safety:</td> <td style="text-align: right;">Directive: 73/23/EEC</td> </tr> <tr> <td>Protection with respect to EMC:</td> <td style="text-align: right;">Directive: 89/336/EEC</td> </tr> </table> <p>EMC: ETSI EN 301 489-1, 8 V1.4.1 (2002-8)</p> <p>Safety: EN 60950-1:2001+A11</p> <p>Radio: ETSI EN 301 502 V8.1.2 (2001-7)</p> <p> Name of authorized person; Position: Mark Schutzer Director, Hardware Engineering </p> <p style="margin-top: 10px;"> Date: 1/6/2008  Signature </p> <p style="font-size: small; margin-top: 20px;"> Mailing Address: P.O. Box 1101, Minneapolis, Minnesota 55440-1101 World Headquarters: Minneapolis, Minnesota USA +1.952.938.8080 www.adc.com </p>	Protection to Health and Safety:	Directive: 73/23/EEC	Protection with respect to EMC:	Directive: 89/336/EEC	<div style="display: flex; justify-content: space-between; align-items: center;">  <div style="text-align: center;"> <p>EC Declaration of Conformity Under R&TTE Directive 1999/5/EC</p> </div> </div> <p style="margin-top: 20px;"> Manufacturer Name : ADC Telecommunications, Inc. Address : 2495 Leghorn St. Mountain View, CA 94043, U.S.A. </p> <p> Declares that the product Ultrawave NIB System Product Description : Wireless Network System Model Number : AMADxxxxxxxxxxxxxxxxxxxxx (x = 0-9, A – Z or blank) </p> <p><i>Complies with appropriate essential requirements of the Article 3 of the R&TTE directive.</i></p> <p><i>Standard to which conformity is declared :</i></p> <table style="width: 100%; border: none;"> <tr> <td style="width: 60%;">Protection to Health and Safety:</td> <td style="text-align: right;">Directive: 73/23/EEC</td> </tr> <tr> <td>Protection with respect to EMC:</td> <td style="text-align: right;">Directive: 89/336/EEC</td> </tr> </table> <p>EMC: ETSI EN 301 489-1, 8 V1.4.1 (2002-8)</p> <p>Safety: EN 60950-1:2001+A11</p> <p>Radio: ETSI EN 301 502 V8.1.2 (2001-7)</p> <p> Name of authorized person; Position: Mark Schutzer Director, Hardware Engineering </p> <p style="margin-top: 10px;"> Date: 1/6/2008  Signature </p> <p style="font-size: small; margin-top: 20px;"> Mailing Address: P.O. Box 1101, Minneapolis, Minnesota 55440-1101 World Headquarters: Minneapolis, Minnesota USA +1.952.938.8080 www.adc.com </p>	Protection to Health and Safety:	Directive: 73/23/EEC	Protection with respect to EMC:	Directive: 89/336/EEC
Protection to Health and Safety:	Directive: 73/23/EEC								
Protection with respect to EMC:	Directive: 89/336/EEC								
Protection to Health and Safety:	Directive: 73/23/EEC								
Protection with respect to EMC:	Directive: 89/336/EEC								

Preliminary

TABLE OF CONTENTS

Content	Page
TABLE OF CONTENTS	v
CHAPTER 1 - UNPACKING AND CONFIGURATION VERIFICATION	
1.1 UNPACKING AND INSPECTING	2
1.1.1 Unpacking and Inspecting the picoBTS	2
1.2 ELECTROSTATIC DISCHARGE (ESD)	3
1.2.1 Identifying the System	3
CHAPTER 2 - INSTALLATION	
2.1 ANALYZING SITE REQUIREMENTS	6
2.1.1 Environmental Conditions	6
2.1.2 Electrical Requirements	6
2.1.3 Chassis Requirements	8
2.2 MOUNTING THE PICOBTS CHASSIS	9
2.2.1 Required Materials	9
2.2.2 Rack Mount Advisory	9
2.2.3 Installation Instructions	10
2.3 CONNECTING THE GROUNDING CABLE	12
2.4 CONNECTING THE POWER SUPPLY	14
2.5 CONNECTING THE DISTRIBUTED ANTENNA SYSTEM	16
2.6 NETWORK CONNECTION	18
2.7 POST INSTALLATION CABLING AND CHECKS	19
CHAPTER 3 - COMMISSIONING AND CONFIGURATION	
3.1 PRE-COMMISSIONING	23
3.1.1 On-Site Visual Inspection	23
3.2 COMMISSIONING OF THE PICOBTS	24
3.2.1 Connecting the PC to the picoBTS Chassis	24
3.2.2 Setting Up a Serial Connection to the picoBTS Serial Port	24
3.2.3 Power On LED Tests	26
3.3 CONFIGURING THE ETHERNET ADDRESS AND BOOT PARAMETERS	28
3.4 SOFTWARE VERIFICATION	31
3.4.1 Verifying the Current Software Version and Patch Level	31
3.4.2 Verifying the Software License	32

- 3.4.3 Rebooting the picoBTS 32
- 3.4.4 Terminating Serial Communications with the picoBTS 33
- 3.5 PREPARING FOR ON-LINE COMMISSIONING 33

CHAPTER 4 - ON-LINE TESTING

- 4.1 PRE ON-LINE COMMISSIONING REQUIREMENTS 36
- 4.2 ON-LINE COMMISSIONING 37
 - 4.2.1 Testing the picoBTS 39
 - 4.2.2 Recovery Tests 39
 - 4.2.3 TCH Timeslot Tests 39
 - 4.2.4 RX Signal Quality Measurements 40
- 4.3 POST ON-LINE COMMISSIONING PROCEDURES 42

Preliminary

ABOUT THIS MANUAL

Welcome to the InterReach picoBTS Installation Guide. It describes how to perform local installation and commissioning of the picoBTS at the customer's site.

This document is intended for an ADC trained field service engineer (FSE) or operator who performs local installation and commissioning at the customer's site. The FSE or operator should be equipped with the necessary tools for installation and commissioning, and a basic understanding of the GSM cellular network. The FSE or operator should also be familiar with the use of the Craft PC and procedures conducted using the Craft PC.

ADC assumes that pre-installation project planning has occurred, and is documented via a site survey report. This site survey should include items such as the location of antennas, chassis, power connections and other interface accesses and temperature control equipment.

RELATED PUBLICATIONS

Listed below are related manuals, their content, and their publication numbers. Copies of these publications can be ordered by contacting the Technical Assistance Center at 1-800-366-3891, extension 73476 (in U.S.A. or Canada) or 952-917-3476 (outside U.S.A. and Canada).

Title/Description	ADCP Number
Mobile Network Solutions Documentation Index	ADCP-76

UNITED STATES FEDERAL COMMUNICATIONS COMMISSION REQUIRED USER INFORMATION

Located on the equipment is a label that contains, among other information, the FCC registration number. If requested, this information must be provided to the telephone company.

The UltraWAVE BTS Series AUAC series complies with Part 22 of the FCC Rules.

The 1900 MHz WAVEXpress Series M50 complies with Part 24 of the FCC Rules.

The WAVE2000 BS Plus 800 MHz complies with Part 22 of the FCC Rules.

The WAVE2000 Pico BS Plus (800 MHz and 1900 MHz) comply with Part 22 and Part 24 of the FCC Rules and UL 1950 safety certification.

This equipment cannot be used on the telephone company-provided coin service. Connection to Party Line Service is subject to State Tariffs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations, of procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If the trouble is causing harm to the telephone network, the telephone company may request you to remove the equipment from the network until the problem is resolved.

It is recommended that the customer install a surge arrester in the AC outlet to which that device is connected. This is to avoid damaging the equipment caused by local lightning strikes and other electrical surges.

This equipment uses the following USOC jacks and codes:

MODEL NAME	FACILITY INTERFACE CODE	SERVICE ORDER CODE	JACK TYPE
340122/340133	04DU9-BN	6.ON	RJ-48C
340122/340133	04DU9-DN	6.ON	RJ-48C
340122/340133	04DU9-1KN	6.ON	RJ-48C
340122/340133	04DU9-1SN	6.ON	RJ-48C
340122/340133	04DU9-1ZN	6.ON	RJ-48C

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes of modifications not expressly approved by ADC can void the user's authority to operate the equipment. FCC and IC certification labels denoting the product specific certification numbers may be found on the product.

INDUSTRY CANADA REQUIRED USER INFORMATION

CP-O1, Issue 8, Part 1, Section 14.1

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

The standard connecting arrangement (telephone jack type) for this equipment is CA81A.

CP-01, Issue 8, Part 1, Section 14.2


NOTICE: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

This device complies with Industry Canada RSS-133 and SRSP-510 or RS132 & SRPS-503.

DISPOSAL OF ELECTRONIC AND ELECTRICAL WASTE

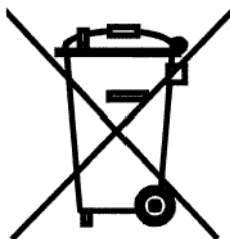

Pursuant to the WEEE EU Directive electronic and electrical waste must not be disposed of with unsorted waste. Please contact your local recycling authority for disposal of this product.

ADMONISHMENTS

Important safety admonishments are used throughout this manual to warn of possible hazards to persons or equipment. An admonishment identifies a possible hazard and then explains what may happen if the hazard is not avoided. The admonishments — in the form of Dangers, Warnings, and Cautions — must be followed at all times.

These warnings are flagged by use of an alert icon (seen below), and are listed in descending order of severity of injury or damage and likelihood of occurrence.



DANGER: Danger is used to indicate the presence of a hazard that **will** cause severe personal injury, death, or substantial property damage if the hazard is not avoided.



WARNING: Warning is used to indicate the presence of a hazard that **can** cause severe personal injury, death, or substantial property damage if the hazard is not avoided.



Caution: Caution is used to indicate the presence of a hazard that **will** or **can** cause minor personal injury or property damage if the hazard is not avoided.

CONVENTIONS USED IN THIS MANUAL

The following type and style conventions are used in this manual:

Conventions Used in This Manual

CONVENTION	MEANING
Body Text	Used for regular body text
Bold	Indicates a menu or button choice
Command	Indicates computer generated text and prompts
User Input	Indicates user input
<code><hostname></code>	In command syntax, indicates user-specified command line parameters
<code><variable></code>	In body text, indicates user-specified command line parameters
[BRACKETS]	Indicates a key on the keyboard or instrument
	Note: Provides relevant additional information

CHAPTER 1 - UNPACKING AND CONFIGURATION VERIFICATION

Content	Page
1.1 UNPACKING AND INSPECTING	2
1.1.1 Unpacking and Inspecting the picoBTS	2
1.2 ELECTROSTATIC DISCHARGE (ESD)	3
1.2.1 Identifying the System	3

This chapter provides instructions for opening the shipping container and inspecting the contents. When you have completed the procedures in this chapter you will have confirmed that the hardware arrived undamaged, and that everything you ordered is present and configured correctly.

Preliminary

1.1 UNPACKING AND INSPECTING

The InterReach picoBTS is packed with great care, and all containers are inspected prior to shipment. Upon receipt of these packages, immediately inspect the outside of the shipping containers. If there is any visible damage, insist that a representative of the carrier be present when unpacking the contents.

Carefully inspect the system as it is unpacked. If any damage such as dents or broken connections is noticeable, immediately notify the carrier as well as ADC Customer Service.

Store the shipping containers for future use. If the unit has to be returned for upgrade or service, the specially designed shipping containers assure adequate protection for the equipment. If for some reason the containers are not reusable or if they are misplaced, please contact ADC to order new containers.

1.1.1 UNPACKING AND INSPECTING THE PICOBTS

The InterReach picoBTS is shipped in a specially designed shipping box. The system should remain in the packaging until shipped to its final destination.

- Open shipping box and remove the picoBTS chassis.
- Note part numbers on the back of the unit correspond to the shipping documentation.

Carefully inspect the system as it is unpacked. If any damage such as dents or broken connections is noticeable, immediately notify the carrier as well as ADC Customer Service.

Store the shipping containers for future use. If the unit has to be returned for upgrade or service, the specially designed shipping containers assure adequate protection of the equipment. If for some reason the containers are not reusable or if they are misplaced, please contact ADC to order new containers.

The picoBTS shipment will include the following items:

- picoBTS chassis
- Mounting brackets
- Eight mounting bracket screws

If you have ordered an InterReach distributed antenna system, it will be shipped in a separate container. Please refer to the Quick Start Guide and packing slip included with its shipment.

1.2 ELECTROSTATIC DISCHARGE (ESD)

Electrostatic discharge is the movement of normally motionless electrical charges which can destroy common electrical and electronic equipment.

ADC recommends that you use an anti-static wrist strap when handling boards and components.

By using an anti-static wrist strap, static electricity is constantly dispersed, via the snug-fitting wrist-band, down the cable and to the grounded connection at the other end, leaving hands free to work.

- Use either the provided anti-static wrist strap or an ESD mat.
- Otherwise, touch the metal chassis to drain off any static electricity before touching the cards.
- Do not wear wool or polyester clothing.
- Dry air can prevent dangerous charges from harmlessly dissipating. ADC recommends a relative humidity of 50-60% when working on this equipment.
- Handle the cards as little as possible and only by the edges.



Warning: Make sure you use anti-static precautions before starting any of the following procedures.

1.2.1 IDENTIFYING THE SYSTEM

The picoBTS system can be identified using the main identification label. This label also provides the relevant compliance information for the system when it was assembled.

- Locate the identification label, shown in [Figure 1-1](#), on the rear of the chassis.

This configuration label provides the model and serial numbers for your chassis. These identification details are required if you encounter any problems with the system and need to contact Customer Service.

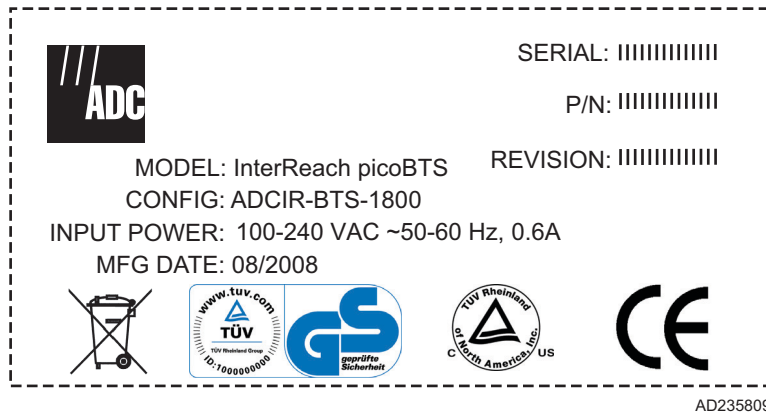


Figure 1-1: Identification Label

- Record your model number and configuration.

Preliminary

CHAPTER 2 - INSTALLATION

Content	Page
2.1 ANALYZING SITE REQUIREMENTS	6
2.1.1 Environmental Conditions	6
2.1.2 Electrical Requirements	6
2.1.3 Chassis Requirements	8
2.2 MOUNTING THE PICOBTS CHASSIS	9
2.2.1 Required Materials	9
2.2.2 Rack Mount Advisory	9
2.2.3 Installation Instructions	10
2.3 CONNECTING THE GROUNDING CABLE	12
2.4 CONNECTING THE POWER SUPPLY	14
2.5 CONNECTING THE DISTRIBUTED ANTENNA SYSTEM	16
2.6 NETWORK CONNECTION	18
2.7 POST INSTALLATION CABLING AND CHECKS	19

This chapter will guide you through the complete installation and configuration of the InterReach picoBTS hardware.

2.1 ANALYZING SITE REQUIREMENTS

Before a site is chosen or equipment installed, a site survey must be carried out. The site survey checklist assists the surveyor with the inspection and the collection of site specific information such as environmental conditions, electrical requirements, and mechanical requirements. This site survey should also include the location of the InterReach picoBTS and InterReach Unison or Fusion distributed antenna system (DAS) including the placement of the distributed antenna system remote radio heads throughout the target structure.

The site survey checklist must be completed before installation begins. The InterReach DAS documentation provides additional detailed site requirements.

The site readiness checklist assists the field service engineer or operator to ensure that the site is ready for equipment installation. It includes information about:

- Environmental conditions
- Electrical requirements
- Chassis requirements

2.1.1 ENVIRONMENTAL CONDITIONS

The picoBTS is designed to operate indoors only. To facilitate long-term operability and durability of the picoBTS, observe specific environmental constraints.

Before installing the picoBTS, ensure that the operating environment maintains a temperature within the range shown in [Table 2-1](#).



Caution: Make sure the ambient temperature around the unit (which may be higher than the room temperature) is within the limit specified for the unit.

Table 2-1: picoBTS Operating Environment

RANGE	HUMIDITY (NON-CONDENSING)	TEMPERATURE (CELSIUS)	TEMPERATURE (FAHRENHEIT)
Maximum	90%	45 degrees	113 degrees
Minimum	10%	-5 degrees	23 degrees

2.1.2 ELECTRICAL REQUIREMENTS

The picoBTS is specified to operate on AC power. This document defines the electrical requirements for the picoBTS only.

2.1.2.1 Power Options

Main power supply options for the picoBTS are:

- 100 to 240 VAC auto-ranging, 50-60 Hz, 0.6A

Table 2-2 shows the power requirements for the picoBTS.

Table 2-2: Estimated Power Requirements

PRODUCT CONFIGURATION	110 VAC	220 VAC
picoBTS	60 watts	60 watts

Table 2-3: picoBTS Power Specifications

POWER REQUIREMENTS	SPECIFICATION
picoBTS voltage range: 110 VAC	85 to 264 VAC
picoBTS power protection: 110 VAC	1 amp circuit breaker
picoBTS voltage range: 220 VAC	90 to 264 VAC
picoBTS power protection: 220 VAC	1 amp circuit breaker

2.1.3 CHASSIS REQUIREMENTS

Before installing the picoBTS, ensure that adequate clearance space is allowed around the unit. Enough clearance should be provided from the back of the chassis to allow adequate cooling and cable connections to the distributed antenna system.

This requires at least 7.9 inches (20.0 cm) from the rear panel. The minimum clearance required from the front and on either side of the chassis is 3.9 inches (10.0 cm). This unit is designed to be rack mount and there is no minimum clearance required above or below the chassis.

These mounting clearances should provide ample clearance for the RF and Ethernet cables to be attached to the connectors at the front and rear of the chassis.

The picoBTS should be installed indoors away from salt spray and in an area where there are minimal vibrations.

Table 2-4 lists the weight and dimensions of the picoBTS chassis.

Table 2-4: Chassis Weight and Dimensions

SCALE	WEIGHT (MAXIMUM CONFIGURATION)	HEIGHT	WIDTH	DEPTH
Metric	11.2 kg	9.0 cm	48.3 cm	40.6 cm
Imperial	25.0 lbs	3.5 inches	19.0 inches	15.0 inches

2.2 MOUNTING THE PICOBTS CHASSIS

The picoBTS chassis is shipped with the appropriate hardware to be installed in a 19" rack. This section describes all the necessary steps for installing a picoBTS.



Note: Ensure that:

- The ambient temperature around the unit (which may be higher than the room temperature) is within the limit specified for the unit.
- There is sufficient airflow around the unit.
- The electrical circuits are not overloaded - consider the name plate rating of all the connected equipment and make sure you have over current protection.
- The 19" equipment rack is properly grounded.

2.2.1 REQUIRED MATERIALS

- 4 standard 19" (48.26 cm) rack mount screws (customer-provided)

2.2.1.1 Optional Materials

- Cable ties

2.2.1.2 Required Tools

- Phillips screwdriver

2.2.2 RACK MOUNT ADVISORY



CAUTION:

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.

Attention: Pour éviter toute blessure corporelle pendant les opérations de montage ou de réparation de cette unité en casier, il convient de prendre des précautions spéciales afin de

maintenir la stabilité du système. Les directives ci-dessous sont destinées à assurer la protection du personnel:


- Si cette unité constitue la seule unité montée en casier, elle doit être placée dans le bas.
- Si cette unité est montée dans un casier partiellement rempli, charger le casier de bas en haut en plaçant l'élément le plus lourd dans le bas.
- Si le casier est équipé de dispositifs stabilisateurs, installer les stabilisateurs avant de monter ou de réparer l'unité en casier.

Warnung: Zur Vermeidung von Körperverletzung beim Anbringen oder Warten dieser Einheit in einem Gestell müssen Sie besondere Vorkehrungen treffen, um sicherzustellen, daß das System stabil bleibt. Die folgenden Richtlinien sollen zur Gewährleistung Ihrer Sicherheit dienen:

- Wenn diese Einheit die einzige im Gestell ist, sollte sie unten im Gestell angebracht werden.
- Bei Anbringung dieser Einheit in einem zum Teil gefüllten Gestell ist das Gestell von unten nach oben zu laden, wobei das schwerste Bauteil unten im Gestell anzubringen ist.
- Wird das Gestell mit Stabilisierungszubehör geliefert, sind zuerst die Stabilisatoren zu installieren, bevor Sie die Einheit im Gestell anbringen oder sie warten.

2.2.3 INSTALLATION INSTRUCTIONS

- 1 Using the screws provided, attach a mounting bracket to each side of the picoBTS, as shown in [Figure 2-1](#).

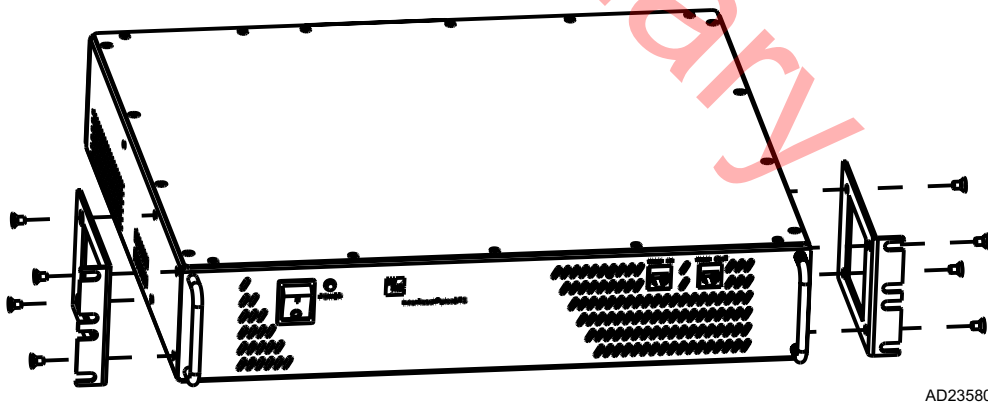

AD235807

Figure 2-1: Mounting Brackets

- 2 The rack mount brackets have cutouts to accommodate the 19" (48.26 cm) rack screws. Using two people, carefully align the chassis with the rack holes.

- 3 Carefully mount and secure the picoBTS using customer-provided rack screws, as shown in [Figure 2-2](#)



Figure 2-2: picoBTS Rack Mount

Note: Ensure that all rack mount screws are securely tightened.

- 4 If you are mounting an InterReach Unison or Fusion DAS hub, use the same procedure to align and mount the unit directly above or below the picoBTS in the rack using customer-provided screws. [Figure 2-3](#) shows a DAS hub mounted in a rack with a picoBTS.

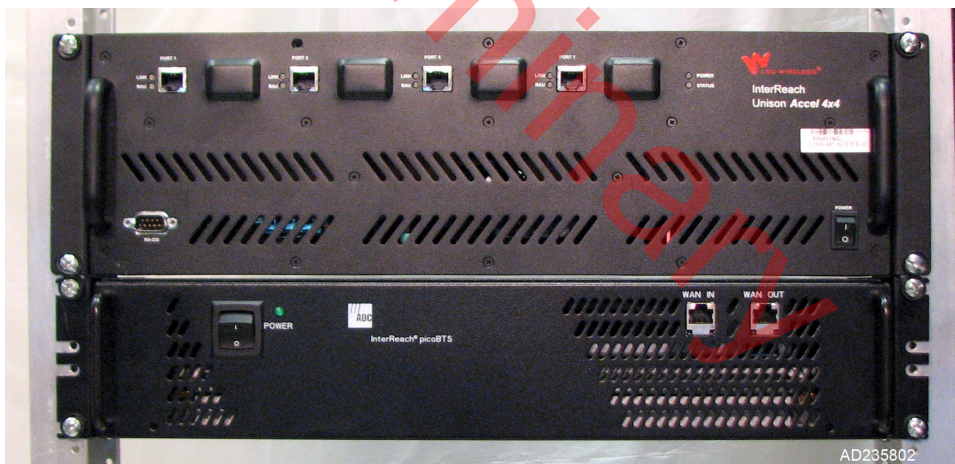


Figure 2-3: picoBTS and DAS Mounting Location

- 5 You have completed the hardware installation, proceed to the next section to continue the picoBTS connections.

2.3 CONNECTING THE GROUNDING CABLE

Use this section to connect your earth ground and power cable to the picoBTS cabinet.



Caution: Grounding circuit continuity is vital for safe operation of machine. Never operate machine with grounding conductor disconnected.

Attention: Un circuit de terre continu est essentiel en vue du fonctionnement sécuritaire de l'appareil. Ne jamais metre l'appareil en marche lorsque le cable de mise à la terre est débranche.

Warnung: Achtung, Hoher Ableitstrom! Schutzleiteranschluß vor dem Netzanschluß herstellen.

The rack unit in which the picoBTS chassis is being mounted should be properly grounded to the site earth ground ring. You must attach a ground strap to each subrack and to the rack unit or directly to the site ground ring.

- 1 Locate the ground lug on chassis. See [Figure 2-4](#) for its location.

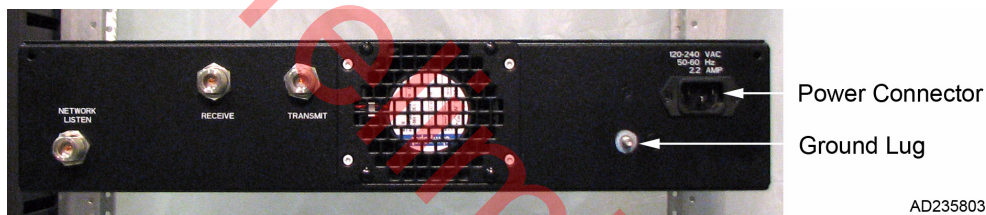


Figure 2-4: picoBTS Ground Lug and Power Connector

- 2 Remove the nut from the ground lug and connect a ground lead to the chassis. Secure the nut tightly on each subrack assembly using a 7/16 (11mm) wrench as shown in [Figure 2-5](#).

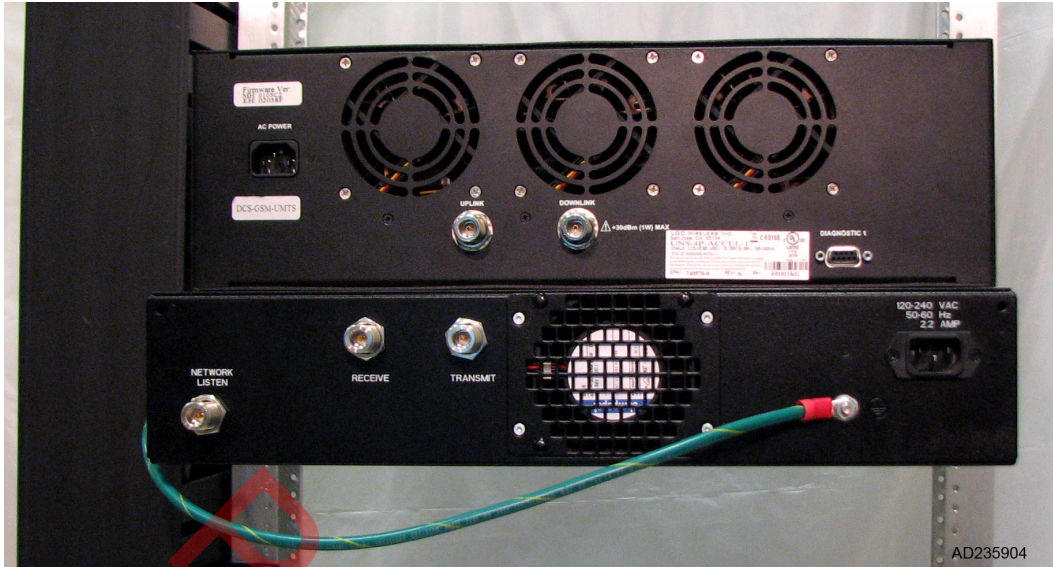


Figure 2-5: Ground Cable Connection

- 3 Attach the ground cables to the properly grounded rack assembly or to the closest earth ground bus.

2.4 CONNECTING THE POWER SUPPLY

In this section, you will connect the picoBTS to your power source.

Warning: This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that a fuse or circuit breaker no larger than 220 VAC, 1A; 110 VAC, 1A is used on the phase conductors (all current-carrying conductors).



Attention: Pour ce qui est de la protection contre les courts-circuits (surtension), ce produit dépend de l'installation électrique du local. Vérifier qu'un fusible ou qu'un disjoncteur de 220 VAC, 1A alt., 110 VAC, 1A alt. est utilisé sur les conducteurs de phase (conducteurs de charge).

Warnung: Dieses Produkt ist darauf angewiesen, daß im Gebäude ein Kurzschluß- bzw. Überstromschutz installiert ist. Stellen Sie sicher, daß eine Sicherung oder ein Unterbrecher von nicht mehr als 220 V Wechselstrom, 1 A; 110 V Wechselstrom, 1 A an den Phasenleitern (allen stromführenden Leitern) verwendet wird.

- 1 Verify the ground connection you made in [Section 2.3](#) is secure.
- 2 Make sure that the power switch located on the front of the chassis in the OFF (0) position.
- 3 Use a local IEC standard power cable to connect the power connector shown in [Figure 2-4](#) to your AC power supply. [Figure 2-6](#) shows the power connection to both the picoBTS and DAS systems.

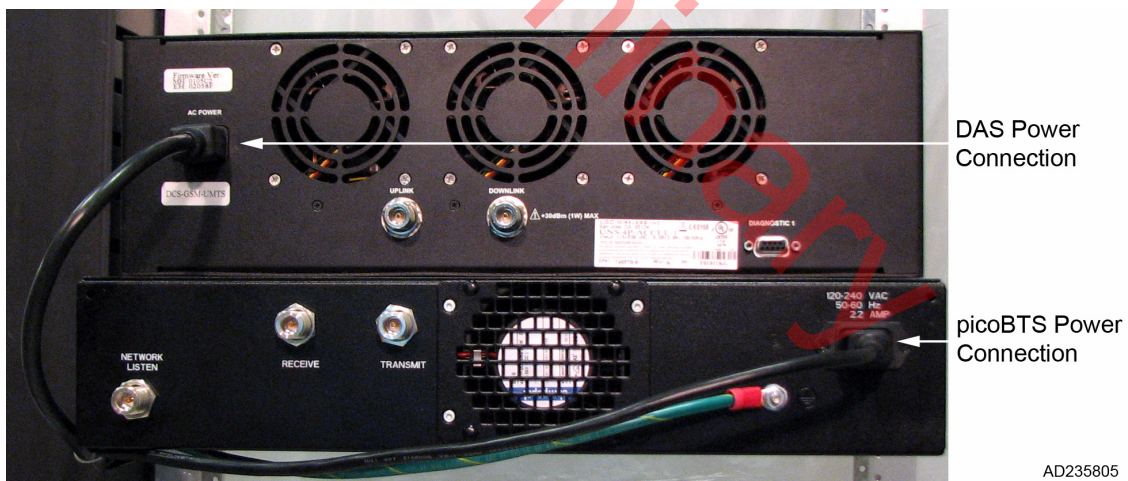


Figure 2-6: Power Supply Connection

- 4 **Do not apply power to the chassis at this time.** Wait until you are performing the commissioning procedures in the next chapter.



Caution: The power supply cord is used as the main disconnect device, ensure that the socket-outlet is located/installed near the equipment and is easily accessible.

Attention: Le cordon d'alimentation est utilisé comme interrupteur général. La prise de courant doit être située ou installée à proximité du matériel et être facile d'accès.

Warnung: Das Netzkabel dient als Netzschalter. Stellen Sie sicher, dass die Steckdose einfach zugänglich ist.

Preliminary

2.5 CONNECTING THE DISTRIBUTED ANTENNA SYSTEM

The chassis provides access to the female N-type connectors for your distributed antenna system (DAS) or other external antennas.

The antenna cabling for the picoBTS will typically be configured for connection to an Inter-Reach DAS system. Your site specific DAS system and configuration was determined during the network planning stage of implementation.

Table 2-5: Adapters and Cabling

IDENTITY	CABLE TYPE	CORRESPONDING CABLE PLUGS
RF cable (15 in.)	Coaxial	N-type, Male
<p>Note: Two 15 inch cables are provided to connect the picoBTS to a DAS. If your configuration is different from the standard installation, you must provide the proper RF cables.</p>		

- 1 Verify the power is OFF on both the picoBTS and DAS chassis.
- 2 Using one RF cable, connect the TRANSMIT N-type connector on the picoBTS to the DOWNLINK connector on the DAS chassis. Tighten the connectors by hand until snug.
- 3 Using the second RF cable, connect the RECEIVE connector on the picoBTS to the UPLINK connector on the DAS chassis. Tighten the connectors by hand until snug.
- 4 [Figure 2-7](#) illustrates the connections between the picoBTS and the DAS. Verify the connections are correct and all connectors are tight.

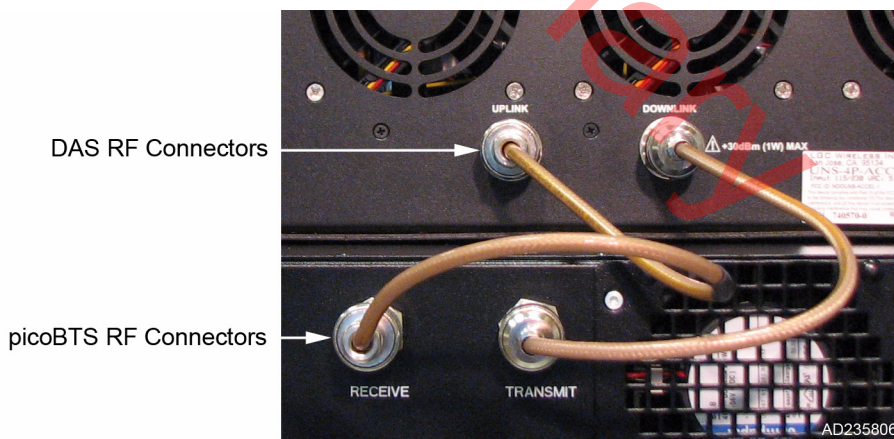


Figure 2-7: Antenna Cabling for Standard picoBTS Configurations

WARNING: All RF cabling must be completed with the chassis powered off and, preferably, with the power cable disconnected from the cabinet.



Do not disconnect RF coaxial connectors on the ADC equipment or antenna systems while the radio equipment is operating. **Never** place any body part over or look into any RF connector while the radio equipment is transmitting.

RF signal levels that give rise to hazardous radiation levels can exist within the transmitter, power amplifiers, associated RF multiplexers and antenna systems.

Preliminary

2.6 NETWORK CONNECTION

External cabling is dependent upon the customer site-specific requirements. The picoBTS system carries OAM and VoIP traffic over Ethernet and should be connected on an isolated Ethernet subnet for best performance.

The picoBTS has two 100baseT RJ-45 connectors Ethernet connection on the front panel labeled WAN IN and WAN OUT, as shown in [Figure 2-8](#).



Figure 2-8: Network Connection

- To make the connection, an Ethernet patch cable into the port and set up the Ethernet connection as described in [Section 3.3](#).

2.7 POST INSTALLATION CABLING AND CHECKS

Before proceeding to the next chapter and commissioning the equipment, make sure that:

- The chassis and mounting rack are properly grounded.
- The power cable is properly connected to the chassis and input power supply.
- The chassis power is turned off.

Preliminary

Blank

Preliminary

CHAPTER 3 - COMMISSIONING AND CONFIGURATION

Content	Page
3.1 PRE-COMMISSIONING	23
3.1.1 On-Site Visual Inspection	23
3.2 COMMISSIONING OF THE PICOBTS	24
3.2.1 Connecting the PC to the picoBTS Chassis	24
3.2.2 Setting Up a Serial Connection to the picoBTS Serial Port	24
3.2.3 Power On LED Tests	26
3.3 CONFIGURING THE ETHERNET ADDRESS AND BOOT PARAMETERS	28
3.4 SOFTWARE VERIFICATION	31
3.4.1 Verifying the Current Software Version and Patch Level	31
3.4.2 Verifying the Software License	32
3.4.3 Rebooting the picoBTS	32
3.4.4 Terminating Serial Communications with the picoBTS	33
3.5 PREPARING FOR ON-LINE COMMISSIONING	3333

*****THIS CHAPTER IS TBD AND WILL INCLUDE BASIC NANO SETUP.

This material is currently covered in ADCP 75-310 Issue 2.

The commissioning process includes the following steps:

- Pre off-line commissioning, where you ensure that the system is in an appropriate state. This includes:
 - Visual inspection
 - Compliance checks
- Startup Verification, where you verify that the system comes up correctly by observing the LEDs on the front panel.
- Configuration includes setting up the site-specific local IP address for the picoBTS.

The rest of this chapter includes the detailed instructions for these steps.

WARNING: Under normal operating conditions, ADC Telecommunications radio equipment complies with the limits for human exposure to radio frequency (RF) fields adopted by the Federal Communications Commission (FCC). All ADC Telecommunications, Inc. radio equipment is designed so that under normal working conditions radio frequency radiation directly from the radio is negligible when compared with the permissible limit of continuous daily exposure recommended in the United States of America by ANSI/IEEE C95.1-19991 (R1997), Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.



Radio frequency signal levels that give rise to hazardous radiation levels can exist within the transmitter, power amplifiers, associated RF multiplexers and antenna systems.

Do not disconnect RF coaxial connectors on the ADC equipment or antenna systems while the radio equipment is operating. **Never** place any body part over or look into any RF connector while the radio equipment is transmitting.



Caution: The BSS software used in the is highly complex. **Before proceeding**, contact Customer Service to verify that you have the latest available software. You must **have** the correct software CD-ROM and **know** the current patch level for your software version before commissioning the picoBTS. Contact your Level 2 support representative for additional assistance.

3.1 PRE-COMMISSIONING

This section must be completed before doing the commissioning. The commissioning of the chassis should take place on-site after the physical installation of the picoBTS. Use the appropriate lists depending on where the off-line commissioning is being performed.

3.1.1 ON-SITE VISUAL INSPECTION

If you are doing your visual inspection on-site, check that:

- The chassis has been securely installed at the appropriate site.
- The power to the chassis is OFF.
- The chassis is connected to a suitable power source.
- The chassis is correctly grounded.
- All cables are available and secured in their correct positions.



Caution: DO NOT turn the power supply ON until you have a DAS or external antenna connected to EACH antenna port.

3.2 COMMISSIONING OF THE PICOBTS

This section describes the commissioning procedures for the picoBTS. It includes Power-on LED tests and software verification procedures. These check and configure the software and run power on self tests (POST) and check the results.

In this chapter, you will use a laptop PC or other computer with serial session capability to verify the software configuration and other aspects of the picoBTS operation.

3.2.1 CONNECTING THE PC TO THE PICOBTS CHASSIS

You will be making a serial connection from the laptop computer to the picoBTS. This connection is used for checking the software version installed on the system, verifying and changing boot parameters and monitoring test results.

3.2.1.1 Required Hardware

The following hardware is required to connect the laptop to the picoBTS using a serial connection.

- One standard DB9 to DB9 serial cable
- Laptop USB to DB9 serial adapter (if necessary)

3.2.2 SETTING UP A SERIAL CONNECTION TO THE PICOBTS SERIAL PORT

- 1 Connect one end of the serial cable to picoBTS connector labeled `Serial` on the rear of the chassis.
- 2 Connect the opposite end of the cable to the DB9 serial connector or serial adapter on the laptop, as shown in [Figure 3-2](#).



Figure 3-1: Connecting to the Serial Port

The PC uses serial communications for basic control of the picoBTS, including bootChange configuration and monitoring of the boot-up process.

- 1 If not already done, connect the laptop to the picoBTS as described in [Section 3.2.2](#).
- 2 You may use any available application to open a serial connection. This procedure describes how to use HyperTerminal. Navigation to the program may differ depending on the operating system you have installed.
 - A Launch the application by navigating: Start -> Programs -> Accessories -> HyperTerminal -> **HyperTerminal**
 - B Enter BSS for the connection name and select an icon. Then click the **OK** button.
 - C The Connect To dialog box displays. Select **COM1** from the Connect using drop-down list. If you know that your serial port is configured on a different port, select that port from this drop-down list.
 - D The COM1 Properties dialog box displays. Set the following properties and click the **OK** button. See [Figure 3-2](#).

Bits per second: **9600**

Data bits: **8**

Parity: **None**

Stop bits: **1**

Flow control: **None**

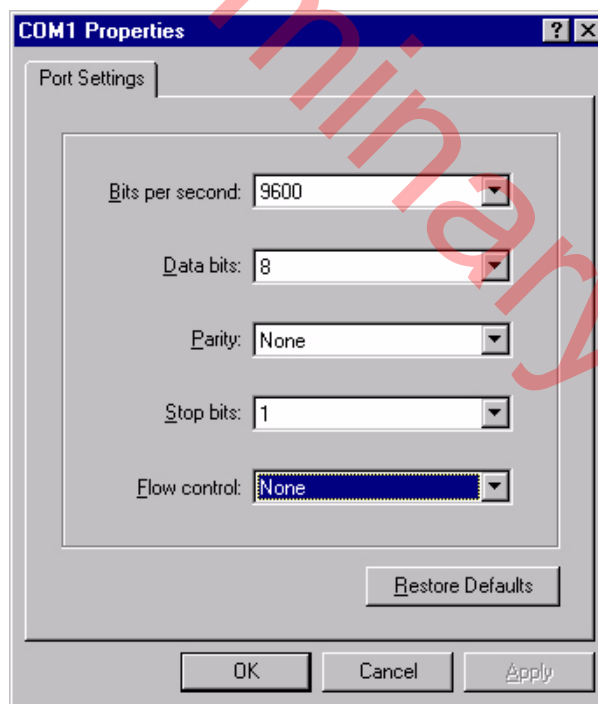


Figure 3-2: Serial Session Properties

- E Select **OK** to connect to the chassis. At this time, you will not see a prompt. Proceed to [Section 3.2.3](#) to power on the chassis.

3.2.3 POWER ON LED TESTS

This section describes how to power-on the picoBTS and verify that the system comes up properly by viewing the LEDs on the front of the chassis. The purpose of these tests is to verify that the LEDs come up in the correct state, indicating that the system is operating normally.

Use the following procedure:

- 1 Turn the power to the chassis on by switching on the power switch on the front panel.



Caution: DO NOT turn this power supply on until you have a DAS system or an external antenna connected to EACH antenna port.

- 2 Verify that the front-panel LEDs flash in the sequence shown in [Figure 3-3](#).

Figure 3-3: LED Sequence During the Boot Process

- 3 When the sequence is completed, verify that the LEDs appear as shown in the following table:

Table 3-1: LED Normal Indications

LED	DESCRIPTION
PWR	Green LED, lit when system has power supplied. The PWR LED of the controller and TRX cards will be lit after all cards have completed the boot-up process.
ON LINE	Green LED, lit when card is on-line, and card BOOT process has been performed successfully. The On-Line LED of the Controller card will be lit after all cards have completed the boot-up process. The TRX cards will not go on-line until they are unlocked by the OMC operator
FLT	Red LED, lit when card detects a fault or is not downloaded.

- 4 If your LEDs appear as described above, you are done with the LED Power up tests. Contact Customer Service.

- 5 You can monitor the status of the boot process using the serial session opened in [Section 3.4](#).

Once the LEDs on the processor cards have reached their final online status, press the [ENTER] key in the HyperTerminal window. The prompt now changes to the following:

```
HD:iwbox->
```

Preliminary

3.3 CONFIGURING THE ETHERNET ADDRESS AND BOOT PARAMETERS

In this section, you configure the boot parameters to modify the IP address of the system. After changing the boot parameters, the chassis must be reset before the changes take effect.

- 1 If not already done, establish serial communications with the picoBTS as described in [Section 3.2.2](#).
- 2 Once the picoBTS boots normally, press the [ENTER] key to show the prompt:

```
HD:iwbox->
```

- 3 Display the boot parameters, by typing:

```
bootChange [ENTER]
```

- 4 The boot parameters display individually after pressing the [ENTER] key. Each parameter can be modified by simply entering the new values after the existing value is displayed and pressing the [ENTER] key. You cannot use the backspace or delete keys in this window. Edit the parameter values using the following commands:

Table 3-2: Changing Boot Parameters

COMMAND	ACTION
[ENTER]	Accepts the current parameter value and proceeds to the next parameter.
. [ENTER]	Erases the current parameter value and proceeds to the next parameter.
- [ENTER]	Returns to the previous parameter.
[CTRL] [d]	Aborts all changes and reverts to the current values.

[Figure 3-4](#) shows the default bootChange parameters for the system.


```

'.' = clear field; '-' = go to previous field; ^D = quit

boot device      : ata.0
processor number : 0
host name       :
file name       : hd0:/vxWorks
inet on ethernet (e) : 172.16.80.42:ffffff00
inet on backplane (b):
host inet (h)   :
gateway inet (g) :
user (u)        : target
ftp password (pw) (blank = use rsh):
flags (f)       : 0x0
target name (tn) : iwbox
startup script (s) : /hd0/iwvstart
other (o)       : motfcc

value = 0 = 0x0
HD:iwbox-> _

```

Figure 3-4: Default Boot Parameters

It is necessary to change the default picoBTS Ethernet address to match your site-specific network configuration. Use the following steps to modify the IP address and target name of the picoBTS.

- 5 Type the `bootChange` command to edit the boot parameters. The parameters will be displayed one line at a time.

bootChange [ENTER]

```

'.' = clear field; '-' = go to previous field; ^D = quit

boot device      : ata.0
processor number : 0
host name       :
file name       : hd0:/vxWorks
inet on ethernet (e) : XXX.XXX.XXX.XXX:ffffff00
inet on backplane (b):
host inet (h)   :
gateway inet (g) : YYY.YYY.YYY.YYY
user (u)        :
ftp password (pw) (blank = use rsh):
flags (f)       : 0x0
target name (tn) : TARGETNAME
startup script (s) : /hd0/iwvstart
other (o)       : motfcc

value = 0 = 0x0
HD:iwbox-> _

```

Figure 3-5: Boot Parameters Requiring Changes

6 **Figure 3-5** shows the IP address parameters which must be modified to add your picoBTS to your Ethernet network.

- **xxx.xxx.xxx.xxx** is the IP address. Replace it with the site-specific Ethernet IP address for your network. The IP address is followed by **':fffff000'** which is the subnet mask as a hexadecimal value. To modify the subnet mask of the processor card, determine the proper hexadecimal value and enter following the colon. For example to use a subnet of 255.255.255.0, you would follow the IP address with **':ffffff00'**. The value displayed in the example **':fffff000'** is equal to 255.255.240.0.
- **yyy.yyy.yyy.yyy** is the gateway router IP address. Enter the IP address of the gateway router.
- **TARGET NAME** sets the IP name. The default is "iwbox". The **TARGET NAME** parameter sets the IP name. The default is "iwbox". You should enter a different name for each system.



Note: Use the IP name and IP address you received from your network administrator.

7 Ensure that all other boot parameters are configured exactly as shown in the previous figures.



Caution: You should ONLY change the `inet` on `ethernet`, `target name` and `gateway inet` parameters. All other parameters should NOT be modified.

8 If you have changed anything, for the new parameters to take effect, reboot the chassis by pressing the key combination `[CTRL] [x]`. If you do not receive a prompt after reboot, press `[ENTER]` to display the `HD:iwbox->` prompt.

9 Connect an Ethernet RJ-45 patch cable to the WAN port on the front of the chassis.

10 Notify the OMC operator that the picoBTS is connected to the Ethernet, and give the OMC operator the IP address and IP Name.



Caution: The OMC operator MUST have the correct picoBTS IP address, or the OMC will not be able to communicate with the BS Plus.

3.4 SOFTWARE VERIFICATION

You should use the following commissioning procedures to verify the software installed on the picoBTS.

3.4.1 VERIFYING THE CURRENT SOFTWARE VERSION AND PATCH LEVEL



Note: The following section describes procedures performed using the Craft PC. For more information pertaining to the use of the Craft PC, please refer to the GSM Craft PC User Guide.

- 1 If not already done, establish serial communications with the picoBTS as described in [Section 3.2.2](#).
- 2 After the HD: iwbox-> prompt appears, verify the current software version and patch level by typing:

```
iwversion [ENTER]
```

The following software information will be displayed:

```
BSC code version: iw07_05.ZZZ
```

```
Release number: 7.5
```

```
ABIS version: 1.1
```

```
Packages Installed:
```

```
Encryption: A5/1
```

```
Patches Installed:
```

```
patch<#> <file directory> <patch size> <iw07_05.ZZZ>
```

The current software version is displayed, represented above by the parameter iw07_05.ZZZ. This number should correspond to the software version detailed in the release notes included with the CD-ROM. Keep this number for your records.

- 3 Verify under Patches Installed: that the most current patch is installed, if applicable. Refer to the GSM Craft PC User Guide for procedures to install required patches. If you are unsure if you require software patches, contact your Level 2 support representative for additional assistance.



Note: If the displayed software version number does not coincide with the software version being run on the network for which this picoBTS is going to be used, contact Customer Service for instructions on how to install a different software version.

3.4.2 VERIFYING THE SOFTWARE LICENSE

In this section you will complete the following procedures:

- Backup the software license files from the processor card to the PC or OMC.
 - Verify the software license files are compatible with the system.
- 1 Verify the serial cable is connected to the chassis and you have an open serial session as detailed in [Section 3.2.2](#).
 - 2 Verify the license file using the following command:

```
printLicenseKey
```

The following output is a sample of properly configured license file:

```
License Keys :
printLicenseKey
GENERAL : VALID
GPRS : VALID
FREQHOP : VALID
XTNDCELL : VALID
SECTOR : VALID
TRX_84 : VALID
PDCH_60 : VALID
value = 1 = 0x1
HD:iwbox-> Done.
```

The licenses will vary depending based on your sales order and your network configuration. Your license will not have all of the the entries listed above and may display an error message similar to the following:

```
1219117434.733 (tShell) VerifyKey: key not found 4
```

This is normal, however if your license does not have any VALID entries. The file may be corrupt or not properly installed, contact Customer Service.

3.4.3 REBOOTING THE PICOBTS

- Using the serial session window, reboot the picoBTS by typing:

```
reboot [ENTER]
```

The entire chassis will now reboot.

3.4.4 TERMINATING SERIAL COMMUNICATIONS WITH THE PICOBTS

- To terminate serial communications, use the disconnect menu within HyperTerminal or other application.

3.5 PREPARING FOR ON-LINE COMMISSIONING

The following procedure is necessary to ensure that the picoBTS is ready for use and ready for on-line testing.

- 1 Power on the picoBTS if it is not already on. Verify that all PWR and On-Line LEDs are green.
- 2 Using the appropriate documentation, ensure the distributed antenna system (DAS) is properly connected, cabled and configured.
- 3 Inform the OMC operator that the picoBTS is ready for network configuration.
- 4 After the OMC operator has configured the picoBTS, continue with on-line commissioning tests in the next chapter.

Blank

Preliminary

CHAPTER 4 - ON-LINE TESTING

Content	Page
4.1 PRE ON-LINE COMMISSIONING REQUIREMENTS	36
4.2 ON-LINE COMMISSIONING	37
4.2.1 Testing the picoBTS	39
4.2.2 Recovery Tests	39
4.2.3 TCH Timeslot Tests	39
4.2.4 RX Signal Quality Measurements	40
4.3 POST ON-LINE COMMISSIONING PROCEDURES	42

On-line commissioning tests the air interface to the picoBTS and takes place on-site after installation and commissioning. Its purpose is to verify that the equipment is operational and can be integrated into the telecommunications network.

On-line commissioning requires the participation of one or two people; a field technician who operates and tests the picoBTS on-site and an OMC-R operator who has commissioned the picoBTS on the BSC. These two must work together to get the RF interface up and the system ready to make calls.

Radio Frequency Radiation Warning



Under normal operating conditions, ADC radio equipment complies with the limits for human exposure to radio frequency (RF) fields adopted by the Federal Communications Commission (FCC). All ADC Telecommunications, Inc. radio equipment is designed so that under normal working conditions RF radiation directly from the radio is negligible when compared with the permissible limit of continuous daily exposure recommended in the United States of America by ANSI/IEEE C95.1-1991 (R1997), Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.

RF signal levels that give rise to hazardous radiation levels can exist within the transmitter, power amplifiers, associated RF multiplexers and antenna systems.

Do not disconnect RF coaxial connectors on the ADC equipment or antenna systems while the radio equipment is operating. **Never** place any body part over, or look into any RF connector while the radio equipment is transmitting.

4.1 PRE ON-LINE COMMISSIONING REQUIREMENTS

Before on-line commissioning begins, the field technician or the OMC-R operator must verify that:

- The picoBTS, BSC and the MSC are fully commissioned, in service and connected to each other.
- The BSC is in service and connected to the picoBTS.
- The OMC-R operator has successfully created and configured the picoBTS object on the OMC-R and downloaded this information to the picoBTS. Refer to the procedures described in the FlexWave BSS documentation.
- The RF frequencies are cleared to transmit.
- The BSC-picoBTS Ethernet link is properly configured and operational.
- The HLR subscriber data has been entered into the MSC HLR. In particular, the HLR must be configured to support the SIM cards of the mobiles used by the field technician.

Preliminary


4.2 ON-LINE COMMISSIONING

The network commissioning procedures must be performed using the OMC-R and within the coverage area provided by the picoBTS. This requires one or two persons working from at least two different documentation sets:

- A field technician who is on-site within the coverage area of picoBTS and DAS system. They must have a copy of this manual and the appropriate DAS documentation.
- An OMC-R operator who uses the FlexWave OMC-R or BSC Configuration Manager to configure and enable the picoBTS in the network. They must have the appropriate FlexWave documentation for the procedures they are performing.

The flowchart shown in [Figure 4-1](#) provides a high-level view of the procedures. The procedures in the following sections provide detailed, numbered steps.

Note: Before starting any of the following procedures, the field technician needs to ensure that anti-static precautions are taken. Refer to [Section 1.2](#).

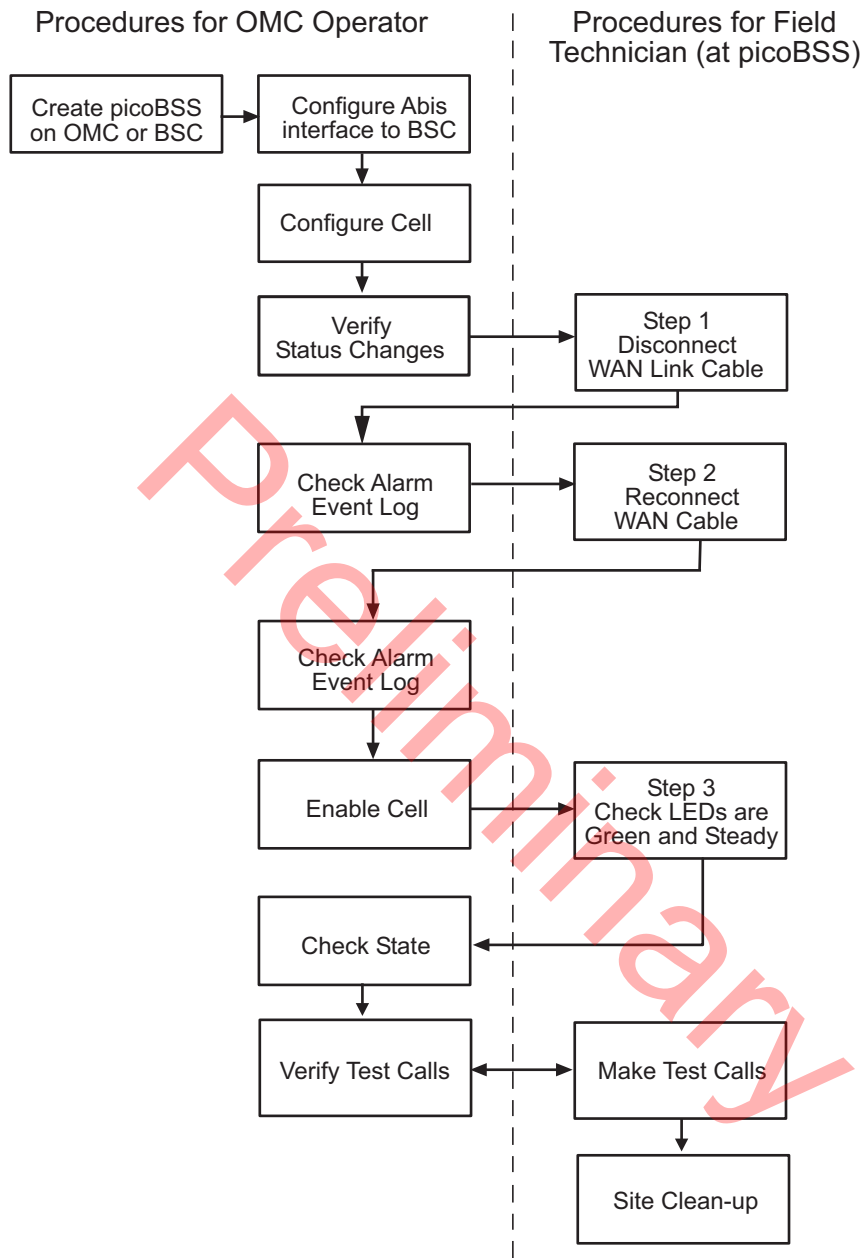

AD235811

Figure 4-1: On-Line Commissioning Procedures

4.2.1 TESTING THE PICOBTS

Before disconnecting the physical Ethernet cable, the field technician must make sure that the cable is labeled in a way that clearly identifies its origin and destination.

- Provide the OMC-R operator with all part, revision and serial numbers for the picoBTS.

4.2.2 RECOVERY TESTS

The OMC-R operator should add the picoBTS to the GUI, configure the Abis to the BSC and configure the Cell information on the OMC-R or BSC. Then perform the following steps:

- 1 At the picoBTS, disconnect the physical Ethernet cable.
- 2 Coordinate with the OMC-R operator to ensure the proper alarms have appeared on the OMC-R.
- 3 Reconnect the physical Ethernet cable to the picoBTS.
- 4 Coordinate with the OMC-R operator to ensure the proper alarms have cleared on the OMC-R.

4.2.3 TCH TIMESLOT TESTS

- 1 In this test, the OMC-R operator unlocks individual TCH timeslots and the field technician places a mobile-to-mobile call over each timeslot using a mobile handset in debug mode. Refer to the documentation provided by the module handset manufacturer for the proper procedures.

For each timeslot, the commissioner should verify that:

- The timeslot displayed on the handset corresponds to the timeslot unlocked by the OMC-R operator.
- A two-way call is completed successfully.
- The call has good audio quality and power, and low interference.

The number of timeslots to be tested will be for two TRXs. [Table 4-1](#) provides the sequence for two or more TRXs.

Table 4-1: Timeslots Requiring Testing in picoBTS

TRX NUMBER	TIMESLOT NUMBER	CHANNEL TYPE	TESTING NECESSARY
First TRX (Note)	0	BCCH	No
	1	SDCCH	No
	2	TCH	Yes
	3	TCH	Yes
	4	TCH	Yes

Table 4-1: Timeslots Requiring Testing in picoBTS, continued

TRX NUMBER	TIMESLOT NUMBER	CHANNEL TYPE	TESTING NECESSARY
	5	TCH	Yes
	6	TCH	Yes
	7	TCH	Yes
Second TRX (Note)	0	TCH	Yes
	1	TCH	Yes
	2	TCH	Yes
	3	TCH	Yes
	4	TCH	Yes
	5	TCH	Yes
	6	TCH	Yes
	7	TCH	Yes
<p>Note: The BCCH can be assigned to any TRX within the picoBTS. The label “First TRX” applies to the TRX to which is assigned the BCCH. All TCH timeslots on the secondTRX must be tested.</p>			

4.2.4 RX SIGNAL QUALITY MEASUREMENTS

The objectives of this test are to verify the performance of the Receive path of the picoBTS and the operation of the RX module in the TRX. Before these tests can take place, the picoBTS must be returned to its original “on air” working state with call processing possible.

- 1 From an Xterm window on the OMC-R, telnet to the picoBTS to be tested, or alternatively connect directly using a serial session to the picoBTS with the laptop PC.

THIS SECTION FROM HERE IS TOO BE DETERMINED.

- 2 From the picoBTS prompt type the following to activate the RX RSSI and quality data logging:

```
HD:iwbox-> log_none [ENTER]
HD:iwbox-> ho_log_on_bts [ENTER]
```

- 3 Place a mobile to mobile call through the BS Plus. The RSSI and Quality for the call will be displayed, as illustrated in [Figure 4-2](#).

```

210 (bts ) (4 0xe)UL:63/63 0/0 F AVG 63 0 DL:63/63 0/0 F AVG 63 0 NBR
211 (bts ) (4 0xe)UL:63/63 0/0 F AVG 63 0 DL:63/63 0/0 F AVG 63 0 NBR
212 (bts ) (4 0xe)UL:63/63 0/0 F AVG 63 0 DL:63/63 0/0 F AVG 63 0 NBR
213 (bts ) (4 0xe)UL:63/63 0/0 F AVG 63 0 DL:63/63 0/0 F AVG 63 0 NBR
214 (bts ) (4 0xe)UL:63/63 0/0 F AVG 63 0 DL:63/63 0/0 F AVG 63 0 NBR
215 (bts ) (4 0xa)UL:63/63 0/0 F AVG 61 0 DL:63/63 0/0 F AVG 63 0 NBR
216 (bts ) (4 0xe)UL:63/63 0/0 F AVG 63 0 DL:63/63 0/0 F AVG 63 0 NBR
217 (bts ) (4 0xa)UL:59/60 0/0 F AVG 62 0 DL:63/63 0/0 F AVG 63 0 NBR
218 (bts ) (4 0xe)UL:63/63 0/0 F AVG 63 0 DL:63/63 0/0 F AVG 63 0 NBR

```

Uplink RSSI/Quality Downlink RSSI/Quality

Figure 4-2: RSSI and Quality Log

The sample log shows typical results for strong signals on both the uplink and downlink where RSSI of 63 is the highest number. The quality should generally be 0 when the RSSI is above 40 (strong signal). If you have any 2 or higher numbers in RX quality, you have some receiver problems and should contact Customer Service.

4.3 POST ON-LINE COMMISSIONING PROCEDURES

- 1 Leave the power to the OMC-R and picoBTS on.
- 2 Check that all power cable and ground connections are tight.
- 3 Ensure that the picoBTS site is left in a tidy state.

This concludes the commissioning of the picoBTS. The technician may now leave the picoBTS site.

Preliminary

Blank

Preliminary



PHONE:

U.S.A. or CANADA

Sales: 1-800-366-3691
Extension 73000
Technical Assistance: 1-800-366-3891
Connectivity Extension: 73475
Wireless Extension: 73476

EUROPE

Sales Administration: +32-2-712-65 00
Technical Assistance: +32-2-712-65 42

EUROPEAN TOLL FREE NUMBERS


Germany: 0180 2232923
UK: 0800 960236
Spain: 900 983291
France: 0800 914032
Italy: 0800 782374

ASIA/PACIFIC

Sales Administration: +65-6294-9948
Technical Assistance: +65-6393-0739

ELSEWHERE

Sales Administration: +1-952-938-8080
Technical Assistance: +1-952-917-3475

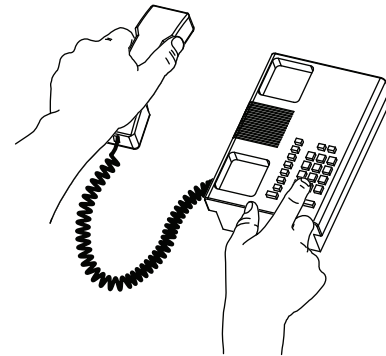


13944-P

WRITE:

ADC Telecommunications (S'PORE) PTE, LTD;
100 Beach Road, #18-01, Shaw Towers.
Singapore 189702.

ADC Telecommunications, INC
PO Box 1101,
Minneapolis, MN 55440-1101, USA

ADC European Customer Service, INC
Belgicastraat 2,
1930 Zaventem, Belgium

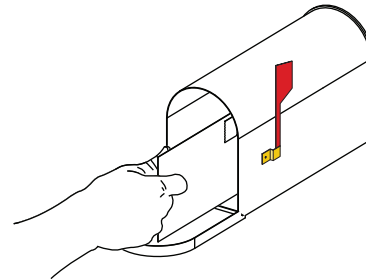


PRODUCT INFORMATION AND TECHNICAL ASSISTANCE:

connectivity.tac@adc.com

wireless.tac@adc.com

euro.tac@adc.com

asiapacific.tac@adc.com

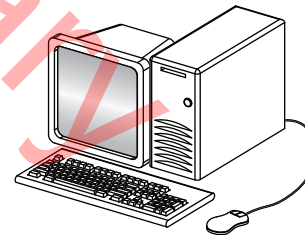

REPRINTS:

PDF copies of manuals are available
for downloading at the following link:

www.adc.com/manuals

ADCP Number: **ADCP-77-061**

Contents herein are current as of the date of publication. ADC reserves the right to change the contents without prior notice. **In no event shall ADC be liable for any damages resulting from loss of data, loss of use, or loss of profits and ADC further disclaims any and all liability for indirect, incidental, special, consequential or other similar damages. This disclaimer of liability applies to all products, publications and services during and after the warranty period.**

Preliminary

Preliminary



Website: www.adc.com