

**iSavi**<sup>TM</sup>

# **USER GUIDE**

**BETA VERSION**



## SAFETY INSTRUCTIONS

For safety and protection, please read the user guide before using the Satellite Terminal, iSavi™ Model: SH-100. In particular, do read this safety section carefully. Keep this safety information where you can refer to it, if necessary.

The following general safety precautions must be observed during all phases of operation, service and repair of this equipment. Failure to comply with these precautions or with specific warnings elsewhere in this user guide violates safety standards of design, manufacture and intended use of the equipment.

Addvalue Innovation Pte Ltd assumes no liability for the customer's failure to comply with these requirements.

### Hazard Symbols

Avoid touching the metal plate of the Transceiver (bottom/rear) during continuous operation that are marked with this symbol, otherwise it may result in injury.

Évitez de toucher la plaque métallique de l'émetteur-récepteur (bas / arrière) pendant le fonctionnement continu qui sont marqués par ce symbole, sinon il peut causer des blessures.



“HOT”

### Antenna Radiation Warning

During transmission the embedded antenna in the radiates high power levels of radio frequency energy. This radiation is considered a health hazard to any personnel that come close to the antenna.

It is important to maintain a distance of at least 1 metre between the transmitting antenna and any personnel.



### Service

Users should not attempt to access the interior of the transceiver. Only qualified personnel authorized by its manufacturer may service the device. Failure to comply with this rule will result in the warranty being void.

## Battery Safety

Use only Addvalue-supplied or approved AC adapters with the terminal and for recharging the batteries.

The use of batteries that are not Addvalue-supplied or approved may pose increased safety risks.

Do not dispose of batteries in a fire, as they may explode.

Batteries may burn or explode if damaged.

Do not dismantle, open, bend or cut cells or batteries.

Do not attempt to modify or remanufacture the battery.

Do not immerse or expose the battery to water or other liquids.

In the event of a battery leak, avoid the contents coming into contact with the skin or the eyes. If this does happen, flush the affected areas with water and seek medical help as appropriate.

### **CAUTION**

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE  
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

### **ATTENTION**

IL Y A DANGER D'EXPLOSION S'IL Y A REMPLACEMENT INCORRECT DE LA BATTERIE,  
REPLACER UNIQUEMENT AVEC UNE BATTERIE DU MEME TYPE OU D'UN TYPE  
ÉQUIVALENT RECOMMANDÉ PAR LE CONSTRUCTEUR.  
METTRE AU REBUT LES BATTERIES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS  
DU FABRICANT.

## COPYRIGHT

© Copyright 2014 Addvalue Innovation Pte Ltd.

All rights reserved. This publication and its contents are proprietary to Addvalue Innovation Pte Ltd. No part of this publication may be reproduced in any form or by any means without the written permission of Addvalue Innovation Pte Ltd., 8, Tai Seng Link, Level 5 (Wing 2), Singapore 534158.

## WARRANTY

Addvalue Innovation Pte Ltd has made every effort to ensure the correctness and completeness of the material in this document. Addvalue Innovation Pte Ltd shall not be liable for errors contained herein. The information in this document is subject to change without notice. Addvalue Innovation Pte Ltd makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

## TRADEMARKS

All trademarks, marks, names, or product names referenced in this publication are the property of their respective owners, and Addvalue Innovation Pte Ltd neither endorses nor otherwise sponsors any such products or services referred to herein.

Wideye, the Wideye logo, iSavi and iSavi logo are either trademarks or registered trademarks of Addvalue Technologies Ltd and/or its affiliates in Singapore and/or other countries.

Microsoft, Windows and Internet Explorer are registered trademarks of Microsoft Corporation in the U.S.A. and/or other countries

INMARSAT is a trademark of the International Mobile Satellite Organization. The Inmarsat LOGO and the trademark IsatHub are trademarks of Inmarsat (IP) Company Limited. All trademarks are licensed to Inmarsat Limited.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries.

Android and Google Chrome are either trademarks or registered trademarks of Google Inc.

Macintosh, Mac OS, iPhone, iPad and Safari are trademarks or registered trademarks of Apple Inc., registered in the U.S. and other countries.

Java is registered trademark of Oracle and/or its affiliates.

Firefox is registered trademark of Mozilla Foundation

All other company and product names may be the registered trademarks or trademarks of their respective owners.

iSavi™ Model : SH-100 User's Guide

## REGULATORY INFORMATION

### **FC** Federal Communication Commission Notice

FCC Identifier: **QO4-ISAVISH100**

#### USE CONDITIONS:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and radiates radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### IMPORTANT NOTE: EXPOSURE TO RADIO FREQUENCY RADIATION

This Device complies with FCC & IC radiation exposure limits set forth for an uncontrolled environment. The Antenna used for this transmitter must be installed to provide a separation distance of at least 1 metre from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

#### FCC CAUTION:

Any Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by FCC, to operate this Satellite Terminal, iSavi™. Model: SH-100

## **Industry Canada Statement:**

IC Identifier: **5023B-SH100ISAVI**

This device complies with Industry Canada license-exempt RSS-170 and RSS-GEN210 standard(s). Operations subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### **IMPORTANT NOTE: Radiation Exposure Statement**

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This antenna used for this transmitter must be installed to provide a separation distance of at least 1 metre from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

### **NOTE IMPORTANTE: l'exposition aux radiations**

Cet appareil est conforme aux limites d'exposition aux rayonnements définies pour un environnement non contrôlé. Cette antenne utilisée pour ce transmetteur doit être installée pour fournir une distance de séparation d'au moins 100cm de toutes les personnes et ne doit pas être co-localisées ou opérant en conjonction avec une autre antenne ou émetteur.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a built-in patch and maximum 8dBi gain (or lesser) approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un 8dBi gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

## Declaration of Conformity:

Addvalue Innovation Pte Ltd., 8, Tai Seng Link, Level 5 (Wing 2), Singapore 534158.  
declares under our sole responsibility that the Product, brand name as Wideye and model:  
SH-100 Satellite Terminal , iSavi to which this declaration relates, is in conformity with the  
following standards and/or other normative documents:

ETSI EN 301 489-1, -17, -19, -20, ETSI EN 301 681, ETSI EN 300 328, EN 50385,  
EN 50371, ITU-R M.1480, IEC 60950 – 1 AND EN 60950-1,

We hereby declare that all essential radio test suites have been carried out and that the above  
named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The Conformity Assessment procedure referred to Article 10 and detailed in Annex [III] or [IV] of  
Directive 1999/5/EC has been followed with involvement of the following notified body(ies):

TIMCO ENGINEERING, INC., P.O BOX 370, NEW BERRY, FLORIDA 32669.  
Identification mark: 1177 (Notified Body number)



The technical documentation relevant to the above equipment are held at:

- Addvalue Innovation Pte Ltd., 8, Tai Seng Link, Level 5 (Wing 2), Singapore 534158.
- Signed by

Mr. Tan Khai Pang (Chief Technology Officer, July 17, 2014) and

Mr. Prabakar Kuttaniseeri (Manager-Quality Management, July 17, 2014).

<b>SAFETY INSTRUCTIONS.....</b>	<b>1</b>
<b>COPYRIGHT.....</b>	<b>4</b>
<b>WARRANTY.....</b>	<b>4</b>
<b>TRADEMARKS.....</b>	<b>4</b>
<b>REGULATORY INFORMATION(TBC).....</b>	<b>5</b>
<b>1 INTRODUCTION.....</b>	<b>9</b>
Key Features .....	9
Configuration Interface.....	9
System Requirements.....	10
<b>2 GETTING STARTED.....</b>	<b>11</b>
Point the terminal and connect to the network.....	13
Accessing data and calls .....	15
<b>3 NAVIGATING THE WEB CONSOLE.....</b>	<b>17</b>
<b>Menu Overview .....</b>	<b>17</b>
<b>Status of Terminal.....</b>	<b>17</b>
<b>Data .....</b>	<b>19</b>
Data Profile Setting.....	19
Firewall Protection Setting.....	21
Access Rights Setting according to MAC address.....	24
<b>Telephony.....</b>	<b>26</b>
SIP Setting.....	26
<b>SMS.....</b>	<b>27</b>
Compose a new SMS .....	27
View Received SMS .....	28
View Sent SMS.....	28
View Draft SMS.....	29
<b>Settings.....</b>	<b>30</b>
Create Account for Web Console Access .....	30
Change SSID and Wi-Fi Password .....	31
Configure SIM Security .....	33
Terminal Settings .....	34
Firmware Upgrade .....	35
Important Information and Log File .....	36
Language.....	36
Support.....	36
<b>4 TROUBLESHOOTING AND FAQ.....</b>	<b>37</b>
<b>5 CARE AND MAINTAINENCE.....</b>	<b>42</b>
<b>Appendix A: Antenna Pointing LED Status Table.....</b>	<b>43</b>
<b>Appendix B: Technical Specifications .....</b>	<b>47</b>
<b>Appendix C: IsatHub Coverage Map.....</b>	<b>49</b>



# 1 INTRODUCTION

Your iSavi™ satellite terminal is specially designed to be compact and easy to use with a standby battery lifespan that is comparable to laptops and smart phones. Together with a corresponding service package from Inmarsat, your iSavi™ can meet the data and voice communications needs for the modern global business traveler, NGO field workers and many more types of user.

## Key Features

- Built-in 802.11 b/g/n access point with 30 metre range (with built in Wi-Fi antenna).
- Data connectivity using Wi-Fi
- Voice connectivity using VoIP over Wi-Fi
- iSavi™ terminal management via web console or smart phone and tablet Control app
- Detachable rechargeable battery compartment with built-in charging circuit
- Single unit with integrated antenna (all-in-one)
- Easy antenna pointing (with audio tone and LED feedback )
- Lightweight, robust, reliable
- IP65 Compliant (dust tight and protected against water jets)

## Configuration Interface

The user may configure the iSavi™ terminal via three different configuration interfaces:

- 1) Web Console
- 2) Smart phone and tablet Control app\*
- 3) Voice app\* (VoIP configuration for voice calls)\*

\*Supplied separately- Search for IsatHub on your iOS or Android device (App Store or Google Play).

## System Requirements

<p><b>Network Requirements</b></p>	<ul style="list-style-type: none"> <li>• IEEE 802.11b/g/n wireless clients</li> <li>• Inmarsat iSatHub Micro-SIM card</li> </ul>
<p><b>Browser based Web Console Requirements</b></p>	<p><b>Smart devices or personal computer with the following operating systems:</b></p> <ul style="list-style-type: none"> <li>• iOS or Android™,</li> <li>• Windows®, Macintosh®, or Linux-based operating system</li> </ul> <p><b>Recommended Browsers:</b></p> <ul style="list-style-type: none"> <li>• Google Chrome™</li> <li>• Safari®</li> <li>• Internet Explorer®</li> <li>• Firefox®</li> </ul> <p>Users have to ensure they have the latest version of Java™ installed where necessary. Visit <a href="http://www.java.com">www.java.com</a> to download the latest version.</p>
<p><b>IsatHub Control app and Voice app Requirements</b></p>	<p>Smart phone or tablet:</p> <p>iOS 6 or higher (minimum requirement: iPhone 4 / iPad 3 )</p> <p>Android 4.1 or higher</p>

## 2 GETTING STARTED

### WELCOME

Congratulations on purchasing the Addvalue's Wideye™ iSavi™ satellite terminal.

### SHARE ACCESS TO DATA

Devices connected to your iSavi™ satellite terminal over Wi-Fi can access data and calls.



### CONTROL SHARED ACCESS

The features of your iSavi™ terminal can be conveniently controlled remotely.



Use a tablet or smart phone to share and control data access\*.



For control of your iSavi™: IsatHub Control app  
For satellite calls: IsatHub Voice app



**DOWNLOAD NOW**  
Apps are available for iOS & Android.

Alternatively use any web browser to control your iSavi™ satellite terminal.



\* Apps are supplied by Inmarsat



### QUICK REFERENCE

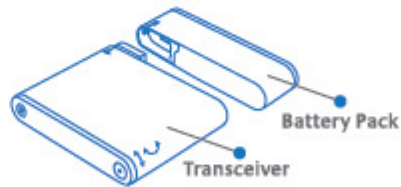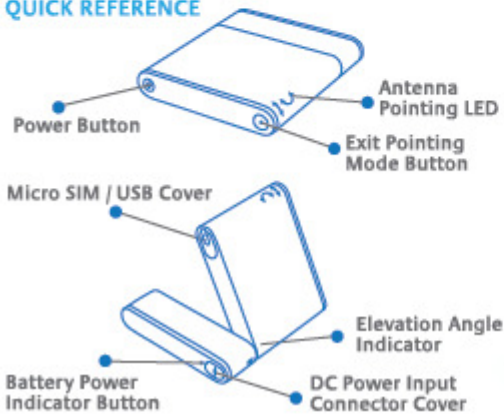

### Other contents in the box



*Note: The antenna is embedded inside the transceiver.*

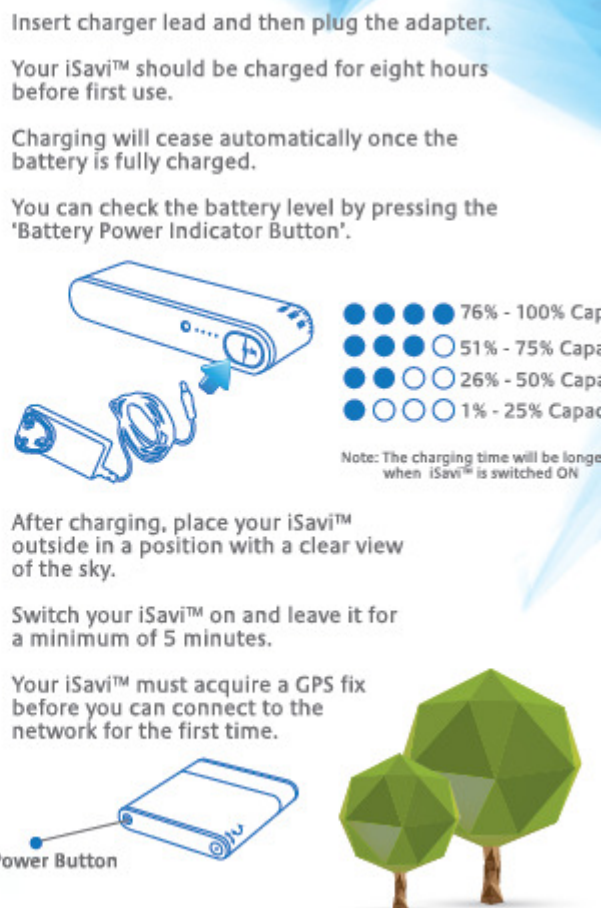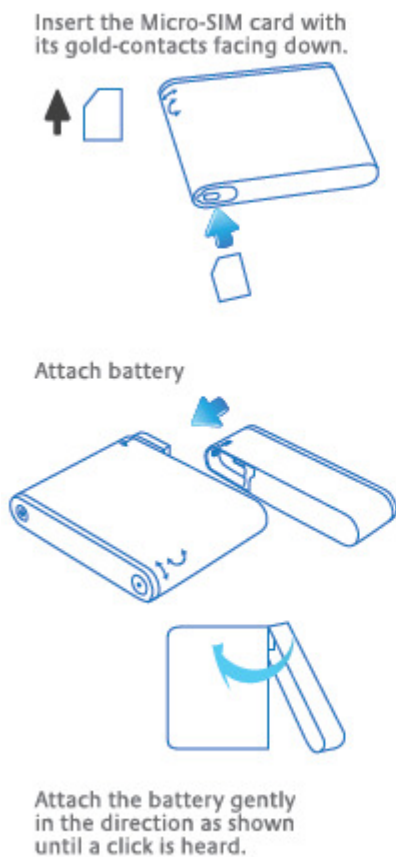

## iSavi terminal control

Your iSavi™ can be controlled in 2 ways:

1. Web console: Any browser provides access to configure and operate the terminal. See [Section 3 NAVIGATING THE WEB CONSOLE](#).
2. IsatHub Control app: The application is designed for everyday administration of your iSavi terminal including managing data usage and sharing the data connection with other devices. It provides a more limited set of functionality than the web console functionality. The app for smart phones and tablets is available from App Store or Google Play for iOS or Android devices respectively.

## Point the terminal and connect to the network

Make sure you place your iSavi™ outside with a clear view of the sky. Your iSavi™ needs to be pointed towards the sky in the correct direction to ensure connection to the Inmarsat satellite network.


Turn on the terminal by pressing the Power Button for five seconds. It takes around one to two minutes for your iSavi™ to power up and enter antenna pointing mode.

There are three methods for antenna pointing:

1. LED visual pointing mode
2. Audio assisted pointing mode
3. Control app pointing assist

### LED Visual Pointing Mode

By default, the antenna pointing is in LED Mode.

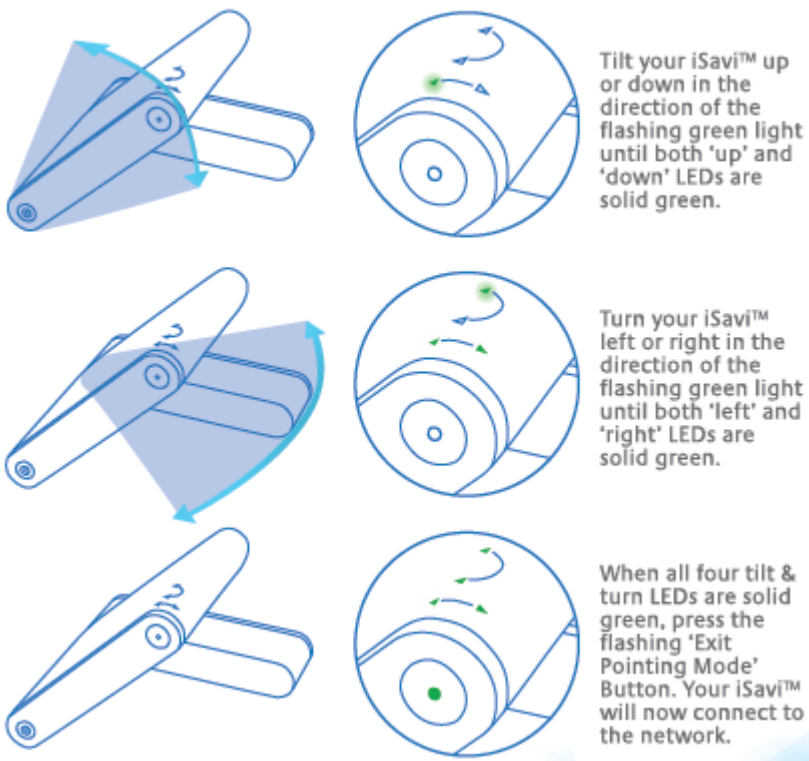

#### **Note:**

Once the network is available, all the four tilt and turn LEDs will turn off after one minute. The LEDs of 'Power' button and 'Exit Pointing Mode' button may sometimes be hard to see under bright sunlight. Use the signal strength indicator in the Control app or web console in bright environments.

If LEDs display any other pattern of illumination, please refer to [Appendix A: Antenna Pointing LED Status Table](#)



For safety reasons, never stand closer than one metre in front of your iSavi™ terminal's transceiver when it is connected to the network.

## **Audio Assisted Pointing Mode**

1. The terminal is in LED visual pointing mode by default. To switch into Audio assisted pointing mode, press and hold 'Exit Pointing Mode' button for 5 seconds.
2. The four arrow LEDs will change into flashing green pattern when antenna pointing audio mode is activated, refer [Appendix A: Antenna Pointing LED Status Table](#).
3. The beeping sound indicates the signal strength. The frequency of the beeping will become higher when the signal is stronger.
4. First, tilt the terminal up to 45 degrees from the horizontal.
5. Now turn the terminal slowly until the beeping frequency is maximized.
6. Finally, tilt the terminal up or down and fine tune the position onto further increase the beeping frequency.
7. 'Exit Pointing Mode' button will turn to flashing green when the signal strength is good enough for network registration.
8. Press the 'Exit Pointing Mode' button to exit antenna pointing mode and start network registration.
9. Once the network is registered, all the four tilt and turn LEDs will turn off after one minute and 'Exit Pointing Mode' button is green colour.

### *Note:*

*You can switch back to LED Visual Pointing Mode when the global beam is not acquired by pressing the 'Exit Pointing Mode' button for five seconds before registered to network.*

*You are recommended to use [Appendix A: Antenna Pointing LED Status Table](#) as a guideline.*

*Once the network is available, all the four tilt and turn LEDs will turn off after one minute. The LEDs of 'Power' button and 'Exit Pointing Mode' button may sometimes hard to see under bright sunlight.*

## **Antenna Pointing using the IsatHub Control app**

1. Before using this method, download the application from App Store or Google Play for iOS or Android devices respectively. Data downloaded over the iSavi is chargeable, so use a free data service to acquire these apps where possible. Refer to [GETTING STARTED](#).
2. Open the Control app with smart phone or tablet.
3. Follow the on screen instructions and press 'Pointing assist' for specific help.

## Accessing data and calls

### STEP 1

Connect to your iSavi™ over Wi-Fi by selecting it from the list of available Wi-Fi networks.

The default Wi-Fi network name (SSID) and password can be obtained from the product label on the back of the iSavi™ terminal.



**Note:**  
For your security, please change the Wi-Fi password at the first opportunity.

### STEP 2

For smart device control of your iSavi™, open the IsatHub Control app and follow the instructions presented to get started.

iOS and Android apps are available from App Store and Google Play respectively.



For control of your iSavi™ over web browser, access the web console by opening any web browser and type `http://192.168.1.35` into the address bar.



### STEP 3

To access your chosen control interface, the default credentials are:

**USERNAME: admin**  
**PASSWORD: 1234**

### STEP 4

Once your iSavi™ is connected to the network, you are ready to start making and receiving calls on any iOS or Android smart device.



The IsatHub Voice app is available from App Store and Google Play. It is advised to install the application before connecting to the iSavi™ satellite terminal.



When you first access data over the network, you may need to enter the APN username and password supplied to you with your SIM card by your service provider. Please make sure you have these available.  
Refer to the [Data Profile](#) section for the setting if required.

## STEP 5

Once your iSavi™ is connected to the network, you are ready to start a data session. Press the 'Data On' button to begin and 'Data Off' to end all connection to the Internet.



The web console provides data access through the 'Activate data connection' button on the Home page.

To stop access to data press 'Deactivate data connection'

Refer to the section [Status of Terminal](#).

### Note:

Signal strength need to be at least 42dBHz and above for an acceptable service to commence. You may check the signal strength and registration status using home page of web console or the smart phone Control app.

If the signal strength level indicated in the web console is low under registered condition, you can slowly adjust the terminal angle and monitor the signal strength displayed in web console.

Turn off the terminal by pressing the 'Power' button for five seconds.



# 3 NAVIGATING THE WEB CONSOLE

## Menu Overview




DATA	TELEPHONY	SMS	SETTING	
<a href="#">Data Profile</a>  <a href="#">Firewall</a> - Setup - Incoming Rule - Outgoing Rule  <a href="#">Device Management</a>	<a href="#">SIP Setting</a>	<a href="#">Compose</a>  <a href="#">Inbox</a>  <a href="#">Sent</a>  <a href="#">Drafts</a>	<a href="#">Accounts</a>  <a href="#">Wi-Fi</a> - System Info - Wireless Setting - Security Setting  <a href="#">SIM Security</a> -SIM PIN -Terminal to SIM	<a href="#">Terminal Settings</a> - Reboot Terminal - Factory Reset - Firmware Upgrade  <a href="#">Terminal Info</a> - Information - Logs - Call Log  <a href="#">Language</a>  <a href="#">Support</a>

## Status of Terminal

The **Home** page provides the status information of the terminal, pointing information and allows a data connection to be established.

Navigate to **Home** page in order to check for the following status:

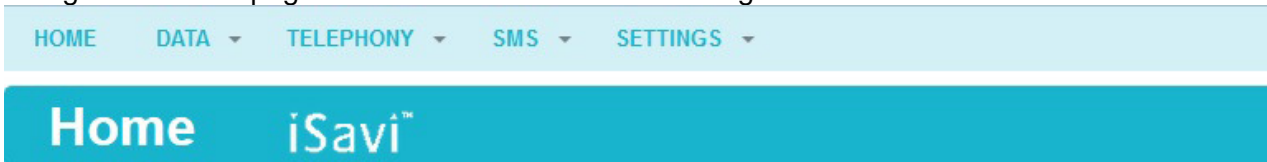

**Status:**

Registered to network - **Yes**  
 Data connection active - **No**

**Signal:**

53 dB



**GPS:**

Last acquired: Thu Jun 12 2014, 18:31:28 UTC+0800  
 Lat: 1° 20' 10.53" N  
 Long: 103° 53' 28.13" E  
 Type: 3D (NEW)

**Battery:** 56%

**Temperature:** Normal

Registered to Network but no active data connection exists. You are now able to make phone calls and send SMSs.  
 Please activate a data connection before doing any data transfer.

Status	Indicates registration and data connection status.
Signal	Indicates terminal received signal strength.
GPS	Indicates GPS information
Battery	Indicates available capacity of the battery.
Temperature	Indicates current operating temperature status.

Click “Activate Data Connection” or “Deactivate Data Connection” in order to activate or deactivate data connection.

*Note:*

*Signal strength must be 42 dB or above for the iSavi™ terminal to successfully connect or register to the network. Signal strength can be improved by pointing more accurately.*

*If the signal strength level indicated in the web console is low under registered condition, you can slowly adjust the terminal angle and monitor the signal strength displayed in web console.*

## Data

### Data Profile Setting

Navigate to **Data > Data Profile** in order to modify the connection type.

#### iSavi™ Data Profile

Set as default  
Profile Name:

---

**Access Point Name (APN):**

SIM

User Defined

**Static IP**  
Address APN Username:

**Static IP**  
Address APN Password:

Please note that the 'username' and 'password' stated above are not those used to login to the WebConsole. They are those provided by your Service Provider for static IP address subscription. If you do not have any such subscription or if you are not sure, please leave them blank.

**IP Configuration:**

Dynamic IP Address

Static IP Address

**Limited Connection:**

Time  
Duration:  minutes (10 ~ 720)

**Notification Before Expired:**  minutes (0 ~ 8)

Volume  
Traffic Volume:  MB (1 ~ 1024)

Connection profile defines the connection type. User can select from a list of profiles to be the default primary profile and connection type.

*Note: From a smart phone or tablet, the Control app will always use the connection profile defined as default*

You can create your customized primary profile.

#### **Profile Name**

Change the profile name as desired.

#### **Access Point Name (APN)**

By default, the APN from your SIM card will be selected.

Follow these steps to change the Access Point Name (APN):

- i. Select User Defined.
- ii. Enter the new APN in the field space provided (e.g. BGAN.INMARSAT.COM).
- iii. Enter the username and password if required (these details have been supplied by your service provider).

## **IP Configuration**

By default, a Dynamic IP Address is selected.

To use a Static IP Address:

- i. Select Static IP Address and enter the IP Address in the space provided.

## **Limited Connection**

You can control the data usage of the user by setup the limited connection time or volume.

*Note:*


*The data connection will be automatically deactivated when the volume had reached the defined limit.*

## Firewall Protection Setting

The firewall function is disabled by default and users need to navigate to the firewall setup page to enable it.

### Setup

Navigate to **Data > Firewall > Setup** to change the Firewall protection profile setup .

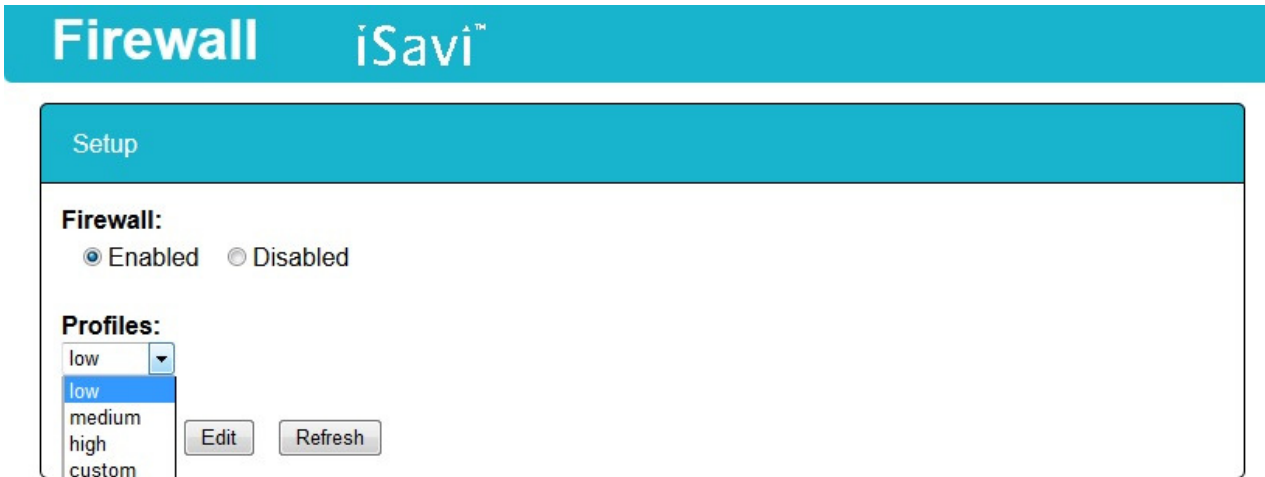

Firewall Setup

**Firewall:**  
 Enabled  Disabled


**Profiles:**  
low  
low  
medium  
high  
custom

Edit Refresh

Follow these steps to change the profile setting.

- i. Select profile name.
- ii. Click **Edit** to modify the setting.
- iii. By default, your iSavi™ accept all the incoming packets.

You can edit the profile name and define the rules to allow or reject incoming packets.

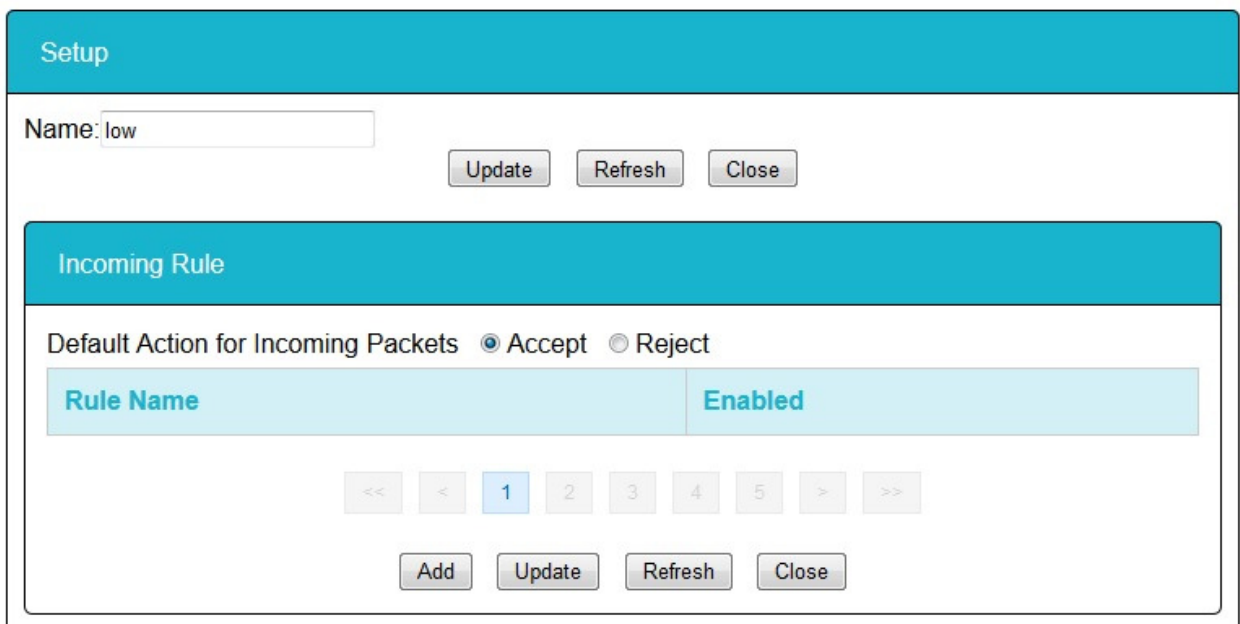

Setup

Name: low

Update Refresh Close

**Incoming Rule**

Default Action for Incoming Packets  Accept  Reject

Rule Name	Enabled
-----------	---------

<< < 1 2 3 4 5 > >>

Add Update Refresh Close

iv. By default, your iSavi™ reject all the outgoing packets

You can enable the packet by select the rule name.

Outgoing Rule

Default Action for Outgoing Packets  Accept  Reject

Rule Name	Enabled
+ FTP Data	<input checked="" type="checkbox"/>
+ FTP Ctrl	<input checked="" type="checkbox"/>
+ SSH	<input checked="" type="checkbox"/>
+ Telnet	<input checked="" type="checkbox"/>
+ SMTP	<input checked="" type="checkbox"/>
+ DNS	<input checked="" type="checkbox"/>
+ HTTP	<input checked="" type="checkbox"/>
+ POP3	<input checked="" type="checkbox"/>
+ Ping	<input checked="" type="checkbox"/>

<< < 1 2 3 4 > >>

Add Update Refresh Close

*Note: The incoming and outgoing rules in the profiles are predefined in the general rules. If you would like to add in new rule for specific profile, click **Add** and fill in the details.*

## Incoming Rule

To define general incoming rule, navigate to **Data > Firewall > Incoming Rule** to add and define up to 10 rules to allow or reject incoming packets.

### Incoming Rule

Rule Name	Protocol	Source IP Address	Source Port	Destination IP Address
-----------	----------	-------------------	-------------	------------------------

<< < 1 2 3 4 5 6 7 8 > >>

Add Edit Delete Refresh

## Outgoing Rule

To define general outgoing rule, navigate to **Data > Firewall > Outgoing Rule** to add and define up to 10 rules to allow or reject outgoing packets.

### Outgoing Rule

Rule Name	Protocol	Source IP Address	Source Port	Destination IP Address	Destination Port	Action
FTP Data	TCP	ANY	ANY	ANY	20	Allow
FTP Ctrl	TCP	ANY	ANY	ANY	21	Allow
SSH	TCP	ANY	ANY	ANY	22	Allow
Telnet	TCP	ANY	ANY	ANY	23	Allow
SMTP	TCP	ANY	ANY	ANY	25	Allow
DNS	UDP	ANY	ANY	ANY	53	Allow
HTTP	TCP	ANY	ANY	ANY	80	Allow
POP3	TCP	ANY	ANY	ANY	110	Allow
Ping	ICMP	ANY	N.A.	ANY	N.A.	Allow

<< < 1 2 3 4 5 6 7 8 > >>

Add Edit Delete Refresh

## Access Rights Setting according to MAC address

Navigate to **Data > Device Management** to set the allowed MAC address and the access rights.

MAC address is a number that uniquely identifies any device connected to a network. Once the device is connected to the terminal, the MAC address will be shown in the page.

From this page, you can also check the number of connected devices, their MAC addresses and the data usage of the terminal.

Name	MAC Address	Admin
Default Rule		
C0F8DA223F34★	C0:F8:DA:22:3F:34	

<< < 1 2 3 4 > >>

Add Edit Delete Refresh

### ★ - Device connected

Device connected: 1/128

Upload: 1.66 MB

Download: 0 byte



You can add a new MAC address by clicking **Add** or create a nickname for the existing MAC address by clicking on the **Edit** button. Data usage of the device is available in the bottom of the page.

Temporary Entry

**Name:**

**MAC Address:**

**Access Level:**  Admin

**Permissions:**  Incoming Call  
 Outgoing Call  
 Data

★ - **Devices connected**

**IP Address:** 192.168.1.40

**Upload:** 214.72 KB

**Download:** 0 byte

- i. Define a nickname for the device.
- ii. Key in the allowed MAC address (for newly added).
- iii. Check if the MAC address belongs to the smart phone or tablet used to host the Control app. Only one device is allowed to use the Control app each time.
- iv. You can define access rights selecting the relevant permission options.
- v. The settings are stored temporary and not available after terminal is rebooted. If you plan to keep the same access rights settings, deselect  Temporary entry so that the access rights are still valid even after the terminal is rebooted.

## Telephony

### SIP Setting

Navigate to **Telephony > Call Setting > SIP setting> SIP Server** to change the RTP Codec.

**SIP Settings**      iSavi™

SIP Server

<b>Server Port:</b>	5060
<b>Register Expiry Time:</b>	3600 second(s)
<b>RTP Codec:</b>	<div style="display: flex; align-items: center;"><div style="border: 1px solid #ccc; padding: 2px; margin-right: 5px;">G.711u ▼</div><div style="border: 1px solid #ccc; padding: 2px; margin-right: 5px;">G.711u</div><div style="border: 1px solid #ccc; padding: 2px;">SILK</div></div>
<input type="button" value="Update"/>	

*Note: SIP calls with the iSavi™ terminal require a special SIP client application on your smart phone or tablet. The IsatHub Voice app is available from the App Store or Google Play.*

*SIP calls from a Windows or Macintosh PC are not supported. Use of any other SIP application will not benefit from the voice connection to the Inmarsat network and may suffer technical issues in congested areas.*

## SMS

### Compose a new SMS

Navigate to **SMS > Compose** to enter compose page.

Compose iSavi™

Phone no.:

Store a sent copy in SIM

Send Save Clear Append GPS

- i. Enter the recipient's phone number in the Phone no. box. Type the message in the text editor box.
- ii. Click **Append GPS** to include the current GPS location in the SMS.
- iii. Click **Send** to send the SMS
- iv. To save an unsent SMS, click **Save** and the unsent SMS will save in **Drafts**.
- v. Check the box  if you wish to store a sent SMS into SIM card.

*Note:*

*When sending an SMS with your iSavi™ terminal you should always enter the full international phone number format for your recipient. This is true even if you are located in the same country as the recipient when sending the message.*

## View Received SMS

Navigate to **SMS > Folders> Inbox** to view received SMS.

Reply to an SMS from Inbox:

- i. Select the SMS you plan to reply to by clicking the particular SMS by clicking the
- ii. Click **Reply**.
- iii. The inbox console will switch over to **Compose** mode. Enter your reply in text box. Click **Send** to send the SMS.

Forward an SMS from Inbox:

- i. Select the SMS you plan to forward and click **Forward..**
- ii. The inbox console will switch over to **Compose** mode. Enter your reply in text box. Click **Send** to send the SMS.

Delete an SMS from Inbox:

- i. Select the SMS you plan to delete and click **Delete**.
- ii. A single SMS or multiple SMSs can be deleted based on the selection.
- iii. Click **OK** to confirm the deletion, or **Cancel** to abort.

To Refresh the Inbox list:

- i. Click **Refresh** and the list will be refreshed.

## View Sent SMS

Navigate to **SMS > Folders> Sent** to view Sent SMS.

Resend a sent SMS:

- i. Select the SMS you plan to resend and click **Resend**.
- ii. The SMS will be sent to the recipient.

Forward a sent SMS:

- i. Select the SMS you plan to forward and click **Forward**.
- ii. The Sent console will switches over to the **Compose** mode.
- iii. Enter the recipient's number in the **Phone No.** field.
- iv. Click **Send**.
- v. The SMS will be sent to the recipient.

Delete a sent SMS:

- i. Select the SMS you plan to delete.
- ii. Click **Delete**.
- iii. Click **OK** to confirm the deletion, or **Cancel** to abort.

## View Draft SMS

Stored SMS are saved inside draft folder.

Navigate to **SMS > Folders> Draft** to view Draft SMS.

### Send a draft SMS:

- i. Select the draft SMS you plan to send and click **Send**
- ii. The SMS will be sent to the recipient.

### Forward a draft SMS to other recipient:

- i. Select the draft SMS you plan to send and click **Send**.
- ii. Click **Forward**.
- iii. The draft console will switch over the Compose console.
- iv. Enter the recipient's number in the **Phone No.** field.
- v. Click **Send**.
- vi. The SMS will be sent to the recipient.

### Delete a draft:


- i. Select the draft SMS you plan to send and click **Send**.
- ii. Click **Delete**.
- iii. Click **OK** to confirm the deletion, or **Cancel** to abort.

## Settings

### Create Account for Web Console Access


Navigate to **Settings > Security > Account** to create or edit an account for Web Console and Control app access.

Only one User and one Admin account are allowed for your iSavi™.

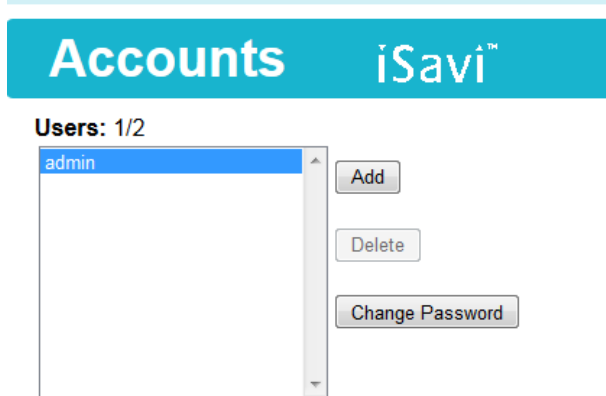

Add a new account:

- i. Click **Add**.

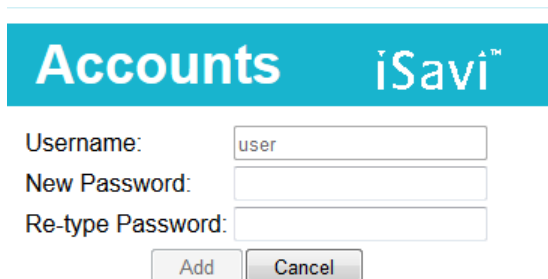

- ii. Fill in **New Password** and **Re-type Password**.
- iii. Click **Add**.
- iv. The new account will be added into the account list.

**Delete an account:**

- i. Select the account which you want to delete.
- ii. Click **Delete**.
- iii. Account name is deleted successfully it is removed from the account list.

### Change account password:

- i. Select the account which you want to change the password (example: **admin**).

Username:	admin
Old Password:	<input type="text"/>
New Password:	<input type="text"/>
Re-enter New Password:	<input type="text"/>
	<input type="button" value="Update"/> <input type="button" value="Cancel"/>

- ii. Fill in the **Old Password**, **New Password** and **Re-type Password**.
- iii. Click **Update** for the new password to take effect.

*Note:*

*SSID network name is the Wi-Fi network name that other users will see on their smart phone, tablets or personal computers when they view a list of available networks.*

*You can get the default SSID of your iSavi™ from product label.*

### Change SSID and Wi-Fi Password

Navigate to **Settings > Security> Wi-Fi> Wireless Settings** to change network mode and network name.

Wireless Settings

<b>Network Mode:</b>	802.11b ▼
<b>Network Name (SSID):</b>	<input type="text"/>
<input checked="" type="checkbox"/> Allow SSID Broadcast	
<b>Channel:</b>	Auto ▼
	<input type="button" value="Update"/>

Navigate to **Settings > Security> Wi-Fi> Security Settings** to set password of your Wi-Fi network.

The screenshot shows the 'Security Settings' page. At the top, there's a blue header with the text 'Security Settings'. Below it, the 'Security Mode' section has two radio buttons: 'Disabled' (which is selected) and 'WEP'. Under 'Disabled', there's an 'Authentication Type' dropdown menu set to 'Open Key'. Below that is a 'Default Key' dropdown menu set to '1', followed by a 'Key' text input field. Under 'WPA - Personal', there's an 'Encryption Type' dropdown menu set to 'Auto' and a 'Passphrase' text input field. Under 'WPA2 - Personal', there's another 'Encryption Type' dropdown menu set to 'Auto' and another 'Passphrase' text input field. At the bottom of the form is an 'Update' button.

Security Mode: **Disabled** or select the security mode for the wireless local area network.

Three different security modes are available:

- **Wired Equivalent Privacy (WEP)**

For 64-bit encryption - You can enter either 5 ASCII characters or 10 hexadecimal digits (any combination of 0-9, a-f, A-F, empty string is not permitted).

For 128-bit encryption - You can enter either 13 ASCII characters or 26 hexadecimal digits (any combination of 0-9, a-f, A-F, empty string is not permitted)

- **Wi-Fi Protected Access® Personal (WPA)**

You can enter 8-63 characters of keys for the password.

- **Wi-Fi Protected Access® 2 Personal (WPA2)**

You can enter 8-63 characters of keys for the password.

WPA2 is highly recommended over WEP for a higher level of security.

*Note:*

*The default SSID password of your iSavi™ is configured under WPA2 mode.*

*To help safeguard your data connection and the associated bill, please change the default SSID password printed on the product label of the your iSavi™ to your preferred password as soon as possible.*



## Configure SIM Security

### SIM PIN

If the security feature is enabled, a prompt requests you to enter the SIM PIN each time you power up your iSavi™. This helps prevent unauthorised use of your SIM. Disable this feature to skip PIN entry process.

Navigate to **Settings > Security> SIM Security> SIM PIN** to enable SIM PIN.

1. Click SIM PIN to configure the SIM PIN settings.
2. Select **Disabled** if you do not need to set the SIM PIN.
3. Select **Enabled** to set the SIM PIN.
4. Enter the PIN number in the space provided and click **Apply**.

*Note: The SIM PIN depends on the SIM card. Consult your service provider if necessary.*

The screenshot shows a web interface with a navigation bar at the top containing links for HOME, DATA, TELEPHONY, SMS, SETTINGS, and LOGOUT. Below the navigation bar is a teal header with the text 'SIM Security' and the iSavi™ logo. The main content area is titled 'SIM PIN' and contains a 'PIN' section with two radio buttons: 'Enabled' and 'Disabled'. The 'Disabled' radio button is selected. Below the radio buttons is a text input field labeled 'Enter PIN:' and an 'Apply' button.

### Terminal to SIM

Once Terminal to SIM locking is activated, your iSavi™ will prompt for the password if a different SIM Card is inserted into the terminal.

Navigate to **Settings > Security> SIM Security> Terminal to SIM** to enable Terminal to SIM PIN.

1. Click **Terminal to SIM** to configure the Terminal to SIM settings.
2. Select **Disabled** if you do not need to enable Terminal to SIM.
3. Select **Enabled** to enable Terminal to SIM locking.
4. Enter the PIN number in the space provided and click Update PIN.

The screenshot shows a web interface with a teal header containing the text 'Terminal To SIM'. Below the header is a 'PIN' section with two radio buttons: 'Enabled' and 'Disabled'. The 'Disabled' radio button is selected. Below the radio buttons is a text input field labeled 'Enter PIN:' and an 'Apply' button.

## Terminal Settings

Navigate to **Settings > Terminal Settings> Reboot Terminal** to reboot the terminal.

Reboot Terminal

Click on the button to reboot the Terminal:

Navigate to **Settings > Terminal Settings> Factory Reset** to factory reset the terminal.

Enter default security code **0000** for factory reset.

Factory Reset

**Security code:**

**NOTE:**  
Executing "Factory Reset" will reset all of the system configuration settings to default values and clear all user data from the non-volatile memory (e.g., phone book, call history, call logs, etc.).

You can also perform factory reset by referring to the following step:

- i. With the terminal off, remove the SIM card.
- ii. Press the 'Power' button for 5 seconds.
- iii. Once the 'Power' button turn into red colour, press and release the 'Exit Pointing Mode' button for 3 times.
- iv. Press and hold the 'Exit Pointing Mode' button for 5 seconds.
- v. All the LEDs will flashing in red once the factory reset is triggered.
- vi. Your iSavi™ will reboot automatically once the factory reset is completed.

Navigate to **Settings > Terminal Settings> Firmware Upgrade** to perform firmware upgrade.

Firmware Upgrade

Need to reboot in the Firmware Upgrade Mode (Safe Mode). Please do it manually if reboot failed.

**Disclaimer**

Please be informed that firmware upgrading is done at your own risk and the equipment manufacturer will not be held responsible for any possible malfunction or damage to the system due to upgrading the firmware.

If you encounter any problems or have any questions, please contact the equipment distributor for technical support.

## Firmware Upgrade

Firmware upgrade allows you to update your iSavi™ with the latest operating software.

There are two methods for upgrading the iSavi™ firmware.

### Firmware upgrade by Safe Mode over Wi-Fi

- vii. With the terminal off, press and hold 'Exit Pointing Mode' button.
- viii. Press the 'Power' button for 5 seconds.
- ix. Release both 'Exit Pointing Mode' button and 'Power' button.
- x. If the Safe Mode is enabled successfully, all the four Antenna Pointing LEDs will turn to Amber colour, refer to [Appendix A: Antenna Pointing LED Status Table](#).
- xi. Log in to Web Console by typing **http://192.168.1.35** or **http://192** into the address bar of any web browser.
- xii. Browse to the location of the new firmware, select and click **Upload**.
- xiii. Firmware upgrade will take approximately 10 to 12 minutes to complete.  
You will be prompted with the **Result: Firmware Upgrade Completed** message.

*Note: You are highly recommended to perform firmware upgrade over Wi-Fi. Firmware upgrade by safe mode over Micro USB is only required when the firmware is corrupted.*

### Firmware upgrade by Safe Mode over Micro USB

- i. With the terminal off, press and hold 'Exit Pointing Mode' button.
- ii. Press 'Power' button for 5 seconds.
- iii. Release both 'Exit Pointing Mode' button and 'Power' button.
- iv. If the Safe Mode is enabled successfully, all the four Antenna Pointing LEDs will turn to Amber colour, refer to [Appendix A: Antenna Pointing LED Status Table](#).
- v. RNDIS USB driver file is available in the USB drive which is included in the iSavi™ packaging box. You are required to copy the file into your personal computer (Windows XP or Windows 7).
- vi. Unzip the attached file and select the .inf as the driver file
- vii. Connect the Micro USB cable to your personal computer.
- viii. The USB installation should complete with a new network adapter created as USB Remote NDIS device.
- ix. Disconnect or remove any physical ethernet/ Wi-Fi connections of your personal PC and left only the Micro USB cable which is connected between your PC and your iSavi™ .
- x. Change the IP address of the USB network adapter to "192.168.1.100"
- xi. By having the USB connection, iSavi™ is accessible at "192.168.1.37".
- xiv. Log in to Web Console by typing **http://192.168.1.37** into the address bar of any web browser.
- xv. Browse to the location of the new firmware, select and click **Upload**.
- xvi. Firmware upgrade will take approximately 10 to 12 minutes to complete.
- xii. You will be prompted with the **Result: Firmware Upgrade Completed** message

## Important Information and Log File

Navigate to **Setting > Terminal Info> Information** in order to check for the detail of the terminal. You may need to supply this information when contacting your service provider.

### Event Logs and Error Logs

Navigate to **Setting > Terminal Info> Logs** to view the Event Log of Error Log of the terminal.

Click **Export all Logs** in order to export the logs.

### Call Log and Data Log

Navigate to **Setting > Terminal Info> Call Log** to view the Call Log and Data Log of the terminal

Click **Export all Logs** in order to export the logs.

## Language

Select the desired language for the Web Console. The default language is English.

## Support

Navigate to **Settings > Support** to get the contact information of your service provider's support team.

## 4 TROUBLESHOOTING AND FAQ

### Terminal Fail to Power Up

Problem	Possible Root Cause	Solution
My iSavi™ does not switch on successfully	Battery not connected properly to the iSavi™ transceiver.	Check if the battery is attached correctly. Press and hold the <b>Power Button</b> for 5 seconds.
	Battery pack is in low charge condition.	Check if the battery needs charging. Charging for 20 minutes should provide enough power to switch the terminal on.
	Battery end of life.	If the battery does not charge it has probably exceeded its useable life and you will need to replace it with a new one.

### SIM Card

Problem	Possible Root Cause	Solution
LED Situation 19: Fatal error ('Power' button LED colour turn to red)	SIM card not inserted	Ensure SIM card is inserted before turning on your iSavi™.
	Incorrect SIM card	Ensure that a correct SIM card is inserted.  Contact your service provider if you are unable to resolve the problem.
My iSavi™ and/or SIM has been lost or stolen	-	Contact your service provider as soon as possible so your iSavi™ and/or SIM can be barred

Antenna Pointing

Problem	Possible Root Cause	Solution
<p>LED Situation 14: Azimuth and Elevation are correct but low signal strength- <b>LED visual pointing mode.</b> (All the four Antenna Pointing LEDs flashing in green ; 'Exit Pointing Mode' button flashing in red)</p> <p>LED Situation 20: Global Beam is not available- <b>LED visual pointing mode</b> (All the four Antenna Pointing LEDs flashing in amber, 'Exit Pointing Mode' button flashing in red)</p> <p>LED Situation 22: GPS not available after timeout. (All the four Antenna Pointing LEDs flashing in amber, 'Exit Pointing Mode' button flashing in red)</p> <p>LED Situation 23: Global Beam not available- <b>Audio assisted pointing mode</b> (All the four Antenna Pointing LEDs flashing in green, 'Exit Pointing Mode' button flashing in red)</p>	<p>Terminal is blocked by building or wrong locating position.</p> <p>Terminal is using inaccurate or out of date GPS fix location</p>	<p>LED visual pointing mode is using magnetometer and GPS to do the pointing. When there is blockage between your iSavi™ and the Inmarsat satellite, the terminal is unable to connect to the network even though the azimuth and elevation are correct.</p> <p>Ensure your iSavi™ is placed outside with a clear, unobstructed view of the sky. Adjust the elevation so that your iSavi™ is flat, facing straight upwards. Switch the terminal on and leave for a minimum of 3 minutes. Your iSavi™ will automatically enter LED visual pointing mode once GPS coordinates are acquired. Check Web Console or Control app to check GPS fix status.</p> <p>Ensure the iSavi™ terminal is placed outside, with an unobstructed view of the sky. Tilt the Terminal flat so that it is facing straight up and leave the terminal for a minimum of 3 minutes to refresh GPS fix information.</p> <p>Switch into audio assisted pointing mode by press and hold the 'Exit Pointing Mode' button for 5 seconds.</p> <p>Contact your service provider if you are unable to resolve the problem.</p>

Refer to [Appendix A: Antenna Pointing LED Status Table](#) for LED situation.

### Antenna Pointing

<b>Problem</b>	<b>Possible Root Cause</b>	<b>Solution</b>
LED Situation 16: Registration Failure(All the four LEDs flashing in amber, 'Exit Pointing Mode' button flashing in red)	Registration time-out	Press and hold 'Exit Pointing Mode' button for 3 seconds to enter Antenna Pointing Mode again.
LED Situation 21: Magnetic interference detected. (Left and Up LEDs flashing in Red, Down and Right LEDs flashing in Amber; 'Exit Pointing Mode' button flashing in red)	Interference by electrical devices	LED pointing mode relies on GPS fix information along with the output of a magnetometer. Local electrical interference can impact the reliability of the magnetometer.  Ensure the iSavi™ is placed outside away from electrical devices or appliances that generate RF noise, and with an unobstructed view of the sky.

### Data Connection

<b>Problem</b>	<b>Possible Root Cause</b>	<b>Solution</b>
LED Situation 18: iSavi™ terminal is registered to the network but fail in data activation.	Low signal strength.  Not enough credit for prepaid card.  No access rights for internet access.	Ensure that the signal strength is good. Signal strength need to be at least 42dBHz and above for an acceptable service to commence.  If you have a prepay subscription, check your prepay balance to ensure you have sufficient credit to make a data connection.  Ensure no firewall settings are preventing access to the internet.  Contact your service provider if you are unable to resolve the problem

## SMS

<b>Problem</b>	<b>Possible Root Cause</b>	<b>Solution</b>
My Web Console cannot receive a text message	SMS inbox is full.  Some local networks do not have agreements in place to send SMS to the Inmarsat network	Maximum SMS storage is dependent on SIM card memory. If the memory is full, delete a few texts to free up memory for new messages.  Ensure the sender tries another network to send messages.

## Web Console

<b>Problem</b>	<b>Possible Root Cause</b>	<b>Solution</b>
Unable to access Web Console	Wi-Fi connection.  Wrong IP address	Make sure that there is no problem with the Wi-Fi connectivity.  Make sure that the IP address is entered correctly. <b>http://192.168.1.35</b>  Try to refresh the web page after ensuring the IP address is correct.



### Safe Mode and Firmware Upgrade

<b>Problem</b>	<b>Possible Root Cause</b>	<b>Solution</b>
Unable to enter safe mode. Terminal continues to start in normal mode.	Incorrect steps for button pressing	Ensure the 'Exit Pointing Mode' button is pressed and held. Press and hold 'Power' button for 3 seconds. Release 'Exit Pointing Mode' button and 'Power' button.
Firmware Upgrade Failure	Incorrect upgrade package/file is selected.  Wi-Fi connection is lost.  Interruption on power supply.	Ensure that correct firmware upgrade package is used.  Ensure the Wi-Fi connection is stable. Perform firmware upgrade after restarting iSavi™ terminal.  Ensure that there is no interruption of power supply during firmware upgrade. Retry firmware upgrade.

### Voice call

<b>Problem</b>	<b>Possible Root Cause</b>	<b>Solution</b>
Unable to make outgoing call	Wrong contact number.  No access rights for outgoing calls.  Not enough credit for prepaid SIM.  Wrong SIP client  Call Barring is activated.	Make sure that a correct number format is dialed including full international prefix.  Make sure the device used for VoIP calls is given the correct access rights for outgoing call functionality.  If you have a prepay subscription, check your prepay balance to ensure you have sufficient credit to make a call.  SIP calls on the iSavi™ are only supported with the IsatHub Voice app available on App Store and Google Play for Macintosh and Android devices respectively.  If the phone has sufficient signal strength and cannot make or receive calls, check if Call barring has been activated in call settings.
Unable to receive incoming call	No access rights for incoming call.  Wrong SIP client  Call Barring is activated.	Make sure that the user account is given the access right for receiving call.  SIP calls on the iSavi™ are only supported with the IsatHub Voice app available on App Store and Google Play for Macintosh and Android devices respectively  If the phone has sufficient signal strength and cannot make or receive calls, check if call barring has been activated in call setting.

## 5 CARE AND MAINTAINENCE

### Caring for your iSavi™

Your iSavi™ is a highly sophisticated electronic device. Complying with the following recommendations will help you to protect your warranty coverage and extend your terminal's life:

- Keep your terminal dry. Liquids or moisture can contain minerals that will damage electronic circuits. If your phone does get wet, dry it with a soft absorbent cloth as soon as possible, remove the battery module and allow your transceiver and battery to dry completely before reassembling it.
- The connector covers are intended to protect your terminal. Keep these covers firmly closed at all times. Ensure that the connectors are free from dust or dirt before connecting any accessory. When closing the connector cover, ensure the area around the connectors, and the rubber sealing surfaces of the cover are clean and free from dirt. Ensure that the cover is fully closed to give maximum protection to your terminal.
- Do not store your terminal in dusty, dirty or damp areas as this may shorten its life.
- Do not store your transceiver and battery in extreme cold and hot areas exceeding a certain temperature range. Storage temperature range for the transceiver is -40 °C to +80 °C (-40 °F to +176 °F) whereas for the battery it is -20 °C to +40 °C (-4 °F to +104 °F). Extreme temperatures can shorten the life of your terminal and damage the battery.
- Your terminal's operating temperature range is -25 °C to +55 °C (-13 °F to +131 °F). The charging temperature range is 0 °C to +40 °C (+32 °F to +104 °F).
- Avoid often use in high or low temperature environments. Lithium ion batteries have an optimal working and storage temperature. If they are continually used an extreme temperature environment, it will negatively affect the battery's use time and useful cycles.
- If you don't need to use your iSavi™ for a long time where the lithium ion battery might be left unused for 3 months or more, partially recharge the lithium ion battery, then store the device (recharge the battery to around 30-70% of capacity) to prevent battery damage. You may need to take the device out of storage and charge again after a few months.



# APPENDIX A: ANTENNA POINTING LED STATUS TABLE

## LED Legend


\* Flashing in sequential pattern.

Note:


Flashing LED is represented by symbol with zebra stripes

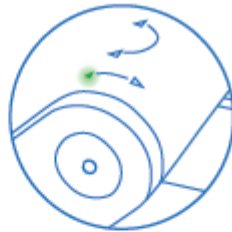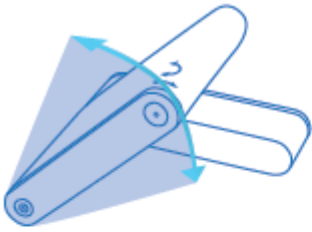

Tilt your iSavi™ up or down in the direction of the flashing green light until both 'up' and 'down' LEDs are solid green.

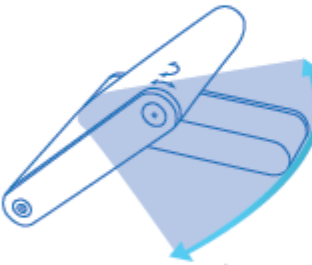

Turn your iSavi™ left or right in the direction of the flashing green light until both 'left' and 'right' LEDs are solid green.

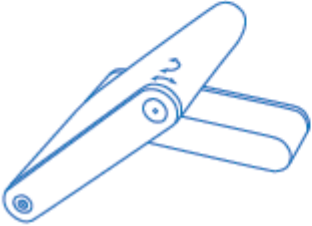

When all four tilt & turn LEDs are solid green, press the flashing 'Exit Pointing Mode' Button. Your iSavi™ will now connect to the network.


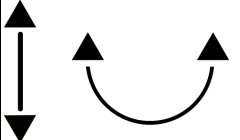
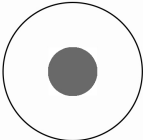

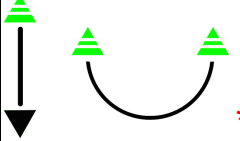
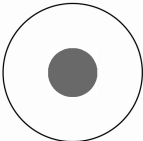
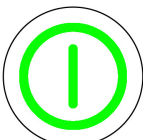
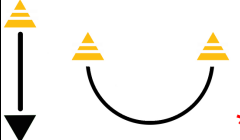
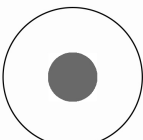
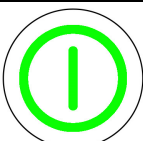
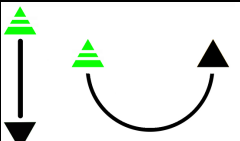
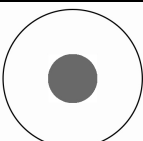
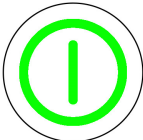
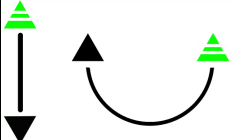
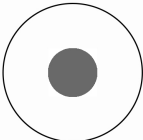
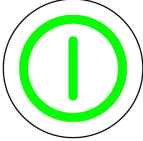
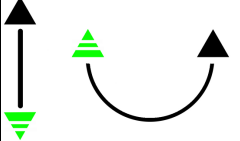
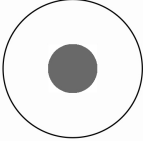
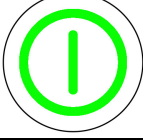
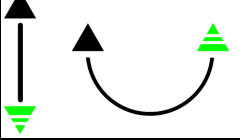
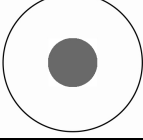
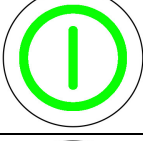
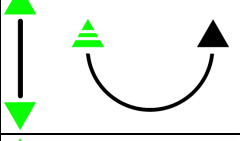
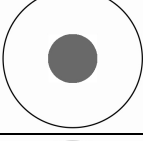
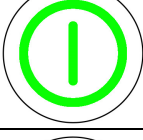
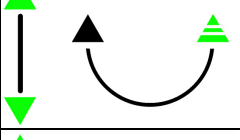
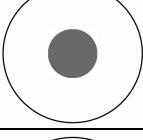

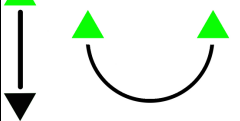
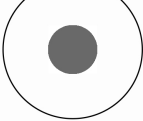
LED Legend

\* Flashing in sequential pattern

CW: Clockwise

CCW: Counterclockwise

Note: Flashing LED is represented by symbol with zebra stripes

Situation	Power Button	Arrow LED	Exit Button	Status
1				Terminal is OFF.
2				Powering up (firmware loading).
3				Acquiring GPS.
4				Tilt UP and Turn CLOCKWISE for correct pointing.
5				Tilt UP and Turn COUNTERCLOCKWISE for correct pointing.
6				Tilt DOWN and CLOCKWISE for correct pointing.
7				Tilt DOWN and COUNTERCLOCKWISE for correct pointing.
8				Elevation is correct. Turn CLOCKWISE for correct pointing.
9				Elevation is correct. Turn COUNTERCLOCKWISE for correct pointing.
10				Azimuth is correct. Tilt UP for correct pointing.

LED Legend

\* Flashing in sequential pattern

Note: Flashing LED is represented by symbol with zebra stripes

















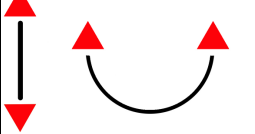
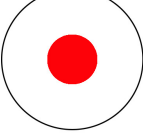
Situation	Power Button	Arrow LED	Exit Button	Status
11				Azimuth is correct. Tilt DOWN for correct pointing.
12				Azimuth and Elevation are correct. Press Exit Button to exit Antenna Pointing and register to network.
13				Registering to network.
14				Azimuth and Elevation are correct but Low signal strength. †
15				Registered to network successfully.
16				Network Registration Failure. †
17				Data activated successfully.
18				Data activation failure. †
19				Fatal Error. †
20				Global Beam is not available. †

† : Refer to [TROUBLESHOOTING AND FAQ](#)

LED Legend

\* Flashing in sequential pattern

Note: Flashing LED is represented by symbol with zebra stripes

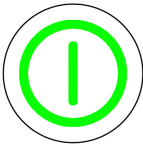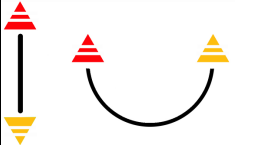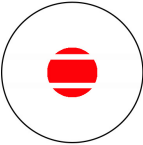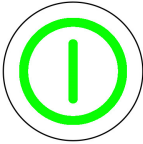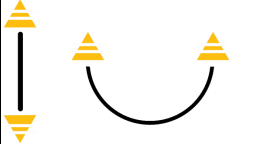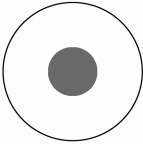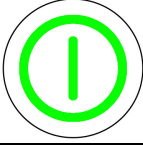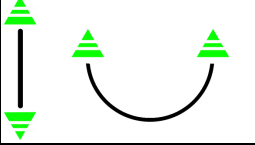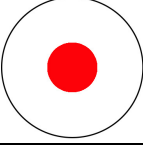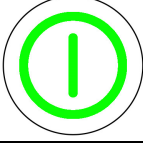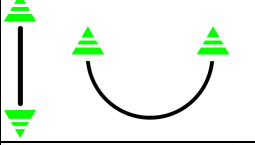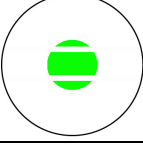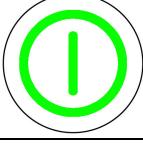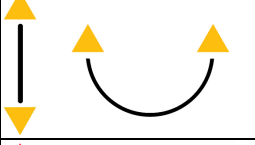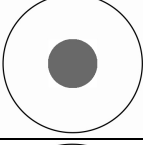21				Magnetic interference detected. †
22				GPS not available after timeout. †
23				Audio Pointing Mode ON- Global beam is not available. †
24				Audio Pointing Mode ON- Global beam is available.
25				Safe Mode is enabled.
26				Powering down.

† : Refer to [TROUBLESHOOTING AND FAQ](#)

## APPENDIX B: TECHNICAL SPECIFICATIONS

### Operating Frequency:

Satellite Transmit: 1626.5 – 1660.5 MHz and 1668 – 1675 MHz

Satellite Receive: 1518 – 1559 MHz

GPS Frequency: 1574.42 – 1576.42 MHz

Dimensions (L x W x H)	
Overall Terminal	
180 x 170 x 30 mm	7.09 x 6.69 x 1.18 in
Transceiver	
130 x 170 x 30 mm	5.12 x 6.69 x 1.18 in
Standard Battery Pack	
50 x 170 x 30 mm	1.97 x 6.69 x 1.18 in

Weight	
Overall Terminal	
900g	1.98lbs
Transceiver	
640g	1.41lbs
Standard Battery Pack	
260g	0.57lbs

### Environmental:

Operating Temperature: -25 °C to +55 °C, -13°F to +131°F (with DC supply)  
 -20 °C to +55 °C, -4°F to +131°F (with battery)

Storage Temperature: -40 °C to +80 °C, -40°F to +176°F (Transceiver)  
 -20 °C to +40 °C, -4°F to +104°F (Battery)  
 -20 °C to +40 °C, -4°F to +104°F (Transceiver with battery)

Battery Charging Temperature: 0 °C to +40 °C, +32°F to +104°F

Storage Humidity: 95% RH (non-condensing at +40 °C or +104°F)

Ingress Protection: IP65 Compliant

UV resistant

### Services

Standard IP: Up to 240/384kbps (send & receive)

SMS: Using VoIP Apps or WebMMI; Standard 3G (up to 160 characters)

Voice Connectivity: SIP server using Apps on Smart Devices

Data Connectivity: Wi-Fi 802.11 b/g/n Access Point with internal Wi-Fi Antenna

### Power Requirement

Power adaptor: 110/230 volts AC, o/p +18V, 65 watt

**Battery**

Standard:

10.8V @ 3Ah (3S1P) Li-ion Battery Pack

High Capacity (Optional accessory):


10.8V @ 6Ah (3S2P) Li-ion Battery Pack

Item	Specification
Battery Type	Lithium ion, rechargeable
Nominal Voltage	10.8V
Standard Battery Capacity	3Ah
Charging temperature	0 °C to +40 °C
Operating temperature	-20 °C to +55 °C, -4°F to +131 °F
Min. charge cycles	300
Storage Temperature	
1 month	-20 °C to +45 °C, -4°F to +113 °F
6 months	-20 °C to +40 °C, -4°F to +104 °F
1 year	-20 °C to +35 °C, -4°F to +95 °F



# APPENDIX C: ISATHUB COVERAGE MAP

## IsatHub coverage

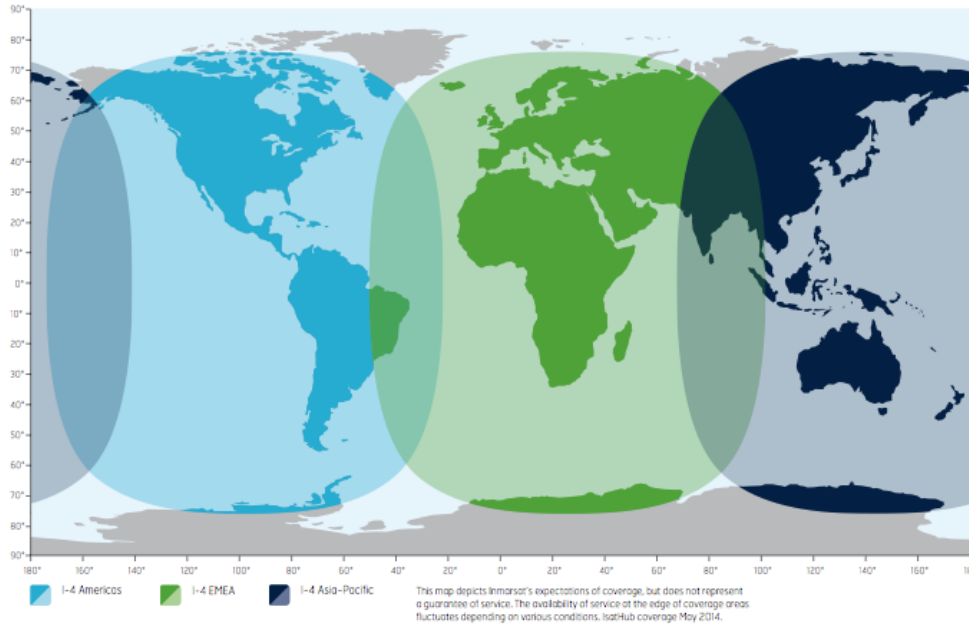


[inmarsat.com/isathub](http://inmarsat.com/isathub)



At the time of printing Inmarsat has announced that the change to the Alphasat satellite in the EMEA region has been postponed until March 2015. The coverage will change to the following when the change occurs.

## Alphasat coverage

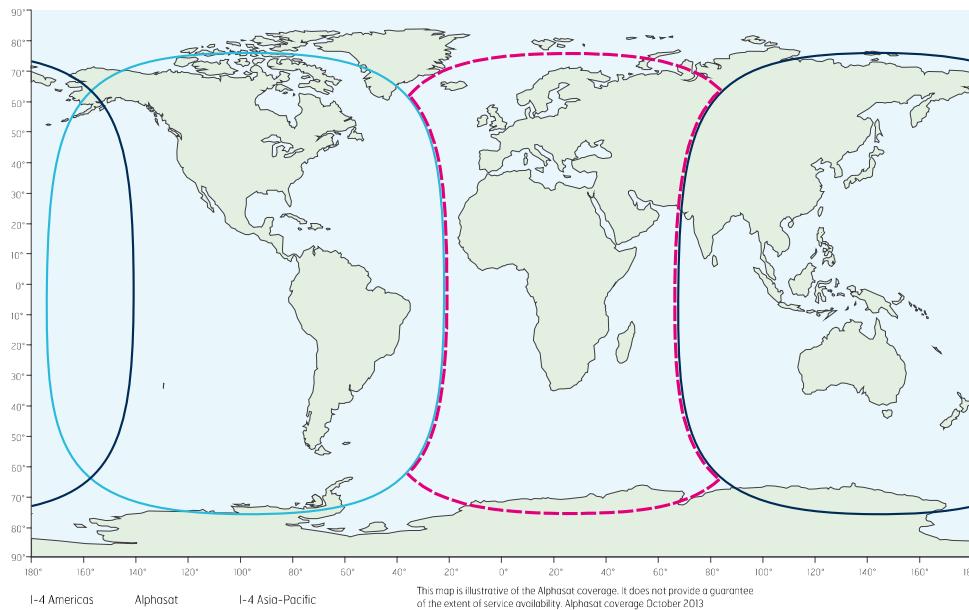

[inmarsat.com](http://inmarsat.com)

