

Wireless audio and video transmission parts

D51 User Manual

Precautions:

This accessory camera can achieve audio and video transmission. With the 2.4GHz wireless transmission, 4 frequency switching function. With Sports Camera use.



Main functions and features:

2.4G wireless audio and video transmission

4 frequency switching, 2414MHz/2432MHz/2450MHz/2468MHz

transmission distance of more than 200m

Frequency of memory function, automatic save last frequency point

Product Structure:



Position	Function	Position	Function
1	Switch open: Red Led 2.4G open indicator- Green led;	5	Red led;CH2 channel
2	CH channel select	6	Red led;CH1 channel
3	Red led;CH4 channel	7	With a video camera connected
4	Red led;CH3 channel	8	Switch

Operating Instructions:

1. Install D51 to camera。
- 2.The DV power button set to ON, open the DV power supply.
3. D51 on the power button is moved to the ON
4. According to the D51 frequency shift key, select a CH channel.
5. Open the wireless receiver power, wireless receiver CH channel and D51 channel to the same.

Attention Item:

1. Please do not use a long time to remove the D51.
2. Please keep away local high temperature, and prevent rain.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.