

 
# Quick Start Guide

Congratulations on your purchase of a mini UHD digital camera produced by AEE!


This Manual provides instructions on how to use this camera and its accessories. Please read this Manual carefully before use and keep it handy for future reference. We hope you enjoy your photo shooting experience with this product!

Due to the difference in product version, the product and its accessories you have purchased may be slightly different from those described herein. All items are offered subject to availability.

## Appearance

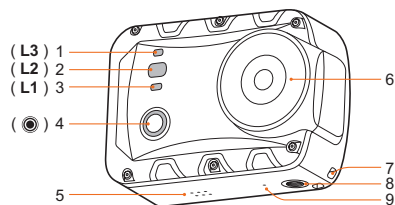


 1. Wi-Fi status indicator
2. Recording status indicator
3. Charging status indicator
4. Video/audio recording key
5. Speaker
6. Lens
7. Strap hole
8. Tripod mount
9. Microphone

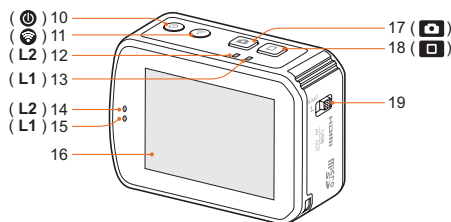

10. Power key
11. Wi-Fi key
12. Recording status indicator
13. Charging status indicator
14. Recording status indicator
15. Charging status indicator
16. TFT touch screen
17. Shutter key
18. Stop key
19. Storage cover

## > Information on Lattice Screen

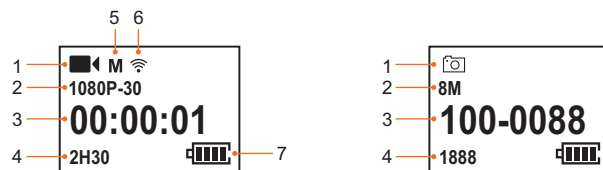 

Icon	Functions	Icon	Functions
	Video recording mode		Video resolution
	Video-only mode		Photo resolution
	Voice recording mode		Recording timer
	Time lapse mode		Number of recorded files
	Auto video mode		Remaining recordable time
	Photo in video mode		Remaining shots
	Single shot mode		View angle
	Fast shot mode		Wi-Fi
	Continuous mode		Battery level
	Timed shooting mode		

## > Description of Indicators

 
Position	L1	L2	L3
Status	Red indicator	Green indicator	Blue indicator
Video recording	/	Flash slowly	/
Audio recording	/	Flash slowly	/
Photo shooting	Stay on	Flash once	/
Charging	Flash slowly	/	/
WiFi on	Stay on	/	Flash slowly

When turn off the screen state, the TFT display indicators will be lit up. you can long press the " " key to turn on/off the screen.

## Preparations before Use

### > Memory Card

When the device is off, turn the push key on the storage cover to the "OPEN" position; then push the storage cover in the direction of arrow. Insert TF card into the memory card slot in the arrow direction flatly to the end.

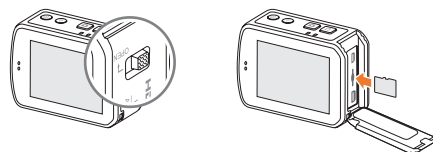


### > Power on

Long hold the " " key for about 3s; at this moment, the camera enters the video recording standby mode.

### > Charge

 To charge the device, use the supplied USB data cable to connect the camera to power supply or a USB port on your computer.

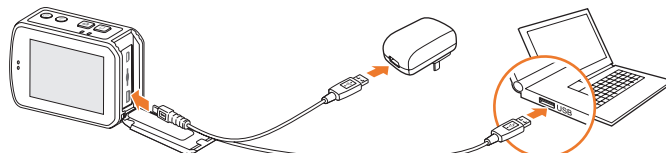

## Operations

### > Basic Operations of Touch Screen

1. Touch the display screen →  
Touch " " to enter the main menu and " " / " " to zoom in/out the view angle;
2. Main menu →  
Tap the main icon to enter the submenu; tap " " to go back to the Preview interface;



3. Submenu →  
Tap the icon to enter the Parameter Settings interface; tap " " / " " to find parameters by paging up / paging down; tap the menu bar icon " " / " " / " " to go back to the submenu;
4. Parameter Settings interface →  
Tap the desired parameter, and the system will automatically return to the previous step;
5. Playback interface →  
Press " " on the main unit to switch the file type (Video files / Photo files / All files); tap a thumbnail to expand and view the corresponding file;  
Tap " " / " " to view thumbnails by paging up / paging down;  
Tap " " to go back to the Preview interface;  
Tap " " to delete file / protect file / automatically play photos.

### > Video recording

- " " normal video recording mode:
- Press " " once; the system makes a "beep" sound, hinting the start of video recording;
  - Press " " once; the system makes two "beep" sounds, hinting the end of video recording.

### > Voice recording

- " " audio recording mode:
- Press " " once; the system makes a "beep" sound, hinting the start of audio recording;
  - Press " " once; the system makes two "beep" sounds, hinting the end of audio recording.

### > Single shot

- " " Single shot mode:
- Press " " once; the system makes a "click" sound, hinting the completion of photo shooting.

Note:

1. In the photo modes, you can press the " " key to switch to the last used video modes.
2. In the video modes, you can press the " " key to switch to the last used photo modes.
3. In the preview state, you can long press the " " key switch to voice recording mode.
4. When host in power-on state, you can long press the " " and " " key simultaneously for 3s to turn off Host. After closing the host, You can long press the " " and " " key simultaneously for 3s to turn it on.


Wi-Fi

> Enable and Connect Wi-Fi

- 1. Press the "Wi-Fi" key to switch on Wi-Fi function;
- 2. Search for Wi-Fi hot spot on a mobile receiving device, Select "AEE Magicam" network and connect it (default password: AEE12345). Then the camera and the mobile device are connected.

> APP Control Interface

After connection, you can remotely control your camera with a mobile device, so as to achieve functions like video recording, photo shooting, view angle switch, parameter setting, video cutting and sharing.

 


- 1. Total number of files
- 2. Wi-Fi status
- 3. Battery status
- 4. Remaining recording time or number of shots
- 5. Recording Duration
- 6. Video recording mode
- 7. Single shot mode
- 8. Maximize preview
- 9. Current state icon /Start / Stop key
- 10. Parameter settings
- 11. Zoom out
- 12. Zoom in
- 13. Playback mode
- 14. Fast shot mode


The Wi-Fi App is available on the Apple APP store and Google Play for free to download.

Use of Accessories

Mount plug bracket components:

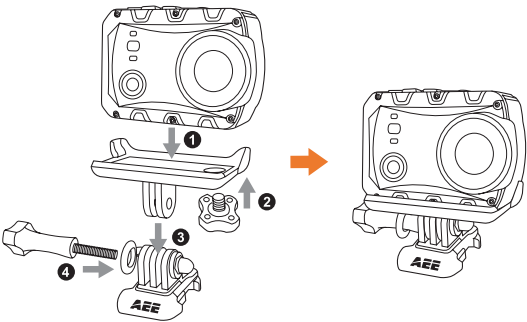


 Use curved adhesive mount and flat adhesive mount:

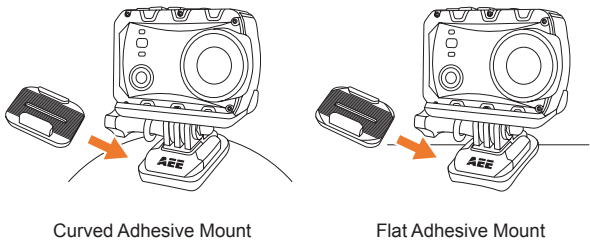

Use of Remote Control

 you can remotely control your camera with a remote control, so as to achieve functions like video recording, photo shooting, view angle switch, parameter setting.

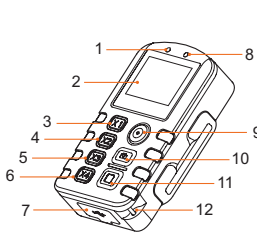

- 1. Power Indicator
- 2. Screen
- 3. Wide view key
- 4. Medium view key
- 5. Narrow view key
- 6. Small view key
- 7. USB port
- 8. Wi-Fi indicator
- 9. Power/Record key
- 10. Shutter key
- 11. Stop key
- 12. Strap hole


Key	Functions
	Long press it for about 5s to turn on/off the Wi-Fi based remote control.
⊙	Under the photographing mode, press it once to switch the current mode to the video recording mode.
	Under the video recording mode, press it once to start video recording.
	After entering the mode selection state, press it to select the option upwards.
📷	Under the video recording mode, press it once to switch the current mode to the photographing mode.
	Under photographing mode, press it once to take a photo.
	Long press it for about 2s to enter the mode selection state. Select your desired mode, and press it to enter.
⏏	During video recording, press it to stop video recording.
	After entering the mode selection state, press it to select the option downwards.
X1	Press it once to switch the viewing angle of the camera to wide angle.
X2	Press it once to switch the viewing angle of the camera to medium angle.
X3	Press it once to switch the viewing angle of the camera to narrow angle.
X4	Press it once to switch the viewing angle of the camera to small angle.

> Pairing


Before use of the remote control, please first pair it with the camera according to the following steps:

- 1. Turn on the main unit, and enable its Wi-Fi function;

 
- 2. First press and hold the "📷" key on the remote control; then long press the "⊙" key for about 5s to turn on the device; when "WAIT HOST PBC" appears on the remote control screen, release these two keys;



 - 3. Press the "📷" key on the main unit once; wait until the remote control screen shows "PRESS CONNECT";



 - 4. Press the "📷" key on the remote control again; wait until the remote control screen shows "CONNECT";




- 5. Pairing is successful when the information on the remote control screen is consistent with that on the lattice screen of the main unit.



Tips

 - 1. When the unit is in used for long period, it is natural that its surface temperature will rise.
- 2. If you will not use the unit for long period, it is suggested that you charge it once every 6th month to maintain the performance of battery.
- 3. Use of digital zooming function during shooting will have slight impact on the image quality.
- 4. The visual angles under different modes will be slightly different.
- 5. To smoothly play a high-definition video file, it is suggested to use a PC or other professional device.
- 6. If you enable cyclic recording function for long period or frequently shoot/delete photos, the memory card may have data fragments so that you may not be able to store or shoot photos. Please back up the data to external storage medium and perform formatting operation to the memory card.
- 7. When the camera works in a high-temperature environment, the lattice screen may become black, which is a normal phenomenon and will not affect its function.
- 8. When the camera is used for a long time, the temperature of the metal parts near the lens may rise, which is a normal phenomenon; please do not touch the heated metal parts.
- 9. Hot plugging is not supported; in case of white screen, please restart the camera to return to normal.
- 10. The main unit can be operated normally during charging, but this may reduce the service life of both the battery and the device.

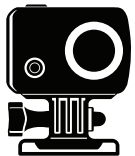

## FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC RF warning** statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.