

How to Use Correctly?



Centrally Placed



Plastic Case
thickness $\leq 4\text{mm}$



Not Placed Correctly
Crookedly Placed



Magnetic Case



Bulky Case
thickness $\geq 4\text{mm}$



Metal Ring Case



Credit Card Case

Wireless Charger

Model: RL568-1



Charging

1. Plug into the outlet
2. Once connected the LED will glow red to indicate standby mode.
3. To charge a mobile phone, place it directly on top of the charging pad with the screen side facing up. The LED will light blue to indicate the phone is charging.

Safety

1. Keep credit cards, pacemakers and other sensitive electronic devices away from the wireless charger.
2. Do not use the charger if it is wet.
3. Do not use the charger outside the safe operating temperature range of -20°C to 50°C .
4. Do not use the charger in direct sunlight or high temperatures.
5. Do not place anything between the mobile device being charged and the charging pad.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.