



Radio Controlled Vehicles

OPERATING INSTRUCTIONS:

BATTERY REQUIREMENTS (BATTERIES NOT INCLUDED.)

Vehicle: 6 X AA Batteries

Transmitter: 1 X 9V Battery

NOTE: Vehicle may be powered by most manufacturer's 9.6V Rechargeable Battery Packs.

Remove battery tray and follow Manufacturer's charging and safety instructions.

FCC NOTE:

The Manufacturer is not responsible for any Radio or TV interference caused by the unauthorized modification of this equipment. Such modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. The device may not cause harmful interference and
2. This device must accept any interference received including interference that may cause undesired operation.

ATTENTION PARENTS:

It is recommended that this Toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

HOW TO INSTALL BATTERIES IN VEHICLE:

(WHEN USING 6 X AA SIZE BATTERIES)

1. Push the ON/OFF Switch to the OFF position.
2. Open the Battery Cover.
3. Insert the "AA" Batteries into the Battery Cartridge. (See Diagram #1)
4. Replace Battery Cover.

DIAGRAM #1


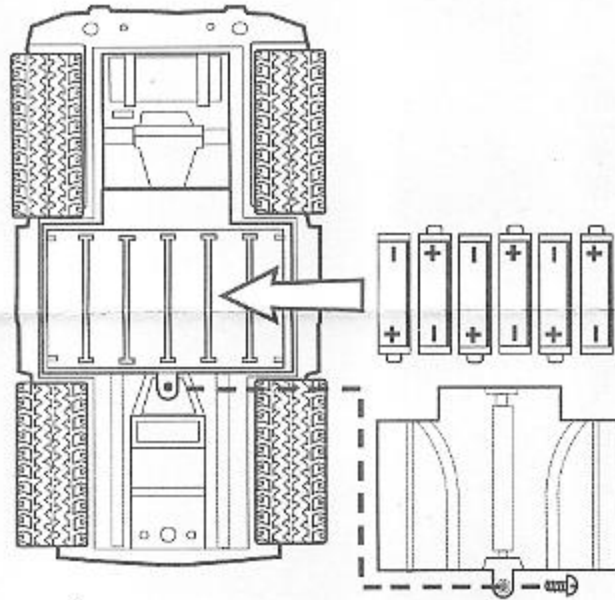


DIAGRAM #2

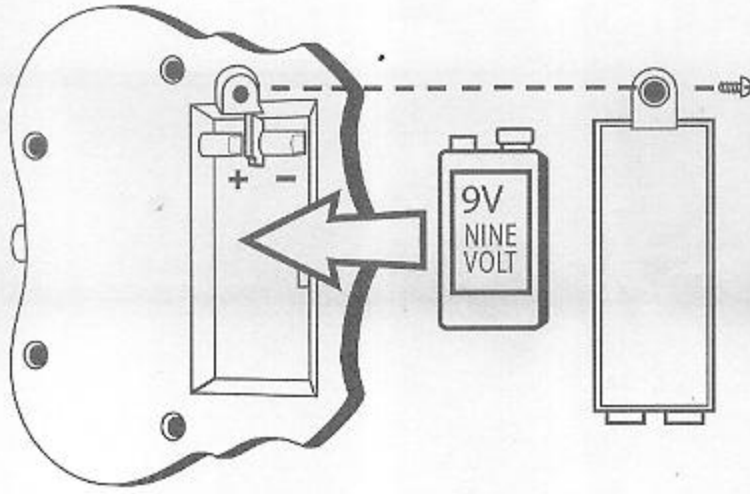

HOW TO INSTALL BATTERY IN TRANSMITTER:

(USING 1 X 9V BATTERY)

1. Remove the Screw and open the Battery Cover on the back of the Transmitter.
2. Insert a 9 Volt Battery by following the engraved symbols. (See Diagram #2)
3. Replace the Battery Cover and the Screw.

USING YOUR VEHICLE:

1. Ensure that band selector switch on remote and car are set to the same number.
2. Turn power switch to "ON" position.
3. Use Controller to operate vehicle.
4. After operation, turn off car and remove batteries.

NOTE: REMOVE BATTERIES AFTER YOU HAVE FINISHED USING YOUR VEHICLE.

PERFORMANCE TIPS:

- * Use fresh Alkaline Batteries.
- * Do not drive through Water.
- * Do not drive in Grass, Sand or Carpet.
- * Be sure to rest Vehicle for 30 Minutes after every 15 minutes of operation.
- * Electrical, CB interference, Mobile Phones, Air Conditioning, Elevators and Steel Girders in building will affect the Vehicle operation.
- * Do not leave the Vehicle or Transmitter near a source of heat or under direct Sunlight for long periods of time.
- * Make sure ON/OFF Switch on your Vehicle is "OFF" when not in use.
- * Remove the Batteries from the Vehicle and Transmitter when not in use.