



Radio Controlled Vehicles

OPERATING INSTRUCTIONS:

REMOVE TRY ME WIRE

REMOVE AND DISCARD THE FLAT WIRE CONNECTED
FROM THE CONTROLLER TO THE VEHICLE



RECHARGE THE BATTERY AFTER THE PURCHASE

BATTERY REQUIREMENTS

Vehicle: 9.6V Rechargeable Battery Pack w/ Charger

Transmitter: 1 X 9V Battery

Battery Charging (See Diagram #1)

1. Plug the wall pack battery charger into the wall outlet
2. Connect the cables leading from the battery pack and the charger together by snapping the jack and socket tightly.
3. To disconnect cables, press down and on the clip and pull apart
4. Charge the battery for 4 hours. Caution the Battery will be hot.
5. After use the battery pack will be hot , please allow 20 minutes to cool down before use.

RECHARGE THE BATTERY AFTER THE PURCHASE

USING YOUR VEHICLE: (See Diagram #3)

 
1. Ensure that band selector switch on remote and car are set to the same number.
2. Turn power switch to "ON" position.
3. The left thumbstick controls the forward and reverse function of the car
4. The right thumbstick controls the steering of the car.
5. The Left bottom button controls the rear hydraulics
6. The Right bottom button controls the front hydraulics
7. The middle button controls the powered Spinners
8. The bottom center button controls all functions together.

The function of the 4 buttons in diagram #3
will automatically stop after several seconds.
The buttons will have no response when
performing the function.

STREET BEATZ ITEM no. 00205

MADE IN CHINA

DIAGRAM #2

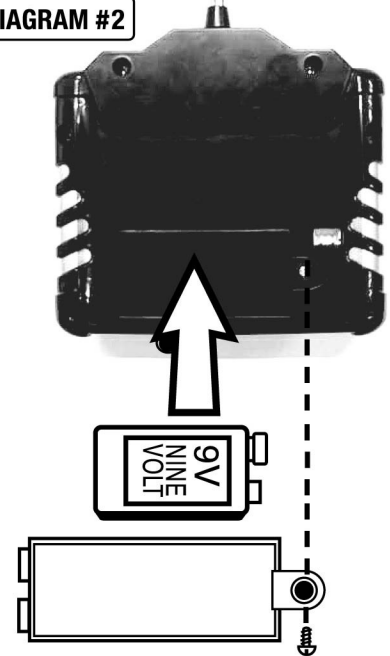 


 
HOW TO INSTALL BATTERY
IN TRANSMITTER:

(USING 1 X 9V BATTERY)

1. Remove the Screw and open the Battery Cover on the back of the Transmitter.
2. Insert a 9 Volt Battery by following the engraved symbols. (See Diagram #2)
3. Replace the Battery Cover and the Screw.

DIAGRAM #3

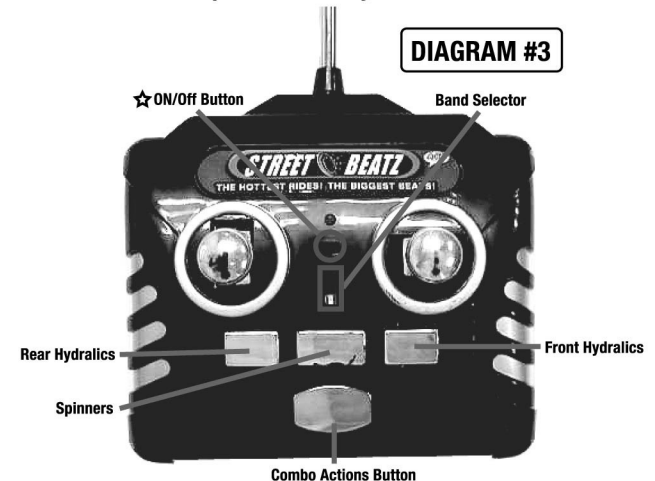

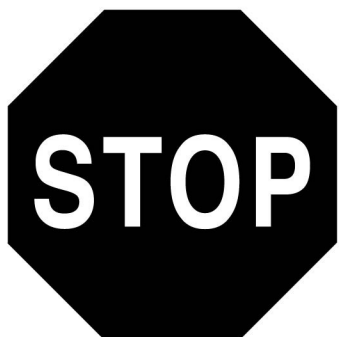**CAUTION****ELECTRICALLY OPERATED OBJECT**

- * RECHARGEABLE BATTERIES ARE TO BE CHARGED AND INSTALLED BY An ADULT ONLY
- * Battery and Charger should be inspected regularly for damage .
- * Adult Supervision is recommended when this vehicle is being operated.
- * Do not pick up your vehicle while in motion
- * Keep fingers and hair away from the wheels
- * Do not drive this on the street!

ATTENTION PARENTS:

It is recommended that this Toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

FCC WARNING:

The Manufacturer is not responsible for any Radio or TV interference caused by the unauthorized modifications of this equipment. Such modifications could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. The device must not cause harmful interference.
- 2: This device must accept any interference received, including interference that may cause undesired operation of the device.

PERFORMANCE TIPS:

- * Use fresh Alkaline Batteries.
- * Do not drive through Water.
- * Do not drive in Grass, Sand or Carpet.
- * Be sure to rest Vehicle for 30 Minutes after every 15 minutes of operation.
- * Electrical, CB interference, Mobile Phones, Air Conditioning, Elevators and Steel Girders in building will affect the Vehicle operation.
- * Do not leave the Vehicle or Transmitter near a source of heat or under direct Sunlight for long periods of time.
- * Make sure ON/OFF Switch on your Vehicle is "OFF" when not in use.
- * Remove the Batteries from the Vehicle and Transmitter when not in use.

FOR PROPER VEHICLE OPERATION,
THE BAND SELECTOR ON THE CAR MUST BE SET
TO THE SAME POSITION AS THE BAND SELECTOR
ON THE CONTROLLER.

SET TO SAME POSITION!

