

H08001 操作说明书

H08001 User Guide

IMPORTANT INFORMATION REQUIRED BY THE FCC

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT

一、功能操作说明：

一、Operation:

- 1、开机：在发射器的点烟器上接上 12V 直流电压即可开机。

Turn On: Connects 12V DC power supply to cigarette lighter

- 2、接上 IPOD、海尔 ibiza 数码播放器或从音频输入接口输入音源即可发射传输信号。

Connects to iPod、Haier ibiza of media player or other sound sources

- 3、按向下调整频率键可向下调整发射频率(频率范围：88.1MHz~107.9MHz)。

Press "Frequency Forward" button to choose the frequency ranging from 88.1MHz ~ 107.9MHz

- 4、按向上调整频率键可向上调整发射频率(频率范围：88.1MHz~107.9MHz)。

Press "Frquency Backward" button to choose the frequency ranging from 88.1MHz ~ 107.9MHz

- 5、按预存频率切换键可切换预存频率并发射（预存频率：88.1MHz,88.9MHz,94.9MHz,107.9MHz）

Press "Preset Frequency" switch to changeover the frequency and start transmission (Preset Frequency: 88.1MHz,88.9MHz,94.9MHz,107.9MHz)

- 6、按 LCD 背光开/关键可打开或关掉 LCD 背光灯。

Press "LCD Backlit On/Off" button to turn on or turn off the backlit

二、按键说明图：

Overview

