

 
◆ Answer Call

In case of incoming call on phone, the system will automatically switch to Bluetooth HF interface. Touch [] or [] on the panel to answer or reject. During call, touch [Call Switch] slightly to switch between vehicular speaker phone and mobile phone. Press hang up key after call to return to the previous model.



◆ History


Touch [History] icon to enter the interface as shown below:

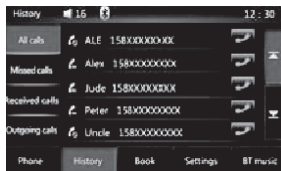

[All Calls] : to check all calls
 [Missed Calls] : list of missed calls
 [Received Calls] : list of received calls
 [Outgoing Calls] : list of outgoing calls
 [] [] Press the icon to check call history.

◆ Address Book


Click [Address Book] icon and the interface is as shown below:

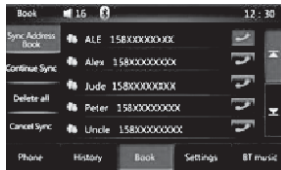

1. Click [Download All] and then click [Download] or [Cancel] to download all phone numbers to the system. Click [Pause and Resume] to continue downloading all.
2. Click [Pause and Resume] key to continue downloading All numbers since the last number of last time.
3. If any call history, click [Delete All] to delete all numbers.
4. During downloading all, click [Stop Download] key to
 - ① Stop the current phone number downloading;
 - ② When download stopped, click [Pause and Resume] again continue downloading.

◆ Settings


Click [Settings] icon on main menu and the interface is as shown below:

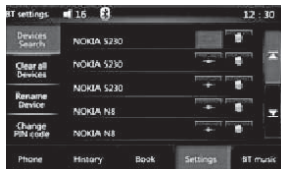

1. Click [Devices Search] to display device name: Honda-HFTPIN Password: 0000
Begin to ...10,
Click [Cancel] to return to main interface of settings.



To display Bluetooth devices and [Connect/Disconnect] icon; To display [Clear All Devices].
 Bluetooth device connection is as shown below:

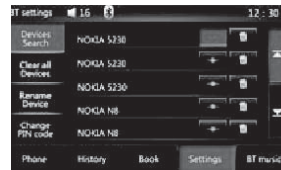

Bluetooth device disconnection is as shown below:



2. Click [Clear All Devices] icon to clear all device record.
3. Click [Change PIN Code] icon to change to new PIN code: 8888




Click [Remove] to delete all numbers entered.
 [] click it to delete numbers entered one by one.
 [OK]: to confirm password setting
 [Cancel]: to cancel the setting and return to setting menu.



[Remove]: to clear all letters entered; [] delete letters one by one; [OK]: to confirm new name;
 [Cancel]: to cancel the setting and return to setting menu

◆ Bluetooth Music

When Bluetooth music is connected and matched, if phone is provided with Bluetooth music play function, it will switch phone audio into vehicle speaker system to play music in phone. Click [Bluetooth Music] to enter Bluetooth music play interface as

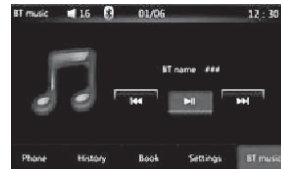

[] Previous; [] Play/pause; [] Next

7. USB

The video file format that can be played back on this unit are MP4, DOLBY, H264, Xvid, AVI, MPEG1/2, MOV, FLV, RealVideo, MKV and M4V.

Files protected by DRM (Digital Right Management) or other files with some of copyright protection, cannot be played back on this unit.


When USB disk memory does not support a format, it will automatically skip it.

◆ Plug/unplug USB Disk

Plug U disk with media information into USB interface.

◆ Enter USB Disk Play Model


Click [USB] icon on screen to enter USB interface as shown below

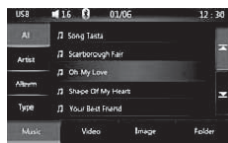

When USB disc is read, its play model is the same as data disc.

◆ Music

Enter music menu to select according to menu category, e.g., All, Artist, Album, and Type as shown below:

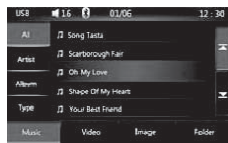

[All]: to enter all song list to play in song order;

[Artist]: to enter artist list to play in artist order;

[Album]: to enter album list to play in album order;

[Type]: to enter type list to play in type order.

Enter music menu as shown below:



[⏮]: fast backward

[⏸]: to pause when playing;

When paused or stopped, press the icon to play again.

[⏭]: fast forward


[Random]: to random play songs in disk.

[Cycle]: to cycle play the current song. In random model, Press [Random] again to cancel it and then all songs will cycle play.

[EQ]: to switch among the following models: Classic, Soft, Standard, Rock, Pop, Live and Dance.

◆ Video

Click [Video] to switch to video list interface as shown below:

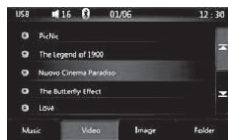

[⏮] [⏭]: to scan video list up and down.

Click video document and enter video play interface as follows:



◆ Picture

Click [Picture] icon and enter picture list interface

[⏮] [⏭]: to scan picture up and down as shown below:



[⏮]: previous picture

[⏸]: to pause picture display

[⏭]: next picture

[🔄]: rotate picture;

Rotate picture by 180°. When rotating,

The screen will not play the next one automatically.

[🔍]: to zoom in picture

[🔍]: to zoom out picture

as shown below:



◆ File

Press [File] to enter file selection interface as shown below:



Press [Back] on panel to return to the previous menu and

click to select song;

Click [⏮] to turn page upward;

Click [⏭] to turn page downward;

Click [File] icon to enter file list.


8. iPod

When iPod player is connected, the system can play audio and video file in iPod.

◆ Enter/Exit

Slightly touch menu and then touch


[iPod] to enter iPod interface as shown below:

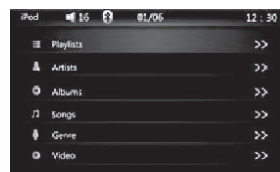


iPod cable can connect phones upto iphone 4s only. In case of above model please purchase connector from dealer.

- [Play] : click it to play songs in list order
- [Artist] : click it to play songs in artist order
- [Album] : click it to play songs in album order
- [Song] : click it to play songs in song order
- [Style] : click it to play song in style order
- [Video] : click it to play songs in video order
- Touch [iPod] icon to enter main interface and touch other function icons to exit.


[Play] : click it to enter another menu as shown below:

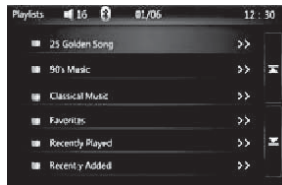

- [▲] : click it to select the previous list
- [▼] : click it to select the next list
- [Song] : click it to enter another menu as shown below:

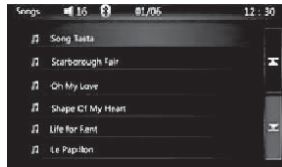


Click to enter song play menu as shown below:

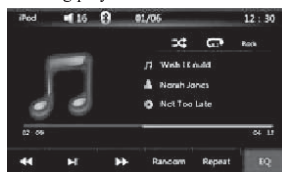

- [↻] : mean random play
(Controlled by [Random] key. If no mark displayed, it is to play in order)
- [Cycle] : mean cycle play
(Controlled by [Cycle] key. There are single cycle and non-cycle)
- [◀◀] : click it to play the previous song;
- [||] : click it to pause song;
- [▶▶] : click it to play the next song;
- [Video] : click it to enter video menu as shown below:



Click to enter video play menu as shown below:

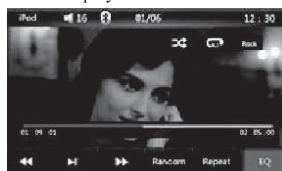


- [↻] : mean random play
(Controlled by [Random] key. If no mark displayed, it is to play in order)
- [Cycle] : mean cycle play
- [EQ] : to set sound effect in the following order:
Standard→Rock→Pop→Live→Dance→Classic→Soft to display effect change


- [◀◀] : click it to play the previous video;
- [||] : click it to pause video play;
- [▶▶] : click it to play the next video.

9. AUX

Click [AUX] to enter AUX interface as shown below:

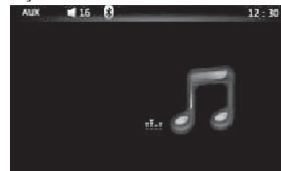

10. Remote Control

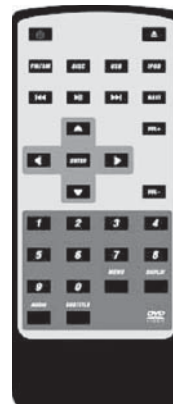

- | Function | Description |
|----------|------------------|
| [Power] | : standby switch |
| [DVD] | : DVD slot |
| [VOL+] | : volume up |
| [VOL-] | : volume down |
| [FM/AM] | : Radio |
| [DISC] | : Disc |
| [USB] | : USB |
| [NAVI] | : Navigation |
| [IPOD] | : iPOD |

- [◀◀] : Previous: corresponding to all with [◀◀] "
- Press the key, if the current interface has the icon [||], it will trigger relevant function.
- [||] : Play/Pause: corresponding to all functions with the icon. Press the key, if it has the icon [||], it will trigger relevant functions.
- [▶▶] : Next: corresponding to all with [▶▶] "
- Press the key, if the current interface has the icon [▶▶], it will trigger relevant functions.
- [▼] : USB, IPOD, DISC cursor to move down \ DVD MENU to move up.
- [▲] : USB, IPOD, DISC cursor to move down \ DVD MENU to move down
- [◀] : return to USB, IPOD, DISC list \ DVD MENU to move left
- [▶] : Return to USB, IPOD, DISC list \ DVD MENU to move right
- [ENTER] : Select USB, DISC list to trigger \ DVD MENU


- [1] Confirm DVD number to select CHAPTER
- [2] Confirm DVD number to select CHAPTER
- [3] Confirm DVD number to select CHAPTER
- [4] Confirm DVD number to select CHAPTER
- [5] Confirm DVD number to select CHAPTER
- [6] Confirm DVD number to select CHAPTER
- [7] Confirm DVD number to select CHAPTER
- [8] Confirm DVD number to select CHAPTER
- [9] Confirm DVD number to select CHAPTER

Menu: DVD Menu
 Display: DVD DISPLAY
 Audio: DVD Language
 Subtitle: DVD Subtitle

11. Setting Functions

◆ Key Tone

Click [Setting] on main menu to enter [Setting] interface as shown below:

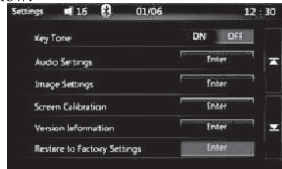

Set to [ON] to open key tone;
Set to [OFF] to close key tone;

◆ Audio Settings

Click to select audio model: Standard, Rock, Pop, Live, Dance, Classic and Soft.
Default: Standard

◆ Sound Field Adjustment

Click [Sound Field Adjustment] key to enter sound field Adjustment interface as shown below:



Click [Center] key to default center position.

[High Pitch] [-] or [+]: adjust high pitch up or down


[Low Pitch] [-] or [+]: adjust low pitch up or down.

[Center]: adjust sound effect center to physical center point.

Press up/down/left/right, and red point will move for one unit to that direction.

◆ Image Setting

In "Image Setting" key in setting menu, click [Enter] to enter image setting menu as shown below:

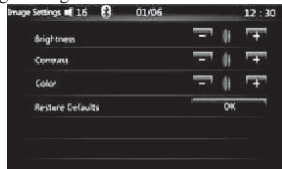

In image setting menu, brightness, contrast and color parameter can be adjusted, and it also can restore defaults.

1. Brightness

Click [-] or [+] to adjust to proper brightness:

① When brightness down, screen turns dark;

② When brightness up, screen turns bright;

③ Brightness cursor moves correspondingly

2. Contrast

Click [-] or [+] to adjust to proper contrast:

① When contrast down, screen contrast turns small;

② When contrast up, screen contrast turns big;

③ Contrast cursor moves accordingly.

3. Color

① When color down, color saturation down and screen turns dark;

② When color down, color saturation up and screen turns bright;

③ Color cursor moves correspondingly.

4. Default Settings

When contrast, brightness an color of image setting are not default, Click [OK] to restore image default.

◆ Screen Calibration

Slightly and accurately click cross cursor according to tips, and system will return to the previous interface after calibration. If not, repeat the operation as shown below:



When touch panel is insensitive or drifting, touch panel shall be calibrated for its area range.

Operation method: when the system starts, at certain screen will appear:

Click [Enter] to enter calibration screen and one white

interface will appear; according to word tips on top screen,

click cross cursor slightly and accurately by hand or pen.

When calibration is finished, cross cursor will disappear.


Within 30 seconds counter down time, click screen center

to ensure to store calibration data, or else the calibration is invalid. See picture on top right corner:



◆ Version Information

Click [Enter] to enter version information interface as shown below:

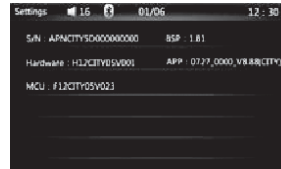

◆ Version Information

Click [Enter] to enter [Restore to Factory Setting] interface as shown below:



Click OK or Cancel the operation.

12. Reversing Function Operation

The system is provided with reversing video. When reversing the car, the system will automatically turn to reversing image interface.

13. Online map upgrade

Device ID number and existing Map card require.
Device ID is visible by visiting setting/folder.
Updated Map link get shared through your email after online charge payment.
Downloading and saving of Map should be on same Genuine SD card.

MMI Support team:
Call- 09910007103/09999333223/4
Mail-support@mapmyindia.com

Please visit below web link for more details:-
<http://www.mapmyindia.com/in-dash-avn/maps/coverage>
<http://www.mapmyindia.com/in-dash-avn/maps/map-update>

1. Map update process will be additional activity and cost of Single map update is INR 1800/- for Honda end user for update from dealer/website.
Map can be updated from Map My India Service center also.
2. In case of theft of SD Card customer needs to purchase a new SD Card and it shall cost 3000/- INR.
But, in case it has damaged/corrupted it shall be replaced FOC by Alpine India ON REPRODUCING DAMAGED SD CARD.



IV. Maintenance and Troubleshooting

How to Use Screen Correctly

Application Notes

- ⚠ Don't keep in high temperature for long time.
- Please keep direct sunlight away from the screen when it is not used.
- Please use the screen in the temperature range:
Operating temperature: -20~+70
Storage temperature: -40~+85C
- Please don't use sharp objects. Please be sure to click the screen by hand or else it may bring scratches to the screen.

Screen Picture

- There may be small black dot or flashing point (bright spot) on screen. This is the special phenomenon of screen, but not fault.
- If bright light shines directly at screen, screen will be vague for light reflection.

Maintenance

- Before cleaning dust or stain on screen, please shut off power first and then wipe screen by soft cloth.
- Please be careful to avoid screen scratched by nail when wiping screen, or else, it will be hard to get clear image.
- Please do not use wet cloth, versatile oil or thinner to wipe screen.

How to Use Screen Correctly

Notes for Disc Operation

- Do not use disc with crack and stain or bended



- Do not use irregular (non circular) disc to avoid any fault.



Only 12cm disc to be inserted.

- Do not touch burned surface (the surface with colorful gloss) when operating disc. Do not damage disc.
Do not paste paper or tag on disc.



Tips In consideration of product design, if there is any scratch / fault on surface of disc, this is not product fault.

Maintenance

- If disc is attached with dust, please wipe it by clean soft cloth inside out. Do not use oil or thinner. In addition, do not use antistatic agent.



Notes for Storage

- Tips** • Do not store in direct sunlight or high temperature.
• Please be sure to place into disc box to Avoid bending.

Environment to Play Disc

- During vehicle driving, it may be impossible to read disc data correctly due to vibration.
- If disc is played immediately after radiator is started at low temperature, it may be impossible to play disc as normal due to lens or disc condensation (condensation effect). And now, please wait for about 1 hour until dew evaporated and then wipe disc with soft cloth.
- When the product temperature rises, protection effect will be functional and some functions will stop.