

User's Manual


Product name : TRANSMITTER ASSY KEYLESS

Type : TWB1G721

This unit is installed in vehicle. It performs communication with keyless unit by LF, processes RF signal from keyless unit, and performs actions according to the signal.

Immobilizer Function

Unit Assy Immo&Keyless communicates with the transponder in the hand unit when the user inserts the hand unit in the key cylinder, and it rotates

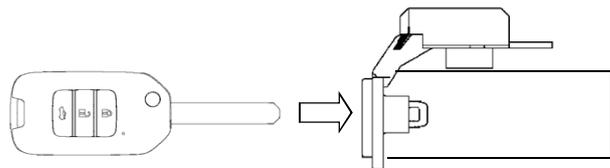


HUND UNIT

UNIT ASSY IMMOBI&KEYLESS

Keyless Function

When the user pushes LOCK, UNLOCK, and the TRUNK button of HAND UNIT, the RF electric wave is output, and IMMOBI UNIT receives it, and an open lock, the close lock of the door, and the signal of the trunk opening are output.

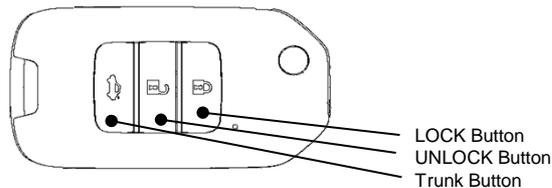

Operation Voltage	typ. 3.0V / max 3.3V
Battery	Lithium battery CR2032
Operating temperature range	-20~+60 degree C Keyless -40~+85 degree C Immobilizer
Weight	0.056kg
Operation of frequency	RF : 433.92MHz LF: 125kHz

■ CAUTION ■

Pay attention to the following.

- It may not be operated when using the equipment of the same frequency band in the vicinity.

Please DO NOT the following. Engine is not started by failure of electronic parts. (Product can not receive the signal correctly)

- Give a shock.
- Get it wet. If it got wet, wipe and dry up.
- Disassembly and modification.

This device complies with Part 15 of FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.