

Blu-Fi X7




User Manual

Instructions


- All the instructions should be read **carefully** before operation and follow the instructions.
- The speaker should be situated away from heat sources such as radiators, with proper ventilation, and not exposed to moist air or water.
- Place the unit on a **stable** surface, out of reach of children.
- The speaker should be connected to a power supply **only** of the type described in the operating instructions.
- The user should **not** attempt to repair the speaker. Contact nearest **Bluet Service Center** for assistance.
- Switch the main power off before cleaning the unit. **Only** use soft cloth to finish (polished or chrome) to clean, as it will damage the surface finishing.
- The power indicator of the speaker should be **unplugged** from the outlet and power switch should be off when left unused for a long period of time.

Packaging List

- Remote Control.....1pc.
- Speaker.....1pc.
- User Manual.....1pc.
- Stereo Audio Cable.....1pc.
- USB Charging Cable.....1pc.

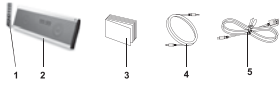


Description Of The Control Buttons

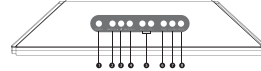


1. **Power**: Long press the button to Power On/Off the speaker.
2. **[+/-] VOLUME**:
 - **USB Bluetooth MODE**: Single press to adjust previous track; Long press to fast forward.
 - **Bluetooth MODE**: Single press to adjust previous track.
 - **FM MODE**: Single press to select previous saved FM channel; Long press to scan previous available FM channel.
3. **[+/-] FM/FM MODE**:
 - **Bluetooth MODE**: Single press to Play/Pause the speaker; Long press to toggle between USB Bluetooth mode only (both are connected).
 - **Bluetooth MODE**: Long press to Play/Pause or Pause/Play/Stop.
 - **Bluetooth MODE**: Single Press to Repeat an increasing **[▶▶]** or decreasing connection with paired device.
 - **FM MODE**: Single press to automatic scan; Long press to auto scan FM channels.
 - **AUX MODE**: To mute / unmute the speaker.
4. **[+/-] LIGHTS**:
 - **Bluetooth MODE**: Single press to adjust track; Long press for fast forward.
 - **Bluetooth MODE**: Single press to adjust track.
 - **FM MODE**: Single press to select next saved FM channel; Long press to scan next available FM channel.
5. **[VOL+/-]**: To decrease/increase the volume of the speaker; auto change volume while playing FM/radio.
6. **[TIME]**: To change time.
7. **[ALBUM]**: To set album.
8. **[MODE]**: To toggle between AUX, USB, Bluetooth, Bluetooth and FM Radio mode.

Description Of The Rear Panel

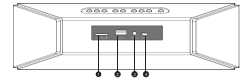


1. **Micro USB**: To connect Micro SD as source.
2. **USB**: To connect USB pen drive as source.
3. **AUX**: To receive input from PC, MP3, MP4, and MP5, etc.
4. **AC DC Micro USB**: To charge the speaker using Micro USB cable from PC or USB power AC USB charger.

Description Of The Remote Control

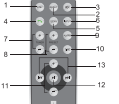

1. **POWER**: Press to switch between Standby and operating mode.
2. **RESET**: Press the speaker volume to switch **[▶▶]**.
3. **[+/-]**: To turn mute/unmute the volume of the speaker (USB, Bluetooth, AUX & FM input).
4. **[▶▶]**: Single press to Repeat an **[▶▶]** should press to Repeat an increasing **[▶▶]** or decreasing connection with an device (Bluetooth, Micro SD).
5. **[▶▶]**: Play/Pause Press the button to Auto Start **[▶▶]** the available FM channel. (Bluetooth Mode, Press once to switch between USB Bluetooth/Play/Pause/Stop of both are connected).
6. **[▶▶]**: To toggle between AUX, USB, Bluetooth, Bluetooth and FM Radio mode.
7. **TUNER**: +/- To get Next/Previous available FM channel.
8. **ALBUM**: +/- To select Next/Previous saved FM channel.
9. **ALBUM**: To set album.
10. **[▶▶]**: To set album.
11. **[VOL+/-]**: To decrease/increase the volume of the speaker; and to change volume while playing FM/radio.
12. **[▶▶]**: To Play/Pause the track in USB/Bluetooth/Bluetooth mode and **[▶▶]** as mode button in AUX and FM mode.
13. **[▶▶]**: Short press to select Previous track back USB/MicroSD/Bluetooth mode and Long press to Repeat: read Repeat the song in USB/Bluetooth mode.

Connections Illustration

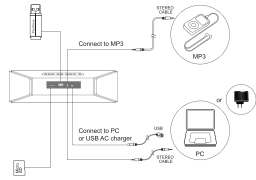

1. The speaker will start charging when USB Cable is connected; it will auto power off to charge completely.
2. Speaker will play music when it is in charging.
3. Charging time may increase, if music played except for charging simultaneously.

Bluetooth

- Bluetooth**
You can connect Bluetooth enabled devices with **[▶▶]** (BLUETOOTH) for e.g. Mobile phones, Tablets, Laptop, PC through Bluetooth Dongles, etc.
- Bluetooth Pairing Procedure:**
Bluetooth may have multiple options and **[▶▶]** (BLUETOOTH) both are within 1 meter while pairing. Specific pairing steps may vary with different devices and mobile phones. Please refer to your mobile phone user manual for further information.
- The general pairing steps are as follows:**
1. Turn on the Bluetooth on your mobile phone and select the speaker (BLUETOOTH mode) by pressing the button on controls panel of Mode button on the speaker (once you are in Bluetooth mode search for BLUETOOTH in your phone and connect).
 2. After pairing some models may ask for pass key, enter "0000" and press connect.
 3. After successful pairing you can **[▶▶]** enjoy the music for up to 10 meters.
- Receiver Cable with **[▶▶]** (BLUETOOTH):**
You can connect with **[▶▶]** (BLUETOOTH) PC. If you have connected your mobile phone with the speaker through Bluetooth, Please **[▶▶]** (BLUETOOTH) button on Receiver or **[▶▶]** (BLUETOOTH) button on Speaker once it is connected and **[▶▶]** (BLUETOOTH) you can use multiple options. You can connect multiple options **[▶▶]** (BLUETOOTH) speaker and your mobile phone **[▶▶]** (Bluetooth) can either be used to connect when using the control panel.
When there is no music when **[▶▶]** (BLUETOOTH) is connected to the previously connected device. If you want to pair with some other mobile phone, other than previous, then **[▶▶]** (BLUETOOTH) pairing procedure. To 2 mentioned above.

- Network:**
- **Pairing** is a task: allow open search to Bluetooth mode and to open the above steps from 1 to 3.
 - **After successful connection**, **[▶▶]** (BLUETOOTH) speaker and your mobile phone **[▶▶]** (Bluetooth) can either be used to connect when using the control panel.
 - **When there is no music when **[▶▶]** (BLUETOOTH) is connected to the previously connected device. If you want to pair with some other mobile phone, other than previous, then **[▶▶]** (BLUETOOTH) pairing procedure. To 2 mentioned above.**

FM Radio

- FM Radio**
1. Enjoy the FM radio by pressing the button or remote control or Mode button on the speaker, once you are in FM mode, Press **[▶▶]** (BLUETOOTH) button to auto scan **[▶▶]** (BLUETOOTH) FM channels and save, SCAN button can be function. Repeat you can also scan and save **[▶▶]** (BLUETOOTH) FM channel by long pressing Play/Pause/Stop button on the speaker.
 2. **[▶▶]** (BLUETOOTH) +/- to toggle between FM channels when Auto Scan is completed. **[▶▶]** (BLUETOOTH) +/- to scan quickly to get next previous available FM channel; you can also change saved FM channel by Save +/- button on speaker and long pressing the button **[▶▶]** (BLUETOOTH) can receive previous available FM channel.
- Setting Time & Album**
- Setting:** Press **[▶▶]** (BLUETOOTH) when either on remote or speaker to set the time. Press the button open to toggle between Minutes or Minutes, you can change the value of Hours and Minutes using Volume +/- button once the respective value is displayed. After some time button once again to set the time/album.
- Setting Album:** Press ALBUM button either on remote or speaker to enter the album time, when it is set to 00:00, Press the button open to toggle between Minutes or Minutes, you can change the value of Hours and Minutes using Volume +/- button once the respective value is displayed. After some time button once again, **[▶▶]** (BLUETOOTH) can receive the album which can be changed by using Volume +/- button. Press **[▶▶]** (BLUETOOTH) to set the album/PC.
- Note:**
- The quality of FM radio depend on the FM reception it is your area.
 - Speaker sound quality and volume may degrade if the speaker's battery is low.

Features & Specifications

- Features**
- Dynamic Range with high quality sound
 - Play music from the files Micro SD Card, Bluetooth and AUX
 - Auto scan to connect PC, MP3, MP4, PC, Laptop etc.
 - Bluetooth connection to Bluetooth Mobile Phones, Tablets and PC
 - Powered by Stereo Car, Office, Phones and other rechargeable battery, strong, compact etc.
 - Charge by Micro USB through PC, Laptop or USB Power Charger.
- Specifications**
- Output Power: 10W (RMS max, 20W x 2)
 - Frequency: 100-1600 KHz range
 - Bluetooth: V2.1, EDR + BT4.0
 - Bluetooth: V2.1, EDR + BT4.0
 - Dimensions: 270x110x30 (mm) x 30 (mm)
- Others:**
- Phone, Play, Stereo, Big Phone, Head, Seek, +/-, VOL +/-, Time, Alarm & Mode
- Battery**
- Working Time: 10hrs 7 hours
 - Charging Time: About 4 hours
- Inputs:**
- AUX (3.5mm)
 - USB
 - Micro SD
 - DC in (Micro USB for Charging)
- Package content:**
- Speaker + Remote with battery
 - 100 x 100 x 100 mm
 - 1 x Stereo Audio Cable
 - 1 x USB Power Cable
 - User Manual

*This user manual is for the Blu-Fi X7. The actual product may vary and details will be updated as needed. It is recommended to read the user manual carefully before using the product. The manufacturer is not responsible for any damage or loss caused by the use of the product. The manufacturer is not responsible for any damage or loss caused by the use of the product.

FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**