



## Portable Bluetooth Speaker with Mic



### INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY  
AND RETAIN FOR FUTURE USE**

#### **Getting started**

- Remove the Bluetooth speaker & accessories from the box.
- Remove all packaging from the Bluetooth speaker.
- Place the packaging inside the box to either store or dispose of safely.

### **In the Box**

- Bluetooth Speaker
- AUX Cable
- USB Charging Cable
- Instruction Manual

### **Features**

- Enjoy music wirelessly
- Easy to switch between calls and music, you will not miss the incoming call whilst listening to music
- Answer & end a call at click of a button.
- Redial last number
- Volume Control
- Every time the speaker is turned on, it connects to last connected device automatically

### **Safety Instructions**

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not use the unit with wet hands.

Do not put objects into any of the openings.


Keep the unit free from dust, lint etc.

Do not use this unit for anything other than its intended use.

Keep the unit out of reach of children.

This product is not a toy.

## Description of Parts

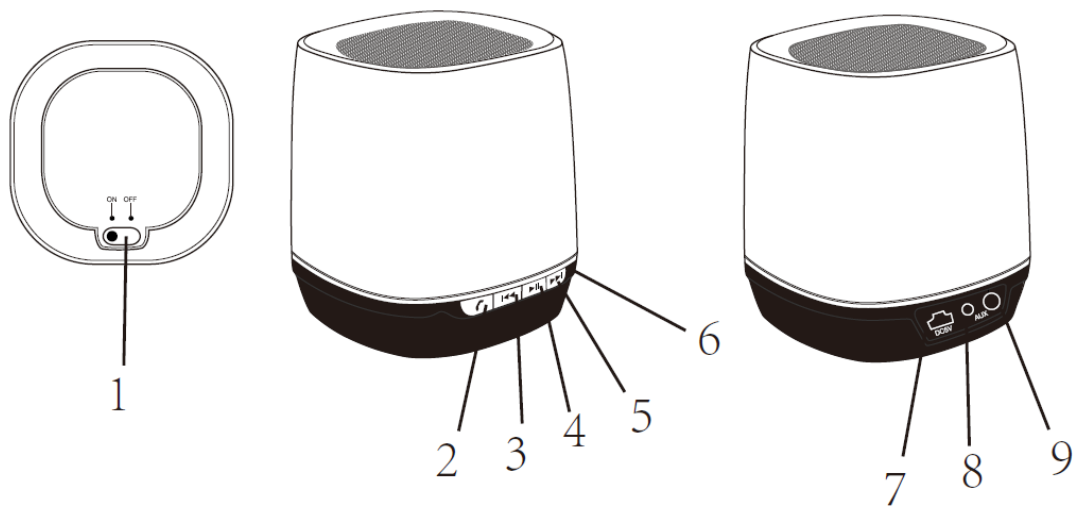

1	ON/OFF Switch
2	Call Answer Button
3	Skip Backward / Decrease Volume
4	Play / Pause
5	Skip Forward / Increase Volume
6	Microphone
7	Mini USB Charging Port
8	LED Indicator
9	AUX Jack

## **INSTRUCTIONS FOR USE**

### **Charging Instructions**

The speaker comes with a built in rechargeable battery. Before using it for the first time we recommend you charge the battery fully.

Connect the USB cable to a computer USB port and the Mini USB plug to the charging port of the speaker. The Red LED illuminates while the speaker is being charged. It takes around 3 hours for the unit to fully charge. When the battery is fully charged the red LED will turn off. When the battery is low, an indication tone (only at Bluetooth paired mode) will alert you. When this occurs, please charge the speaker.

### **Turning on/off the speaker**

There is an on/off switch at the bottom of the speaker. You can turn on/off the speaker with this switch. In order to save power, put the switch to off position when the speaker is not in use.

### **Pairing the speaker with Bluetooth devices (phone or music device)**

Switch on the speaker.

Place the speaker and Bluetooth device (phone or music device) so that they are no further than 1 meter apart.

Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.

Once you have activated Bluetooth on your device, select the speaker "SL BT Speaker" from the list of available Bluetooth devices.

If required, enter the password '0000' to confirm & finalize pairing.

Once paired successfully, the blue LED flashes two times every three seconds.

You can now start to use the speaker.

If pairing is unsuccessful, turn off the speaker first and then re-pair following the above steps.

Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

The speaker will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device please follow the steps outlined above.

Once the speaker is paired with your device the music will transmit directly to the speaker.

Please refer to your device's user manual for further information.

## Function Summary

### Listening to Music

Once the speakers are paired with your device you can stream music wirelessly through the speaker. Select the track you wish to listen to and it will be streamed to your Bluetooth speaker. Should you encounter any problems while streaming please refer your device's user manual for further information.

Function	Operation	Button
Increase Volume	Playing music	Long press the <b>Skip Forward / Volume Increase</b> button will increase the volume
Decrease Volume	Playing music	Long press the <b>Skip Backward / Volume Decrease</b> button will decrease the volume
Pause	Playing music	A short press on the <b>Play / Pause</b> button will pause the music
Play	Pausing	A short press on the <b>Play / Pause</b> button will resume the music
Skip Forward	While playing music	Short press the <b>Skip Forward / Volume Increase</b> button and it would skip one track forward
Skip Backward	While playing music	Short press the <b>Skip Backward / Volume Decrease</b> button and it would skip one track backward

An indication tone will alert you when the volume is adjusted to the minimum or maximum level.

### Making a call with the speaker

#### Basic operation

Function	Operation	Button
Answer A Call	Incoming Call	Short press the <b>Call Answer Button</b> to answer an incoming call
Reject a call	Incoming Call	Press and hold the <b>Call Answer Button</b> for 3 seconds
End a call	Incoming Call	After your phone conversation, short press the <b>Call Answer Button</b> .
Increase Volume	During a call	Long press the <b>Skip Forward / Volume Increase</b> button will increase the volume
Decrease Volume	During a call	Long press the <b>Skip Backward / Volume Decrease</b> button will decrease the volume
Redial last number	Standby mode and connected to a device	Short press the <b>Call Answer Button</b> twice

### Please Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information.
- Certain functions and indication tones maybe vary depending on your mobile phone.
- When the volume is adjusted to min or max, you will hear an indication tone.

### Play music using “Aux-In” Jack

1. Turn ON the device.
2. Insert the 3.5 mm Aux in cable (provided) to the Aux jack of the speaker. And, the other end of the cable connects to the audio device (such as computer / tablet / .....etc.).
3. The Blue LED will light up without flashing.
4. Select your favourite song at the source device.

(Note: When you insert 3.5 mm Aux in cable into the Aux jack of the speaker, the Bluetooth of the speaker will Turn Off at once.)

### LED indicator

Please refer to the below tables for a list of the LED statuses whilst using the speaker.

#### Battery Charging Indication

LED indicator	Status of the speakers
Red LED	Charging
Red LED turns off	Charging Completed

#### LED Indication

LED indicator	Status of the speakers
Blue LED flashes quickly	Pairing mode
Blue LED flashes two times every three seconds	Paired successfully

#### Tone Indication

Indication tone	Status of the speakers
Emits short tones	Enter pairing mode
Emits an indication tone	Low Battery Power (only at Bluetooth paired mode)

## Specifications

<b>Bluetooth specification</b>	Bluetooth V2.1+EDR
<b>Operating distance</b>	33 Feet, Class II
<b>Speaker output</b>	2W
<b>Working time</b>	Music: Up to 2 hours Talk: Up to 10 hours
<b>Standby time</b>	Up to 100 hours
<b>Charging input voltage</b>	DC 5V
<b>Charging time</b>	About 3 hours
<b>Dimensions</b>	65 x 65 x 65mm
<b>Weight</b>	138g

**Note:** Battery life & charging time may vary based on usage & types of devices used.

## Care and Maintenance

Read the following recommendations before using the speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the speaker to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the speaker.
- Do not expose the speaker to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the speaker in a fire as it will result in an explosion.
- Don't expose the speaker to contact with sharp objects as this will cause scratches and damage.
- Don't let the speaker fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the speaker as it may get damaged if you are not professional.

In case the speaker doesn't function properly, send it to the store you bought it. The staff will help you to the problem.

## FCC statements:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**Limited Warranty**

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@mtradinggroup.com](mailto:info@mtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.