



ES-52047BT

Bluetooth Speaker

SHENZHEN AOB ELECTRONICS CO.,LTD

INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR
FUTURE USE**

Getting Started

- Remove the speaker from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

- Bluetooth Speaker
- USB rechargeable cable
- 3.5mm AUX cord
- Instruction Manual


Key Features

- Wireless Connectivity using Bluetooth®2.0+EDR Technology
- Featuring NFC technology, for convenient one touch pairing
- Use as Hands-Free speaker phone, with a built-in microphone
- Compatible with all Bluetooth enabled devices such as Smart Phones, Tablets, etc.
- Built-In Micro SD Card (TF Card) Slot to play music from Micro SD Card (Supports Micro SD Card up to 16GB)
- 3.5mm AUX universal connectivity for MP3/MP4 Players, iPods, computers, netbooks, laptops etc.
- Wireless Streaming Range – 26 to 33 Feet


SAFETY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This appliance is not a toy.
- Do not use the handset at excessive levels as damage to hearing may occur.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

Description of Parts (Front & Top View)

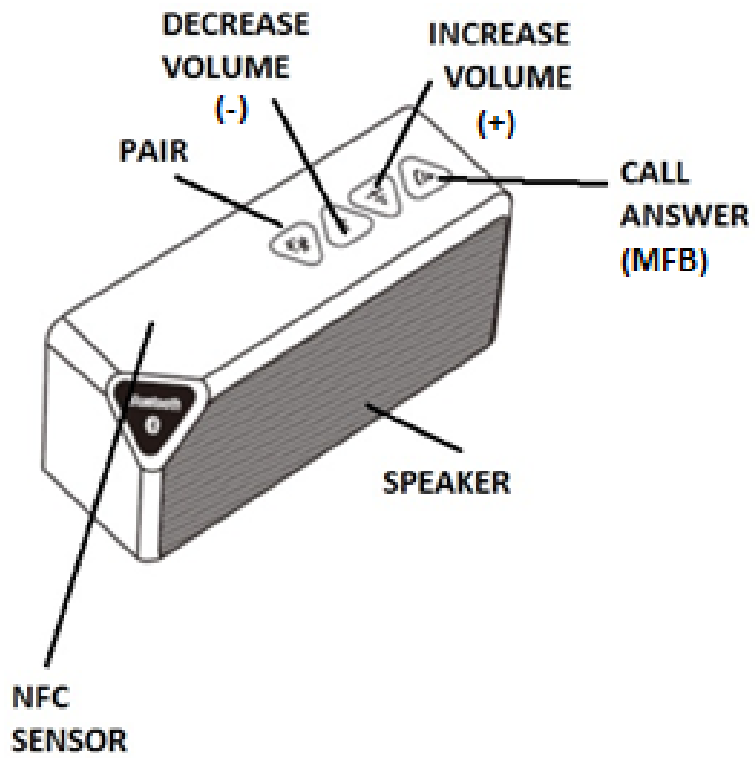

Description of Parts (Rear View)

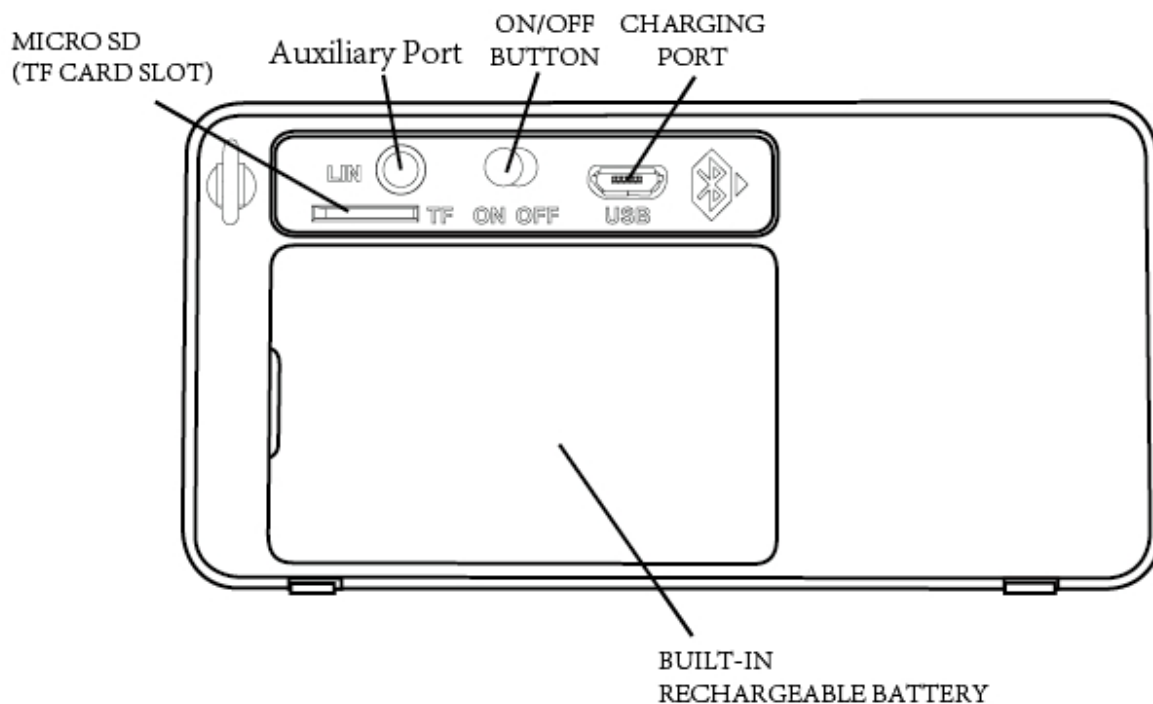

INSTRUCTIONS FOR USE

Turning ON/OFF the Speaker –

Before Turning ON the device, please ensure that the unit is fully charged.

To Turn ON the device – Slide the On/Off button to “ON” position.

To Turn OFF the device – Slide the On/Off Button to “OFF” position.

Connect using NFC Technology

Note: NFC function would work only if the source device (Phone, tablet, MP3 player etc) is equipped with NFC functionality. Please see source device’s user manual to see if your device supports NFC technology.

- Turn On the Speaker. You would hear a start-up tone, and Blue LED light would flash rapidly, indicating that you are now in Bluetooth Pairing Mode.
- Locate the NFC sensor spot on your smart phone. (see smart phone manual for more information)
- Rest the source device on top of the speaker, bringing both NFC spots together. Speaker would make a sound when both NFC spots come in contact.
- Wait for few seconds and you will hear “Beep” sound from the speaker, indicating pairing has been successful.
- You can now stream wireless music on your speaker through your source device.

Connect using Bluetooth Technology (manually)

- Turn On the Speaker. You would hear a start-up tone, and Blue LED light would flash rapidly, indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet). Please refer to manufacturer’s instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find “ES-52047BT” – Pair it with this device.
- If required, enter the password “0000” to pair with the device

- You can now stream wireless music on your speaker through your source device.
- Wait for few seconds and you will hear “Beep” sound from the speaker, indicating pairing has been successful.
- You can now stream wireless music on your speaker through your source device.

Talking using the Bluetooth Speaker

Please ensure that you are paired with the Bluetooth Speaker (either by NFC or Standard Bluetooth) to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the MFB once to answer an incoming call.
Reject incoming call	Incoming Call	Press the MFB button twice in quick succession until an indication tone is heard
End Call	Incoming Call	After your phone conversation, short press the MFB button
Increase Volume	During a call	Press and hold the + button to increase the volume
Decrease Volume	During a call	Press and hold the - button to decrease the volume
Redial last number	Standby mode and connected to a device	Short press the MFB button twice

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker (either by NFC or Standard Bluetooth) to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase Volume	Playing music	Press and hold the + button to increase the volume
Decrease Volume	Playing music	Press and hold the - button to decrease the volume
Pause	Playing music	Short press the MFB button will pause the music
Play	Pausing	Short press the MFB button will resume the music
Previous track	Playing music	Short press the - button will return you to the previous track
Next track	Playing music	Short press the + button will take you to the next track

(Note: The above functions only can be used in Bluetooth mode only. In Aux mode, you will need to control through your source device.)

Stream music from “Micro SD” (TF Card) Card –

- Turn ON the device.
- Insert the Micro SD (TF Card) preloaded with songs, into the Micro SD card slot of the speaker.
- Speaker would automatically start playing songs from the Micro SD Card
- To Skip Track Forward – Short press the + button
- To Skip Track Backwards – Short press the - button
- To Pause the Track – Short press the MFB button
- To Play the Track – Short press the MFB button

Play music through “Auxiliary” mode

- Turn ON the device.
- Connect the 3.5 mm Aux in cord (included) to the Auxiliary Port of the speaker. And, the other end of the cord the audio device (such as phone / MP3 Player / computer / tablet /etc.).
- This will turn on Blue LED.
- Select your favourite song at the source device.

Note: Once AUX cable is connected to the Bluetooth Phone & Speaker, music through the Bluetooth will be stopped. Microphone function doesn't work in auxiliary mode. Media and volume can be controlled only through source devices, while playing music in Auxiliary mode.

Charging the speaker

The speaker has built-in rechargeable battery. When the battery is drained out, device would turn OFF automatically. Please recharge the battery every time it drains out.

Plug the Micro USB end of the included USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged.

It takes up to 3 hours to fully charge the device. Once the device is fully charged, LED Light would turn OFF.

Specifications –

Bluetooth® Version: 2.0+EDR

Wireless Streaming Range Distance: 26 to 33 Feet

Speaker: 3 Watts

Power Input: DC 5V

Built-In Rechargeable Battery: 800mAh

Built-in 3.7V rechargeable Li-ion battery

Charging Time: Up to 3 Hours

Play time: about 80 mins (max volume), about 2 hours (80% volume)

(Note: Battery life & charging time may vary based on usage & types of devices used.)

Care and maintenance

Read the following recommendations before using the Mini Bluetooth Stereo Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

In case the unit does not function properly, please contact the number shown on the Warranty Page for help.

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 9am to 5pm CST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.