




HYPE®
LED STEREO BOX
 Color-changing Bluetooth® Speaker
 Operation Manual HY-LTBX-BLK

DIAGRAM

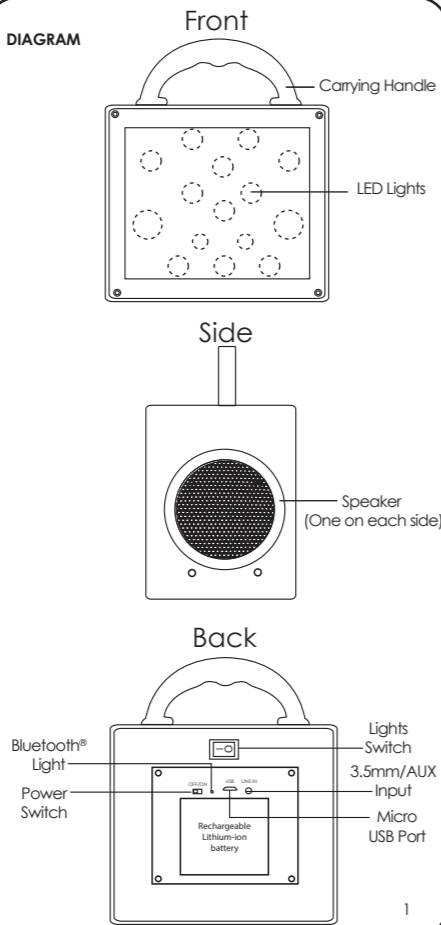

Thank you for purchasing the Hype LED Stereo Box Color-Changing Bluetooth® Speaker. Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Color-changing Bluetooth® Speaker
- (Optional) 3.5mm Aux Cable
- Micro USB Cable
- Operation Manual

KEY FEATURES

- Color flashing LED lights
- Compatible with most Bluetooth®-enabled devices
- Lightweight and portable design
- Great for travel

SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not puncture or harm the exterior surface of the product in any way.

Keep the unit free from dust, lint, etc.

Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children.

Do not use the unit at excessive levels as this may damage hearing.

Do not expose batteries, battery pack, or batteries to installed to excessive heat, such as direct sunlight, or open flame.

CHARGING THE SPEAKERS

The speaker comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the speaker.

Connect the USB cable to a computer USB port and the USB plug to the charging jack of the headset. The red LED light will illuminate while the speaker is charging.

A full charge of the battery takes around 2-3.5 hours. When the battery is fully charged, disconnect the speaker. The speaker will then be ready for use.

SPEAKER OPERATION

1. Connect one end of a mini USB cable (included) to your computer or a compatible USB AC/DC Adapter (not included) & the other end of the micro USB cable to the speaker

2. Switch the device to the "On" position. The green power indicator light at the back will come on.

3. Plug the audio jack into the audio playing device.

4. Ensure that your audio device is on.

5. Adjust the volume control on the audio playing device as needed.

TURNING SPEAKERS ON/OFF

Power On: Switch the power on/off button to the on position.

Power Off: Switch the power on/off button to the on position.

PAIRING THE SPEAKERS

1. Ensure the speaker is turned off. If it is not, please turn off the speaker first before pairing.

2. Switch the power on/off button to the on position. The LED flashes blue. This will indicate your speaker is now in pairing mode.

3. Place the speaker and the Bluetooth® device to which you would like to pair it within the operating distance. We recommend keeping the two devices no further than 3 feet apart.

4. Ensure Bluetooth® is enabled on your phone or music device. Refer to the manufacturer's instructions for how to enable Bluetooth® on your device.

5. Once you have activated Bluetooth® on your device, select the "HY-LTBX-BLK" from the list of available Bluetooth® devices.

6. If pairing is unsuccessful, turn off the speaker first and repair following the aforementioned steps. Once you have paired the speaker with a device, the earphones will remember this device and will pair automatically when the device's Bluetooth® is activated and in range. You do not need to re-pair any previously connected devices.

LISTENING TO MUSIC

Once the speaker is paired to your device, you can stream music wirelessly to the speaker. Select the track you wish to listen to on your device to listen via speaker. Should you encounter any problems while streaming, please refer to your device's user manual.

BATTERY MAINTENANCE

1. In order to prolong battery life, turn off your speaker.
2. If the speaker is not in use for a long period of time, store it in a dry, safe location. The speaker will need to be charged every 2 months to maintain battery life.

CARE AND MAINTENANCE

- Do not expose the unit to liquid, moisture, or humidity to avoid damage to the product's internal circuitry.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperatures.
- Do not dispose of the unit in fire as it may explode or combust.
- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
- Do not let the unit fall from high places, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the unit.

In the event that the unit does not function properly, return it to the store where it was purchased.

SPECIFICATIONS

Bluetooth®:	V3.0+EDR
Bluetooth® Protocol:	HSP/HFP/OPP/AVDP/AVRCP/PBAP
Bluetooth® Range:	Up to 33ft (10m)
Play Time:	Up to 2 hours
Charge Time:	2-3.5 hours
Stand-by Current:	40mA
Running Current:	200-400mA
Max Working Current:	600mA
Max Working Voltage:	4.2V
Max Audio Power:	1.3W*2
Frequency:	100Hz-18kHz
SNR:	≥75dBA
Battery Capacity:	500mAh/3.7V
Charging Interface:	Micro USB 5V (cable included)
Input:	(Optional) 3.5mm AUX (included)

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) This device must accept any interference received, including interference that may cause undesired operation.