

ALIEN BLUETOOTH SPEAKER BS-12/7881

PORTABLE RECHARGEABLE SPEAKER WITH MICROPHONE

INSTRUCTION MANUAL



**Please read all instructions carefully
& retain for future use.**

Getting Started

Remove product from the packaging.

Retain packaging for storage purposes or future reference or dispose of safely.

In the box

Speaker box

Rechargeable battery

USB cable (For Charging Purpose)

3.5mm audio connection cable

Instruction manual

Features

1. Compatible with Bluetooth® devices & connects via 3.5mm audio jack
2. Perfect for use with a variety of electronic devices, indoors or outdoors
3. Use as Hands-Free speaker phone device, with a built-in microphone
4. Deep rich sound in a compact portable size that goes anywhere
5. Stream Music through USB & SD Card Slot as well
6. Built-In FM Radio
7. USB rechargeable battery

IMPORTANT SAFETY INFORMATION

1. Read all instructions before using this product.
2. Do not leave this product unattended while connected to the power supply.
3. Do not immerse in water or any other liquids.
4. Do not use if unit has been dropped or damaged in any way.
5. Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
6. Place unit on sound, even surface, free of vibrations and away from sources of heat.
7. Do not use with wet hands.
8. Do not put objects into openings.
9. Keep free of dust, lint, hair etc.
10. Do not use this unit for anything other than its intended use.
11. Keep this product out of reach of children.
12. This product is not a toy.
13. Do not play music at excessive levels especially near children, as damage to hearing may occur.

Description of parts



Button	Function	Operation
1	Mode	Select the various mode – Bluetooth, USB, SD, FM, AUX. (If no USB, SD and Aux connected to speaker, such mode function will skip)
2	Play/Pause	Play or Pause when you are playing music through Bluetooth
3	Decrease Volume / Skip Backward	Whilst you are connected using Bluetooth, Long press to decrease the volume; and press once to skip music to previous track
4	Increase Volume / Skip Forward	Whilst you are connected using Bluetooth, Long press to increase the volume; and press once to skip music to next track
5	HeadPhone Jack	Headphone Output Jack – Connect your headphone or earphone to this jack
6	AUX Input	AUX Line-In – Connect AUX Cable 3.5mm jack to this and enjoy music through AUX
7	SD Card Slot	Insert SD Card into this slot to stream music through SD Card
8	USB Charging Port	Use this Charging Port to charge your speaker
9	ON/OFF Switch	On/Off Switch – Use this Switch to TURN ON or OFF the device
10	USB Drive Slot	Insert USB Flash Drive into this slot to stream music from your USB Flash Drive

Instructions for use

Charging the internal battery

For best results, fully charge the unit before use.

Connect the USB cord to the port at the back of the speaker and insert the other end into a port on your computer or other suitable USB outlet.

The LED will come on to show that the battery is charging. It will take around 3 hours to fully charge the Battery.

LED indicator

There is an LED light located in the middle of the front speaker.

Status	LED
Power off	No LED
Power on	Blue and red LED glow for around 3 seconds
Bluetooth pairing	Blue and red LED flashing
Bluetooth paired	Flashing blue LED at around each 3 seconds
USB / SD mode	Flashing blue LED at around each second
FM mode	Flashing blue and red LED at around each second
AUX mode	Blue LED glow
Recharging the battery	Red LED glow (Note: LED will not change color when fully charge)

Turn the speaker to Bluetooth pairing mode -

1. Turn the main power switch on the back of speaker to the "ON" position.
2. Wait 2~3 second until the light on the front starts blinking red and blue. This indicates that it is in pairing mode.

Note: Bluetooth speaker will stay in pairing mode for a few minutes. If you are not fast enough to complete the next step, simply turn "OFF" the speaker and then back to "ON" position, and repeat step 2.

Pairing your device with Bluetooth Speaker –

Your **SoundLogic Alien Speaker** can wirelessly stream audio from any Bluetooth enabled device within 8-10 meter. Simply follow the below steps.

1. Turn ON the device, LED lights will flash Blue and Red lights.
2. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer
3. It will search for various devices
4. The name of our Bluetooth Speaker is "SL Alien". Pair it with this device.
5. If required, enter the password '0000' to confirm to finalize pairing.
6. Once paired, the flashing blue LED at around each 3 seconds

Taking calls on connected to Bluetooth speaker

- When you receive an incoming call, an alert will sound from the speaker.
- If you are listening to music from your phone, the music will automatically pause.
- To accept a call: You can accept a call as you usually do, using your phone to control or press the “Play/Pause” button at the top of speaker. Speak normally, your call will come through the speakers and your voice picked up through the built-in microphone of the speaker.
- To end a call: Use your phone to control or press the “Play/Pause” button at the top of the speaker. If you were listening to music prior to receiving the call, then the music would resume once you end the call.
- To reject a call, long press the “Play/Pause” button at the top of the speaker when there is an incoming call.
- Redial the last number on your phone by long press the “Play/Pause” button.
(Note: It support most of the Bluetooth phones, but some phones may not support.)

Controlling playback when connected via Bluetooth

- Volume Increase: Using the volume controls on the top of speaker, press and hold the “Increase Volume / Skip-Forward” button to increase volume.
- Volume Decrease – Using the volume controls on the top of speaker, press and hold the “Volume Decrease” button to decrease volume.
- Skip Forward Track – Press one time on the “Volume Increase/Skip-Forward” button.
- Skip Backward Track – Press one time on the “Volume Decrease/Skip-Backward” button.
- Pause – Press the “Play / Pause” button one time to pause the music. Press again one time to resume the music.

Stream Music through USB or SD Card Slot

Turn ON the Device

Insert USB drive or SD Card into the appropriate slot of the device

Unit should automatically play the music through the speaker. Or, use the mode button to select.

Increase or Decrease the volume by long press of the volume buttons on the device

You could also Skip tracks by short press of the Skip Forward or Skip Backward buttons on the device

(Note: Make sure your songs are in Mp3 format. Don't put different format songs in your USB drive or SD card)

Play FM Radio

Turn ON the Device

Press the mode button till the FM Tuner has been switched ON

Press the Play/Pause button to scan all the available stations, device would automatically scan all the stations and preset the FM Stations

Press Skip Forward to play the next available FM station; or Skip Backward to play the previous FM station

Recharging Battery

- Plug the Mini USB end of the included USB cable into the USB port, marked "USB Charging" on the back of speaker.
- Plug the other end into a USB port on your computer or other devices made for USB charging. Charge time is around 3 hours.

Do's and Don'ts

Do not play music at excessive levels as damage to hearing and/or equipment may result.

Do not use outdoors in wet or in damp surroundings.

Specification

Speaker Power	: 3W x 2
Size	: 210 X 67 X67 mm
Signal- to- Noise	: 50 dB
Charge Voltage	: 5V (USB)
Bluetooth Range	: 8 – 10 meter

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Speaker volume too low. Battery dead	Adjust source volume. Adjust speaker volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop.) turned off. Speaker turned off. Volume turned down on speaker / source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume on speaker / source. Play media from source.

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives.

Keep this unit away from wet or damp surroundings.

The crossed out wheellie bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.

Note: iPod and iPhone are trademarks of Apple Inc, registered in the US, and other countries.



FCC Instructions

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION:

All materials and workmanship are warranted to the original consumer purchaser for a period of thirty (30) days from the original purchase date.

WARRANTY COVERAGE:

This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, etc. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS:

This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

WARRANTY PERFORMANCE:

During the above 30 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 30 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR:

If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 9am to 5pm CST.

NOTE:

Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.