Wireless speaker with suction cup

ES-63031BT

SHENZHEN AOB ELECTRONICS CO.,LTD

INSTRUCTION MANUAL PLEASE READ ALL INSTRUCTIONS CAREFULLY & RETAIN FOR FUTURE USE

Getting Started

- Remove the unit from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

- Wireless Speaker with Suction Cup
- USB charging cable
- Instruction manual


Features

- Compatible with Bluetooth® devices
 Perfect for use with a variety of electronic devices, indoors or outdoors
- Compact portable size that goes anywhere
- USB rechargeable built-in battery
- Durable and rugged

IMPORTANT SAFETY INFORMATION

- Read all instructions before using this product.
- Do not leave this product unattended while connected to the power supply.
- Do not immerse in water or any other liquids.
- Do not use if unit has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- Place unit on sound, even surface, free of vibrations and away from sources of heat.
- Do not use with wet hands.
- Do not put objects into openings.
- Keep free of dust, lint, hair etc.
- Do not use this unit for anything other than its intended use.
- Keep this product out of reach of children.
- This product is not a toy.
- Do not play music at excessive levels especially near children, as damage to hearing may occur.

Description of parts

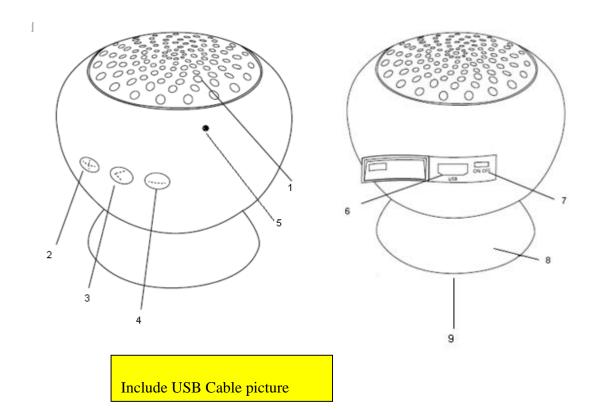

No.	Item	Function
1	Speaker	Sound output
2	Volume "+" button	Short press skip to next track
		Long press to increase the volume
3	Play / Pause button	Play / Pause / Answer phone call / End
		phone call / Redial / Disconnect Bluetooth
4	Volume "-" button	Short press skip to previous track
		Long press to decrease the volume
5	Microphone	Microphone for hands-free phone calls
6	USB charging port	Charging the speaker
7	On/Off switch	Switch on / off
8	Suction cup	Stick on flat & smooth surface walls &
		glass
9	LED indicator	Show on/off, pairing and charging status

(Note: A beep sound will alert on reaching minimum or maximum volume)

INSTRUCTIONS FOR USE

Charging the unit

For best results, fully charge the unit before first use.

- Connect the USB charging cord (included) to the charging port located at the back of the speaker and insert the other end into a USB port of your computer or similar power source.
- 2. The LED at the bottom of the unit turns red when the battery is being charged. Once it is fully charged, LED will turn off. It will take around 2~3 hours to fully charge the Battery.

Turn On/Off the Speaker

Turn the speaker On/Off using the On/Off button at the back of speaker.

Turn the speaker to Bluetooth pairing mode -

- 1. Switch the On/Off button to on position, located at the back of speaker.
- 2. The Blue LED will begin to blink, indicating it's in pairing mode.

(Note: If you have paired to the speaker before, then the speaker will pair automatically with the last device it connected)

Pairing your device with Bluetooth Speaker -

Your speaker can wirelessly stream audio from any Bluetooth enabled device within the range of 33 Feet. Simply follow the below steps.

- 1. Turn ON the speaker and the Blue LED light will begin to blink.
- 2. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer
- 3. It will search for Bluetooth devices
- 4. The pairing name of our Bluetooth Speaker is "Pairing name at here", Pair it with this device.
- 5. If required, enter the password '0000' to confirm to finalize pairing.
- 6. Once paired successfully, the LED turns to solid blue.
- 7. If you fail to pair it or you want to pair it with a new device please follows the steps outlined above.

Select your favorite song at the Source device (mobile phone, tablet, computer etc) and play it through the speaker

(Note: Long press play/pause button of the speaker will disconnect the Bluetooth with your connected device. You can pair your speaker with only one device at a time. Please unpair the speaker with existing device in order to pair it with another one.)

Answer phone call / End phone call / Redial (When Speaker is paired using Bluetooth):

- On receiving an incoming call, the speaker will prompt you caller's number.
- Short press the play/pause button to answer the call.
- Short press the play/pause button again to end a call.
- Short press the play/pause button twice to redial the last called number.

Do's and Don'ts

 Do not play music at excessive levels as damage to hearing and/or equipment may result. Do not use outdoors in wet or in damp surroundings.

 Use suction cup to stick only on flat and smooth surfaces. Suction cup doesn't stick on some of the surfaces.

Specification

Frequency range : 2402~2480MHz Bluetooth Version : V2.1+EDR

Power : 2 W Speaker size : 1.6 inch

Play time : Up to 1.5 ~ 2 Hours

Charge Voltage : DC 5V (USB)
Bluetooth Range : 33 Feet

(Note: Battery life & charging time may vary based on usage & types of devices used)

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume
	Battery dead	Charge the battery
Sound distorted	Battery nearly dead	Charge the battery
Bluetooth doesn't pair	Bluetooth not turned on, either on speaker or source device (mobile phone, tablet, computer etc)	Turn on Bluetooth mode on both, speaker and the source device
	Speaker already paired with another device	Unpair the existing source device, and pair speaker with new source device
No sound at all.	Source device (tablet, mobile phone, laptop.) turned off.	Turn the source device on
	Speaker turned off.	Turn the speaker on
	Source device volume is low	Adjust volume at source
	Media paused on the source device	Play media from source

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

The crossed out wheelie bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling. Note: iPod and iPhone are trademarks of Apple Inc, registered in the US, and other countries.

FCC Instructions

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a cowarrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 9am to 5pm CST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.