

**SOUNDLOGIC** | XT

**BLUETOOTH® XL SOUND BOX**  
PORTABLE RECHARGEABLE SPEAKER WITH MICROPHONE

INSTRUCTION MANUAL



Please read all instructions carefully  
& retain for future use.

## **Getting Started**

Remove product from the packaging.  
Retain packaging for storage purposes or future reference or dispose of safely.

## **In the box**

Rechargeable speaker box  
USB cable (For Charging Purpose)  
3.5mm audio connection cable  
Instruction manual     **USB interface only charge function**

## **Features**

1. Compatible with Bluetooth® devices & connects via 3.5mm audio jack
2. Perfect for use with a variety of electronic devices, indoors or outdoors
3. Use as Hands-Free speaker phone device, with a built-in microphone
4. Deep rich sound in a compact portable size that goes anywhere
5. USB rechargeable built-in battery

## **IMPORTANT SAFETY INFORMATION**

1. Read all instructions before using this product.
2. Do not leave this product unattended while connected to the power supply.
3. Do not immerse in water or any other liquids.
4. Do not use if unit has been dropped or damaged in any way.
5. Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
6. Place unit on sound, even surface, free of vibrations and away from sources of heat.
7. Do not use with wet hands.
8. Do not put objects into openings.
9. Keep free of dust, lint, hair etc.
10. Do not use this unit for anything other than its intended use.
11. Keep this product out of reach of children.
12. This product is not a toy.

2. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer
3. It will search for various devices
4. The name of our Bluetooth Speaker is "SPEAKER", Pair it with this device.
5. Once paired, the LED light will turn to BLUE Color.

### **Taking calls on connected to Bluetooth speaker**

- When you receive an incoming call, an alert will sound from the speaker.
- If you are listening to music from your phone, the music will automatically pause.
- To accept a call: You can accept a call as you usually do, using your phone to control or press the "Play/Pause" button at the top of speaker. Speak normally, your call will come through the speakers and your voice picked up through the built-in microphone of the speaker.
- To end a call: Use your phone to control or press the "Play/Pause" button at the top of the speaker.

### **Controlling playback when connected via Bluetooth**

- Volume Increase: Using the volume controls on the top of speaker, press and hold the "Increase Volume / Skip-Forward" button to increase volume.
- Volume Decrease – Using the volume controls on the top of speaker, press and hold the "Volume Decrease" button.
- Skip Forward Track – Press one time on the "Volume Increase/Skip-Forward" button.
- Skip Backward Track – Press one time on the "Volume Decrease/Skip-Backward" button.
- Pause – Press the "Play / Pause" button one time to pause the music. Press again one time to resume the music.
- Answer Call – Press "Play/Pause" button one time to answer the call when you get the incoming call.
- End Call – Press "Play/Pause" button one time to end the call once you desire to end the call. If you were listening to music prior to receiving the call, then the music would resume once you end the call.

## **Recharging Battery**

Make sure the power switch is set to "ON"

Plug the Micro USB end of the included USB cable into the USB port, marked "USB Charging" on the back of speaker.

Plug the other end into a USB port on your computer or other devices made for USB charging. Charge time is 3 to 4 hours.

## **Do's and Don'ts**

Do not play music at excessive levels as damage to hearing and/or equipment may result.

Do not use outdoors in wet or in damp surroundings.

## **Specification**

Rated Power	: 3W x 2
Size	: 190 x 52 x 66 mm
Signal- to- Noise	: 40dB
Charge Voltage	: 5V (USB)
Bluetooth Range	: 33 Feet

## **Troubleshooting**

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Speaker volume too low. Battery dead	Adjust source volume. Adjust speaker volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop.) turned off. Speaker turned off. Volume turned down on speaker / source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume on speaker / source. Play media from source.

### Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

The crossed out wheellie bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.

Note: iPod and iPhone are trademarks of Apple Inc, registered in the US, and other countries.



### **Limited Warranty**

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**WARRANTY PERFORMANCE:** During the above 30 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 30 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@mtradinggroup.com](mailto:info@mtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 9am to 5pm CST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

#### **FCC NOTE: U.S. ONLY**

*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:*

- 1) This device may not cause harmful interference.*
- 2) This device must accept any interference received including interference that may cause undesired operation.*

*Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These Limits are designed to provide reasonable protection against harmful interference in a residential installation. This generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turn the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures: •Reorient or relocate the receiving antenna • Increase the separation between the equipment and receiver • Connect the equipment to an outlet on a circuit different from that to which the receiver is connected • Consult the dealer or an experienced radio/TV technician for help.*

*Federal Communications Commission (FCC) Radiation Exposure Statement*

*This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm (8 inches) during normal operation.*