

# User Manual



The content and information appearing in this guide is subject to change due to changes and updates relating to the tablets or the cellular system. AOC shall provide separate updates, as necessary.

## Contents

<b>Getting Started</b> .....	<b>3</b>
Specification & Features .....	4
Using the touch screen.....	5
Turning your device on or off .....	8
Getting to know the Home screen.....	9
Lock or unlock the touch screen and the keys .....	12
Access Applications.....	13
Launching multiple applications .....	13
Battery Management .....	14
Customize your device.....	15
<b>Tools and Applications</b> .....	<b>18</b>
Gmail.....	18
Email.....	20
Wi-Fi Direct.....	23
<b>Operational Tips</b> .....	<b>24</b>

 
### Manual del Usuario

por favor lea este manual antes de operar el dispositivo and conservala para futuras referencias

Note: The content and information appearing in this guide is subject to change due to changes and updates relating to the tablets or the cellular system. DANY shall provide separate updates, as necessary.

## Getting Started:

Please read this manual before operating your device, and keep it for future reference.

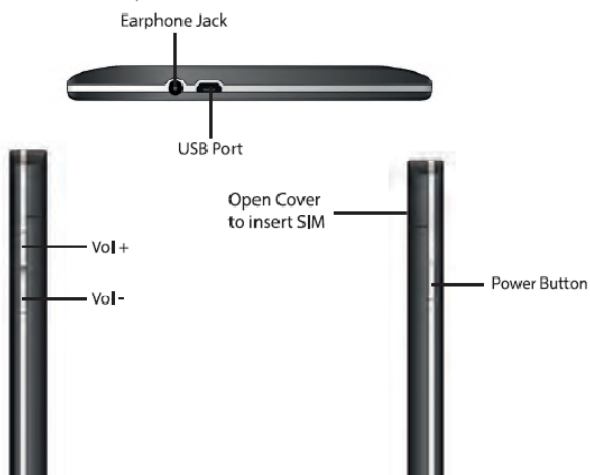

### Information :

- Earphone Jack : 3.5mm Stereo jack
  - Micro USB : can be used to connect your device to the computer for data transmission/charging.
  - Vol - : Volume decrease
  - Vol + : Volume Increase
  - Micro USB : can be used to connect your device to the computer for data transmission/charging.
  - SIM Card jack : Support 3G communications and internet access. you may subscribe for a network data package through your telecommunication service provider. To access the network, please insert your SIM card into the SIM card slot.
- Note : Ensure to turn off your device before removing your SIM card.

## Specification & Features :

### Hardware

CPU : MT8312, ARM Cortex-A7 Quad-Core 1.3GHz  
GPU : Mali 400 MP  
Ram : 1GB DDR  
Storage : 8GB  
3G : GSM/GPRS/EDGE/WCDMA/HSDPA (GSM 850/900/1800/1900, WCDMA 850/1900)  
LCD : 6.95" High resolution screen, 1024 x 600 pixels  
Camera : Front 0.3MP, Back 5.0MP  
Multi Touch: 5 Points Capacitive multi-touch screen  
G-sensor- Yes  
USB : USB 2.0  
Bluetooth : YES  
GPS: YES  
FM : YES  
TF CARD : SD/MMC/TF Card support to 32 GB  
WIFI : WIFI 802.11b/g/n  
Battery : Li-ion Battery 2,800mAh@3.7V

### Software

O/S : Google Android 4.4. 2  
Supported Video formats : Mpeg1, Mpeg2, Mpeg4 SP/ASP GMC, XVID, H.263, H.264 BP/MP/HP, WMV7/8, WMV9/VC1 BP/MP/AP, VP6/8, AVS, JPEG/MJPEG  
Audio : MP3, WMA, MP2, OGG, AAC, M4A, MA4, FLAC, APE, 3GP, WAV  
Video decode: H.264, VP8 and MVC (1080P)  
Picture : JPG, JPEG, GIF, BMP, PNG  
3D E-book : TXT, EPUB, PDF, WORD, EXCEL, POWERPOINT  
Internet : Wifi/GPRS  
Languages : Multi language

## Using the touch screen

Your device's touch screen lets you easily select items or perform functions. Learn basic actions for using the touch screen.



- ⚠ To avoid scratching the touch screen, do not tap it with sharp objects.
  - Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
  - Do not allow the touch screen to come into contact with liquids. The touch screen may malfunction in humid conditions or when exposed to liquids.
- 
- ✍ For optimal use of the touch screen, remove the screen protection film before using your device.
  - Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches from sharp objects, such as a stylus or pen.

 


- Your device turns off the touch screen when you do not use it for a specified period. To turn on the screen, press the Power key.
- You can set the length of time that the device waits before turning off the screen. In the application list, select **Settings** → **Display** → **Screen timeout**

### › Moving item on the Home screen


Tap and hold an item, and then drag it to a new location.

You can add an item to a new folder or move it to a new panel. Tap and hold the item, and then drag it to  or .

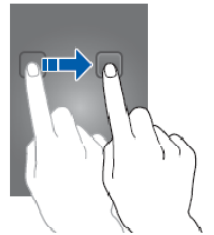

### › Removing an item from the Home screen

 Tap and hold an item, and then drag it to the remove button.

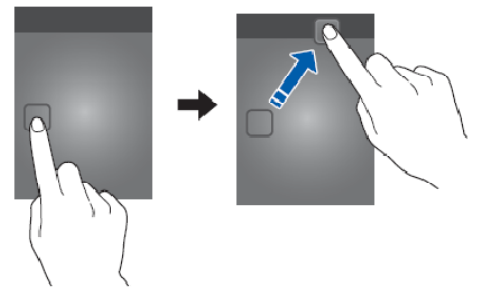

Control your touch screen with the following actions:

### Tap

Touch once to select or launch a menu, option, or application.



### Tap and hold

Tap an item and hold it for more than 2 seconds.



### Drag

Tap an item and move it to a new location.



### Double-tap

Tap an item twice quickly.



### Flick


Briskly scroll up, down, left, or right to move through lists or screens.



## Turning your device on or off


To turn on your device, press and hold the Power key.

### > Keys

Buttons	Function
 Power/Reset <sup>1</sup> /Lock	Turn on the device (press and hold); Access the device options (press and hold); Reset the device (press and hold for 8-10 seconds); Turn off and lock the touch screen or turn it on.

1. If your device experiences fatal errors, hanging, or freezing, you may need to reset the device to regain functionality.

To turn off your device, press and hold the Power key, and then select **Power off** → **OK**.

-  Follow all posted warnings and directions from approved personnel in areas where the use of wireless devices is restricted, such as aeroplanes and hospitals.
- To use only your device's non-network features, switch to Airplane Mode.

## Getting to know the Home screen

From the Home screen, you can view your device's status and access applications.

The Home screen has multiple panels. Scroll left or right to view the panels on the Home screen. You can also select one of the dots at the top of the screen to move directly to the corresponding panel.



Number	Description
1	Google search bar
2	Status Bar
3	Sorted Application Item (changable)
4	Access the Application list
5	Operation Bar
6	Digital Clock and Weather Widget

## > Operation Bar

From the system bar at the bottom of the screen, you can quickly navigate screen, view system information, and more.



 
Number	Description
1	To back screen
2	Home Screen
3	Recent Application

## > Status Bar







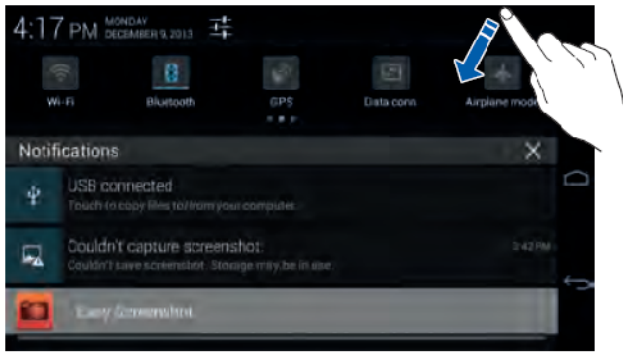








Number	Description
1	to access the Status Panel

Touch and swipe down on Status Bar to open Status panel.



## > Indicator icons

 Icons shown on the display may vary depending on your region or service provider.

Icon	Description
	SIM No service
	GSM Signal
	Connected to GPRS network
	Connected to EDGE network
	Roaming (outside of service area)
	Wi-Fi ' ' connected
	Bluetooth feature activated
	New message
	Call in progress
	Missed call
	Connected to computer
	Error occurred or caution required
	Battery power level

## Lock or unlock the touch screen and the keys

When you do not use the device for a specified period, your device turns off the touch screen and locks the touch screen and the keys automatically to prevent unintended operations.


 

To lock the touch screen and the keys manually, press the Power key.


To unlock them, turn on the screen by pressing the Power key, tap on Lock on the screen, and then drag your finger outside of the large circle.




## Access Applications

Launch applications and take full advantage of features on your device. You can reorganise the application list to match your preferences, or download applications from the Internet to enhance your device's functionality.

- 1 On the Home screen, select  to access the application list.
- 2 Scroll left or right to another screen.
- 3 Select an application.
- 4 Select  to return to the previous screen. Select  to return to the Home screen.

-  • You can add an application shortcut to the Home screen by tapping and holding an icon in the application list.
- If you rotate the device while using some features, the interface will rotate as well. To prevent the interface from rotating, select **Settings → Display → Auto-rotate screen**.

## Launching multiple applications

Your device allows you to multitask by running multiple applications at the same time. To launch multiple applications, select  while using an application. Then select another application to launch from the Home screen.

13

 
## Battery Management

Please ensure to charge your device at least once a month. When your battery is low, the device will prompt a warning tone and display a low battery message, the battery level shown on the battery icon will appear low or empty. If the battery to continue using your device.

If the battery is completely empty, you will not be able to turn on the device, even with the adapter connected to the power source. In this case, allow the battery to charge for a few minutes before turning on the device.

## Connecting your device to a PC

Use an USB cable to connect your device to a PC. Then the USB connection window will pop up, click on the "Turn on USB storage" button to connect to your PC. You may store your additional multimedia files onto a memory card as your tablet accepts micro SD memory card

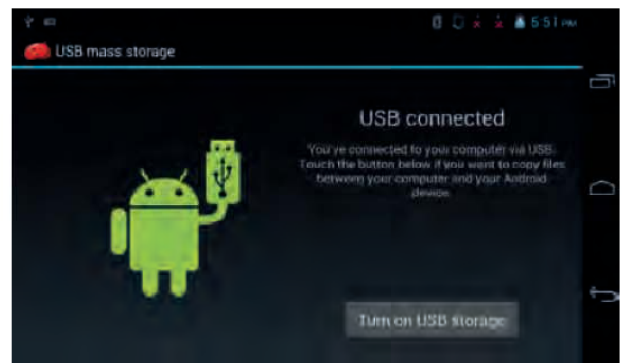

14


## Customize your device
 
### Settings

Click setting icon  to enter the setting interface


### Wi-Fi

It is for setting wireless device and turning it ON/OFF.

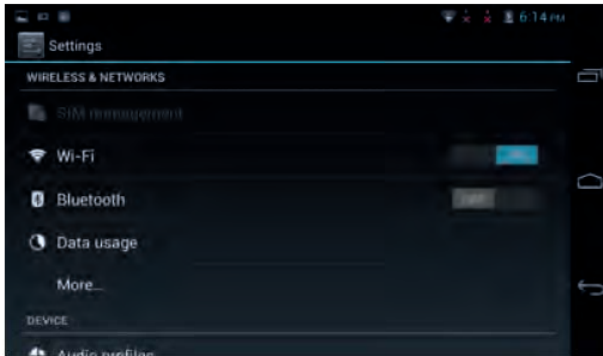

### Bluetooth

 It is for setting Bluetooth device and turning it ON/OFF.

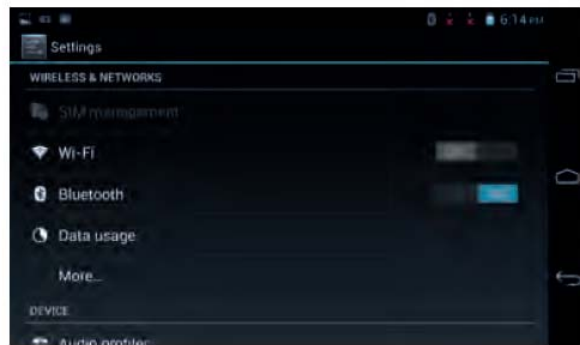

15

### Sound

Includes options for setting volume, alert tones, default notifications and etc.

### Display

Includes options for setting brightness, wallpaper, auto-rotate screen, sleep and font size.

### Storage

It is for checking the memory capacity and memory usage status.

### Battery

It is for checking battery usage

### Apps

Includes options for application management.

### Accounts and Synchronization

Includes options for adding, deleting accounts and synchronization.

### Location & Security

Includes options for setting Google's location service and Google search

16



## Security

Used for setting screen lock, owner info, encrypt tablet information and etc.

## Language and Input

Used for setting language, default language, personal dictionary and etc.

## Backup & reset

Used for restoring factory setting and etc.

Date and Time : Used for setting date and time.

Accessibility : It's for setting touch and hold delay and etc.

Developer options : It is for setting USB debugging, stay awake and etc.

About Tablet : It shows some information about tablet.

## Upgrade



When you need to upgrade your device's Firmware please ensure to close the USB connector.


# Tools and Applications

## Gmail


Learn to send or view email messages via the GMail™ webmail service.

### > Sending an email message

- 1 In the application list, select **Gmail** → 
- 2 Select the recipient field and enter an email address.
- 3 Select the subject field and enter a subject.
- 4 Select the text field and enter your email text.
- 5 Select  and attach a file.
- 6 To send the message, select **SEND**.


 If you are offline or outside your service area, the message will be held in the message thread until you are online and inside your service area.

## › Viewing an email message

- 1 In the application list, select **Gmail**.
- 2 Select  to update the message list.
- 3 Select an email message.

From the message view, use the following options:

- To move to the next or previous message, scroll right or left.
- To reply to the message, select .
- To reply to the message and include all recipients, select .
- To forward the message to other people, select .
- To add the message to the favourites list, select .
- To view an attachment, select **VIEW**. To save it to your device, select **SAVE**.
- To search for a message, select .
- To archive the message, select .
- To delete the message, select **Delete.**  →
- To add a label to the message, select **Change labels.** → .
- To mark the message as unread, select **Mark unread.**  →
- To mark the message as important, select  → **Mark important**. To mark the message as unimportant, select  **Mark as not important**.

- To hide the message, select  → **Mute**. To view hidden messages, select **All mail** from the label list.
- To add the message to the spam list, select  → **Report spam**.
- To update the message list, select  → **Refresh**.
- To customise the settings for each label, select  → **Manage labels**.
- To change the email settings, select  → **Settings**.

## Email

Learn to send or view email messages via your personal or company email account.



- Using this feature may be subjected to additional fees depending on your service provider and subscription.




## › Setting up an email account


- 1 In the application list, select **Email**.
- 2 Enter your email address and password.
- 3 Select **Next**. To enter account details manually, select **Manual setup**.
- 4 Follow the on-screen instructions.

When you are finished setting up the email account, email messages will be downloaded to your device. If you have created two or more accounts, you can

switch between them. Select an account name at the top of the screen, and then select the account from which you want to retrieve messages.

## › Sending an email message


- 1 In the application list, select **Email** → .
- 2 Add recipients:
  - Enter email addresses manually and separate them with a semicolon (;) or a comma. (,).
  - Select phone numbers from your contact list by selecting .
- 3 Select the subject field and enter a subject.
- 4 Select the text field and enter your email text.
- 5 Select  and attach a file.
- 6 To send the message, select **Send**.

 If you are offline or outside your service area, the message will be held in the message thread until you are online and inside your service area.

## › Viewing an email message

When you select to display an email account, you can display previously loaded messages even when you're not online, or connect to the mail server to display new messages.

- 1 In the application list, select **Email**

- 2 Select  to update the message list.
- 3 Select an email message.

From the message view, use the following options:

- To move to the next or previous message, select  or .
- To create a new message, select .
- To reply to the message, select .
- To forward the message to others, select .
- To delete the message, select .
- To mark the message as unread, select  → **Mark as unread**.
- To move the message to another folder, select  → **Move**.
- To save the message to your device, select  → **Save email**. The message will be saved in **My files** → **sdcard** → **Saved Email**.
- To change the view mode, select  → **Display mode**.
- To print the message via Wi-Fi or USB, select  → **Print**. Your device is compatible only with some Samsung printers.
- To save the email addresses of the recipients to the phonebook as a group of contacts, select  → **Save as group**.
- To change the email settings, select  → **Settings**.

# FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate this equipment.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**This Tablet meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.**

FCC RF Exposure information and Statement the SAR limit of USA (FCC) is 1.6W/kg averaged over one gram of tissue. Device type M691(FCC ID: 2AEB5M691) has also been tested against this SAR limit. SAR information on this and other pad can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided