

AGES 6 AND UP

14001




CIANT RC ANT WITH CRYSTAL SKULL REMOTE CONTROL

Installing batteries into ant

Tool required - Small Phillips head screwdriver (not included) <

1. Using a Phillips head screwdriver remove the battery cover from the bottom of the Giant RC Ant (See Fig. 1).

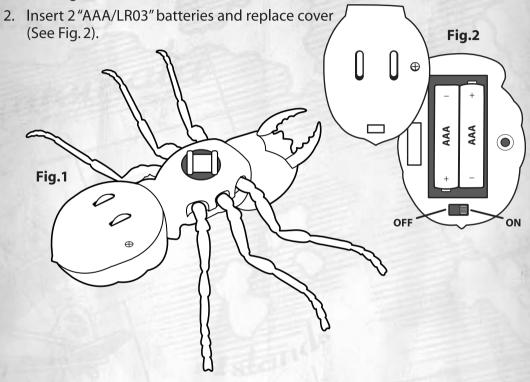

BATTERY SAFETY INFORMATION


- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Installing batteries into controller

Tool required - Small Phillips head screwdriver (not included) <>.

1. Using a Phillips head screwdriver remove the battery cover from the back of the controller (See Fig. 3).

2. Insert 2 "AAA/LR03" batteries and replace cover.

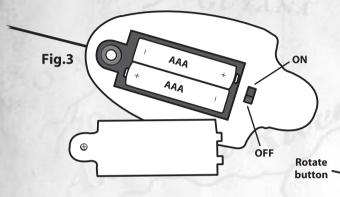

Using your Giant RC Ant

1. Turn the power switches to the "ON" position on both the controller and ant (See Fig. 2 and Fig 3).

2. Move the ant forward or make it turn using the buttons on the controller (See Fig. 4).



CAUTION: To prevent entanglement, keep hair away from wheels

NOTE:

- · Do not immerse in water.
- For best performance use your Giant R/C Ant on a smooth flat surface like a hardwood floor.
- Operating multiple vehicles with the same frequency in close proximity will cause interference and poor performance.
- Works best away from high voltage power lines, large buildings and walls.
- Hold the transmitter antenna up for best performance.
- When the product does not respond, slows down, or loses range, move remote control closer to your Giant RC Ant (recommend 10 feet range). If the product still does not respond, replace with NEW batteries.

FCC ID: WB314001UMI2008 MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

27Mhz

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE DO NOT DISCARD

Problems? Before taking this product back to the store, please call us. We can help! 1-888-742-2484 or go to www.unclemilton.com



© 2008 Lucasfilm Ltd. & TM where indicated. All rights reserved. Used under authorization.



Fig.4

Forward button

Uncle Milton Industries, Inc. – Westlake Village, CA 91362 1-888-742-2484 Fax: 818.707.0878 www.unclemilton.com © UMI, Inc. All rights reserved. Printed in China.

14001-0250-0708

