



SUZUKI Immobilizer Instruction Manual

1、 block diagram

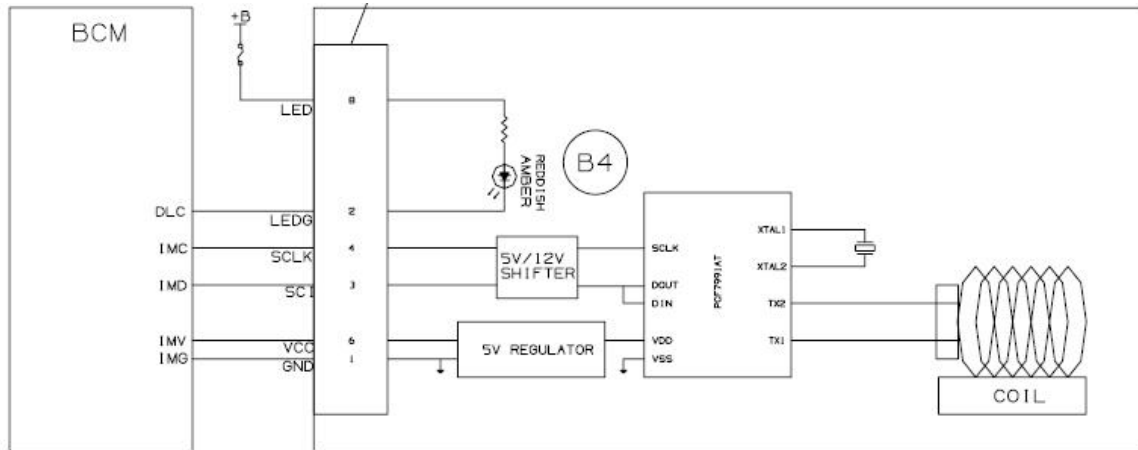

2、 Immobilizer Instruction

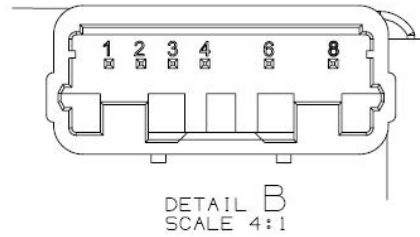

MATING CONNECTOR: AMP 1376368 OR EQUIVALENT

TERMINAL APPLICATION TABLE

NO.	NAME	CONNECTION
1	GND	GND
2	LEDG	ILLUMINATION GND
3	SCI	IMMOBI DATA
4	SCLK	IMMOBI CLOCK
5	-	
6	VCC	12V
7	-	
8	LED	ILLUMINATION

Connect Body Control Module(BCM) IMC,IMD,IMG,IMV pins to Immobilizer SCLK,SCI,GND,VCC in correspond. Power on BCM, ignition on. Immobilizer can transmit 125kHz low frequency signal.

Caution:

This device complies with Part 15 of the FCC. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must

accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.