

Remote control, connector instructions



1.5 Connector USES

Connector is mainly connected to the host, receiving remote control issue instructions to the host.

FCC ID:WBQAQRFDM6R

1.6 Handheld Remote Control Charging

The remote has a built-in Polymer Lithium rechargeable battery. It comes with a custom made charging cable. Connect one end to the blades of the remote control and another the other end to any USB female device (5V dc) for charging.

Make sure the remote has been charged before used.

1.7 Handheld Remote Control Synchronizing

The remote has a receiver dongle (AQ-DM-6UBT-R) with a built-in male DIN connector. Connect the dongle to the female DIN connector of BlueCube Media Player (AQ-BC-6BT).

The remote should already be paired from the factory, but if you need to synchronize the remote, follow below steps.

- 1. Make sure BlueCube Media Player (AQ-BC-6BT) is powered ON (red LED lit)
- 2. Put the remote close to the dongle (AQ-DM-6UBT-R) (ideally within 0.5 meter)
- 2. Press and hold MODE until the LCD shows "Pairing in Progress". Release the button.
- WIthin 2 seconds, the LCD will show "Paired". If it fails to pair, the LCD will show "Retry again". If this happens, wait 5 seconds and repeat the above procedures.

For any additional remote controls, you will also need to synchroize those remote controls to the BlueCube Media Player (AQ-BC-6BT).

- If the pairing process is not successful, try again to put your remote close to the dongle.
- Depending on the frequency of usage, the remote might drain its battery. Please charge the remote before use. If the LCD shows nothing, it means that the battery has been drained.
- If you have lost your remote control and buy a new remote control, please follow the above steps to pair the remote control

2.1 Wireless Handheld Remote Control




Buttons		AUX IN Mode	Bluetooth Mode
Power	(1)	Press once: Toggle Operational mode to Standby mode or vice versa	
Mode/Pair	MODE	Press once: Change the source Press and hold: Pair	
Volume Up	+	Press once: Volume up Press and hold: Fast volume up	
Volume Down	-	Press once: Volume down Press and hold: Fast volume down	
Fast Forward	≫ I	Press once: no function Press and hold: no function	Press once: Next track Press and hold: Fast Forward
Fast Rewind	I	Press once: no function Press and hold: no function	Press once: Previous track Press and hold: Fast backward
Play/ Pause	►II	Press once: Toggle mute Press and hold: no function	Press once: Play/Pause Press and hold: no function
1	1	Press once: Toggle Pump 1 on or off Press and hold: no function	
2	2	Press once: Toggle Pump 2 on or off Press and hold: no function	
3	3	Press once: Toggle Pump 3 on or off Press and hold: no function	
EXT Trigger	<i>‡</i>	Press once: Toggle EXT trigger ON (12V dc) or OFF Press and hold: no function	
Audio	AUDIO	Press once: no function Press and hold: no function	
VBass	VBASS	Press once: Toggle VBass ON or OFF Press and hold: no function	

2.2 Using Audio Menu on Handheld Remote Control (purchased separately)

BlueCube+ Media Player (AQ-BC-6UBT) has equiped with a audio DSP to meet different listening experiences.

- 1. To enter audio menu, press once **AUDIO** button.
- 2. Each press of **AUDIO** button will advance to the next audio setting as described on the right.
- 3. In the audio menu, press and hold will save and exit the audio menu to the original mode.

If you have chosen preset equalizer (Rock, Classic, or Pop), the previously set Bass, Treble will be overrided.

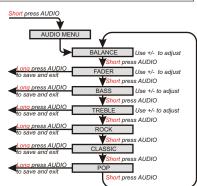

FCC ID:WBQAQRFDM6T Made in China