


AQ-RF34


Floatable Water-Resistant
RF Wireless Remote With White LED LIGHT

1. How to install the Receiver

Connect the RF Receiver to the DVD/CD/IP.
When installing the receiver do not put it in any metal shielding for better reception.

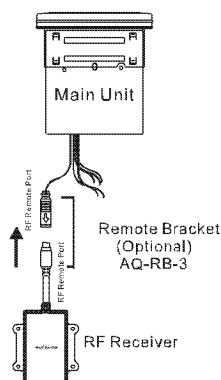

2. Key Functions

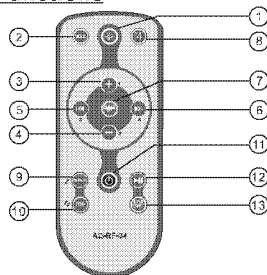

1. Press and hold Light (☼) button to work as a white LED light.
2. Press MODE button to switch modes.
3. Use Volume + to raise the sound volume.
4. Use Volume - to lower the sound volume.
5. Press (⏮) button to seek down/select the lower channel/track down, etc in different modes. Or hold the button to turn down/fast channel down/fast rewind, etc in different modes.
6. Press (⏭) button to seek up/select the higher channel/track up in different modes. Or hold this button to tune up/fast channel up/fast forward, etc in different modes.

7. Press "Audio/SEL" button to access the Audio menu to adjust the menu items. The main unit will automatically exit the audio menu after five seconds of inactivity. You can also press this button to confirm any settings or entering any channel.
8. Press MUTE (🔇) once to turn sound off or on.
9. Press MENU button to access menu. Or press and hold this button to access 12V (🔌) control.
10. Press the TOP button to access TOP. (Contact manufacture for details on this function) Or press and hold this button to access 12V (🔌) control.
11. Press POWER (🔌) once to turn on or off the unit.
12. Press PLAY/PAUSE (⏮⏭) button to resume or pause the disc or iPod playback that is currently being played.
13. Press BAND/SEARCH to change bands in Tuner or SAT mode. Hold this button in SAT mode to SAT search. Press this button in iPod mode to iPod search.

3. Highlighted Features

- DC + 12V Power Out
This Remote has two button named 12V_1 (🔌) and 12V_2 (🔌). These will be used to control the main unit transmit switching signal to the receiver which will have 2 trigger wire outputs capable of driving 12VDC/350mA for operating relays. The 2 triggers will be activated On/Off via
 - Trigger 1 (12V_1) 🔌: Press and hold "MENU" (9) button (>3 second);
 - Trigger 2 (12V_2) 🔌: Press and hold "TOP" (10) button (>3 second).

5. Specifications



RF Range : Up to 20 Feet

Remote Control Dimensions (H x W x D):
150 x 60 x 11 mm

RF Receiver Dimensions (H x W x D):
87 x 79 x 17mm

Note: Specifications are typical. Individual units may vary. Specifications are subject to change and improvement without notice.

4. Contents

1. RF Receiver  x 1 pcs
2. Remote Control with jacket  x 1 pcs
3. 3V Lithium Battery x 1 pcs
4. User Manual x 1 pcs

6. How to pair Remotes

Each receiver can support up to 10 Remote Controls at the same time.

1. Turn Stereo ON
2. Make sure receiver is connected to RF remote port on Stereo
3. Press and hold MUTE (🔇) button for 10 seconds on remote
4. Stereo should go into mute mode and remote will be paired.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.