

6. Customizing the mouse functions

With the software provided, eight commonly-used tasks can be assigned to three programmable wheel buttons

- A. Double click the "Wheel Mouse" icon  at the lower right corner of Windows control panel.
- B. Select the "Programmable Button" to assign many frequently-used Windows and the Web functions as below:



Auto Scroll

Move the documents in the direction with just moving the mouse



Third Button

Third button



Magic Jump

Magic Jump lets you open eight special functions quickly



Double Click

You can assign the "Double Click" function to reduce extra clicks



Switch AP

Quickly switch from one open application to another without moving the mouse



Back

Return to the last page in the Internet



Data Zoom

Magnify or de-magnify the data view



Forward

 
Go to the next page in the Internet

◆ Trouble shooting


- (1) Make sure you have connected the receiver correctly to the computer's USB or Ps2 port.
- (2) For the best performance, we suggest you locate the receiver with a distance from other electrical devices, such as the computer, the computer monitor or external storage drives.
- (3) Make sure you have set the communication between the receiver and the mouse. Refer to the channel setting instruction in your manual.
- (4) Some system devices might conflict with the mouse. Confirm the IRQ/address settings of these devices for conflicts, and change the settings as required.
- (5) Make sure that you are not working the mouse on glossy or reflective surfaces.
- (6) Try unplugging then reconnecting the receiver cable to your computer.

◆ Battery use reminders

- (1) Please make sure the batteries used for recharging are "Rechargeable Batteries".
- (2) To prevent an over-recharge, to remove the batteries from the receiver right after being fully recharged is strongly suggested.
- (3) Remove worn-out batteries from equipment immediately and dispose of promptly.
- (4) Keep all batteries (used or new) out of the reach of children.
- (5) To have the batteries with a regular check and replace new batteries if not used for a long time.

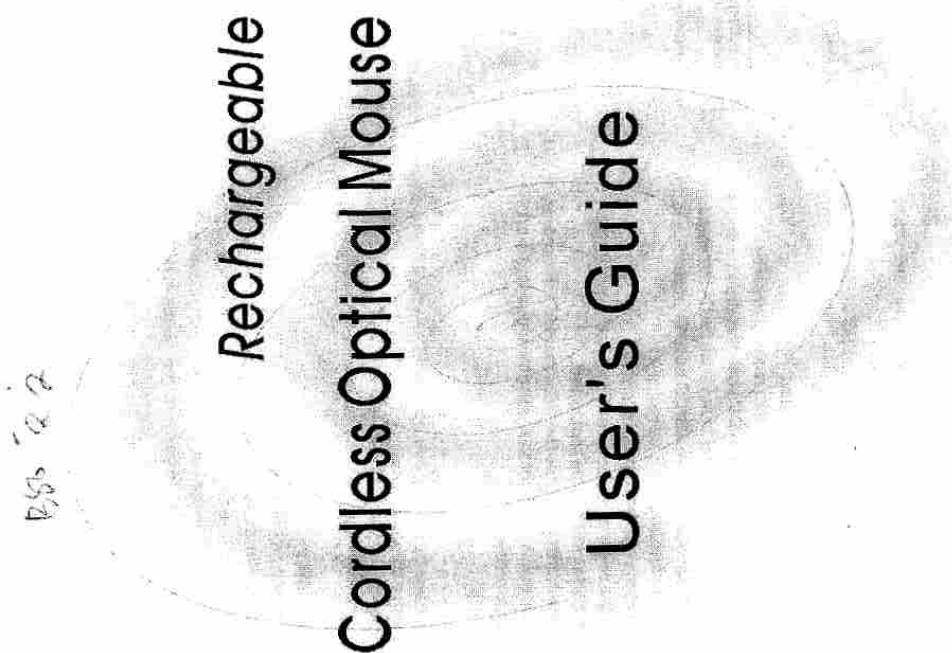


 Congratulations on your purchase of the Rechargeable Cordless Optical Mouse, which includes the radio frequency and optical technologies for superior performance on your PC.

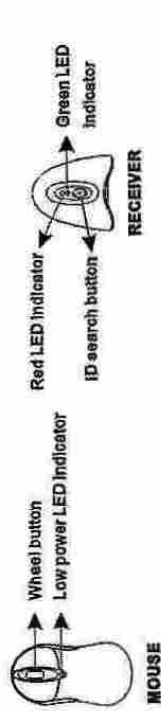

1. Insert the batteries

 - A. Remove the battery compartment cover on the bottom of the mouse.
- B. Fit in the batteries accordingly to the diagram indicated in the battery cabinet.
- C. Close the battery compartment cover.

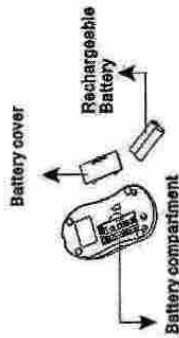

⚠ A wrong battery placement may cause a battery overheat.

IMPORTANT
 > For a supreme battery performance and maintaining its lifetime, it is **MUST** to fully charge the rechargeable batteries contained in this package at the first-time use. (Please refer to battery recharging instruction to recharge the batteries.)
 > The Cordless Optical Mouse unit offers a strong power saving management. Once the mouse enters the sleeping mode, "to click any button of the mouse" is compulsory to wake it up.

2. Connect the receiver

- A. Turn off your PC.
- B. Connect the receiver cable to PS2 or USB port on PC
- C. Turn on your PC.



3. Establish communication between the mouse and receiver

- A. Press the ID search button on the receiver, and note the red LED will blink slowly.
- B. Press the ID change button on the bottom of the mouse to set a new ID. The red LED indicator will blink at a faster rate until an identical ID is located.



C. The red LED indicator on the receiver will blink any time the mouse sends it a signal.

4. Recharge the batteries

When the mouse LED Indicator signals, please replace a new pair of batteries and, have the worn-out pair recharged according to the following instruction.

A. Through PC's USB port

A smart recharging system is provided in the receiver to recharge the batteries through your PC via USB port.

 
- (1) Take out the batteries from the mouse.
- (2) Open the cover at the bottom of the receiver and insert the batteries into it to be recharged.
- (3) Connect USB cable of the receiver to PC's USB port, and make sure your PC's power is on.



B. Through AC/DC adaptor (Optional)

The batteries in the mouse are also rechargeable by plugging in an adaptor into the DC socket at the side of the receiver. (The AC/DC adaptor is not included in the standard package. Please prepare an AC/DC adaptor according to the specifications besides if necessary.)

- (1) Take out the batteries from the mouse.
- (2) Open the cover at the bottom of the receiver and insert the batteries into it to be recharged.
- (3) Plug the AC/DC cord into the DC socket of the receiver, and connect the adaptor to a wall power outlet to start the recharge process.

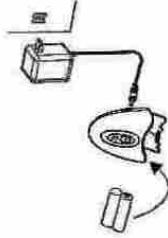

IMPORTANT
 > **DO NOT** recharge the batteries through PC's USB port and DC/AC adaptor of the same time. This will cause serious damages to the mouse.
 > An additional pair of rechargeable batteries is recommended. The spare batteries allow the mouse to work continuously even while the existing batteries are being recharged.

Ⓢ After recharging

The recharging process takes about four hours. After recharging, please:

- (1) Disconnect the recharging cable from the mouse.
- (2) Remove the fully recharged batteries out from the receiver.
- (3) Insert the batteries back to the battery compartment of the mouse
- (4) RE-SET communication between the mouse and the receiver.

5. Install the software

A. Before installing the driver, we suggest you check if any other mouse driver is installed in your system. If yes, in order to avoid any conflicts, please un-install or remove that driver before installing the new driver.

B. Insert the driver diskette into drive A or B, choose the "Start" menu, and select "Run". Type "drive : ; Setup" in the command line box, and select "OK". Then, follow the instructions on the screen, and RESTART the PC when the installation is completed.

Information to User

Notice 1

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

Notice 2

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.