


5. Customizing the mouse functions

With the software provided, eight commonly-used tasks can be assigned to the programmable wheel button

- A. Double click the "Wheel Mouse" icon  at the lower right corner of Windows control panel.
- B. Select the "Programmable Button" to assign many frequently-used Windows and the Web functions as below:



Auto Scroll
Move the documents in the direction with just moving the mouse



Maple Jump
Maple Jump lets you open eight special functions quickly.



Switch AP
Quickly switch from one open application to another without moving the mouse



Data Zoom
Magnify or de-magnify the data view



Third Button
Third button



Double Click
You can assign the "Double Click" function to reduce extra clicks



Back
Return to the last page in the Internet



Forward
Go to the next page in the Internet

Rechargeable Cordless Optical Mouse

User's Guide


❖ Troubleshooting

- (1) Make sure you have connected the receiver correctly to the computer's USB or PS/2 port.
- (2) For the best performance, we suggest you locate the receiver with a distance from other electrical devices, such as the computer, the computer monitor or external storage drives.
- (3) Make sure you have set the communication between the receiver and the mouse. Refer to the channel setting instruction in your manual.
- (4) Some system devices might conflict with the mouse. Confirm the IRQ/address settings of these devices for conflicts, and change the settings as required.
- (5) Make sure that you are not working the mouse on glossy or reflective surfaces.
- (6) Try unplugging then reconnecting the receiver cable to your computer.

❖ Battery use reminders


- (1) Please make sure the batteries used for recharging are "Rechargeable batteries".
- (2) To prevent an over-charge, to remove the batteries from the receiver right after being fully recharged is strongly suggested.
- (3) Keep all batteries (used or new) out of the reach of children.
- (4) To have the batteries with a regular check and replace new batteries if not used for a long time.

Congratulations on your purchase of the Rechargeable Cordless Optical Mouse, which includes the radio frequency and optical technologies for superior performance on your PC.

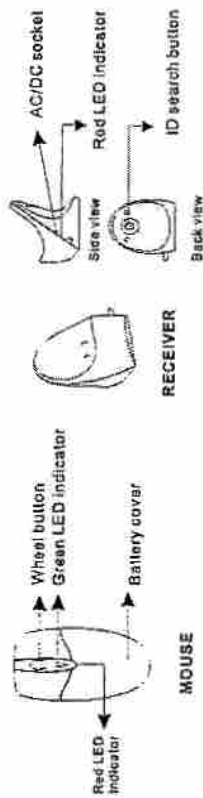

1. Insert the batteries

- A. Remove the battery compartment cover on the mouse.
- B. Fill in the batteries accordingly to the diagram indicated in the battery cabinet.
- C. Close the battery compartment cover.

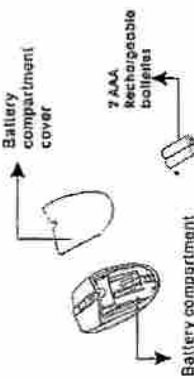

A wrong battery placement may cause a battery overheal.

IMPORTANT:
 - For a supreme battery performance and maintaining its lifetime, it is a **MUST** to fully charge the rechargeable batteries contained in this package at the first-time use. (Please refer to battery recharging instruction to recharge the batteries.)
 - The Cordless Optical Mouse unit offers a strong power saving management. Once the mouse accesses the sleeping mode, to click any button of the mouse is compulsory to wake it up.

2. Connect the receiver

- A. Turn off your PC.
- B. Connect the receiver cable to PS2 or USB port on your PC
- C. Turn on your PC.



3. Establish communication between the mouse and the receiver

- A. Press the ID search button on the back of the receiver, and note the red LED will blink slowly.
- B. Press the ID change button on the bottom of the mouse to set a new ID. The receiver's red LED indicator will blink at a faster rate until an identical ID is located.



- C. The red LED indicator on the receiver will blink any time the mouse sends it a signal.

4. Recharge the batteries

When the mouse Low power LED indicator signals, please recharge the batteries by using the following solutions provided.

Mouse Green LED mode
 * Light ON - Recharging
 * Light OFF - Recharging completed

A. Recharging via the cradle receiver

- (1) Recharging through PC's USB port
 Connect USB cable of the cradle receiver to an available PC's USB port. Make sure the power of your PC is on to start the recharging process.



- (2) Recharging through DC/AC adaptor (Optional)

Connect the DC/AC adaptor cord into the DC socket and plug the adaptor into a wall power outlet to start the recharging process. (Please refer to the AC/DC adaptor specification besides.)



B. Recharging directly from the mouse

- (1) Recharging through DC/AC adaptor (Optional)

Plug the AC/DC cord into the DC socket of the mouse, and connect the adaptor to a wall power outlet to start the recharge process. (Please refer to the AC/DC adaptor specification besides.)



- (2) Recharging through PC's USB port

Plug the USB charging cable contained in the package, to an available PC's USB port and the socket on the top end of the mouse. Make sure your PC's power is on and then, the recharging process begins.



IMPORTANT:
 - DO NOT recharge the batteries through PC's USB port and DC/AC adaptor at the same time. This may cause damages to the mouse.
 - AC/DC adaptor is NOT included in the standard package. Users may need to purchase a proper one according to the specification.

@After recharging

The recharging process takes about four hours. After recharging, please:

- (1) Remove the mouse from the cradle receiver or disconnect the charging cables.
- (2) Make sure the communication between the mouse and the receiver is still available after completing recharging batteries. If not, please refer to the ID setting instruction in the manual to re-set the communication.

5. Install the software

- A. Before installing the driver, we suggest you check if any other mouse driver is installed in your system. If yes, in order to avoid any conflicts, please un-install or remove that driver before installing the new driver.
- B. Insert the driver diskette into drive A or B, choose the "Start" menu, and select "Run". Type (drive) : Setup in the command line box, and select "OK". Then, follow the instructions on the screen, and RESTART the PC when the installation is completed.

Information to User

Notice 1

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

Notice 2

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.