

Wireless Optical Mouse

User's Guide



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
 
FCC NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Model No: B52


*All other brands and trademarks are the properties of their respective owners.
The product specifications are subject to change without notice.*

Congratulations on your purchase of the Rechargeable Cordless Optical Mouse, which includes the radio frequency and optical technologies for superior performance on your PC.

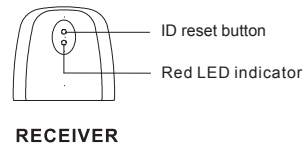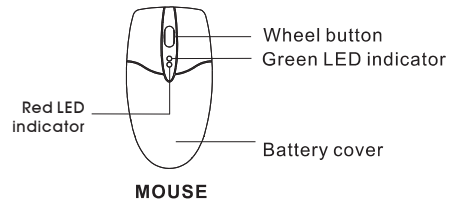

1. Insert the batteries

 - Remove the battery compartment cover on the bottom of the mouse.
- Fit in the batteries accordingly to the diagram indicated in the battery compartment.
- Close the battery compartment cover.

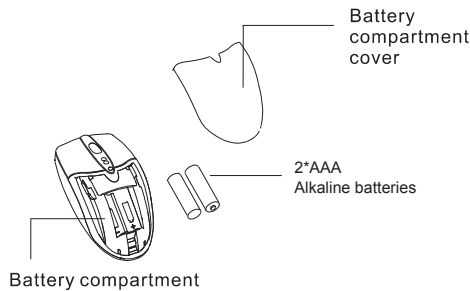


A wrong battery placement may cause a battery overheat.

Note

The Cordless Optical Mouse unit offers a strong power saving management function. Once the mouse accesses the sleeping mode, "to click any button of the mouse" is compulsory to wake it up.


2. Connect the receiver

 - Turn off your PC.
- Connect the receiver to USB port on PC.
- Turn on your PC.

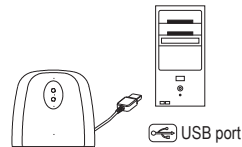


3. Establish communication between the mouse and receiver

 - Press the ID reset button on the receiver, and note the red LED will blink slowly.



 - Press the ID reset button on the bottom of the mouse to set a new ID.
The red LED indicator will blink at a faster rate until an identical ID is located.



Note
To turn on/off the power, press the button and hold for **three second**. Please turn OFF the power when you do not use the mouse to save the power.



NOTE
An appropriate environment setting can ensure the wireless device performance of a Max 1.0m transmission distance.

- The red LED indicator on the receiver will blink any time the mouse sends it a signal.

4. Battery Replacement

- When the Low Battery Indicator LED flashing, please replace new batteries.

❖ Trouble shooting

- Make sure you have connected the receiver correctly to the computer's USB or PS2 port.
- For the supreme performance, we suggest you locate the receiver with a distance from other electrical devices, such as the computer, the computer monitor or external storage drives.
- Make sure you have set the communication between the receiver and the mouse. Refer to the channel setting instruction in this manual.
- Some system devices might conflict with the mouse. Confirm the IRQ/address settings of these devices for conflicts, and change the settings as required.
- Try unplugging then reconnecting the receiver cable to your computer.
- When the battery power is low, the mouse's performance or the transmission distance may not be good. Please replace the new battery.

❖ Battery use reminders

- Keep all batteries (used or new) out of the reach of children.
- To have the batteries with a regular check and replace new batteries if not used for a long time.
- Remove batteries from the electrical device if the device is not going to be used for a long time.
- If the performance of the batteries decrease substantially, it is time to replace the batteries.
- Do not mix different types of batteries (e.g. NiMH, NiCd, alkaline, etc) in the mouse.