



LIVE TV DVR STREAM

TIVO EDGE™

FOR ANTENNA | LIVE TV / DVR / STREAMING PLAYER

MADE BY ARRIS



SETUP & PRODUCT FEATURES

WELCOME TO THE TIVO EDGE FAMILY.

Say hello to TV heaven. TiVo EDGE puts all the smile-making, heart-swelling, nail-biting entertainment out there in one perfect place. When you can't wait to watch your favorites, just speak into the remote and TiVo EDGE searches across live TV, your recordings and even your streaming apps like Netflix, Hulu and more.¹ TiVo EDGE also lets you skip commercials, works with your HD antenna and comes with tons of DVR space for an entertainment experience like no other. All the best shows and a better way to watch them. TiVo EDGE.

PLEASE DO NOT RETURN YOUR DEVICE TO THE RETAILER.


Having challenges with your TiVo EDGE? Don't sweat it! Take advantage of our 30-day money-back guarantee, and contact our friendly customer service agents at (877) 367-8486 (available weekdays: 7 a.m. to 6 p.m. PT, weekends: 8 a.m. to 5 p.m. PT). We can work together to make sure your TiVo story has a happy ending.

STEP 01

ACTIVATE YOUR TIVO SERVICE


If you bought your TiVo EDGE for antenna at a retail location such as Best Buy or Amazon.com, activate your service by scanning the QR code on your TiVo EDGE box, visiting tivo.com/activate or by calling TiVo Customer Support at (877) 367-8486. You'll need your 15-digit TiVo Service Number (TSN) found on the bottom of your TiVo EDGE.

WRITE IT HERE FOR EASY REFERENCE:

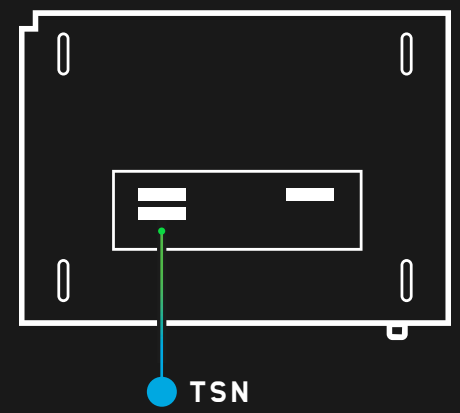

STEP 02

CONNECT YOUR TIVO EDGE FOR ANTENNA

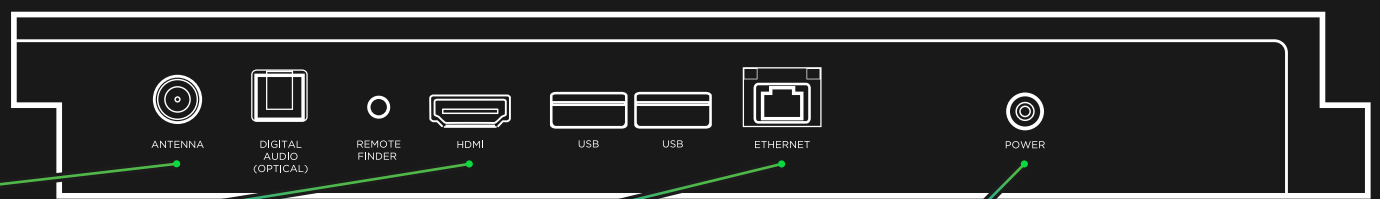

1 ANTENNA
Connect an HD antenna (sold separately).

2 HDMI
Connect the included 4K-ready HDMI cable.
Note: If you use a third-party cable, always use one that is marked as high-speed or 4K-ready.

3 HOME NETWORK
Connect your TiVo EDGE to your home network via WiFi or Ethernet.
Note: If using Ethernet, please make sure the cable is Cat5e or Cat6e. For more networking options and instructions, visit tivo.com/howto

4 POWER
Plug in the power cord.

STEP 03

COMPLETE GUIDED SETUP

Turn on your TV. When you see the TiVo Welcome screen, you're ready to begin Guided Setup for your TiVo EDGE. Just follow the on-screen instructions.

If you don't see the TiVo Welcome screen, use the INPUT, SOURCE or TV/VIDEO button on your **TV remote** to select the correct video input for TiVo EDGE.

STEP 04

PROGRAM YOUR TIVO REMOTE

The **TV POWER**, **VOLUME**, **MUTE** and **INPUT** buttons on your TiVo remote can be programmed to control your TV and/or A/V receiver.

Press the **TIVO BUTTON** to bring up the Home screen, select the menu icon (three horizontal bars) and select *Settings*. Locate *Remote Control Settings* and follow the on-screen remote control setup instructions to program your remote.

TIVO REMOTE BUTTONS

- 1** The **TIVO BUTTON** takes you to the Home screen, where you can find your shows or change your settings.
- 2** If programmed (see Step 4 above), **TV PWR** turns your TV on or off.
- 3** If programmed (see Step 4 above), use **INPUT** to select the input for your TV.
- 4** **BACK** takes you back to the previous screen.
- 5** Use the **ARROW** buttons to navigate the TiVo menus. In live TV, press **UP** for the mini guide, **DOWN** for SmartBar®, **LEFT** for your favorite channels, and **RIGHT** to see what's playing on other tuners.
- 6** Press and hold the **1** button to issue voice commands, like "Show me movies with Tom Hanks." Press and release the button to see more examples.
- 7** If programmed (see Step 4 above), **VOLUME** and **MUTE** control the volume on your TV or A/V receiver.
- 8** **REPLAY** repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show. When browsing, press to jump to the first item in a strip.
- 9** The **A**, **B**, **C** and **D** buttons control viewing options (look for on-screen tips) and turn accessibility features on or off. Press and hold **A** for the screen reader, **B** for closed captioning, **C** for video description or **D** to remove a show from Continue Watching without deleting it. When tuned to a standard definition (SD) program, the **D** button can also be used as a shortcut to jump to the HD version of the same channel.
- 10** **CLEAR** dismisses items appearing over video (including the guide), and deletes titles from My Shows and the To Do List.
- 11** **LIVE TV** takes you to live TV, and additional presses of Live TV let you cycle through the other tuners.
- 12** **INFO** shows the info card while watching a show. Press this button again to make it disappear.
- 13** Press **OK** to choose menu items.
- 14** Use **EXIT** to close certain apps or to watch full-screen video on the Home screen.
- 15** **GUIDE** takes you to the on-screen program guide.
- 16** Press **RECORD** to record the show you're watching or to set up a recording for a show selected in the guide.
- 17** While watching shows, use these buttons to control playback. Press **REWIND** and **FAST-FORWARD** up to three times for three speeds. In the TiVo menus, use **REWIND** and **FAST-FORWARD** to move quickly through strips. Press **PLAY** and then **OK** to start/stop QuickMode®.
- 18** This button allows you to play live or recorded TV in slow motion. Pressing this button while on the main menu turns the live video window on/off.
- 19** **ADVANCE** moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press **ADVANCE** to jump to the next tick mark when fast-forwarding or rewinding.
- 20** Press **SKIP** to jump past commercial breaks when you see the on-screen tip or hear the SkipMode® chime. (Available for SkipMode-enabled shows.)
- 21** Press the **NETFLIX** button to launch the Netflix app.
- 22** **ENTER/LAST** returns to the last channel viewed on a tuner.

The 4-tuner, 2TB TiVo EDGE comes with the TiVo LUX Remote™ with adaptive backlit buttons for ease of use, even in a dark room.



