

		样机测试：NC07	测试时间2021/3/17-3/22	
NO.	功能 Function	操 作 Operation	LED 状 态 LED Status	提示音
1	降噪开/通透模式/降噪关转换 ANC on/AMBIENT/ANC off	必须先开机（关机状态下长按MFB键约1s/Long press the MFB key for about 1s under shutdown） 单击NC/AMBIENT按键，打开降噪模式；单击NC/AMBIENT按键，切换到通透模式；单击NC/AMBIENT按键，切换到降噪关模式/Click the NC/AMBIENT button to shift	ANC开 白色指示灯亮 /ANC on white light is on	降噪模式/ 通透模式/ 降噪关 ANC mode/tran sparent mode/ANC off
2	降 噪 模 式 /The noise reduction mode	1. ANC降噪可以与蓝牙同时使用 2. 耳机有电时，ANC降噪也可以与AUX同时使用 1. ANC noise reduction can be used together with Bluetooth 2. When the earphone is powered, ANC noise reduction can also be used together with AUX		/

3	开机/Power On	关机状态下长按MFB键约3s，耳机进入待配对状态 /Long press the MFB key for about 1s under shutdown	白色指示灯常亮1s/The white light always goes on for 1s	开机 power on
4	关机/Power off	开机状态下长按MFB键约3s/Long press the MFB key for about 3s when the machine is on	红色指示灯常亮1s 后熄灭/The red indicator light always goes on for 1 second and then goes	关机 power off
5	配对连接成功/Paired connection successful	手机搜索耳机并连接/The phone searches for headphones and connects		蓝牙连接 bluetooth connected
6	连接断开/Connection is broken	手机和耳机的连接超出有效范围(>10米) /Phone and earphone connection out of range (> 10 m)		蓝牙断开 bluetooth disconnected
7	Aux输入/Aux input	插入 line-in/Insert the line - in	/	/
8	调节音量 /Adjust the volume	短按音量 + 按键增加音量 /Short press volume + button to increase volume	/	/

9	调节音量 /Adjust the volume	短按音量 - 按键减小音量 /Short press volume - Button to reduce volume	/	/
10	曲目选择/Songs to choose	双击音量 + 按键为下一曲 /Double-click the volume + button for the next song 双击音量 - 按键为上一曲 /Double-click Volume - button for the previous track	/	/
11	暂停/播放 Pause/Play	短按 MFB 按键 /Short press the MFB button	/	/
12	接听/结束来电 Answer/end calls	短按 MFB 按键 /Short press the MFB button	/	/
13	拒接电话 /Refuse to answer the phone	长按音量 + 键2秒拒接电话 /Long press the volume + button for 2 seconds to reject calls	/	/
14	恢复出厂设置 /factory data reset	充电状态, 长按MFB键+音量加 键 3s/When in charge, long/ press MFB + volume + 3s		
15	Reset /复位	如果耳机在即使充满电后仍无 法开启或在使用时无反应, 请 按照下述步骤将其复位: 用充电线将耳机连接至计算机 的USB端口或USB电源适配器, 红色指示灯亮起表示耳机已复 位成功。 If the headset does not turn on even after full charge or does not respond during use, please follow the following steps to reset it:Connect the headset to the COMPUTER's USB port or USB power adapter with the charging cable. The red indicator lights up to indicate that the headset has been reset	红色指示灯常亮/The red indicator light is always on	
16	低电报警/Low power alarm	电量是小于等于3.35V	红灯闪/The red light flashing	请充电 battery low
17	充电/charging	使用DC5V电源输入USB-C充电线 对耳机充电/Use DC5V power to input USB-C charging cable to charge the headset	在充电过程中红色指示 灯常亮, 电池充满电后 红色指示灯熄灭, 白色 灯常亮/The red indicator will	/

18	固件升级 /The firmware update	插入USB-C，双击开机键进入DFU模式，通过电脑升级 /Insert USB-C, double-click the power button to enter DFU mode, and upgrade through the computer	HID设备DFU升级/HID device DFU upgrade	
19	DUT测试模式 /DUT test mode	1. 配对状态同时三击MFB键 2. 完成DUT操作后需要重新插拔USB线进行耳机充电复位 1. Three MFB keys at the same time 2. After DUT operation, it is necessary to replug and unplug the	红蓝指示灯同时快闪3次/The red and blue lights flash three times at the same time	
20	兼容/Compatible with	手机，电脑，平板电脑 /Phones, computers,		
21	电量显示/Power display 4.2V 100% 4V 80% 3.8V 60% 3.6V 40% 3.35V 20%	iPhone, iPad设备, Android 8.0 以上/ IPhone, iPad device, Android 8.0 above		

备注

开机超过10分钟未连接蓝牙音频设备自动关机，如连接音频设备则保证不能自动关机/The Bluetooth audio device will shut down automatically if it is not connected to the audio device for more than 10 minutes. If it is connected to the audio device, it will not shut

每3分钟提示一次 /Prompt every 3 minutes

先将USB线
一端插入
电脑另一
端插入耳
机 /Plug
one end
of the
USB cable
into the
computer
and plug
in the
headset

