

Watching TV	2.1
Watching Digital TV	2.2
To configure the menu	2.3
To Configure TV Channels	2.4
To Select TV/External Input	2.5
Adjusting the Picture	2.6
Adjusting the Sound	2.7
Configuring the PIP/POP/PBP Functions	2.8
To Configure the SET UP	2.9
External Control Device Setup	2.10



Chapter 2

Using the LCD TV

2.1 Watching TV

1 Check the antenna connection. (For more information on connection, see section '1.4 Connecting the LCD TV and Peripheral Devices'.)

2 Press the power button on the rear panel of the LCD TV.



3 Press the <POWER> button on the remote control.

4 Press the <TV/AV> button on the remote control, and press the number button to select a channel (For example, if selecting channel no. 99, press the 9 button twice on the remote control).

5 Press the < VOL- VOL+ > button to adjust the volume.

N · O · T · E**▶ To mute the LCD TV sound**

Press the <MUTE> button on the remote control once to mute the LCD TV sound. Press the button once again to turn the sound back on.

**▶ To completely turn off the LCD TV power.**

❶ Press the <POWER> button on the remote control. The LCD TV will be turned off and remain in standby mode.



❷ Press the power button on the rear panel of the LCD TV (or unplug the power cord from the wall outlet).

