

2.2 Watching Digital TV

▶ To view information on the current channel

- 1 Press the < OK > button.


The information on the current channel will be displayed on the screen.



▶ To view program guide for the digital TV

1 Press the < EPG > button.

Pressing this button while watching the TV displays a program guide for the currently selected channel.

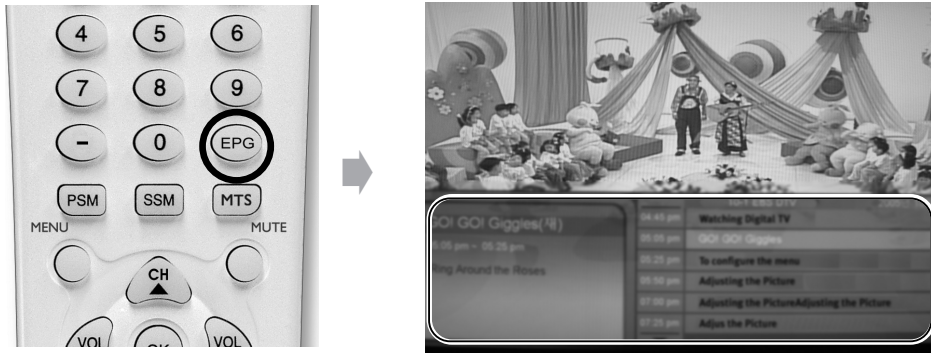

N · O · T · E

▶ Press the EPG button again to clear the program guide.


2.3

To Configure the menu

To configure the LCD TV functions, press the [MENU] button. Knowing the method for configuring the menu will make using the LCD TV much easier.

▶ Menu Settings

- 1 Press the power button on the rear panel of the LCD TV, and press the <POWER> button on the remote control.
- 2 Press the <MENU> button on the remote control.
Press the <CH- / CH+> button on the remote control to navigate to different menus.

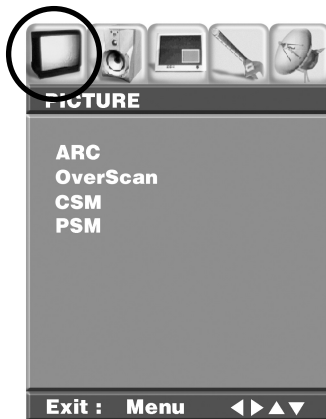

<PICTURE>



<SOUND>



<PIP/POP/PBP>




<SET UP>



<CHANNEL>

- 3 Press the <OK> button or the <CH- CH+> button on the remote control to select the menu to configure. Submenus will be available for each selection.

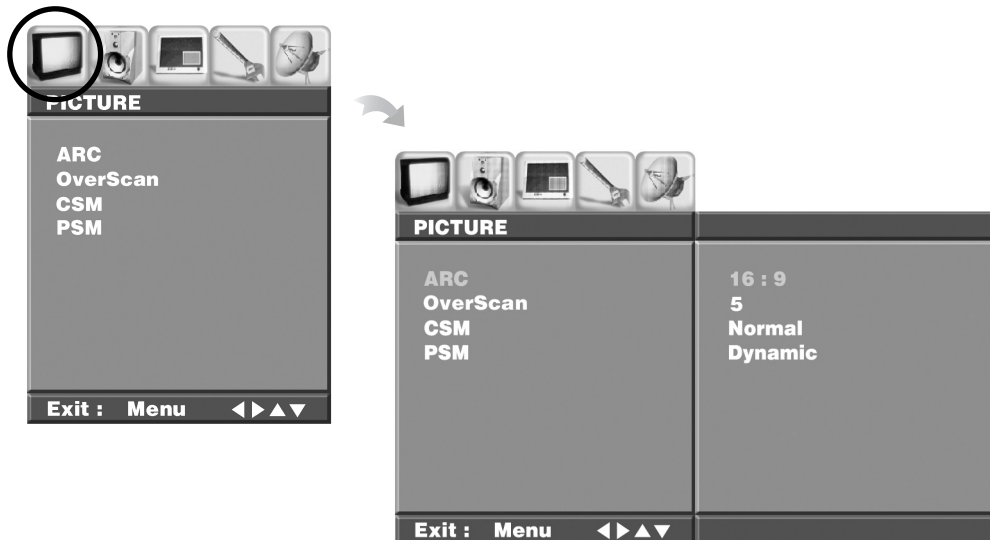

- 4 In the submenu, use the <CH- CH+> button on the remote control to navigate to different items. Use the <VOL- VOL+> button to make adjustments. When selecting 'PSM' submenu, use the <VOL- VOL+> button to make adjustments, and then press the <OK> button on the remote control to make a selection (Select the 'User' item under the 'PSM' submenu).

