## Bluetooth® Speaker User Manual Thank you for purchasing the Vivitar® BS-KI48 Bluetooth® Introduction music wirelessly using Bluetooth® technology, Easily connect to any mobile device for both conversation and HSP, HFP, A2DP and AVRCP profiles). Specifications Bluetooth Specification: V4.2

Vivitar® BS-KI48

With this speaker, you will enjoy listening to high quality

music listening. It also pairs with other Bluetooth-enabled devices (Bluetooth V4.2+EDR specification and Operation Frequency: 2.402-2.48GHz Supported Profile: HSP, HFP, A2DP, AVRCP

• Operation Range: Up to 33 feet(10 meters) . Play Time: About 6 hours Battery Type: 400mAh, 3.7V, Polymer Lithium Ion . Charge Time: About 2 Hours

In the Box

User Manual

instructions.

the user

BS-KI48 Bluetooth® Speaker

not place heavy objects on it.

time or during lightning storms.

USB Charging Cable

Safety Precautions

that produces heat. This may cause an explosion, degrade the performance and/or reduce battery life. . Do not modify, repair or disassemble device (especially the battery). Doing so will void the warranty. The battery in this device may present a risk of fire or chemical burns if misused or tampered with.

and unplug this device when not in use for long periods of

Please read this User Manual carefully and follow all

To avoid damage or malfunction of the speaker do not

drop it from high locations and/or on to hard surfaces, do

. Keep speaker away from humidity, water and other liquids.

electrical shock, explosion and damage to the device or to

as direct sunlight, radiators, stoves or any other apparatus

Do not place or keep this product near heat sources, such

If it does get wet, do not operate as this may cause an

Use only supplied and manufacturer-approved chargers

FCC Statement

particular installation. If this equipment does cause harmful interference to radio or television reception. which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

Reorient or relocate the receiving antenna.

measures:

This device complies with the part 15 of the FCC rules.

device may not cause harmful interference, and (2) this

device must accept any interference received, including

Caution: Changes or modifications not expressly approved

provide reasonable protection against harmful

interference in a residential installation. This

by the party responsible for compliance could void

the user's authority to operate the equipment.

interference that may cause undesired operation.

Operation is subject to the following two conditions: (1) this

Note: This equipment has been tested and found to comply This device must accept any interference received. with the limits for a Class B digital device, pursuant to including interference that may cause undesired

receiver

for help.

EC Declaration of Conformity

part 15 of the FCC Rules. These limits are designed to operation Note: The manufacturer is not responsible for ANY interference, for example RADIO or TV interference, caused by unauthorized modifications to this equipment generates, uses and can radiate radio frequency energy and, if not installed and used in equipment. Such modifications could void the user's accordance with the instructions, may cause harmful authority to operate the equipment. This product is C interference to radio communications. However, there is no guarantee that interference will not occur in a

certified according to the provision of the R&TTE Directive (99/5/EC). This declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Please note that this product uses radio frequency hands not harmonized within ELL Within the ELL this product is intended for use in Austria, Belgium

Denmark, Finland, France, Germany, Greece, Ireland,

Italy, Luxembourg, the Netherlands, Portugal, Spain

- Increase the separation between the equipment and

Connect the equipment into an outlet on a circuit

different from that to which the receiver is connected

- Consult the dealer or an experienced radio/TV technician

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

1. Connect the USB cable to the speaker 2. Connect to the correct outlet (wall, computer).

3. When the charger is connected to the speaker, the red indicator light will turn on.

12345

Sweden, and United Kingdom and within EFTA in

Iceland, Norway and Switzerland.

The BS-KI48 Speaker has a built-in, rechargeable

Charge the battery fully before first use.

lithium-polymer battery. To avoid damage, do not attempt to

remove the battery. The full performance of the battery is

achieved after two or three charging-discharging cycles.

Note: Charging the battery fully may take up to 2 hours.

Location of Controls

③ Indicator LED/Siri

4 Charging Port

(5) Auxiliary Port

First Time Use

Charging the Battery

2 Power/ Play/Pause/Answer

Microphone

6 months. **Battery Notes** 

discharge of the battery, charge the speaker at least every

used for a long period of time. To avoid a complete

Ensure that the battery is fully charged if the speaker is not

every 30 seconds.

Important!

on a regular basis.

When the battery power is low, the speaker will beep

4. When the battery is fully charged, the red indicator light

will turn off. Disconnect the charger from the speaker

Note: Overcharging could reduce the life of the battery. A

charged battery will lose its capacity if it is not used

and the outlet. The speaker is ready for use.

## Pairing with your Phone Music Playback NOTWITHSTANDING THE FOREGOING, CONSUMER'S 7) Do not block any ventilation openings, Install in Vivitar One Year Warranty purchase, a written explanation of the problem, and a valid 1. Place the speaker in close range of a Bluetooth® • Play/Pause button: Press to play or pause music playback. This warranty covers the original consumer purchaser only return address to the authorized service center at your RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE accordance with the manufacturer's instructions. enabled mobile phone. and is not transferable. expense. Do not include any other items or accessories with PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR 8) Do not install near any heat sources such as radiators, 2. Press and hold POWER button for 3 seconds, Until Using the Phone Function the defective product. Any products received by the THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER heat registers, stoves, or other apparatus (including indicator lights flash blue and red. This warranty covers products that fail to function properly • Last Number Re-dial: Press authorized service center that are not covered by warranty THAN THE ORIGINAL CONSUMER WHO PURCHASED THE amplifiers) that produce heat. 3. Set your mobile phone to pairing mode (as explained in UNDER NORMAL USAGE, due to defects in material or the ANSWER button twice to will be returned unrepaired. PRODUCT AND IS NOT TRANSFERABLE. 9) Protect the power cord from being walked on or operating instructions for your phone) and search for Siri/ Google workmanship. Your product will be repaired or replaced at re-dial the last number pinched particularly at plugs, convenience receptacles. Rluetooth® devices no charge for parts or labor for a period of one year. Some countries, states or provinces do not allow the Vivitar One Year Warranty (continued) and the point where they exit from the apparatus. 4. Select "Viv speaker" from the list shown on your phone. . Answering a Call: Short press exclusion or limitation of incidental or consequential NO WARRANTIES. WHETHER EXPRESS OR IMPLIED. What Is Not Covered by Warranty 10) Only use attachments/accessories specified by the 5. If requested, enter the PIN code "0000" and confirm the the ANSWER button to damages or allow limitations on warranties, so limitation or INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED Damages or malfunctions not resulting from defects in Play/Pause/Answer manufacturer entry. Once the pairing is successful, the BS-KI48 answer an incoming call exclusions may not apply to you. This warranty gives you WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A material or workmanship and damages or malfunctions from 11) Use only with the cart, stand, tripod, bracket, or table connects to your phone automatically before switching Reject an Incoming Call: specific legal rights, and you may have other rights that PARTICULAR PURPOSE. OTHER THAN THOSE EXPRESSLY other than normal use, including but limited to, repair by Press and hold the ANSWER button for 2 seconds to reject an specified by the manufacturer, or sold with the to standby mode. The indicator will flicker Blue. vary from state to state or province to province. Contact DESCRIBED ABOVE SHALL APPLY, DISTRIBUTOR FURTHER unauthorized parties, tampering, modification or accident. apparatus. When a cart is used, use caution when incoming call. your authorized retailer to determine if another warranty Note: If pairing is not completed within 10 minutes, the DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS moving the cart/apparatus combination to avoid injury Ending a Call: Short Press the ANSWER button to end a call. applies. This product is manufactured, distributed and sold To obtain Warranty Service and Troubleshooting speaker will turn off. If this happens, repeat the WARRANTY PERIOD STATED ABOVE, NO OTHER EXPRESS from tip-over. by SAKAR International, Inc. All other trademarks are the information: WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM pairing steps above. Siri/ Google assistant 12) Unplug this apparatus during lightning storms or when Call 1-800-592-9541 in the U.S. or Visit our website at OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE property of the respective owner, who has not sponsored Quickly tap the button twice to activate Siri or google assistant **General Operation** unused for long periods of time. endorsed or approved this product. www.vivitar.com BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR 13) Refer all servicing to qualified service personnel Turning ON/OFF REFUND OF THE ORIGINAL PURCHASE PRICE - AT To receive Warranty service along with the name and Important Safety Instructions Servicing is required when the apparatus has been 1 Press and hold the POWER button for 3 seconds to turn Wired External Audio Input DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE address of an authorized product service center, the original 1) Read these instructions. damaged in any way, such as power-supply cord or plug the speaker ON. If pairing was successful (instructions . You can also use the included REMEDIES OF THE CONSUMER, IN NO EVENT WILL consumer purchaser must contact us for problem 2) Keep these instructions. is damaged, liquid has been spilled or objects have above), the speaker will remain paired to your mobile 3.5mm Auxiliary Cable to DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE determination and service procedures. Proof of purchase in Heed all warnings. fallen into the apparatus, the apparatus has been connect audio devices through LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL the form of a bill of sale or receipted invoice, evidencing that 4) Follow all instructions exposed to rain or moisture, does not operate normally 2. Press and hold the POWER button for 5 seconds to turn. the AUX In port on your speaker. PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT the Product is within the applicable Warranty period(s), 5) Clean only with dry cloth. or has been dropped. the speaker OFF. NOT LIMITED TO. DAMAGES FOR LOSS OF PROFITS. MUST be presented in order to obtain the requested service. 6) Do not block any ventilation openings, Install in Note: The speaker will turn OFF automatically when not BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE It is your responsibility to properly package and send any accordance with the manufacturer's instructions connected to a mobile device for approximately 10 USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT defective products along with a dated copy of proof of AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. minutes Ver A