	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

KRT2

VHF Communication Transceiver



P/N 100-()-()

Operation and Installation Manual

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

Record of Revisions

Revision	Date	Subject
1	06 Juni 2010	Erstausgabe
2	20 Sep 2010	Revision Stecker / Redaktionelle Änderungen
3	05 Feb 2011	Editorial update
4	04 Mai 2012	Cable-harness correction
5	16 Mai 2012	Software advantage for battery indication, error reports

List of Service-Bulletins (SB)

Service-Bulletins have to be inserted in the manual, and entered in the table.

SB Number	Rev. No.	Date Issued	Date Inserted	Name

Unit overview

Item No.	Product Overview
	Basic Version
	Introduction of:: <ul style="list-style-type: none"> • 2 Standard Microphone Inputs • Auxiliary Audio Input • DUAL Watch Function

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

TABLE OF CONTENTS

GENERAL.....	6
Symbols.....	6
Abbreviations.....	7
Customer Service.....	8
KRT2 Transceiver properties.....	8
CONTROL general.....	9
Control Elements Overview.....	9
Display.....	11
OPERATION.....	14
General.....	14
ON / OFF Switching.....	14
Frequency Selection.....	15
Direct Frequency Selection.....	15
Frequency Selection from the Favourites List.....	15
Storing and Editing Favourites.....	16
AUD – Audio Menu.....	18
VOL – Volume.....	18
SQ -- Squelch.....	18
VOX – Intercom Voice Trigger Level Setting.....	19
TXm – PTT Switch Selection.....	19
INT – Intercom Volume.....	21
EXT – External Audio Input Volume.....	21
DIM – Display Brightness (Batt.-voltage).....	21
CON – Display Contrast.....	21
SIT – Side tone.....	21
MIC – Setup.....	22
DUAL Watch.....	24
Transmitter Operation.....	26
Self test monitor.....	27
Optical side tone.....	27
Resetting to factory settings.....	28
SET UP - Menu.....	29
ERASE – Erasing the Favourites List.....	29
Channel Spacing.....	30
Remote Control.....	30
Installation.....	31
Installation Hints.....	31
Telecommunication Data.....	31
Scope of delivery.....	31
Unpacking and Inspecting the Equipment.....	32
Mounting.....	32
Electrical Connections.....	33

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00




Microphone-Connection	33
Earphone Connection.....	34
External Audio Input.....	34
Finally Audio-Setup	35
For gliders35	
For motor gliders.....	35
Für Motor planes.....	35
Wiring.....	36
Wire Gauges.....	36
Connector Pin-Configuration.....	36
Wiring Diagram.....	38
Connection support	40
Antenna	41
Antenna Selection	41
Installation Recommendation	41
Microphone general	42
Post-Installation Check	42
Starting Up	43
Accessories	43
Drawings	45
Dimensions	45
Installation Directions	46
ANNEX	47
Frequency / Channel- schedule.....	47
Technical Data.....	49

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

1. GENERAL

This manual contains information about the physical, mechanical and electrical properties as well as a description for the operation and installation of the VHF airborne transceiver KRT2.

1.1. Symbols

	WARNING Non compliance may cause personnel injury due to radiation or fire.
	CAUTION Non-compliance may cause damage or incorrect operation of the transceiver.
	INFORMATION

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00


1.2. Abbreviations


Abb	Description	Definition
PTT	Push to Talk	Transmitter activation
VOX	Voice operated intercom	Voice level setting for the activation of the intercom
INT	Intercom level	Intercom volume level setting
SQ	Squelch	Squelch setting
DIM	Dimming	Display brightness setting
CON	Contrast	Display contrast setting
EXT	External audio input	External Audio input level setting

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

1.3. Customer Service


In order to process returned units most expeditiously, please fill in the form **xxxxxxxxxxxxxxxxxxxxxx** to be found under AIRplus Service at www.airplus24.com.

	Suggestions which will improve this manual are very much appreciated at: www.airplus24.com
---	---

	Information concerning software updates are available under AIRplus Avionics at www.airplus24.com
--	--


1.4. KRT2 Transceiver properties







- VHF airborne transceiver
- Frequency range 118,000 to 136,975 MHz
- Channel spacing 8,33/25 kHz (2278 channel)
- Fast channel selection
- 4 separate microphone inputs (2 x standard or 2 x dynamics)
- Audio-input for other audio devices
- Installation: Standard panel cut-out (57 mm)
- 100 user definable frequencies with up to 8 character designators

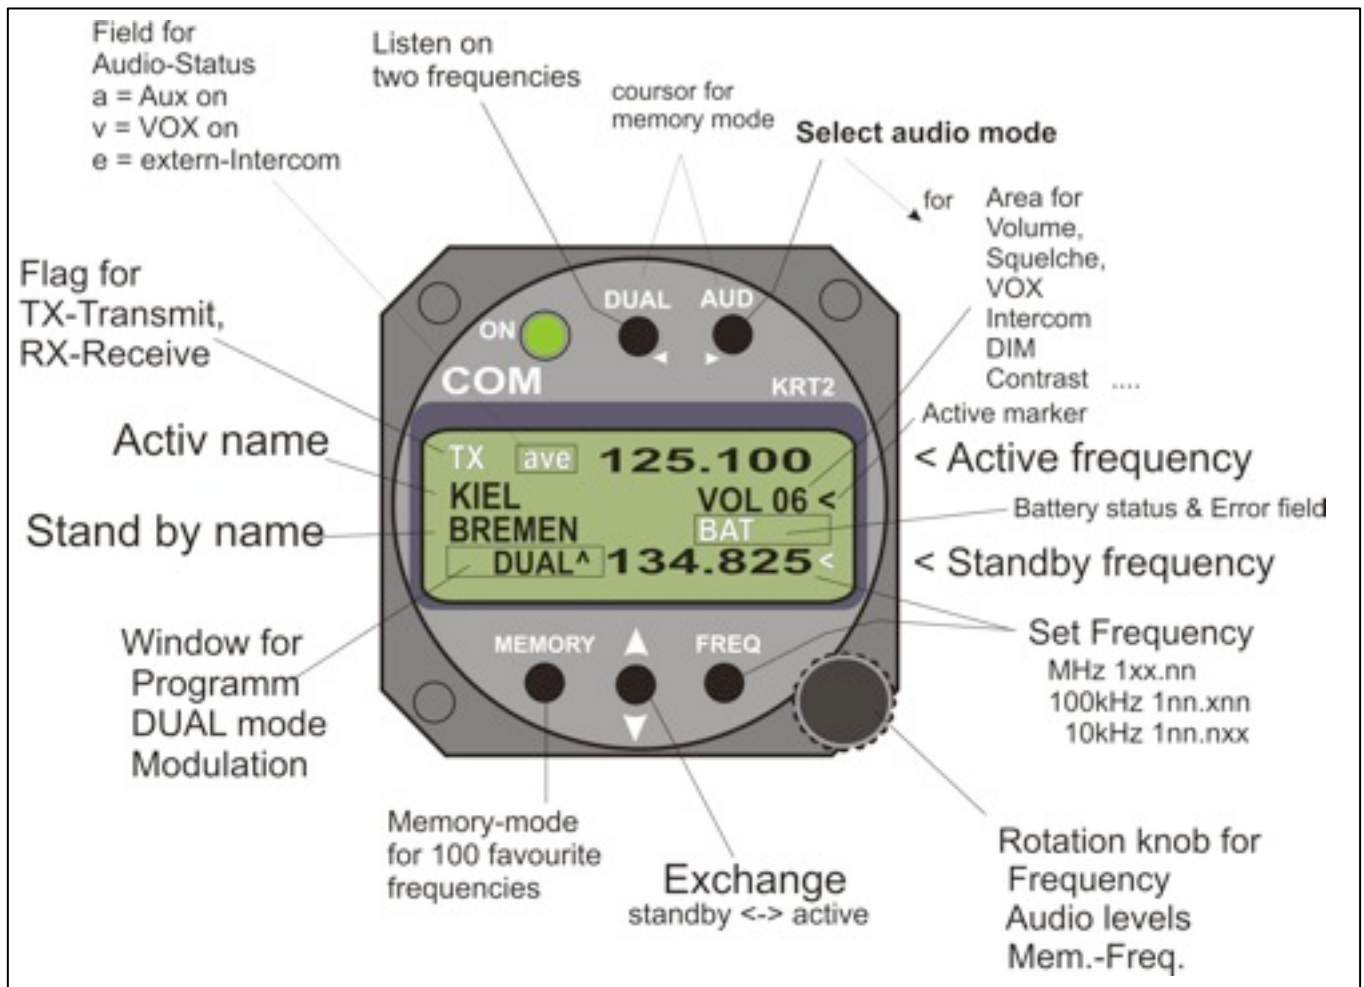	Continuous transmissions will be turned off after 2 minutes. (Stuck mic function).
---	--


2.CONTROL general

2.1. Control Elements Overview



	ON / OFF	Self-locking switch
	DUAL WATCH	<ol style="list-style-type: none"> 1. Scanning between the Active and Standby frequencies 2. Positioning cursor to the left when programming the station designator
	AUDIO SELECT	<ol style="list-style-type: none"> 1. Stepping through the audio menus VOL SQ VOX TX INT EXT DIM CON SIT and MIC 2. Positioning cursor to the right when programming the station designator
	FAVOURITES	<ol style="list-style-type: none"> 1. Frequency and designator selection from the favourites list 2. Programming of favourites (frequency and designator)
	EXCHANGE	Exchange of the Active and Standby frequencies
	FREQUENCY	<ol style="list-style-type: none"> 1. Selection of the frequency range MHz, 100kHz, 10kHz 2. Toggles between frequency and designator when programming the favourites

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

	TURNING KNOB	Sets all variable values in any menu 1. Volume setting of headsets and speakers 2. MHz/kHz selection of the standby frequency in 3 different ranges 3. Favourite selection 4. Alpha character selection when programming favourites 5. Change of microphone settings

2.2. Display

Indication	Meaning	Remarks
RX	Reception	RX is displayed during reception with a squelch value of 02 or more
TX	Transmission	Transmitter operates normally
Te	Transmitter was turned off automatically after 2 min continuous operation	
125.100	Active frequency	
KIEL	Active frequency station designator	Displayed when frequency and designator is stored in the favourite list
VOL	Receiver volume level (default after a certain time delay)	When AUD was pressed the corresponding Audio Menu item and setting is displayed
SQ	Squelch	


	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

VOX	Voice operated intercom	
DIM	Display brightness	
CON	Display contrast	
INT	Intercom - Volume	
EXT	Volume of external devices	
TX**	PTT button selection	Left/Right/Both
SIDE	Side tone	During transmitter operation
BREMEN	Stand by frequency station designator	Displayed when frequency and designator is stored in the favourite list

Display	Meaning	Remark
DUAL	Active frequency AND Standby Frequency are monitored simultaneously	DUAL function is deactivated by frequency change or by pressing the DUAL button again
[03] (MEMORY)	Favourite list index (0-99)	When frequency and designator are stored at this index they are displayed
125.100 upper	Active - frequency	
134.825 lower	Standby - frequency	
<	The pointer indicates what the turning knob will change 1)VOL SQ VOX.....etc 2)Standby frequency	Arrow is positioned in correspondence to the button pressed (AUD or FREQ)
BAT	Supply voltage is low <10,5V	Battery low or Battery/Generator faulty

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

Er_ANT	Antenna error	Bad antenna match
a v e	Status of certain Audio menu functions	a = AUX. Input active v = VOX active e = external Intercom switch active
Er_PLL	Internal error, no transmission	Return the transceiver for maintenance
Er_ADC	Internal error,	Return the transceiver for maintenance
Er_FPA	Internal error; unit not usable	Return the transceiver for maintenance
Er_I2C	Internal error; unit not usable	Return the transceiver for maintenance
Er_si53	Internal error; unit not usable	Return the transceiver for maintenance
Er_D10	Internal error; reception corrupt	Return the transceiver for maintenance
Key_Block	Internal error; unit not usable	Return the transceiver for maintenance

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

3. OPERATION

3.1. General

There is a normal operating mode in which the turning knob always is connected to the volume (VOL). The normal operating mode can be left by pressing the AUD, FREQ or MEMORY button.

When not in the normal mode and there is no pilot action for more than 10 seconds the unit returns to the normal mode.

3.2. ON / OFF Switching

ON / OFF switching is achieved with a self-locking switch.

After power up the following display will show up:



Device-name
KRT2
Software-
Version e.g.

KRT2
Software-
Version e.g.

(example)

The unit then starts in the normal operating mode using and displaying the data last used.

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

3.3. Frequency Selection

There are two different frequency selection methods:

- Direct Input
- Selection from the favourite list (index 0-99)

3.3.1. Direct Frequency Selection



The Standby-Frequency is set with the tuning knob in 3 different ranges. The selected range is highlighted and can be changed with the FREQ button.

Frequency ranges are: 1xx.nnn
1nn.xnn
1nn.nxx

Press the FREQ button once or several times until the desired frequency range is highlighted.

 
When the pointer is not next to the Standby Frequency window, it will be repositioned with the first pressing of the FREQ button.




Exchanges the Active and Standby frequencies.

When the Exchange button was not pressed, the Standby frequency display will return to its normal appearance after 20 seconds.

3.3.2. Frequency Selection from the Favourites List



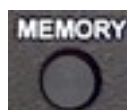By pressing  and operating the turning knob a specific favourite list position can be accessed [xx] (xx = index 0 ... 99). When frequency and station designator have been defined, they will be displayed in the Standby

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

and station designator windows.

The favourite list designators can be sorted in alphabetic order (see 3.3.3).




Exchanges the Active and Standby frequencies.

The selection procedure can be terminated with either the AUD or FREQ buttons. Without pressing any of these buttons the unit will return to its normal operating mode after 20 seconds.

3.3.3. Storing and Editing Favourites

Any displayed Standby Frequency can be given a designator and both can be stored together as favourites in the favourite list. Both, the frequency and designator of a favourite can be edited.



First press  button and by means of the turning knob go to the desired favourite list position which may be empty or the favourite to be edited (index [00 ...99]).

Press the MEMORY button a second time and „-EDIT-„ will show up in the program window.




In the designator window a blinking cursor will show up under the most left character.

The turning knob selects the desired character.

The AUD button positions the cursor one character to the right. The DUAL button positions the cursor one character to the left and simultaneously erases this character.


The station designator can consist of maximum 8 characters.

Press the FREQ button and follow the normal direct input procedure to edit the frequency.


	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00


Press the MEMORY button in order to go to the station designator window for editing the designator if required

Pressing MEMORY again terminates editing and SAVE?  will show up.

SAVE? is available for 20 seconds and must be acknowledged by the  button. No acknowledgement within 20 seconds results in the termination of the storing procedure.

When the  button was pressed SORT?  will show up.

SORT? is available for 20 seconds and must be acknowledged by .

When sorting was acknowledged with the  button, all 99 favourites will be sorted in alphabetical order which can take several minutes.

During the sort procedure „RUN nn“ is displayed in the program window, with nn being the running index.

When the MEMORY button is pressed during the time when SORT? is displayed the sorting procedure will not start and storing and editing is terminated. The transceiver then resumes the normal operating mode.

When the MEMORY button is pressed during the time when „RUNnn“ is displayed the sorting procedure is terminated. The favourite list then is sorted partially only and the transceiver resumes the normal operating mode.

Further favourites can be stored or edited by following the normal input procedure.

For time saving purposes it is recommended to initiate the sorting procedure after the last favourite has been saved or edited.

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

3.4. AUD – Audio Menu



Any action in the Audio Menu requires the pointer (<) to be next to the Audio menu window (see picture). When the pointer is next to the Standby frequency window, the pointer can be repositioned by pressing the AUD button once.

VOLnn is the Audio menu default display. No action on any control for more than 10 seconds will result in the VOLnn display.

Audio Menu items can be accessed in the following order by repeatedly pressing the AUD button.

VOL (default) SQ VOX TXm** INT EXT DIM CON SIT MIC

Audio menu items to right of the above list are more seldomly used than the left ones.

3.4.1.VOL – Volume

Turning the turning knob changes the receiver volume.

VOLnn

Range: 01 - 16



Die VOL setting only concerns the receiver and not the intercom system. Intercom volume values are set in the INT audio menu.

3.4.2. SQ -- Squelch

Pressing the AUD button once enables the turning knob to change the squelch level values.


	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

SQnn

Value range: 01 – 10

The Squelch setting is depending on several factors.

For engine driven airplanes an initial setting of 05-08 is recommended. Gliders may need a lower setting. The lower the Squelch level value the higher is the input sensitivity. A high sensitivity setting is susceptible to noise from other sources like ignition strobe-lights etc.

	Standard SQ-level is 05 ... 08. Higher setting may suppress strong input signals. Squelch does not influence the intercom system.
---	---

3.4.3.VOX – Intercom Voice Trigger Level Setting

Pressing the AUD button twice enables the turning knob to change the voice level which triggers the intercom.

The intercom voice trigger level must be set to such a value which prevents that normal cockpit noise can be heard in the earphones. The intercom system shall only be activated when talking at a normal voice level into the microphone.

The higher the trigger level the louder the voice must be in order to trigger the intercom system.

VOX on condition is indicated by flag “v”.

VOXnn

Range: 01 –

10

In case of extreme cockpit noise or uncompensated microphones the VOX system can be deactivated by selecting VOX: 01. When VOX is deactivated, the intercom can only be used by means of intercom switches.

3.4.4.TXm – PTT Switch Selection

Pressing the AUD button three times enables the turning knob to select certain PTT switches. In addition when one of both PTT switches is disabled (notBoth) the respective microphone channel is disabled during transmissions.

TXm**

- Left / -* Right / *

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

Both

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

3.4.5.INT – Intercom Volume

Pressing the AUD button four times enables the turning knob to set the intercom volume.

INTnn Range: 01 - 10

3.4.6.EXT – External Audio Input Volume

Pressing the AUD button five times enables the turning knob to set the external audio input volume. External audio inputs can be audio alarms, voice alarms, music etc.

Activation occurs for settings >00 and will be indicated by the flag “a”.

EXTnn Range: 00 - 10

3.4.7.DIM – Display Brightness (Batt.-voltage)

Pressing the AUD button six times enables the turning knob to set the display brightness.



Display lighting current drain at maximum brightness is only 10mA. Maximum brightness is glare free even in darkness and can be used continuously. Indication of battery voltage (VDC).

DIMnn Range: 01 – 10

3.4.8.CON – Display Contrast

Pressing the AUD button seven times enables the turning knob to set the display contrast.

CONnn Range: 01 - 10

3.4.9.SIT – Side tone

Pressing the AUD button eight times enables the turning knob to set the side tone volume.

SITnn Range: 01 – 10

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

3.4.10.MIC – Setup

Each of the two microphone inputs channels can be configured individually, which enables different microphone types to be used.

A maximum of two microphones of same type may be connected to each microphone input channel (see Microphone Connection 5.6.1).

The MIC – Setup is the last item of the Audio menu and can be accessed by pressing the AUD button nine times.



By pressing the DUAL button repeatedly L, R and AUTO can be selected. L (R) means left (right) microphone input channel. The AUTO function is explained later.

By means of the turning knob the displayed microphone input channel amplifier gain (MIC-level01=lowgain,09=highgain) can be selected individually. The microphone signal level is dynamically displayed as bar and as numeric value (from0.00to1.00) in the line below.

The initial MIC-level should be 05, the engine should be running, use a headset or earphone and speak at a normal voice level to fine-tune the MIC-level. Whenever a new MIC-level was selected, the dynamic bar indicator should then be at about 50%.

When the microphone setup menu is left, the new value is stored.

The range of the MIC-level for standard microphones is 01 to 09.


	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

MIC levels 10 and 11 are special settings for low microphone levels like dynamic micro-phones often used in gliders.

10 is used for non-amplified Electret microphones with a 8 volt supply voltage.

11 is for dynamic microphones only.

In the AUTO mode every 30 sec. the left microphone impedance is measured. When using an Electret microphone and a dynamic microphone is recognized, internal switchover to the dynamic microphone type and vice will take place. When using a dynamic microphone and an Electret microphone is recognized, internal switchover to the Electret microphone type will take place. Microphone type switch over always affects both microphone channels.

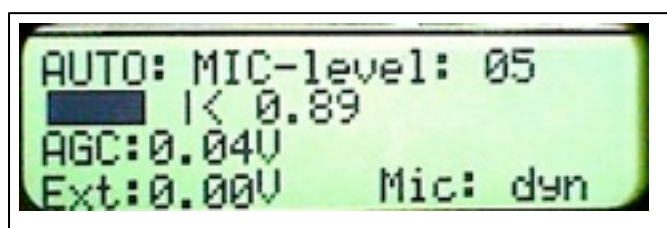

The present recognized type will be indicated (Mic: dyn/std).

To activate the recognition instantly leave AUTO and set back to AUTO.

For the std-part the previous individual setup is stored when the menu was leaving.

The MIC submenu is left by pressing the AUD button.

Additional indications

Additional indications for test purposes:

AGC: HF receiver Automatic Gain Control

Ext: External audio input voltage

Mic: dyn or Mic: std

Indicates, which microphone type was selected either by the user or recognized in the AUTO mode.

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

3.5. DUAL Watch

Because the communication transceiver KRT2 contains only one receiver, DUAL watch is achieved by alternating between the Active and Standby frequencies.

The DUAL button activates and deactivates the dual watch function. Deactivation also can take place by pressing either the FREQ or MEMORY buttons.

The frequencies to be watched should be selected prior to the DUAL watch selection.

Scanning of frequencies is only possible when differentiating between radio noise and radio transmissions. This can be achieved with the squelch system set to a value of 02 or higher.



There must be radio noise suppression in order to recognize reception. SQ must be 02 or higher.



When DUAL watch is activated, "DUAL" is displayed on the lowest line. The pointer next to the DUAL display indicates the frequency on which there is reception.

The Active frequency always has priority, so the receiver remains on the Active frequency as long as there is reception on the Active frequency.

When there is no reception on both the Active frequency and the Standby frequency the receiver scans both frequencies 5 times per second.

When there is reception on the Standby frequency the receiver stays on the Standby frequency, however it switches to the Active frequency every 2 seconds for 0.3 seconds. When reception is detected on the Active frequency the receiver stays on the Active frequency.

The pointer next to the DUAL display indicates on which frequency there is reception.

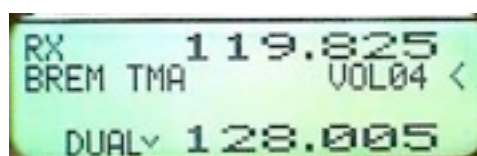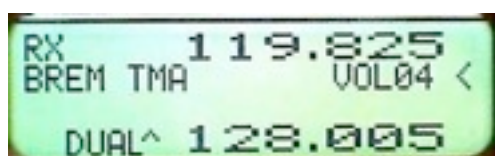

A c t i v e f r e q u e n c y r e c e p t i o n
Standbyfrequencyreception

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

Standby and Active frequencies can be exchanged when in the DUAL mode. The transmitter operates on the Active frequency only.

Summary:

- Select the Standby frequency to be watched additionally.
- With the AUD button and turning knob set SQnn to 02 or higher.
- With the DUAL button activate the DUAL watch function.
- When there is no reception on both the Active frequency and the Standby frequency the receiver scans both frequencies 5 times per second.
- When scanning the Active frequency always has priority.
- Deactivate the DUAL watch function with the DUAL or FREQ or MEMORY buttons.

3.6. Transmitter Operation

The unit transmits on the active frequency (upper line) as long as a PTT (press to talk) switch is pressed.



Transmission



Reception

„TX“ indicates normal transmitter operation.

In the lower left corner of the display the carrier modulation is dynamically displayed. It corresponds to the side tone which is not available on gliders when no earphones are in use.

In order to avoid the blocking of the frequency by unintentional long transmissions (stuck microphone) the transmitter is switched off after two minutes and the display changes from „TX“ to „Te“. To resume transmission the PPT switch first must be released and then be pressed again.

While transition the external audio input will be turned off.

The microphone selection is dependant from the pre-setting at the TXm-activation.

The differential speaker output will be turned off to prevent an audio feedback to the microphone. The speaker also will be disabled if the intercom (VOX) is active.

The output for the head set will carry the side tone.

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

3.7. Self test monitor

There is a permanent back ground test system active.

The field for battery status & error (see Control Elements Overview) is used to indicate warnings and in case of hardware failure, different error reports.

The warnings are:

BAT low battery voltage (becomes active < 10,5V)

At transmission

A-match bad antenna match or antenna defective.

Also while transmission the TX-flag (left top) can change to

Te Transmission time has exceed (> 2 minutes)


All other reports starting with Er.... Indicating a major hardware failure and consequently the radio has to be returned to factory.

3.7.1.Optical side tone

Especially on glider use, where no headset to get the side tone, it is very helpful to see the microphone working.

At left lower side, there is a modulation indicator showing the talking activity. At no modulation it becomes a small dot approximately in the centre.

Also it indicates a bad antenna matching by getting far out of the centre.

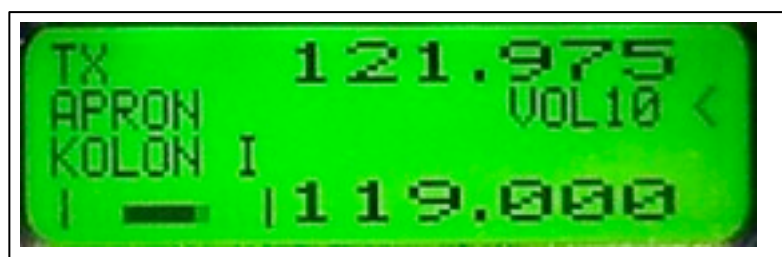

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

3.8. **Resetting to factory settings**

Returning to the factory settings can only be initiated during power-up.

During power-up the MEMORY and DUAL buttons must be pressed simultaneously and the display will show “SET DEFAULTS”. When the buttons are released the resetting to the factory settings takes place. When resetting is completed “DONE” is displayed.

Resetting to the factory settings will not change any data in the favourite list memory.

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00


3.9. SET UP - Menu

During power-up the MEMORY buttons must be pressed

There are two functions within the Set-up menu:

- ERASE – Erasing of the favourites (frequency and designator)
- Channel Spacing – 25kHz / 8,33kHz

Programming of the Set-up is done with the lower 3 buttons. Their function is described on the display.

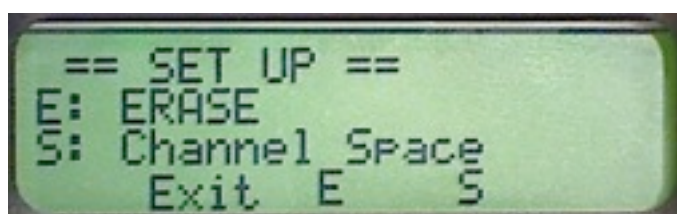


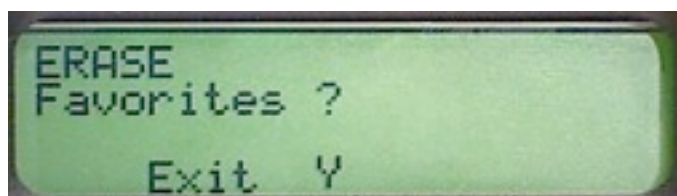
MEMORY  FREQ

Set-up program exit is with the MEMORY button. The unit remains powered and the normal operating mode is resumed.


Remark:  = 

3.9.1.ERASE – Erasing the Favourites List

When in the SET UP – Menu select the “ERASE” submenu with the .





Erasing the favourites (frequency and designator) starts after the  button was pressed again. This procedure may last a few minutes during which time “ERASING” is displayed.


All INFO frequencies and designators that were stored on delivery are

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

lost and all favourite index positions (01 to 99) are available to the user.

3.9.2.Channel Spacing

When in the SET UP – Menu pressing the MEMORY button will change into the Channel Space submenu.

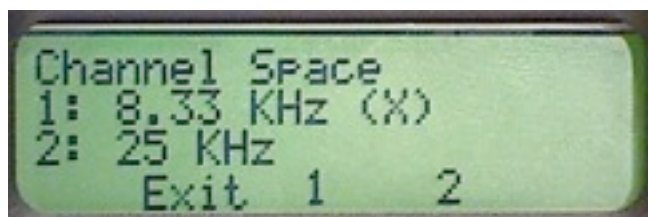

MEMORY  FREQ

The desired channel spacing then can be selected and the (X) indicates the actual channel spacing.

4.Remote Control

Tandem-seat airplanes can be equipped with the KRT2RC Remote Control Unit. The remote control unit is connected to RS232 serial interface and enables selection of the most common settings like frequency, volume, squelch, VOX, display contrast and brightness. In addition the unit has an independent memory for favourites (frequency and designator).

Transmission error messages are displayed in the error window in the third line

R_Time = Time-out transmission error
R_ChkS = Checksum error
R_Cmd = Unknown command
R_Char = Data error
R_Freq = Wrong Frequency

The error message disappears when a valid command or a new frequency has been input, latest however after 5 seconds.

Remote control unit errors do not interfere with the KRT2 transceiver operation.

Data transmissions between the transceiver KRT2 and the remote control unit is checked once every minute. A “r” in the upper right corner is

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

displayed when there is no malfunction.

5.Installation

5.1. Installation Hints

The following hints should be considered for installation.

A certified maintenance shop should perform the wiring. For the wiring diagram refer to chapter 5.7.3


5.2. Telecommunication Data

The following data may be required for the radio station licence.

Manufacturer	AIRplus Maintenance GmbH
Type	KRT2
EASA Number	P/N 100-90001-00
Power Output	6 W
Frequency:	118,000 – 136,975 MHz
Emission Designator:	6k00A3E für 25kHz channel spacing 5k00A3E für 8,33kHz channel spacing

5.3. Scope of delivery

Part Number	Description
KRT2	KRT2 - VHF Transceiver
ZUB2 (3 pcs)	Mounting screw KRT2 - for panels up to 3mm
SSKRT2	Connector (when no cable set was ordered)
.....	Operation and Installation Manual
	EASA Form 1

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

5.4. Unpacking and Inspecting the Equipment

Carefully unpack the equipment. Damages due to transportation must immediately be reported to the shipping company. Save the shipping container and all packing material to substantiate your claim.



For storage or reshipment the original packing material should be used..

5.5. Mounting

- In cooperation with the maintenance shop, mounting details are specified. The maintenance shop can manufacture and install all cables that may be required..
- Avoid installing the unit in the vicinity of heat sources. Sufficient air-circulation is required.
- There must be sufficient space for cables and connectors.
- Avoid sharp bends and wiring close to control cables.
- Cable length must be such that connectors are accessible for repair.
- The wiring to the transceiver must be installed such that water droplets formed by condensation will not run into the connector.
- Remove the turning knob in order to install the transceiver:
 - Remove the turning knob cap with an appropriate tool.
 - Loosen the screw and remove the turning knob.
 - Install cap correctly oriented!
- Installation is from the front side of the instrument panel with three 4mm screws in a 57mm panel cut-out.
- For installation details and drawings refer to chapter 5.7

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

5.6. Electrical Connections

The 15-pin D-Sub connector contains all electrical connections except the antenna.



The battery plus connection must be protected with a 4amps slow blow fuse !

5.6.1. Microphone-Connection

Both the L (left) and R (right) microphone input channels can either be connected to standard microphones (standard signal level 1Vpp) or to dynamic microphones (standard signal level 5mV to 10mV).

For standard microphones a supply voltage of 8V at 330Ω is provided.

Elementary Electret microphones can also be connected. They have considerably lower signal levels and therefore require an 8V supply voltage.

The microphone input channel amplifier gain can be selected via the the MIC-Setup menu 3.4.10.


When dynamic microphones are used in gliders the 8V supply voltage is switched off for power saving purposes.

Standard microphones normally used in headsets together with dynamic microphones generally can not be used at the same time.

Motor gliders should have a toggle switch installed to differentiate between motor less flight with dynamic microphones and powered flight with headsets.

When the AUTO mode is selected in the MIC-Setup menu the KRT2 automatically recognizes to which microphone type has been switched and acts accordingly.

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

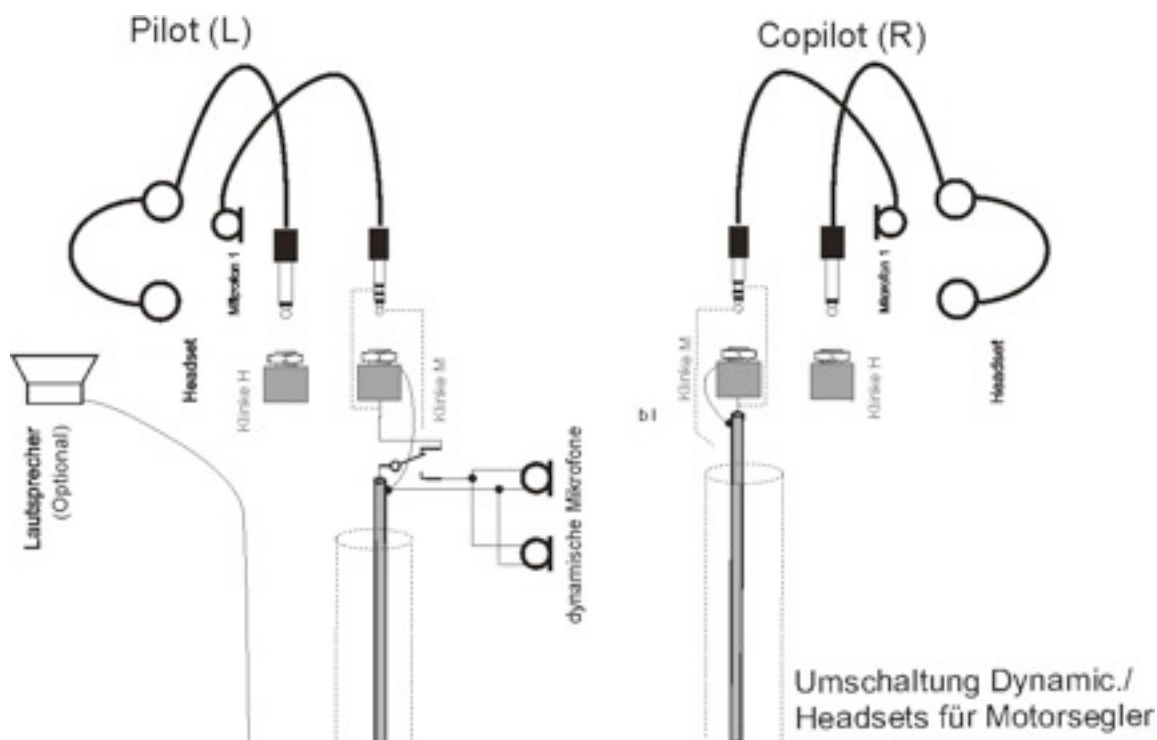

Because the 8V supply voltage is switched off when dynamic microphones are used during glider flight the second (copilot) headset microphone is disabled.

A maximum of two microphones of same type may be connected to each microphone input channel.

5.6.2. Earphone Connection

Several earphones of same type can be connected in parallel. The total impedance should not be less than 60 Ohms.

5.6.3. External Audio Input

Audio alarms or even music can be made available via the external audio input. When this input is not used it must be connected to ground in order to avoid noise. PIN5 must be connected to Battery minus (GND).

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

5.7. Finally Audio-Setup

This is an overview for a correct audio set up depending on the usage.

5.7.1. For gliders

Press button AUD 3x for VOX: Set to VOX 10 (turn off).

Press button AUD 4x for TXm: Set to TXm**.

Press button AUD 6x for EXT: Set to EXT 00 (turn off).

Press button AUD 10x for EXT: Set to MIC-Level 11.

5.7.2. For motor gliders

For change mode (motoring & headset – gliding & dynamic microphone)

Press button AUD 3x for VOX: Set to VOX 3.
on condition at motoring.

Press button AUD 4x for TXm: Set to TXm**.

Press button AUD 6x for EXT: Set to EXT 00 (turn off),
or on condition.

Press button AUD 10x for EXT: Set to MIC-Level 5,
select AUTO

5.7.3. Für Motor planes

Press button AUD 3x for VOX: Set to VOX 3 (turn off).

Press button AUD 4x for TXm: Set to TXm**,
or on condition.

Press button AUD 6x for EXT: Set to EXT 00 (turn off),
or on condition.

Press button AUD 10x for EXT: Set to MIC-Level 3,
or on condition.

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00


5.8. Wiring

5.8.1.Wire Gauges

Supply lines (Power, GND): AWG18 (0,96 mm²)
Control lines: AWG22 (0,38 mm²)


All wires must be aviation certified.


5.8.2.Connector Pin-Configuration

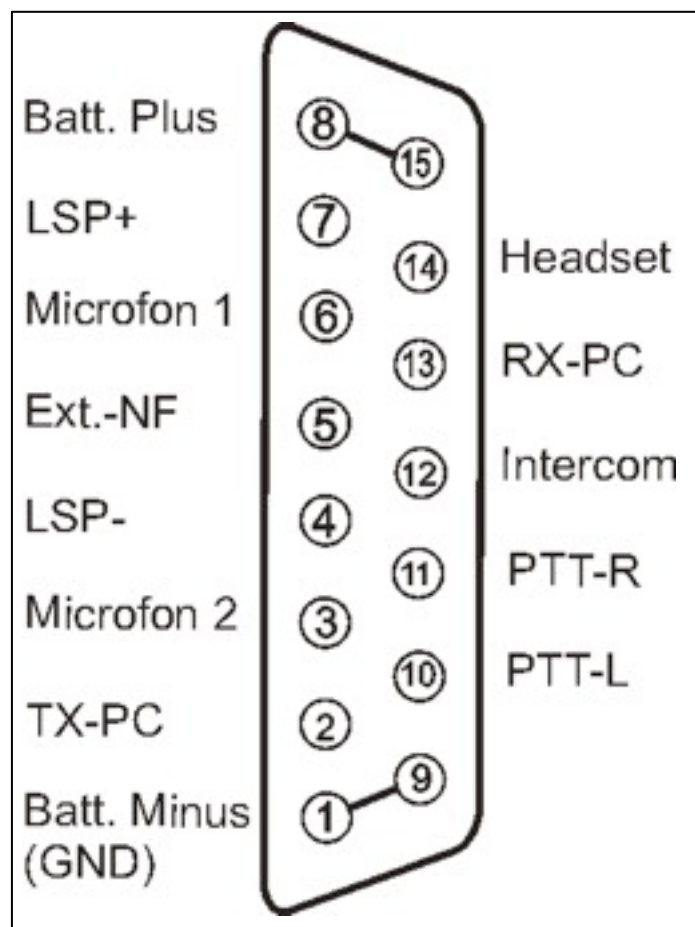

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

5.8.3.Wiring Diagram

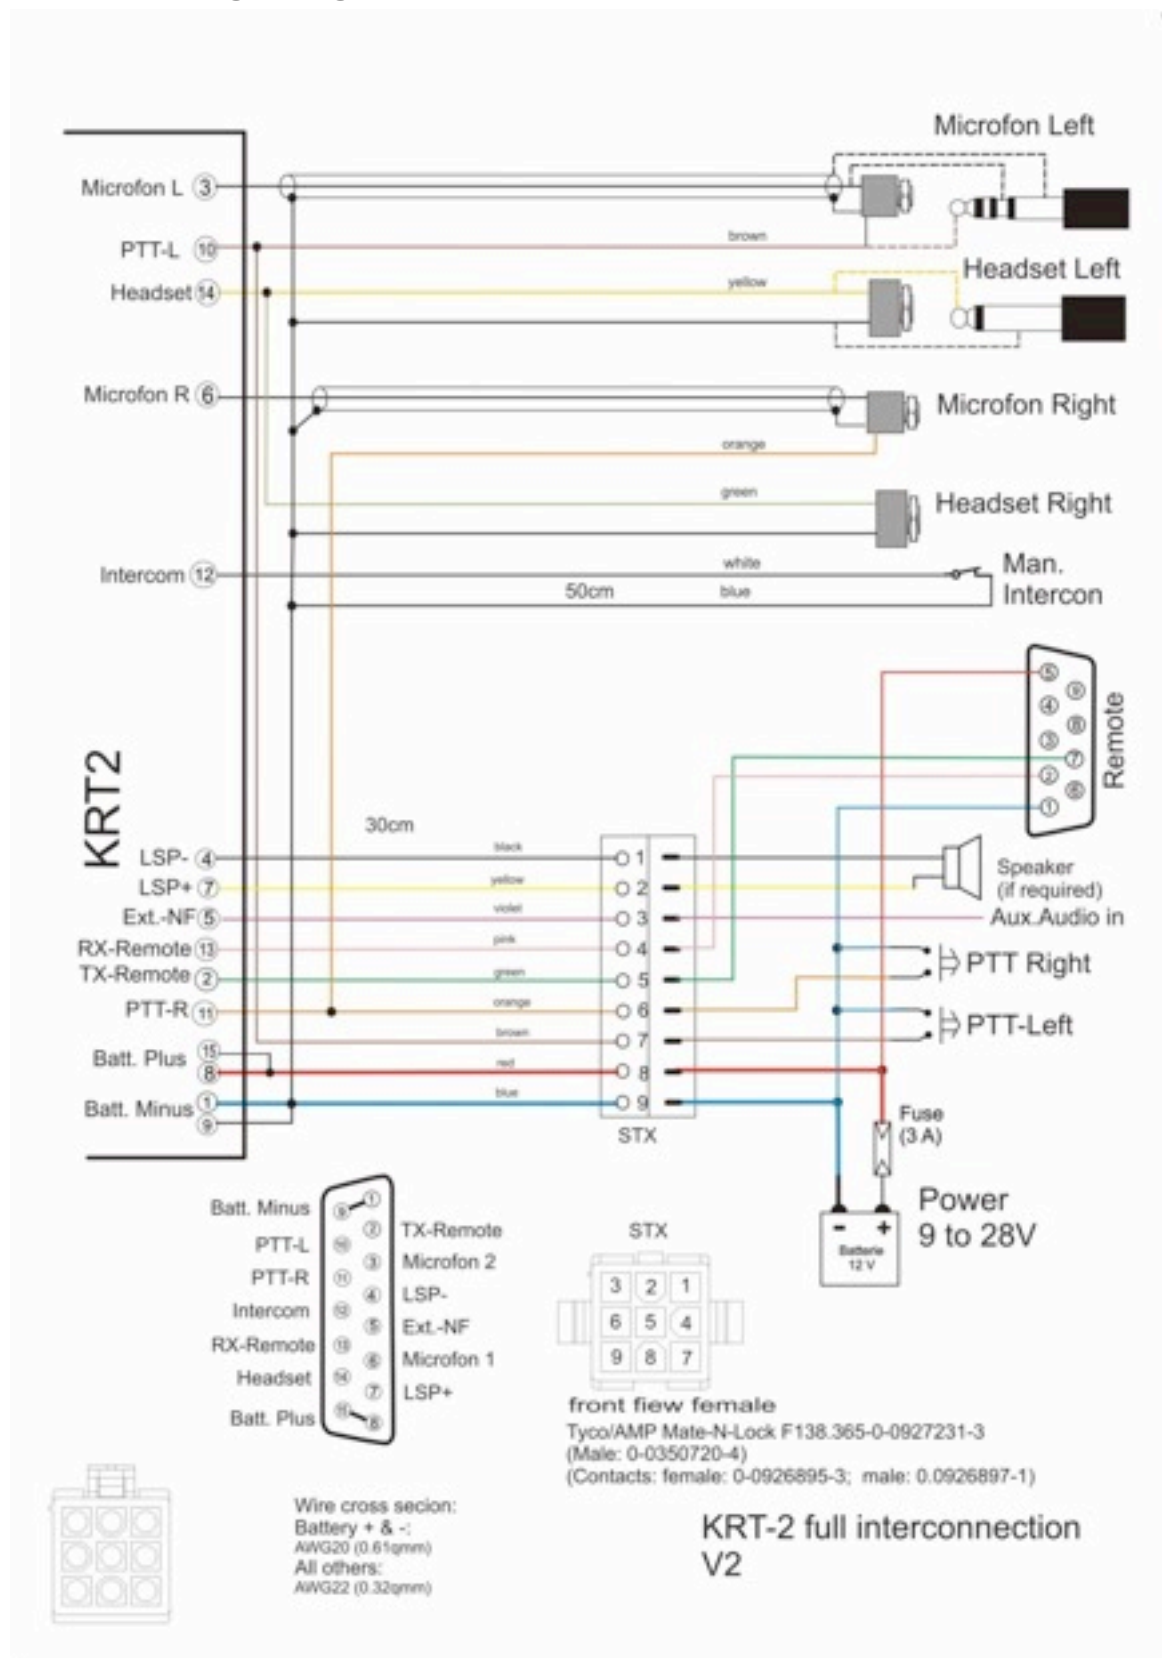


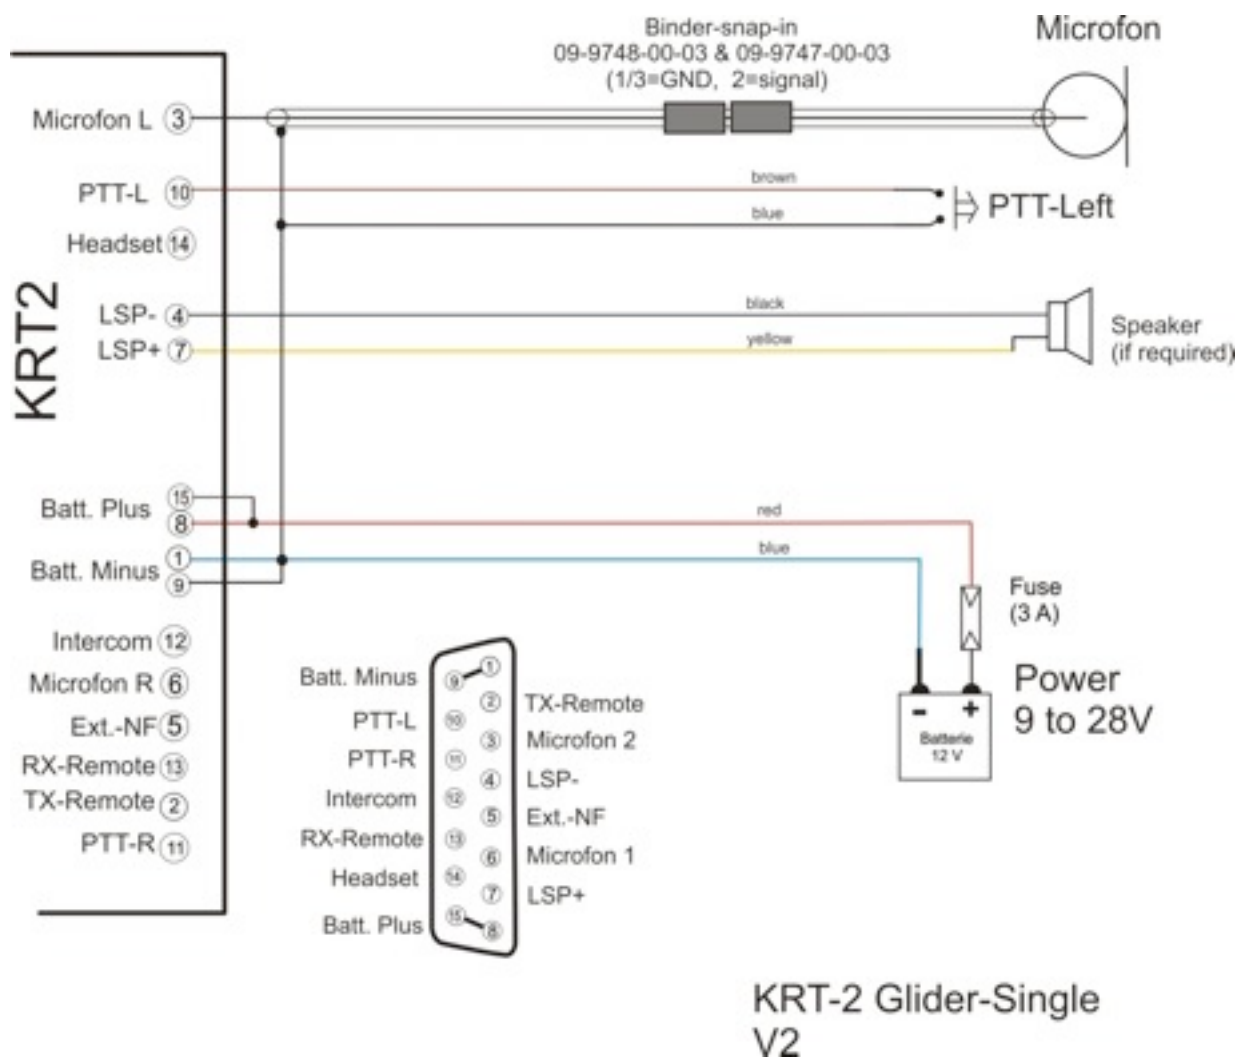

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

5.8.4.Connection support

In order to connect shields of all cables at a single point and to avoid ground loops an adapter board as shown is recommended.

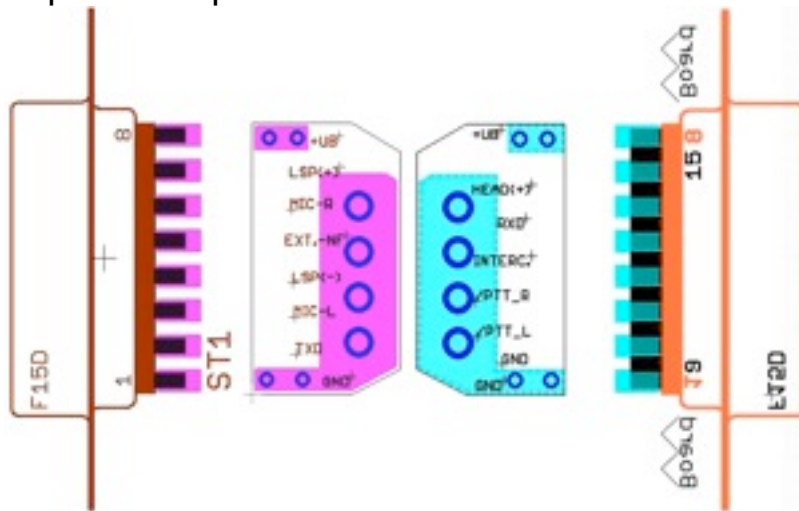

The adapter board is placed between the connector pin rows and soldered to the BAT plus pins 8,15 and GND pins 1,9. Further information printed on the board serves to connect all cables to its corresponding pins.

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

5.9. Antenna

5.9.1. Antenna Selection

- A 50 Ohms impedance VHF-COM-antenna is required.
- The antenna must be approved in respect to aircraft type and installation location.
- The antenna specifications can only be fulfilled when properly installed

5.9.2. Installation Recommendation

- The manufactures instructions have to be observed.
- The metallic contact between airplane surface and antenna ground must be very good. Non-metallic airplanes must have installed a metal sheet, foil or mesh of at least 80×80 cm inside the fuselage as electric counterweight..
- In order to avoid interference the distance between a COM an NAV antenna or between a COM and another COM antenna should be as large as possible. A distance of 2 meters normally is sufficient.
- The antenna must vertically be installed as far as possible away from parts like propeller, landing-gear, rudder etc., that may influence propagation of the radio signals.
- In gliders the internal antenna provided by the airplane manufacturer is to be used.



The RF-antenna cable may not be part of other cable sets like power-supply or microphone. It must not be placed together with any other COM, NAV or transponder antenna cable.

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

5.10. Microphone general

The correct setting of the MIC and VOX values is of great importance for Intercom system (see 3.4.3. VOX Intercom Voice Trigger Level and 3.4.10. MIC Setup).

The VOX intercom voice trigger level must be set to such a value that the intercom system is activated when speaking at a normal voice level into the microphone. It shall not be triggered by normal cockpit noise.

When there is extreme cockpit noise or there are uncompensated microphones VOX can be deactivated with VOX=01 to enable manual intercom operation.

The manual intercom operation is activated with one or two separate, parallel connected, optional intercom switches. These switches are not the PTT switches. The intercom switches connect pin12 (intercom) with GND (pin1and9).

An “e” will be indicated if pin12 is not on GND.

Communication with the VOX system requires pin 12 to be connected to GND by means of one or two intercom switches.

The KRT2 unit **transmits** only when a PTT switch is pressed.

Cockpit noise suppression is only possible with differential microphones used in modern headsets. Normal Electret microphones are not suitable.

5.11. Post-Installation Check



A certified maintenance shop must verify the proper operation of the VHF transceiver.

A complete check of all airplane systems is required to certify that the new wiring is not causing any malfunction.

The standing wave ratio must be less than 3:1.

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

A test flight is recommended to verify proper transceiver operation.

The following items should be checked:

- Check transceiver operation with a radio station at least 50 km away when at 2000ft or above.
- Check if there is unusual electrical interference or noise.
- If possible check the transceiver operation on low and high frequencies of the VHF frequency band.

5.12. Starting Up

Switch the unit on with the ON button.

The following display will appear:



The start display shows device type and the software number. It then changes into the normal operating mode (Direct Input).

5.13. Accessories


Suitable accessories like antennas, cable sets, and switches can be purchased at our online shop on www.AIRplus-avionics.com.

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

5.14. Drawings

5.14.1.Dimensions

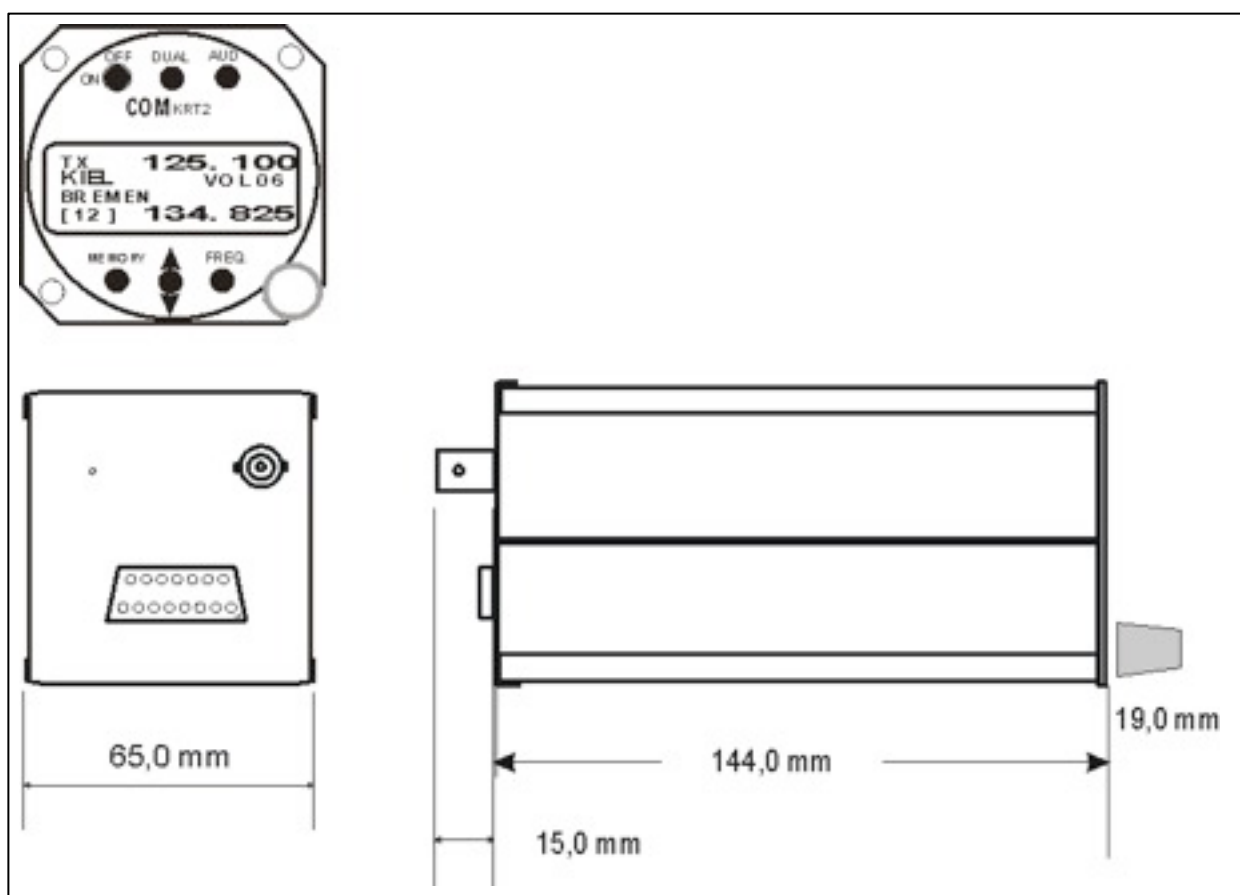


	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

5.14.2.Installation Directions

Connection Area



Panel Cut-out

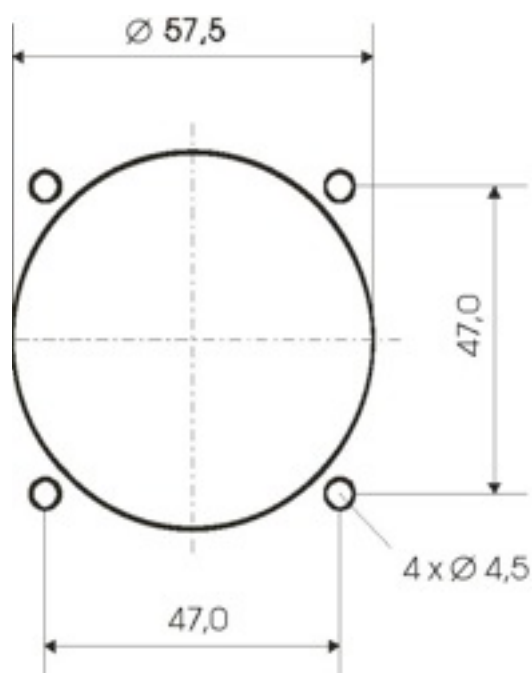

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

6.ANNEX

6.1. Frequency / Channel- schedule

The following table contains the operating and displayed frequencies between 118.000 and... 118.100 MHz. The table can be continued up to 136.975 MHz following the same principle.

Operating frequency (MHz)	Cannel Spacing (kHz)	Displayed channel 8.33/25 kHz Mode	Displayed Channel 25 kHz Mode
118.0000	25	118.000	118.000
118.0000	8.33	118.005	
118.0083	8.33	118.010	
118.0166	8.33	118.015	
118.0250	25	118.025	118.020
118.0250	8.33	118.030	
118.0333	8.33	118.035	
118.0416	8.33	118.040	
118.0500	25	118.050	118.050
118.0500	8.33	118.055	
118.0583	8.33	118.060	
118.0666	8.33	118.065	
118.0750	25	118.075	118.070
118.0750	8.33	118.080	
118.0833	8.33	118.085	
118.0916	8.33	118.090	
118.1000	25	118.100	118.100
118.1000	8.33	118.105	
etc.	etc.	etc.	etc.

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

6.2. Technical Data

GENERAL	
Compliance Standards	ETSO-2C169a, ED-23B Class 4 ED-23B Class C TSO-C169a, Class 6 TSO-C169a, Class H1 & H2
Standards	EUROCAE ED-23B RTCA DO-160E RTCA DO-178B Software Level D
Dimensions	Height: 65mm Width: 65mm Depth: 144mm plus rear panel plugs 60mm
Weight	0.36 kg
Mounting	panel mounting, cut-out Ø 57 mm
Temperature Ranges	
Operation	-20 °C to +55 °C
Storage	-55 °C to +85 °C
Maximum Height	35000 ft
Vibration	DO-160E, Cat. S, Vibration Curve M
Humidity	RTCA DO-160E, Cat. A
Shock	6 G operation 20 G crash safety
RTCA DO-160F ENV. CAT.	[C1Z]CAA[SM]XXXXXXZBAAA[YY]M[B3F3]XXA
Power Supply	9 VDC to 33VDC test @ 12VDC <ul style="list-style-type: none"> • Transmitter: 2.0 A (typ.) • Receiver: 0.1 A • Illumination 0.02A • Audio Power amp. Up to 1A
Power Consumption	emergency operation: 9 VDC Standby 1W, Transmit 30 W
Frequency Range	118.000 .. 136.995 MHz

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

Frequency Stability	±5 ppm
Fuse	external fuse required: 4 A, slow-blow
Compass Safe Distance	30 cm

TRANSMITTER	
POWER OUTPUT	6 W (nominal) 4 W (minimal)
HARMONIC DISTORTION	<10 % at 70 % modulation
SIDETONE OUTPUT	>0,5W an 300Ω (head set output)
MICROPHONE INPUTS	2 x standard (50mV...2V) into 100Ω or 2 x dynamic
HARMONIC CONTENT	>60dBc
MODULATION FIDELITY	deviation <6 dB von 350...2500Hz
CARRIER NOISE LEVEL	>35dB at 70% Modulation index
UNWANTED FREQUENCY MODULATION	<1kHz at m=70% / 1kHz
DUTY CYCLE	2 minutes on, 4 minutes off; automatic turn-off after 2 minutes continuous transmitter operation
RECEIVER	
SENSITIVITY	-105 dBm (>6 dB S+N/N, m = 30 % / 1 kHz)
BANDWIDTH / 25 KHZ	-6-dB-bandwidth > ±8.0 kHz
BANDWIDTH / 8.33 KHZ	-6-dB-bandwidth > ±2.78 kHz
SELECTIVITY (channel spacing 25 KHZ)	-40-dB-bandwidth < ±17.0 kHz -60-dB-bandwidth < ±22.0 kHz
SELECTIVITY (channel spacing 8.33 KHZ)	-60-dB-bandwidth < ±7.37 kHz
SPEAKER OUTPUT	≥4 W into 4 Ω
AGC CHARACTERISTIC	Deviation des NF-output< 6 dB from 10 µV to 10 mV
SQUELCH	Automatic Squelch (adjustable)

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00

SPURIOUS RESPONSES	> 80 dB
DISTORTION (350...2500Hz)	<25% at rated power (85% / -33dBm) <10% at 10dB below rated power (70% / -33dBm)

	User & Installation manual VHF- Communication Transceiver	Doc.-Nr: DE-3000-800100e
	KRT2 & KRT 2A	Revision 5.0 Software >5.00