

SPECIFICATIONS

Power Output	3W*2
Supply Voltage	DC 5V
Bluetooth	3.0+EDR
Modes	AUX, Bluetooth Play
Material	Acrylic + ABS
Frequency Response	180Hz - 18KHz
S/N	72dB
Speaker	1.5" 4Ω
Operation Temperature	32°F - 102°F
Storage temperature	5°F - 140°F
Storage Humidity	20%-90% RH

Accessories: USB Power Cable, 3.5mm Audio Cable, Speaker Connector
MP3, MP4, PC, Cell Phone, iPod, & Multimedia Player Compatible
12 Multicolored LEDs in Total (Red, Blue, Green)

Buttons: Volume+, Volume-, Toggle LED Dancing Waters, Power On/Off

Dimension: 10" x 6.5" x 3.5"

Weight: 1.15 Lbs

Note: Product are improved continuously. We reserve the right to modify the product and specifications without prior notice.

FOR WARRANTY INFORMATION AND FEEDBACK,
PLEASE VISIT
WWW.BEFREESOUND.COM
Support & Warranty
(424) 543-1628

8 | AWD-28T | SPECIFICATIONS

AWD-28T

Fountain Speaker



OWNER'S MANUAL

TROUBLESHOOTING

This guide lists common problems and their solutions. Please refer to this guide before requesting service. If you need further assistance, please contact Befree Technical Support.

There is no power:

- Ensure that the speakers are connected to a USB power source .

The device is unable to connect to the speaker via Bluetooth:

- Turn the speakers off and back on. Try pairing again. Ensure that no other device is connected simultaneously to the speakers as it will not pair with two devices at once.
- If you have previously paired your device with the speakers and it is failing to connect to your device, try unpairing them from your device through the Bluetooth® mode on your device. (Please refer to your device manual on how to unpair devices) .
- The Bluetooth® may be disabled on your device. Enable the Bluetooth® on your device and try pairing again.
- Your device may be beyond the effective connecting range of the speakers. Move closer to the speakers. Range may be affected adversely by environmental conditions.

The device is connected but there is no sound.

- Disconnect all cables from the AUX input connector from the back of the speaker.
- Your device may be beyond the effective playback range of the speakers. Move closer to the speakers. Range may be affected adversely by environmental conditions.
- Ensure that the sound is playing on your device and isn't on pause.
- The volume on your device or on the speaker may be to its lowest.

TROUBLESHOOTING | AWD-28T | 7

PAIRING A DEVICE WITH BLUETOOTH®

A device must be paired with the speakers before using them together for the first time.

1. Turn the speakers on.
2. Ensure that the Bluetooth® is enabled on your device. Enable it if it isn't.
3. Use your device to search for nearby Bluetooth® devices. (This function is usually in the Bluetooth settings menu; refer to your device's instruction manual to learn more).
4. Select "awd-28t" in the list of available devices on your phone.
5. Once the pairing is successful, the speakers will play a sound alerting the user that music is now ready to be streamed.

If the pairing process fails, turn the speakers off and repeat the process. For faster trouble-free pairing, we recommend keeping the device within 3 feet of the speakers while pairing.

USING THE AUX INPUT CONNECTOR


Connect devices without Bluetooth® by using the AUX connection. A 3.5mm stereo cable is required to make this connection.

1. Use the included AUX cable to connect the device's headphone or line-out jack to the AUX connector [2] found on the back of the speakers.
2. Start playback on your device.
3. Press the volume button [3-4] to adjust the volume gradually to a comfortable level.

6 | AWD-28T | SPEAKER OPERATION

PACKAGE CONTENT


Please take a moment to ensure that everything listed in the list below is included in your package

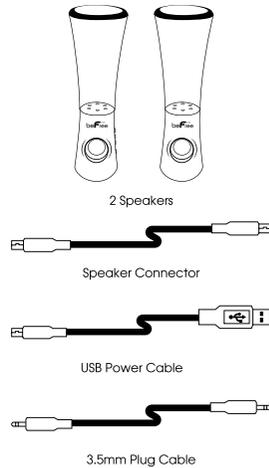


PACKAGE CONTENT | AWD-28T | 3

CONFIGURATION

REAR SPEAKER CONNECTION

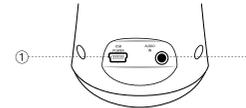

SIDE CONTROL PANEL

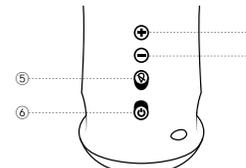

- ① CHARGING PORT
- ② AUXILIARY PORT (AUX-IN)
- ③ INCREASE VOLUME
- ④ DECREASE VOLUME
- ⑤ TOGGLE LIGHTS/WATER
- ⑥ POWER ON/OFF

4 | AWD-28T | CONFIGURATION

SPEAKER OPERATION

CONNECTING POWER

In order to be able to use the Multimedia LED Dancing Water Bluetooth® Speakers, you will need to use the included USB power cable and plug it to a USB port or USB adapter for wall outlet.

- Connect the small end of the cable to the USB port [1] of the unit.
- Connect the large end of the cable to a USB port of a computer or a USB adapter. When plugging to a computer, ensure the computer is turned on.

Please note that the battery is not rechargeable, therefore, the unit will turn off when disconnected from power.

The battery used in this device may present a fire or chemical burn if misused. Do not disassemble, incinerate, or heat the unit. Do not leave the unit in a place subject to direct sunlight, or in a car with its windows closed.

Do not connect the unit to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

TURNING YOUR SPEAKERS ON AND OFF

To turn the speakers on, slide the power button upward [6]. A cue tone will indicate that the unit is now turned on.

To turn the speakers off, slide the power button downward.

To activate dancing waters, slide the light/water button upward [5]. Slide it downward to toggle off the dancing water.

SPEAKER OPERATION | AWD-28T | 5

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.