 


User Manual

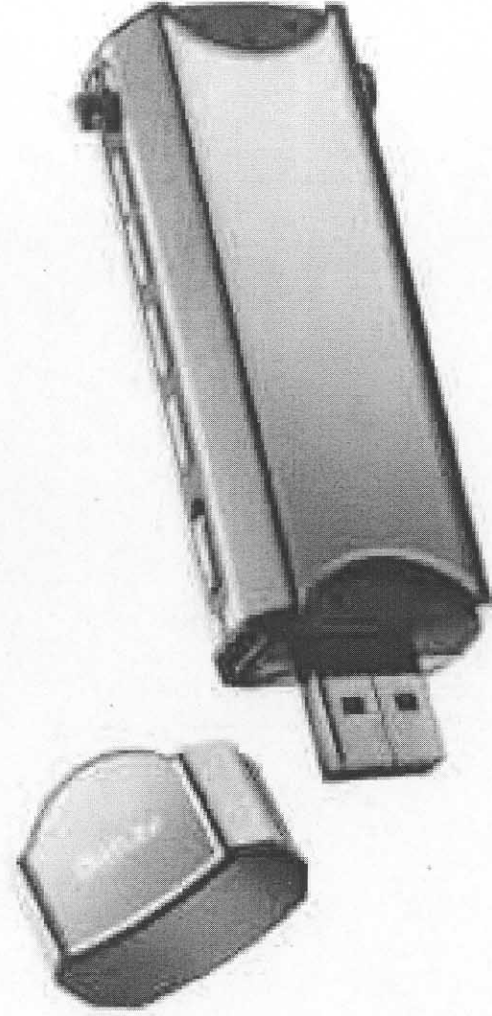

DATUM **NOHFAAS**

Thank you for purchasing our product. Please read this manual carefully before use.

Table of Contents

Brief Introduction

Introduction	1
Key Features	1
Packaging Contents	2
Charging Battery	2
Parts Description	3
Controls	3
- Key Functions	3-4
- LCD Screen	6

Downloading and Transferring Files

USB Driver Installation	8-7
Transferring Files	8
Safety Remove Hardware Procedure	9

Operation

Listening to Music	10
Using the MAIN MENU	10-15
☑ MUSIC PLAYER	11
☑ PROGRAM	12
☑ FM RADIO	13-14
☑ VOICE RECORDER	15


Customizing the Player

Using the SETTING MENU	16-18
☑ PLAY LIST	17
☑ REC RESOLUTION	17
☑ CONTRAST	17
☑ EQUALIZER	17
☑ PLAY TIMER	18
☑ LIGHT TIMER	18
☑ BACKLIGHT COLOR	18
☑ LANGUAGE	18
☑ DELETE FILE	18

Additional Information


Procedures	19-20
Trouble Shooting	21
Technical Specifications	22
Upgrade Firmware Procedure	23
Care and Maintenance	23

 PARTS DESCRIPTION

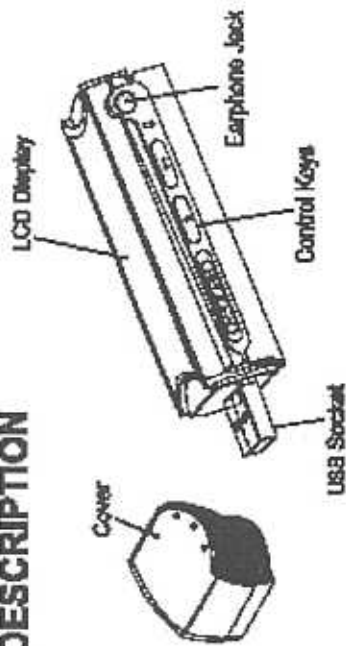


CONTROLS

 Control Keys

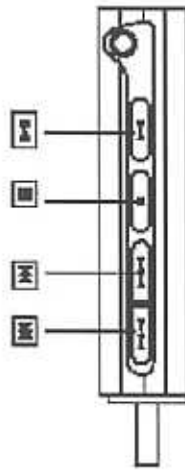


[M]	Press to turn the player ON. Press to play or pause the music file.
[H]	Press and hold to turn the player OFF. Press to skip the music file.
[V]	Press to adjust the sound file. Press and hold to fast forward while the file plays.
[R]	Press to adjust the previous file. Press and hold to fast forward within the file.

 3

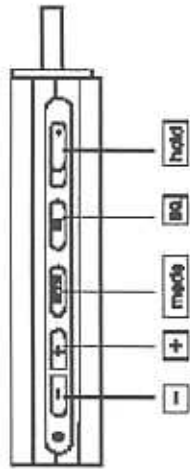


[hold]	Slide to the left to lock all key functions. Slide to the right to unlock all key functions.
[EQ]	Press to access into the Repeat mode. Press and hold to access into the Equalizer mode.
[mode]	Press to access into the Main Menu. Press and hold to access into the Settings Menu.
-	Press to decrease the volume. Press and hold to decrease the volume rapidly.
+	Press to increase the volume. Press and hold to increase the volume rapidly.

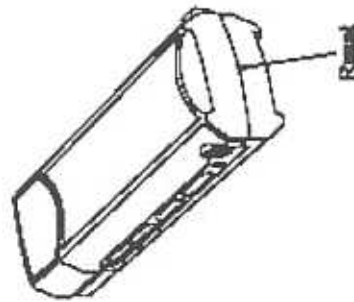 

4

 LCD Screen

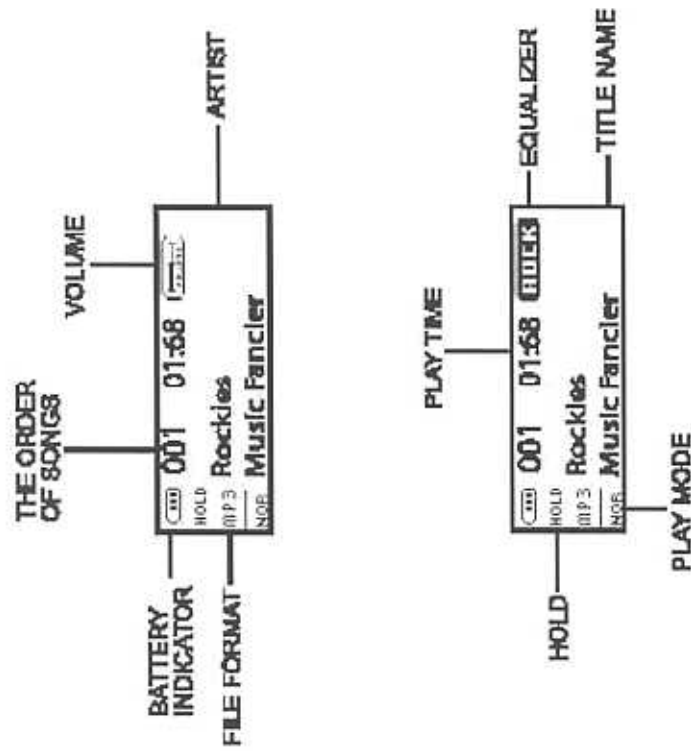

USB DRIVER INSTALLATION

For Windows ME, 2000 or XP:

These versions of Windows will automatically detect your DAP after connecting with the USB cable and the computer. (Please make sure the DAP is turned ON)

For Windows 98SE:

Windows 98SE will not recognize the player until you have installed the driver using the included installation CD-ROM. Follow the detailed instructions in this section to activate the USB mass storage function, so you will be able to transfer files from your computer to your player.

**Installation Procedures for the Player Software
(For Windows 98SE only)**

When connecting the player to the computer for the first time, please follow these instructions:

1. Insert the CD-ROM into the CD Drive. The auto-run program will display as shown (Figure 1). Click "YES" to install the driver (Figure 2).



Figure 1




Figure 2

Remarks: If the setup does not start automatically, please run the setup.exe in your CD-ROM drive directory. Double click "Install.exe" in the installation CD.

2. Follow the on screen instructions to install the software.



 Please install the software under the directory as prompted.

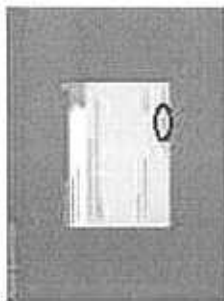

Warning: DO NOT change the installation path. Otherwise, the Player driver may not run properly.

3. After successfully installing the driver software, Windows will ask you to restart your computer system. Click "Yes" to restart your system.



4. When the installation is completed, the new program will be added to the Program menu in the computer.

Transferring files

Connect the DAP to the computer by direct plug in or by using the supplied USB cable. Press the [Exit] button to turn the player ON. The following will be displayed on the LCD screen of your DAP player.



A "Removable Disk" will be added in My Computer. Open the "Removable Disk" folder.



Locate the files you wish to copy from the computer to your DAP. Drag and drop MP3, WMA or WAV files on the computer into the "Removable Disk" folder. These files will now be copied into your DAP.

Note:

When you are finished transferring files, use the Safely Remove Hardware procedure before disconnecting your player. (Please see the next section for detailed instructions.)

SAFELY REMOVE HARDWARE PROCEDURE

1. Double click the "Safely Remove Hardware" icon on the task bar.



2. From the "Safely Remove Hardware" window, select "USB Mass Storage Device" and click the "Stop" button. The "Stop a Hardware Device" window will pop up as shown:



3. Click "OK". A "Safe to Remove Hardware" window will pop up. Now, it is safe to remove the USB Cable and your DAP player from the computer.



Remarks: If the "Safely Remove Hardware" icon is not displayed on the task bar, please double click on My Computer. Right click on "Removable Disk", then left click on "Eject". Now it is safe to remove your DAP from the computer.

 
LISTENING TO MUSIC

After you have transferred MP3, WMA or WAV files from the computer to your DAP, you can start listening to music while you learn how to use the rest of the features.


Insert the earphones into the earphone jack of the player, press the **[▶]** button to turn the player ON. The first song will immediately begin to play. Use the control toys to play, pause, stop, forward, reverse and adjust the volume.

USING THE MAIN MENU

Press the **[M]** mode button to access the MAIN MENU. The following menu will be displayed on the LCD screen:

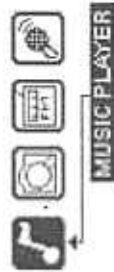

 Press the **[M]** or the **[▶]** button until your desired selection is highlighted and press the **[▶]** button to confirm the selection.

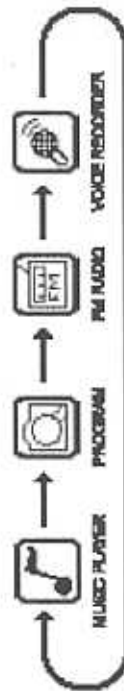

MUSIC PLAYER

To listen to any files or songs stored in your DAP or run the Program List, you can select the MUSIC PLAYER mode.

Using Special Functions

Equalizer Mode (EQ)

The current equalizer mode is displayed in the upper right hand corner of the LCD screen in a rectangular block with a black background.

Changing the EQ mode

- Press and hold the **EQ** button until the current mode is displayed with a clear black background. Keep pressing the **EQ** button repeatedly to select one of the six equalizer modes:

NORM **POP** **JAZZ** **ROCK** **CLASS** **VERSE**

- Stop pressing the **EQ** button when your desired selection is displayed with a clear background. The background will turn back to black after a few seconds.

Repeat Button

Press the **EQ** button repeatedly to select different repeat modes options. As each mode is selected, the following icons will be displayed on the left hand bottom of the LCD screen on your player:



Play all the files in the player once.



Randomly play all the files in the player once.



Randomly play all the files in the player continuously.



Play a single file repeatedly.



Play all the files repeatedly in consecutive order.



Edit and plays one section repeatedly. Press **mode** button once to start with point A and press **mode** button again to end with point B.



 
Plays the play list once. (The play list must be created before using this function.)



Plays the play list repeatedly. (The play list must be created before using this function.)

PROGRAM

You may search for, listen to, and program the play list in the Program mode. Press the **mode** button and use the **M** or the **K** button to highlight the Program icon as shown.

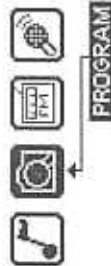

Press the **M** button to confirm and access in the Program menu.

All the files are displayed on the LCD in the Root folder. FM recorded files are stored in the FM folder and voice recorded files are stored in the Vocal folder.

Creating a play list

- Enter into the Program menu
- Press the **M** or the **K** button to highlight a desired song or file.
- Press the **EQ** button, a number icon (01, 02 etc.) will be displayed next to that song or file.
- Press the **EQ** button to confirm the song or file selection; the number icon will disappear and the file or the song will be added to the play list.
- Follow these steps with each file you would like to add to your play list.
- Press the **M** or the **K** button to exit the Program menu.

Note:

You can only program the same file into the play list once. You cannot delete a file while it is playing.