 


MX72FZ Manual

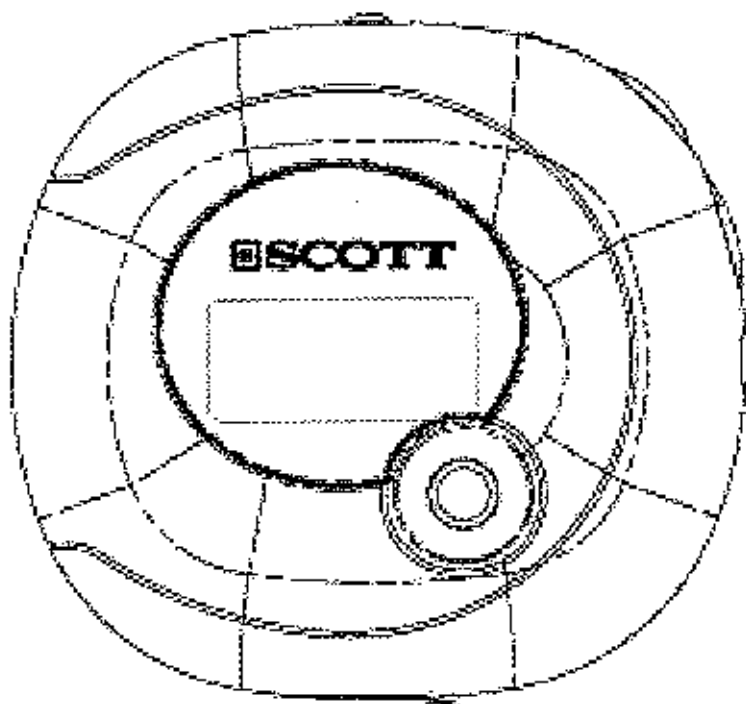

 **SCOTT**

FCC DECLARATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shield cable must be used with this unit to ensure compliance with the class B FCC limits.

Getting Started

INTRODUCTION

Digital Audio Player (DAP) – MX 72FZ

Your Digital Audio Player is a device that stores and plays multi-format digital audio files including MP3, WMA and WAV files. Downloading hours of music from your PC, transfer them into your DAP or use it for voice recording. Please read this manual carefully before using this product for the first time.

KEY FEATURES

 
- Multi-format player supports: MP3, WMA and WAV files.
- USB data transfer.
- Windows Plug & Play support for Windows ME, 2000 and XP and Mac OSX.
- Windows 98SE compatible: Driver required.
- Six different music equalizer levels.
- Power saving feature.
- Battery level indication.
- Firmware Upgradable

PACKAGE CONTENTS

The packaging should include the following accessories:

- Digital Audio Player
- USB Cable
- Installation CD-ROM
- Stereo Earphones
- Quick Start Guide

PARTS DESCRIPTION

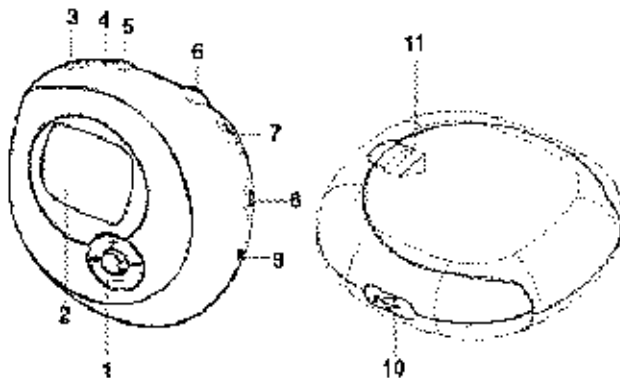


1. Navigation Control
2. Display
3. Neck/Hand Strap (Folder
(Strap(s) not included)
4. Built-in Microphone
5. Lock Switch
6. Headphone Jack

7. ●/EQ/Repeat Button
8. Mode Button
9. Power On/Off Button
Stop (■▶)/Play(▶■)
10. USB Port
11. Battery Compartment (Rear of Unit)

CONTROLS

 Key Functions

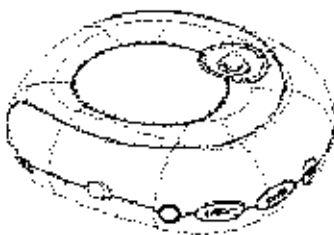

mode

Press to access into the Main Menu.
Press and hold to access into the Settings Menu.

hold

 
Slide to the right to lock all keys functions.
Slide to the left to unlock all keys functions.

●/EQ/▶

Record / Equalizer / Repeat button.
Press to access into the Repeat mode.
Press and hold to access into the Equalizer mode.
Press to recording in Voice mode.
Press to select song into playlist in Navigation mode.


▶■
▶■

Press and hold to turn the player OFF.
Press to turn the player ON.



There is a joystick key in the center that can be used to control several key functions. Press the button top, down, left, right or pressing it down will achieve the following actions:

 In Navigation Mode:



Push the button down to access the Navigation mode of the folders.



Push to the right to select the next file.
Push and hold to the right to fast-forward within the files.



Push to the left to select the previous file.
Push and hold on to the left to fast-rewind within the files.



Push downward to decrease the volume.
Push and hold downward to decrease the volume rapidly.

 


Push upward to increase the volume.
Push and hold upward to increase the volume rapidly.

Battery Installation (not included)

When the bars in the battery indicator (in the display) become low (figure 1), replace the battery as follows.

1. Click the button and opens the battery compartment door.
2. Insert the battery with the correct polarity as show.
3. Close the battery compartment door.

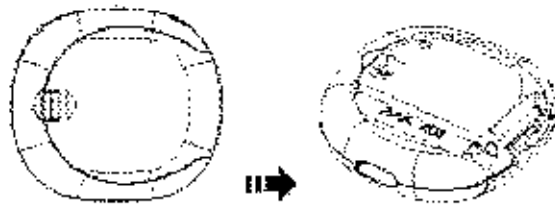

BATTERY PRECAUTIONS

- To avoid battery leakage or corrosion, remove the battery from the player if the player is not to be used for a long time.
- Remove dead battery from the player immediately to avoid damaging the player.
- When corrosion occurs, wipe the battery compartment immediately with a dry cloth and insert a new battery.

Downloading and Transferring Files

USB DRIVER INSTALLATION

For Windows ME, 2000 or XP:

These versions of Windows will automatically detect your DAP after connecting with the USB cable and the computer. (Please make sure the DAP is turned ON.)

 
For Windows 98SE:

Windows 98SE will not recognize the player until you have installed the driver using the included installation CD-ROM. Follow the detailed instructions in this section to activate the USB mass storage function, so you will be able to transfer files from your computer to your player.

Installation Procedures for the Player Software (For Windows 98SE only)


When connecting the player to the computer for the first time, please follow these instructions:

1. Insert the CD-ROM into the CD Drive. The auto-run program will display as shown. Click "Next" to install the driver.

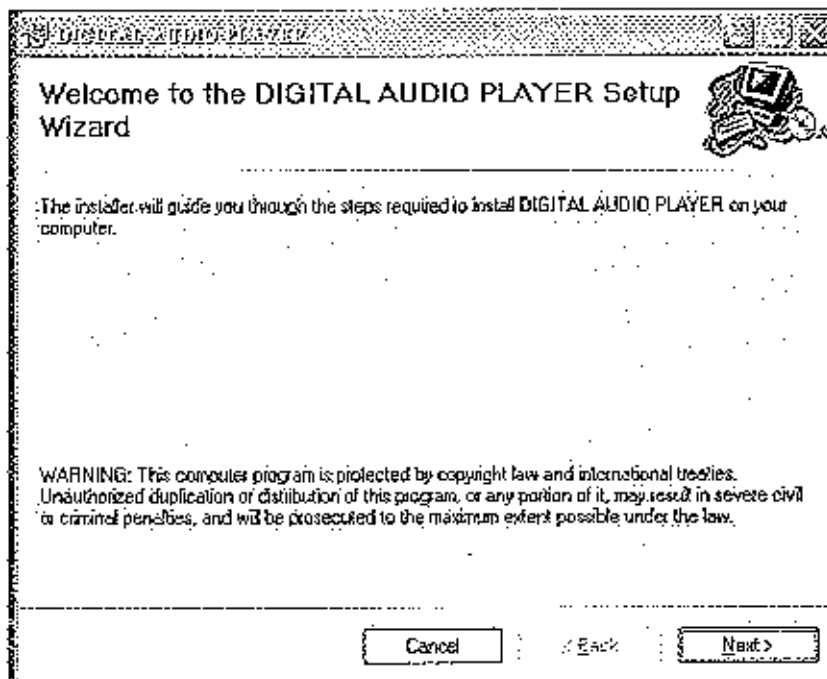


Remarks: If the setup does not start automatically, please run the install.exe in your CD-ROM drive directory. Double click "install.exe" in the installation CD.

  2. Follow the on screen instruction to install the software. Please install the software under the directory as prompted.

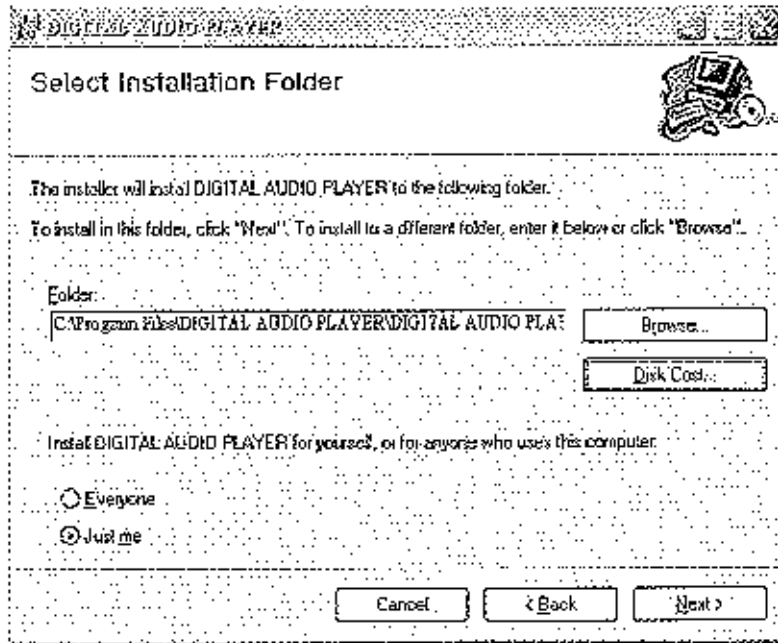


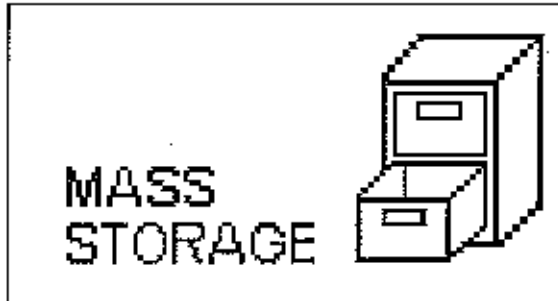 
Warning: DO NOT change the installation path. Otherwise, the Player driver may not run properly.

3. After successfully installing the driver software click "Close to Exit".

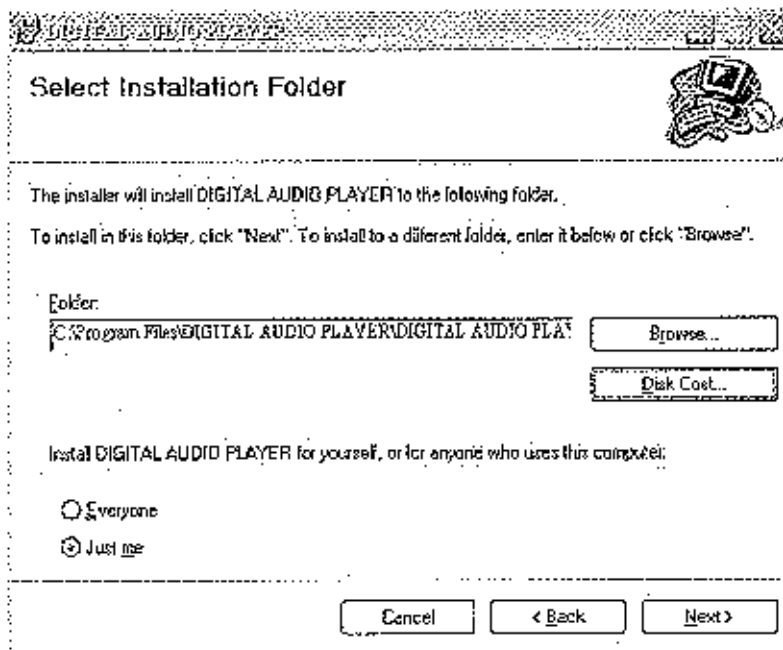 


TRANSFERRING FILES

Connect the DAP by using the supplied USB cable to the computer. Press the  button to turn the player ON. The following will be displayed on the LCD screen of your DAP:



A "Removable Disk" will be added in My Computer. Open the "Removable Disk" folder:

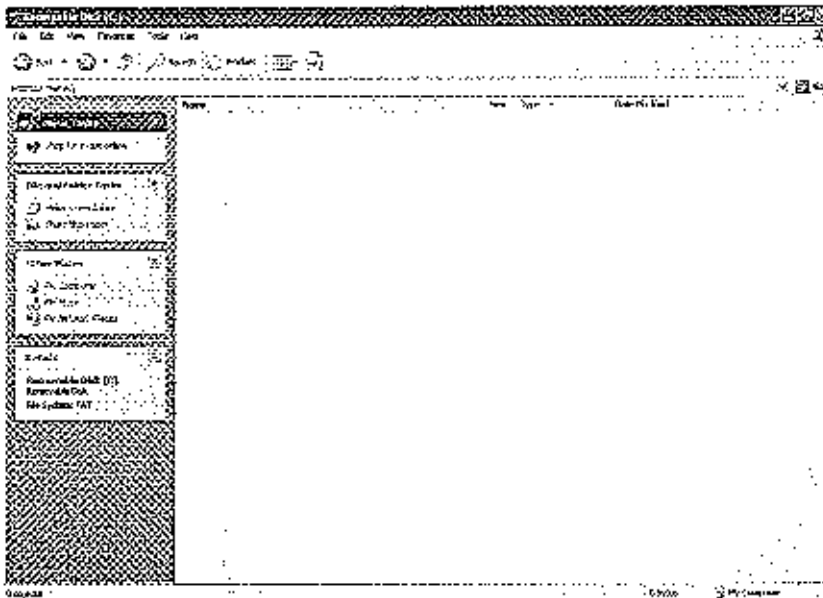


Locate the files you wish to copy from your computer to your player. Drag and drop MP3, WMA or WAV files on your computer into the "Removable Disk" folder. These files will now be copied into your DAP.


Note: When you are finished transferring files, use the Safely Remove Hardware procedure before disconnecting your player. (Please see the next section for detailed instructions.)

SAFELY REMOVE HARDWARE PROCEDURE

 
1. Double click the “Safely Remove Hardware” icon on the task bar:

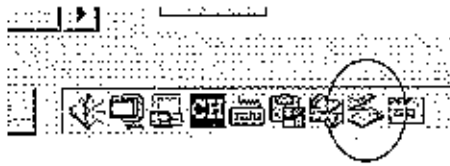

 2. From the “Safely Remove Hardware” window, select “USB Mass Storage Device” and click the “Stop” button. The “Stop a Hardware Device” window will pop up as shown:

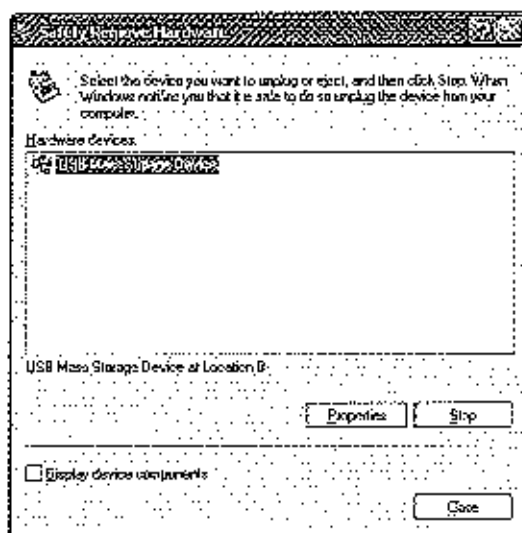

 3. Click “OK”. A “Safe to Remove Hardware” window will pop up. Now, it is safe to remove the USB Cable and the DAP from the computer.

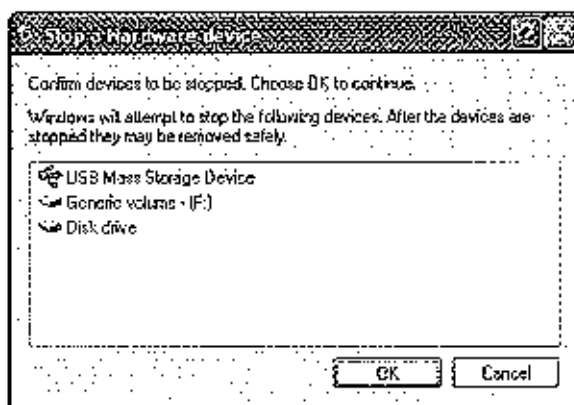


Remarks: If the “Safely Remove Hardware” icon is not displayed on the task bar, please double click on My Computer. Right click on “Removable Disk”, left click on “eject”. Then it is safe to remove the DAP from the computer.


Operation

LISTENING TO MUSIC




After you have transferred MP3, WMA or WAV files from the computer to the DAP player, you can start listening to music while you learn how to use the rest of the features.

Insert the earphones into the earphone jack of the player; press the  button to turn the player on. The first song will immediately begin to play. Use the navigation keys to forward, reverse, adjust the volume and access to Navigation mode.

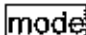USING THE MAIN MENU

Press the  button to access the MAIN MENU. The following menu will be displayed on the LCD screen:



Push  or  until your desired selection is highlighted and press the  button to confirm the selection.




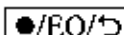
MUSIC PLAYER

To listen to any files or songs stored in your DAP or run the Program List, you can select the MUSIC PLAYER mode.


Using Special Functions Equalizer Mode (EQ)

The current equalizer mode is displayed in the lower right hand corner of the LCD screen in a rectangular block with a black background.


Changing the EQ mode


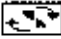
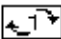
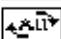
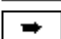

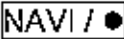

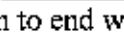
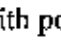
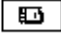
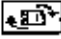
- Press and hold the  button until the current mode is displayed with a clear block background. Keep pressing the  button repeatedly to select one of the six equalizer modes:

NORM **POP** **JAZZ** **ROCK** **CLASS** **BASS**

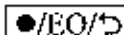

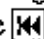

- Stop pressing the  button when your desired selection is displayed with a clear background. The background will turn back to the black after a few seconds.

Repeat Button

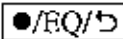
Press the  button repeatedly to select different repeat mode options. As each mode is selected, the following icons will be displayed on the right upper part of the LCD screen on your player:

-  Play all the files in the player once.
-  Randomly play all the files in the player once.
-  Randomly play all the files in the player continuously.
-  Plays a single file repeatedly.
-  Play all the files repeatedly in the consecutive order.
-  Edits and plays one section repeatedly. Press  button once to start with point A  and press  button again to end with point B .
-  Plays the play list once. (The play list must be created before using this function.)
-  Plays the play list repeatedly. (The play list must be created before using this function)

NAVIGATION

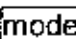
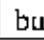
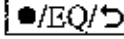


You may search for, listen to, and program the play list in the Navigation mode. Press the  button and use the  or the  button to highlight the Navigation  icon as shown.



Press the  button to confirm and access in the Navigation menu.

All the files are displayed on the LCD in the Root/ folder. Voice recorded files are stored in the Voice/ folder.

Creating a play list

- Enter into the Navigation menu.
- Push  or  button to highlight a desired song or file.
- Press the  button; a number icon (01, 02 etc.) will be displayed next to that song or file.
- Press the  button to confirm the song or file selection; the number icon will disappear and the file or the song will be added to the play list.
- Follow these steps with each file you would like to add to your play list.
- Press the  button or idle a few second to exit from the Navigation menu.

Note: You can only program the same file into the play list once.

VOICE RECORDER

Use your DAP to record quick reminder memos or even lengthy business meetings or lectures.

Press the **mode** button and use the **⏪** or the **⏩** button to highlight the Voice Recorder icon as shown.



Press **NAVI / ●** to confirm and enter the Voice Recorder mode.

Recording a Voice Message

- Press the **●/EQ/↵** button to start recording.
- Press the **■▶** button to stop recording.
- The recorded file is saved as a WAV format.

Listening to the Recorded File

- Press the **■▶** button to listen the recorded file.
- Press the **■▶** button to stop listening.
- Press the **⏪** button to select the previous recorded file.
- Press the **⏩** button to select the next recorded file.

Notes: The volume is not controlled during recording.
You may select three different quality levels for recording.

Customizing the Player

USING THE SETTING MENU

The Setting Menu provides the options to change the player settings, displays, and resolution. Press and hold the **[mode]** button to display the SETTING MENU on the LCD screen.



Press the **[▶▶]** or the **[◀◀]** button to select one of the following setting options: Play List, Recording Resolution, Contrast, Equalizer, Play Timer or Light Timer. Once your selection is highlighted then press **[NAVI / ●]** to confirm.



To exit the SETTING Menu, press the **[mode]** button.

Setting Features

Play List Setting



Push **[+]** or **[-]** button to select the desired file.

Press the **[●/EQ/☐]** button; a [CLEAR ITEM / CLEAR LIST] box will be displayed on the LCD screen.



Push **[+]** or **[-]** to select clear item or clear list and press **[NAVI / ●]** button to confirm.

Push **[▶▶]** or **[◀◀]** button to select [Yes / No] to clear the selection.

Press **[▶▶]** button to confirm the selection.

Note: If you have deleted or not programmed a play list, "PLAYLIST EMPTY" will display on the LCD screen.

Recording Resolution Setting



Push **+** or **-** to select one of the three voice recording resolution: Low, Normal, or High
Press **NAVI / ●** to confirm the resolution selection.

Contrast Setting



Press the **▶▶** or the **◀◀** button to adjust the LCD contrast level.
Press **NAVI / ●** to confirm the contrast level.

Equalizer Setting



Push **+** or **-** button to select one of the six music equalizer effects: Normal, Rock, Ultra Bass, Jazz, Pop, or Classical.
Press **NAVI / ●** to confirm the equalizer mode.

Play Timer Setting



Push **+** or **-** to select between ELAPSED and REMAIN time.
Press **NAVI / ●** to confirm the play timer selection.

Light Timer Setting



Push **+** or **-** to select duration of the backlight timer: 5 sec, 10 sec, 15 sec or Off
Press **NAVI / ●** to confirm the timer selection.

Additional Information

PRECAUTIONS

Copyright

- Making copies of MP3 tracks or files without permission is a violation of the international copyright laws.

Safety

- Vibration experienced during walking or exercising will not affect the player. However, dropping the player or dropping a heavy object on the player may result in damage or sound distortion.
- Avoid spilling any liquid onto or into the player.
- Do not leave the player in a location near extreme heat sources or in a car with the windows closed during excessive heat. Do not leave in a place subject to direct sunlight, excessive dust or sand, moisture, or rain.

On Headphones and Earphones

Road Safety

- Do not use the headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossing and potentially hazardous situations.

Preventing Hearing Damage

- Avoid using the headphones/earphones at high volume. Hearing experts advise not to play loud music for a long period of time. If you do experience ringing in your ears, reduce the volume or discontinue use.

Consideration for Others

- Keep the volume at a moderate level. This allows you to hear the sound and still be considerate to the people around you.

CE Warning



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.



This unit must not be exposed to moisture or rain.



Ensure all connections are properly made before operating the unit.



This unit should be positioned so that it is properly ventilated. Avoid placing it, for example, close to curtains, on the carpet or in a built-in installation such as a bookcase.



Do not expose this unit to direct sunlight or heat radiating sources.

The player may lock up or temporarily lose its function due to electrostatic discharge or other electrical disturbance, but normal function resumes when the device is reset.

TROUBLE SHOOTING

Should any problem persist after you have checked these symptoms, consult your dealer.

Symptom	Possible Reason	Actions
No Power	Check whether the battery is exhausted.	Replace the battery.
No Sound from Earphones	Check whether the earphones are detached from the unit.	Re-insert the earphones.
	Check whether the volume is set to "minimum".	Increase the volume.
	Check whether the battery is exhausted.	Replace the battery.
	Check whether the earphones jack is contaminated or oxidized.	Clean the earphones jack.
	Corrupted MP3 or WMA file.	Download the files again.
Invalid Character on LCD	The Language is not supported.	Visit our web site to check whether a new version of firmware is release.
Failed to Download or Upload of MP3/WMA/WAV files	Check whether the battery is exhausted.	Recharge/Replace the battery.
	Check the connection of USB cable.	Re-plug the cable at both ends.
	Damaged USB cable.	Replace a new USB cable.
	Memory is full.	Release some memory space by deleting some files.
Cannot record Voice	Memory is full.	Release some memory space by deleting some files.

TECHNICAL SPECIFICATIONS

Category	Item	Specification
Audio	Frequency Range	20Hz – 20KHz
	Headphones Output	>40mW, 32ohm (Max. Vol) 130mW per channel, 8ohm
	S/N Ratio	90db (MP3)
File Support	MP3 WMA WAV Bit Rate Tag Info	MPEG 1/2/2.5 Layer 3 Windows Media Audio ADPCM encoding 8kbps – 320kbps ID3 Tag
	Dimension Weight Battery LCD Language USB Built-in Memory Max. Playtime Supported OS Voice Recording Firmware Upgradable Operating Temperature	70.8 x 65 x 24 mm Approx. 42 g (without battery) 1 x AAA battery Full Graphic with Backlight English USB 1.1 128MB Approx. 7-8 hours (128kps, MP3) Win ME, 2000, XP and Mac OSX Win 98SE (Driver is required) Approx. 7-8 hours (Low resolution) Yes (Except Windows 98 and Mac) 23 F to 104 F (-5 C to 40 C)

Specifications are subject to change without notice.

UPGRADE FIRMWARE PROCEDURE

Occasionally, it may a new software (firmware) may be released for this unit enhancing its functionality. For more information, please go to the web site at (www.audioscott.com) for downloading procedure and downloading the latest firmware.

 
EXTERNAL MEMORY CARD

- 1) Open the battery compartment door by click the button.
- 2) Insert a SD/MMC memory card (not included) up to 512MB, facing up as shown.
- 3) Connect the USB cable as described previously.
- 4) Drag MP3 and WMA files into the new folder. The memory card indicator will appear at the bottom left corner on the display.
- 5) To remove the SD/MMC memory card, push the edge of the card, then the card will spring out. Carefully remove the card.


Remarks: Please turn off the unit and remove the battery before install the memory card.
--

FORMATTING THE MEMORY PROCEDURE

1. Ensure the Digital Audio Player is ON.
2. Use the supplied USB cable to connect between Digital Audio Player and the Computer.
3. Double click the “My Computer” icon. “Removable Disk” appears in the My computer folder. (Picture of My computer)

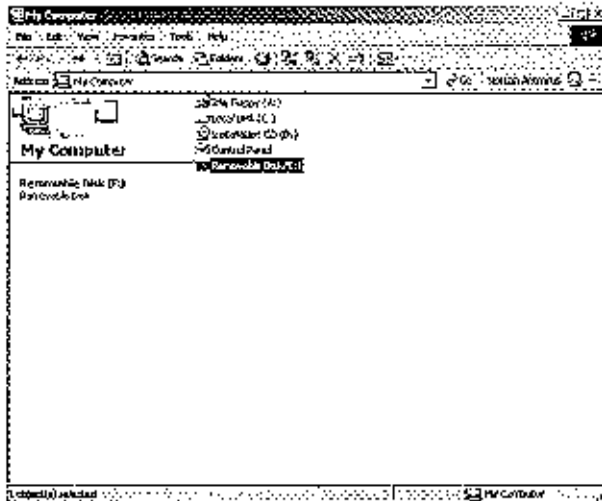


 4. Right click the “Removable Disk” then select Format. (Picture of Format)

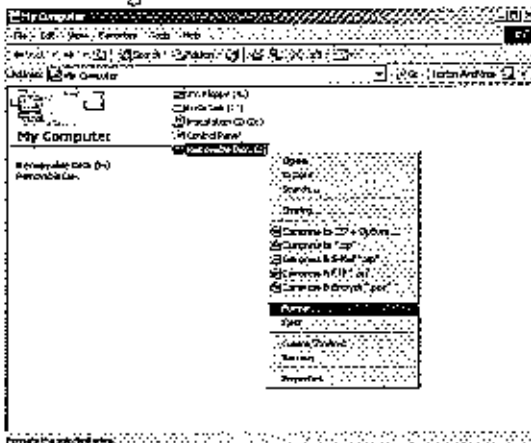


5. The following dialogue box will appear. Select the FAT file system only, then click **START** to proceed for formatting the drive.

 
Important: Do not select other file systems, it will cause malfunction of the unit.
(picture of FAT file)

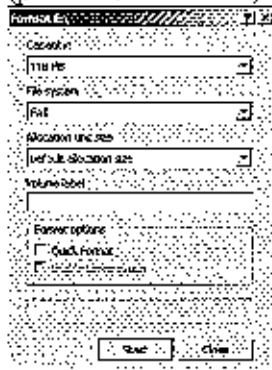

 6. Click "OK" to start for formatting the drive. (picture of OK and formatting)

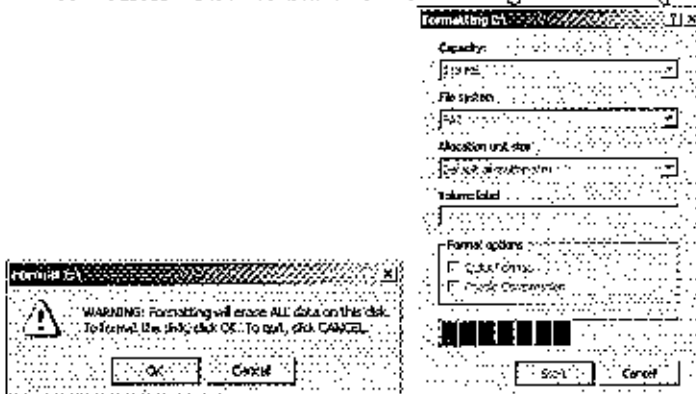

 7. When Format is complete, click "OK" to finish. (picture of Finish)

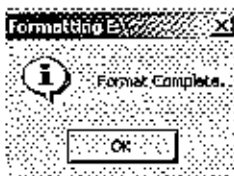

Notes: All files will be deleted when the player is formatted.

CARE AND MAINTENANCE

Your Digital Audio Player is a precise electronic device, and should not be subjected to rough handling or exposed to extreme temperatures or moisture. Do not use chemical agents or liquids to clean the unit, as they may damage the plastic.

Please Retain this Information for Future Reference

The manufacturer reserves the right to make any technical changes without notice in the interest of progress.

Declaration

Our company will not be responsible for any mistakes in this manual. Prior notices will not be given in case of any amendments within the manual. The corresponding companies own the mentioned trademarks and names.

Microsoft Windows Media and Windows Logo are registered trademarks in the US and/or other countries. WinAmp and WinAmp logo are registered trademarks of Nullsoft Company. All other products are the trademarks or registered trademarks of their owners.

INDEX

Brief Introduction

Introduction	1
Key Features	1
Packaging Contents	1
Parts Description	2
Controls	2
Key Functions	2-3
Charging Battery	3

Downloading and Transferring Files

USB Driver Installation	4-6
Transferring Files	7
Safely Remove Hardware Procedure	8

Operation

Listening to Music	9
Using the MAIN MENU	9-11
MUSIC PLAYER	9
NAVIGATION	10
VOICE RECORDER	11

Customizing the Player

Using the SETTING MENU	12-13
PLAY LIST	12
REC RESOLUTION	13
CONTRAST	13
EQUALIZER	13
PLAY TIMER	13
LIGHT TIMER	13

Additional Information

Precautions	14-15
Trouble Shooting	16
Technical Specifications	17
Upgrade Firmware Procedure	18
Formatting the Memory Procedure	19-20
Care and Maintenance	21